 


Ariete

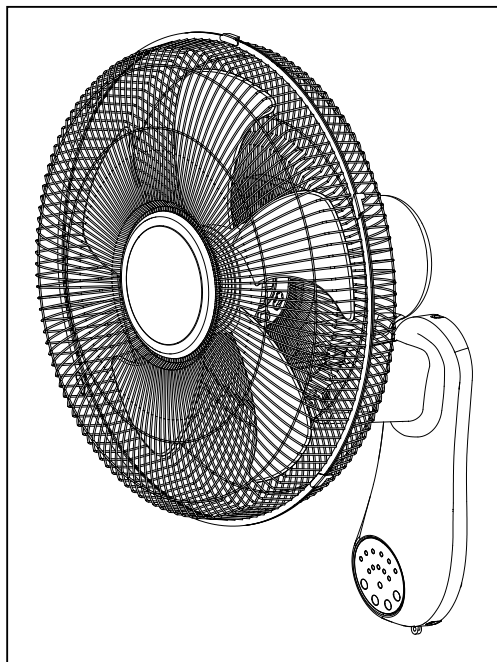

Fan

IMPORTANT SAFEGUARDS

READ THESE INSTRUCTIONS BEFORE USE

The necessary precautions must be taken when using electrical appliances, and these include the following:

- 1 Make sure that the voltage on the appliance rating plate corresponds to that of the mains electricity.
- 2 Never leave the appliance unattended when connected to the power supply; unplug it after every use.
- 3 Never place the appliance on or close to sources of heat.
- 4 Always place the appliance on a flat, level surface during use.
- 5 Never leave the appliance exposed to the elements (rain, sun, etc....).
- 6 Make sure that the power cord does not come into contact with hot surfaces.
- 7 This appliance must not be used by people (including children) with reduced physical or mental capabilities or by people without the relevant experience or knowledge of the appliance, unless they are carefully supervised or properly trained in its use by a person responsible for their safety.
- 8 Make sure that children cannot play with the appliance.
- 9 Never place the appliance body, plug or power cord in water or other liquids; always wipe clean with a damp cloth.
- 10 Always unplug the power cord from the electricity mains before fitting or removing single attachments or before cleaning the appliance.
- 11 Always make sure that your hands are thoroughly dry before using or adjusting the switches on the appliance, or before touching the power plug or power connections.
- 12 To unplug the appliance, grip the plug and remove it directly from the power socket. Never pull the power cord to unplug the appliance.
- 13 Do not use the appliance if the power cord or plug are damaged or if the appliance itself is faulty; all repairs, including substitution of power cord, must be carried out exclusively by an Ariete assistance centre or by authorized Ariete technicians in order to avoid all risks.
- 14 In case of using extension leads, these must be suitable for the appliance power to avoid danger to the operator and for the safety of the environment in which the appliance is being used. Extension leads, if not suitable, can cause operating anomalies.
- 15 Never allow the cord to dangle in places where it may be grabbed by a child.
- 16 Do not threaten the safety of the appliance by using parts that are not original or which have not been approved by the manufacturer.
- 17 This appliance is designed for HOME USE ONLY and may not be used for commercial or industrial purposes.
- 18 Any changes to this product that have not been expressly authorised by the manufacturer may lead to the user's guarantee being rendered null and void.
- 19 In the event that you decide to dispose of the appliance, we advise you to make it inoperative by cutting off the power cord. We also recommend that any parts that could be dangerous be rendered harmless, especially for children, who may play with the appliance or its parts.
- 20 Packaging must never be left within the reach of children since it is potentially dangerous.
- 21 Never immerse the appliance in liquids or spray it, do not use it in proximity of windows or other places exposed to rain to prevent the risk of electric shock.
- 22 Do not start the appliance close to combustible or flammable materials or in proximity of emissions.
- 23 Keep the appliance away from curtains, drapes, or other light objects that might be sucked in.
- 24 Never put fingers or other objects into the grid, especially when the appliance is running.
- 25 Do not start the fan using a timer or other control devices, to prevent the risk of fire or electrocution.

DO NOT THROW AWAY THESE INSTRUCTIONS

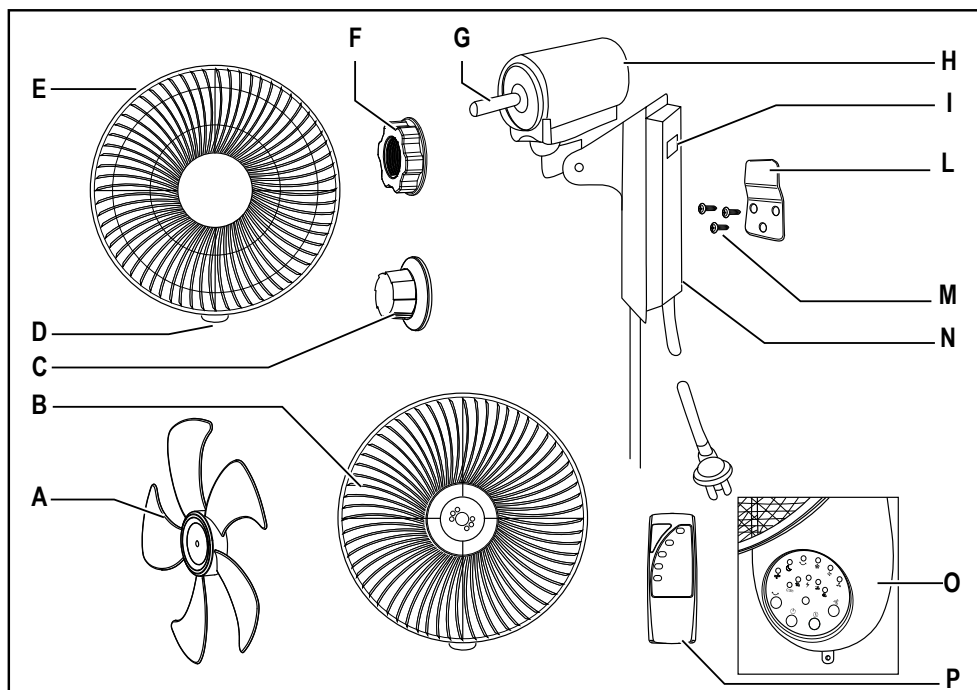 


Fig. 1

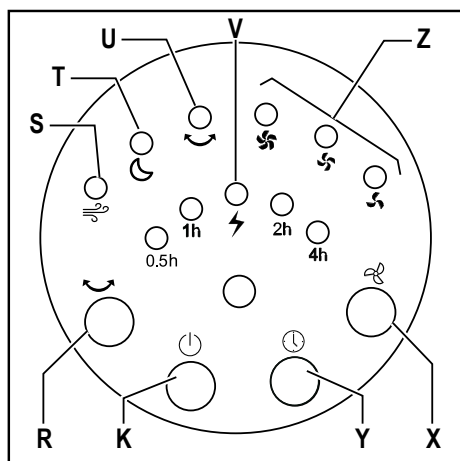 


Fig. 2

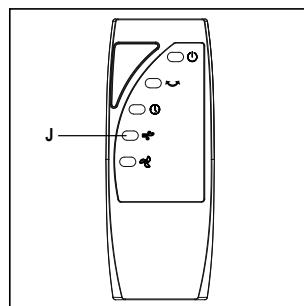 


Fig. 3

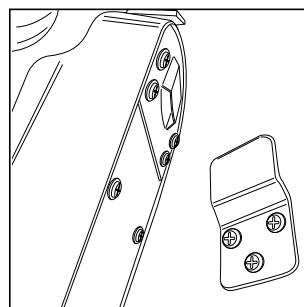 


Fig. 4

APPLIANCE DESCRIPTION (Fig. 1)

A	Blade	H	Motor body
B	Rear grid	I	Fan fitting to the fixing bracket
C	Front blade locking ring nut	L	Wall mount bracket
D	Grid locking hook	M	Screws
E	Front grid	N	Blade support arm
F	Rear blade locking ring nut	O	Control panel (Fig. 2)
G	Motor shaft	P	Remote control (Fig. 3)

ASSEMBLY

- Position the rear grid (B) onto the shaft (G) of the motor unit (H) and fix it by inserting and rotating the apposite ring nut (F) clockwise until it locks in place.
- Insert the blade (C) onto the motor shaft (G) and slightly press it.
- Lock the blade (A) by screwing the corresponding front ring nut (C) on the shaft, until it locks in place.
- Assemble the front grid (E) with the rear one (B) by means of the apposite hook (D) on the front grid and lock them together by tightening the corresponding screw with a screwdriver. Close the clips around the front grid edges so that they lock both grids.
- Drill three holes in the wall using the bracket holes (L) as reference. Mount the fixing bracket (L) to the wall by using the 3 screws (M).
- Fit the fan to the wall, inserting the apposite fitting (I) situated on the arm back (N), on the fixing bracket (L) fixed to the wall (Fig. 4).

ATTENTION:

Before using the appliance, make sure the appliance is properly assembled.

HOW TO OPERATE

- Plug the appliance into a mains power socket.
- Switch the blade on by pressing the "ON/OFF" (K) button on the remote control or on the control panel.

The apposite light (V) will light up on the front side of the blade.

- The blade speed is adjusted by repeatedly pressing the button (X) on the remote control or on the control panel. The apposite lights (Z) on the front side of blade will turn on.
- Switch the fan off by pressing the "ON/OFF" (K) button on the remote control or on the control panel. By pressing the "ON/OFF" button all of settings are cancelled automatically and the blade is reset.
- To start and stop the oscillation of the blade head, press the (R) button on the remote control or on the control panel. The apposite light (U) on the blade front side will turn on.
- To set the operating time (from 0.5 to 7.5 hours), press repeatedly the button (Y) on the control panel or the remote control until the apposite lights of the time set, situated on the front side of the blade, light up.

For instance, for setting an operating time of 5 hours, it will be necessary to press button (Y) 10 times until the lights "4H" and "1H" turn on. For setting an operating time of 7.5 hours, it will be necessary to press the button (Y) 15 times until the lights "4H", "2H", "1H" and "0.5H" turn on.

- It is possible to select other two possible ventilation modes "Natural" (S) or "Sleep" (T), in addition to the standard one, by repeatedly pressing the (J) button on the remote control (Fig.3). The apposite light on the front side of the blade will turn on (S-T).

The "Natural" function reproduces the natural wind with non-constant speed during the ventilation

cycle.

By setting the night function "Sleep" with a required operating level, the air speed will reduce to the lower levels every 30 minutes until the appliance switches off or the timer is disabled.

For both modes, it is possible to select the operating level ("Low", "Middle", "High") by means of the (X) button on the remote control or the control panel, repeatedly pressed with the fan in operation.

- At the end of the use, switch the appliance off by pressing the ON/OFF (K) button on the remote control or on the control panel, then unplug it.

CARE AND CLEANING

- Clean the outside of the grid using a clean, damp cloth.
- Do not use solvents or abrasive agents for cleaning.
- The cooling blades on the motor unit (H) must be always free from dust that can be removed with a vacuum cleaner.

HOW TO INSERT / REMOVE THE REMOTE CONTROL BATTERIES (not supplied)

Open the battery door on the remote control back (press on the back and pull the door).

Insert the batteries into their seats paying attention to the correct positioning of the polarity.

Refit the door in the remote control.

Use 2 batteries type LR03 AAA 1.5 V.

If the remote control is not used for a prolonged period of time, remove the batteries.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 19/2012/UE.

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

WARRANTY

**PLEASE AFFIX YOUR RECEIPT/PROOF OF PURCHASE HERE.
IN THE EVENT OF A CLAIM UNDER THIS WARRANTY THE AFORESAID RECEIPT/PROOF OF
PURCHASE MUST BE PRODUCED TOGETHER WITH THIS WARRANTY.**

Model number	(Lot number:)
Product name	
Date of purchase	
Place of purchase	

1. The party selling the product ("the seller") to the original purchaser of this product ("the customer") hereby warrants that this product will be of good quality and, in good working order and, free of defects and suitable for its intended purpose under normal household use, for a period of 1 (one) year from the date of purchase ("warranty period") of this product.
2. In the event that the warranty period has not lapsed and the product is not of a good quality, or in good working order or, is defective or is not suitable for its intended purpose under normal household use, the customer may, subject to paragraph 3 below, return the product to the seller and have the following options available:
 - 2.1 Within the first 6 (six) months of the warranty: to receive a refund of the actual price paid or exchange the product for the same or similar product of the same purchased value;
 - 2.2 Within the second 6 (six) months of the warranty: to have the product exchanged for the same or similar product of the same purchased value.
3. The seller will not replace the product or refund the customer in terms of this warranty if the product:
 - 3.1 has been altered contrary to the instructions provided in the product manual;
 - 3.2 has been misused, abused or tampered with;
 - 3.3 is defective or not in working order due to ordinary wear and tear;
 - 3.4 is damaged resulting from the customer's gross negligence, recklessness, malicious behavior or criminal conduct;
 - 3.5 has been utilised for commercial use.

4. This warranty applies only to the product that has been purchased from the seller and not to any expendables attached to or installed on the product by the customer.
5. Any claim in terms of this warranty must be supported by the original proof of purchase.
6. Note that the exchange item will only carry the balance of the warranty period as from the original date of purchase.
7. Spares:
Selected spares can be purchased from:

ServiceTec
10 Saddle Drive
Woodmead Office Park
Woodmead

Email: spares.za@delonghigroup.com
Tel: +27 11 474 0153

Ariete

De' Longhi Appliances Srl
Divisione Commerciale Ariete
Via San Quirico, 300
50013 Campi Bisenzio FI - Italy
E-Mail: info@ariete.net
Internet: www.ariete.net