

ecoslot™

1 slot setting, only heats what you need, saving 50% energy.

before using your Kenwood appliance

- Read these instructions carefully and retain for future reference.
- Remove all packaging and any labels.

safety

- Burnt food can catch fire, so:
 - never leave your toaster on unattended;
 - keep your toaster away from anything (eg curtains) that could catch fire;
 - set the browning control lower for thin or dry bread;
 - never warm food with a topping or filling (eg pizza): if it drips into the toaster, it could catch fire.
- Clean the crumb tray regularly: crumbs can smoke or burn.
- To avoid electric shocks, **never**:
 - let the toaster, cord or plug get wet; or
 - put **your hand** or anything metal, eg a knife or foil, into the toaster.
- Always unplug the toaster when not in use, before cleaning or attempting to clear jammed bread.
- Never cover your toaster with a plate or anything else - it could overheat and catch fire.
- Never let the cord hang down where a child could grab it.
- We recommend that you do not use your toaster directly under wall cupboards.
- Do not move the toaster whilst it is in operation.
- Never touch hot surfaces especially the metal top area.
- Never use an unauthorised attachment or accessory.
- Never use a damaged toaster. Get it checked or repaired: see 'Service & Customer Care'.

- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Only use the appliance for its intended domestic use. Kenwood will not accept any liability if the appliance is subject to improper use, or failure to comply with these instructions.

before plugging in

- Make sure your electricity supply is the same as the one shown on the underside of your toaster.
- This appliance conforms to EC directive 2004/108/EC on Electromagnetic Compatibility and EC regulation no. 1935/2004 of 27/10/2004 on materials intended for contact with food.

Important – UK only

- The wires in the cord are coloured as follows:
Green and Yellow = Earth,
Blue = Neutral,
Brown = Live.
- The appliance must be protected by a 13A approved (BS1362) fuse.
- **WARNING: THIS APPLIANCE MUST BE EARTHED.**

Note:

- For non-rewireable plugs the fuse cover **MUST** be refitted when replacing the fuse. If the fuse cover is lost then the plug must not be used until a replacement can be obtained. The correct fuse cover is identified by colour and a replacement may be obtained from your Kenwood Authorised Repairer (see Service).
 - If a non-rewireable plug is cut off it must be DESTROYED IMMEDIATELY. An electric shock hazard may arise if an unwanted non-rewireable plug is inadvertently inserted into a 13A socket outlet.
- before using for the first time**
- Wrap excess cord around the cord storage device on the underside of the toaster ⑩.
 - Operate the toaster once on a medium setting without bread.
 - As with all new heating elements, your toaster may emit a slight burning smell when it is first switched on. This is normal and not a cause for concern.

key

- ① removable warming rack
- ② display
- ③ bagel button with indicator light
- ④ defrost button with indicator light
- ⑤ browning control
- ⑥ start/cancel button
- ⑦ ecoslot™ button with indicator light
- ⑧ crumb tray
- ⑨ ecoslot™
- ⑩ cord storage

to use your toaster

- 1 Plug the toaster into the power supply and setting 3 will automatically be displayed.
- 2 To change the setting press the browning control button. Each time the button is pressed the number will change and scroll through settings 1 to 6. Use a lower setting for light toasting and for thin or dry bread.
- When subsequent toasting is carried out the browning setting will automatically default to the last setting selected.
- 3 Insert the bread, muffins etc.
- 4 Press the start/cancel button which will illuminate and the carriage will automatically lower. During toasting a countdown indicator will show the progress of the toasting operation.
- 5 At completion the carriage will automatically rise allowing the toast to be removed. This will be followed by an audible noise.
- To stop toasting at any stage, press the start/cancel button.
- To toast frozen bread, press the defrost button, then press the start/cancel button. Both buttons will illuminate.
- To toast a single slice of bread, place the bread in the **ecoslot™**, press the **ecoslot™** button then press the start/cancel button. Both buttons will illuminate.
- To toast a single slice of frozen bread, place the bread in the **ecoslot™**, press both the defrost and **ecoslot™** buttons, then press the start/cancel button. All buttons will illuminate.
- To toast bagels, place the bagel with its cut sides innermost. Press the bagel button then press the start/cancel button, both buttons will illuminate.

Note when toasting bagels the elements on the two inside slots will toast with a higher heat than those on the outside.

- To toast frozen bagels press both the defrost and bagel buttons, then press the start/cancel button, all buttons will illuminate.
- If the bagel, **ecoslot™** or defrost functions are accidentally selected, press the button again to de-select.
- To save energy if no button is pressed within 5 minutes of connecting the toaster to the power supply, the display will automatically switch off. Press any button to reactivate the display.
- If the toaster mechanism jams, the display will go off and all the lights will flash. If this occurs, switch off and unplug the toaster before attempting to clear the jam.

hints on using your toaster

- Select a lower setting for light browning or for dry bread.
- Dry/stale bread toasts more quickly than fresh bread and thinly sliced bread toasts more quickly than thickly sliced bread. Therefore the browning control should be set at a lower setting than usual.
- For best results ensure that the bread slices are of an even thickness, freshness and size.
- In order to achieve uniform browning we recommend you wait a minimum of 30 seconds between each toasting so that the control can automatically reset. Alternatively select a lower setting when additional toasting is carried out.

warming rack safety

- 1 Never set the browning control higher than 2 when using the warming rack.
- 2 Never completely cover the warming rack.
- 3 When using the warming rack, never wrap the food up. Plastic wrapping will melt and could catch fire. Foil will reflect heat, damaging the toaster.
- 4 If you're using the toaster slots, always remove the warming rack so it can't burn you.

to use the warming rack

- 1 Place the warming rack on top of toaster making sure that it sits level when fitted ③.
- 2 Put your food on top of the rack (slicing thick items in half will speed up the warming process).
- 3 Set the browning control **no higher than 2**.
- 4 Press the start/cancel button, the carriage will lower automatically and the start/cancel light will illuminate.
- 5 The lever will automatically rise at the end of the warming cycle. Turn the items over and repeat the operation. Watch to make sure they don't burn.

care and cleaning

- 1 Before cleaning, unplug your toaster and let it cool down.
- 2 Slide out the crumb tray ②. Clean, then replace. Do this regularly: crumbs can smoke or even burn.
- 3 Wipe the outside of the toaster and the warming rack with a damp cloth, then dry. Do not use abrasives.

service & customer care

- If the cord is damaged it must, for safety reasons, be replaced by KENWOOD or an authorised KENWOOD repairer.

If you need help with:

- using your toaster or
- servicing or repairs (in or out of guarantee)
- ☎ call Kenwood customer care on **023 9239 2333. Have your model number ready** - it's on the underside of your toaster.
- **spares and attachments**
- ☎ call 0870 2413653.
- **other countries**
- Contact the shop where you bought your toaster.

- Designed and engineered by Kenwood in the UK.
- Made in China.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste.



Head Office Address:
Kenwood Limited, New Lane, Havant, Hampshire PO9 2NH, UK
www.kenwoodworld.com

Designed and engineered by Kenwood in the UK

Made in China

40471/1

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.


guarantee (UK only)

If your toaster goes wrong within one year from the date you bought it, we will repair or replace it free of charge provided:

- you have not misused, neglected or damaged it;
- it has not been modified (unless by Kenwood);
- it is not second-hand;
- it has not been used commercially;
- you have not fitted a plug incorrectly; and
- **you supply your receipt to show when you bought it.**

This guarantee does not affect your statutory rights.

KENWOOD

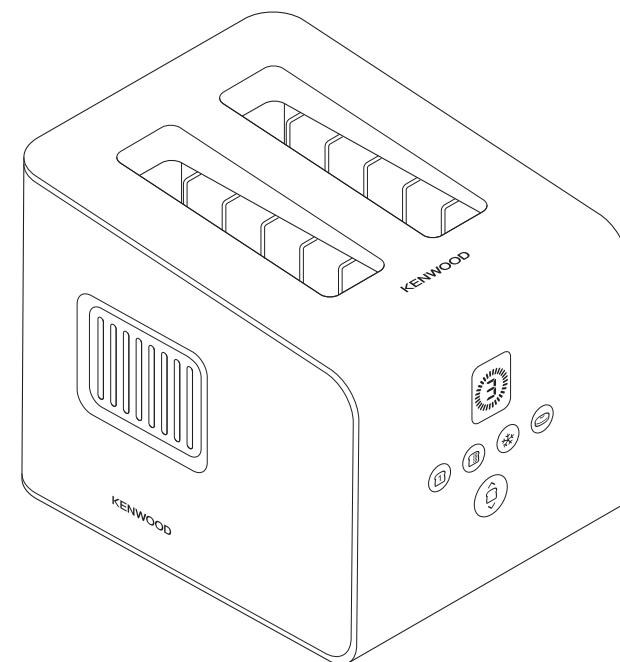

TTM910 series