

safety

- Never let the cord hang down over the worktop edge - a child could grab it and pull the machine down. Push excess cord inside the back of the machine.
- Always make sure there is water in the tank before switching on.
- Never use a damaged coffee maker. Get it checked or repaired: See 'service'.
- Never put the machine in water or let the cord or plug get wet.
- Push out for steam it could burn you.
- This machine is for domestic use only.
- This machine is not intended for use by young children or infirm persons without supervision.
- Don't let children play with this machine.
- This coffee maker is only suitable for use with a thermal jug of the type supplied.
- Always unplug the coffee maker when not in use and before cleaning.

before plugging in

Make sure your electricity supply is the same as the one shown on the underside of your machine.

Important (UK) only

- The wires in the cord are coloured as follows:
Green and Yellow = Earth
Blue = Neutral
Brown = Live.
- This machine complies with European Economic Community Directive 89/336/EEC.

before using for the first time

- 1 Remove all packaging.
- 2 Wash the parts: see 'care and cleaning'.

- 3 Push excess cord inside the back of the machine.
- 4 Run two lots of water through the machine (without coffee) to clean it out. Fill the tank to the 6 cup mark when you do this. See 'to make coffee'.

key

- ① filter door
- ② filter holder
- ③ permanent coffee filter (or use a paper filter instead)
- ④ lid
- ⑤ filter door release button
- ⑥ compartment for excess cord
- ⑦ on switch with indicator light
- ⑧ thermal jug and lid

additional features on the CM860 series only

- ⑨ strength control indicator light
- ⑩ strength control button
- ⑪ auto/on/off indicator light
- ⑫ auto/on/off button
- ⑬ automatic timer light
- ⑭ automatic timer button
- ⑮ hour button
- ⑯ minute button

to set the clock (CM860 series only)

(the clock does not have to be set in order for the coffee maker to operate)

- 1 Plug into the power supply.
- 2 Press the hour and minute buttons until the correct time is shown. Make sure when selecting the hour that AM or PM is correctly selected.
- Providing the appliance remains connected to the power supply the clock will keep the correct time, if it is unplugged the clock will flash 12:00.

to make coffee important

Follow steps 1 to 5 before plugging into the power supply.

- 1 Pour water into the tank. The water must be between the top and bottom cup marks. **Never overfill.** Then close the lid.
- Use **cold** water. We recommend using filtered water from a Kenwood Water Filter as it reduces limescale. Never use warm or fizzy water.
- 2 Open the filter door by pressing the release button and insert the filter holder.
- 3 Add either a permanent filter or a paper filter. Add the coffee (approximately 1 rounded dessertspoon/7g per cup). Then close the filter door.
- 4 Fit the lid onto the thermal jug.
- For brewing the lid should be fully closed. After brewing has finished it's best to keep the lid in this position to retain the coffee temperature.
- 5 Put the jug on the base.
- 6 Plug in to the power supply. To start brewing:
- **CM850 series** if the on switch with the indicator light is not glowing, press the button once.
- **CM860 series** press the auto/on/off button **twice**. The light will come on.
- 7 **CM860 series:** to produce stronger coffee press the strength control button.
- During operation the strength control indicator light will glow for approximately 10 minutes.
- 8 Don't remove the jug until brewing has finished. The thermal jug will keep your coffee hot, but the sooner you drink it, the better it will taste.
- 9 To pour coffee from jug, unscrew the lid and align the arrow with the centre of the spout.

10 When the brewing cycle has finished, the coffee maker will automatically switch itself off.

11 Unplug and let the machine cool down before cleaning.

- If you haven't used the machine for a while, run one lot of water through it (without coffee) to clean it out. Fill the tank to the 6 cup mark when you do this.
- Never put the jug in the microwave.

to use the automatic timer (CM860 series only)

- 1 Make sure there's water in the tank and coffee in the filter.
- 2 Set the correct time.
- 3 Press the automatic timer button and at the same time adjust the Hour and Minute buttons to display the time you want the coffee maker to come into operation. Make sure that the desired AM or PM is selected.
- 4 Release the automatic timer button.
- 5 Press the auto/on/off button once. The automatic timer light will glow.
- When the set brewing time is reached the coffee maker will operate, the automatic timer light will go out and the auto/on/off light will come on.

care & cleaning

- Always unplug and allow to cool before cleaning.
- Never put the machine in water or let the cord or plug get wet.
- Don't wash parts in the dishwasher.

jug, lid, filter holder permanent filter

- Wash, then dry.

body, filter door

- Wipe with a damp cloth, then dry. Don't use abrasives - they'll scratch the surface.

descaling

You'll know when limescale has built up because your coffee will take longer to come through. When this happens it's time to descale.

to descale

- 1 Buy a suitable descaler.
- 2 Descal the machine (without coffee). Don't fill the tank above the 6 cup mark.
- 3 After descaling, run several lots of water through the machine to clean it out. Fill the tank to the 6 cup mark when you do this.
- 4 Wash the parts.

service

- If the cord is damaged it must, for safety reasons, be replaced by Kenwood or an authorised Kenwood repairer.

UK

If you need help with:

- using your machine or
 - servicing, spare parts or repairs (in or out of guarantee)
- call Kenwood customer care on **023 9239 2333. Have your model number ready** – it's on the underside of the coffee maker.

Eire

See our advertisement in Golden Pages.

other countries

Contact the shop where you bought your machine.


guarantee

If your coffee maker goes wrong within one year from the date you bought it, we will repair it (or replace it if necessary) free of charge provided:

- you have not misused, neglected or damaged it;
- it has not been modified (unless by Kenwood);
- it is not second-hand;
- it has not been used commercially;
- you have not fitted a plug incorrectly; and
- **you supply your receipt to show when you bought it.**

This guarantee does not affect your statutory rights.

KENWOOD

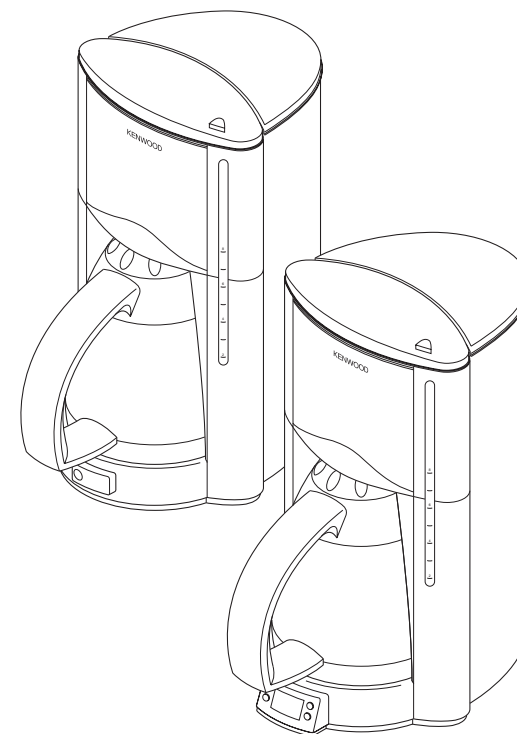

CM850 series

CM860 series

