

KENWOOD

English

2 - 13

TYPE MWA30

instructions

Cod. 6275104900 Rev. 0 - 19/03/2024



Kenwood Ltd

New Lane
Havant
Hampshire
PO9 2NH
kenwoodworld.com



© Copyright 2024.Kenwood Limited. All rights reserved

English

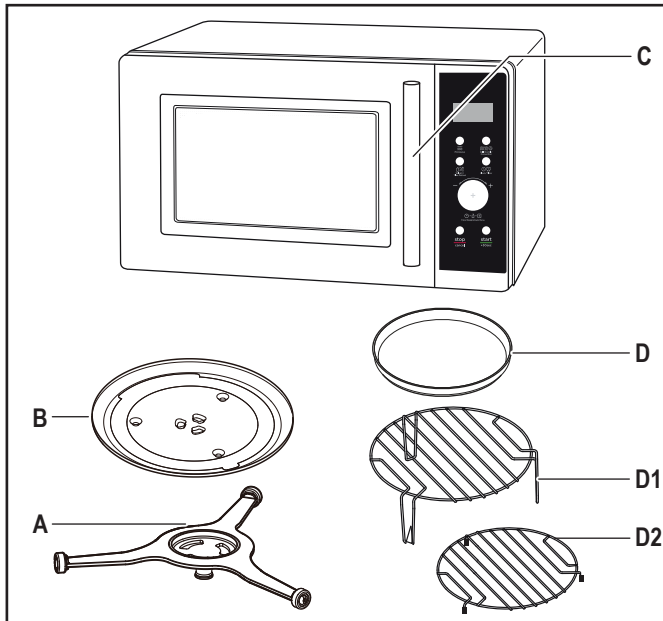


Fig. 1

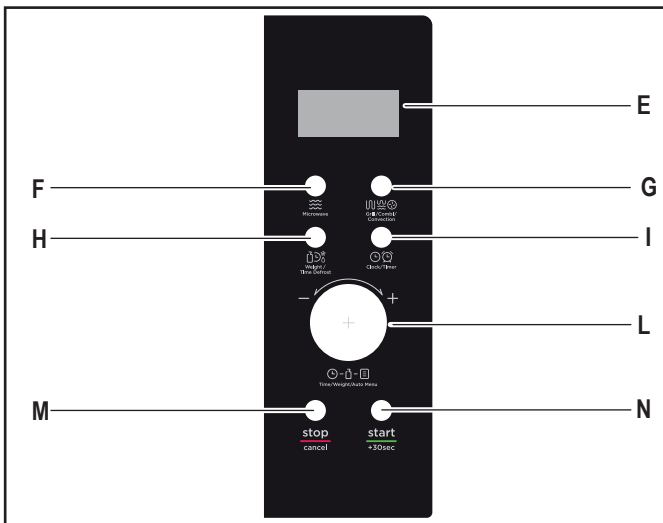


Fig. 2

safety

- Read these instructions carefully and retain for future reference.
- Remove all packaging and any labels.
- If the cord is damaged it must, for safety reasons, be replaced by KENWOOD or an authorised KENWOOD repairer.
- Make sure that the voltage on the appliance rating plate corresponds to that of the mains electricity.
- Never leave the appliance unattended when connected to the power supply; unplug it after every use.
- Never place the appliance on or close to sources of heat.
- Always place the appliance on a flat, level surface during use.
- Never leave the appliance exposed to the elements (rain, sun, etc....).
- Make sure that the power cord does not come into contact with hot surfaces.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Do not allow children to play with the appliance. Cleaning and user maintenance must not be carried out by children unless they are older than 8 and supervised.
- Children under age 8 should not be allowed to handle appliance and its power cord which must be kept out of their reach.

- Never place the appliance body, plug or power cord in water or other liquids; always wipe clean with a damp cloth.
- Always unplug the power cord from the electricity mains before fitting or removing single attachments or before cleaning the appliance.
- Always make sure that your hands are thoroughly dry before using or adjusting the switches on the appliance, or before touching the power plug or power connections.
- To unplug the appliance, grip the plug and remove it directly from the power socket. Never pull the power cord to unplug the appliance.
- Do not use the appliance if the power cord or plug are damaged or if the appliance itself is faulty; all repairs, including substitution of power cord, must be carried out exclusively by an assistance centre or by authorized technicians in order to avoid all risks.
- In case of using extension leads, these must be suitable for the appliance power to avoid danger to the operator and for the safety of the environment in which the appliance is being used. Extension leads, if not suitable, can cause operating anomalies.
- Never allow the cord to dangle in places where it may be grabbed by a child.
- Do not threaten the safety of the appliance by using parts that are not original or which have not been approved by the manufacturer.
- This appliance is designed for HOME USE ONLY and may not be used for commercial or industrial purposes.

- Any changes to this product that have not been expressly authorised by the manufacturer may lead to the user's guarantee being rendered null and void.
- In the event that you decide to dispose of the appliance, we advise you to make it inoperative by cutting off the power cord. We also recommend that any parts that could be dangerous be rendered harmless, especially for children, who may play with the appliance or its parts.
- Packaging must never be left within the reach of children since it is potentially dangerous.
- For safety reasons, always connect the appliance to an earthed socket according to the current electric regulations. **AVOID ANY NON-COMPLIANT ELECTRIC INSTALLATION.**
- Wash all attachments thoroughly before use.
- According to the placement of the kitchen, place the oven on a work surface or a kitchen cabinet that can bear a temperature of at least 90°C.
- This appliance complies with Directives 2014/35/EU and EMC 2014/30/EU, as well as to regulation (EC) No. 1935/2004 of 27/10/2004 on materials in contact with food.
- Do not move appliance while operating.
- Whilst operating, the metallic parts and the glass are hot: use the appliance touching the metallic handle only.
- Do not warm frying oil or grease up, as the temperature of oil cannot be controlled.
- After use, clean the appliance inside with a

damp cloth first, and then with a dry cloth to remove any residues of food and fat. The fat residues may overheat and generate smoke or catch on fire.

- If the materials in the oven cavity generate smoke or catch on fire, keep the door closed, switch the oven off and unplug it.
- Always shell and peel eggs, boiled eggs, potatoes, sausages, chestnuts, etc. before cooking.
- Always use containers suitable for microwave cooking (e.g. heat-resistant ceramic, glass or plastic containers). Never use metallic containers for microwave cooking as sparks may occur.
- Whilst heating liquids up, always use a container with a wide opening and wait at least 20 seconds before removing them from the oven to prevent sudden, explosive boiling. Never use the oven for boiling liquids.
- **WARNING:** do not heat up liquids and food in sealed containers to prevent them from exploding.
- After cooking, the container may be very hot. Always use appropriate gloves or mittens to remove food from the oven and direct the steam away from face and hands to prevent the risk of burn.
- Allow the rotating base to cool down before cleaning it.
- Do not put frozen food or cold kitchenware on the hot rotating base.
- Make sure the kitchenware do not press against the inner walls of the oven whilst cooking.
- Do not use the appliance when the con-

tainer with the ingredients is not placed on the assembly seat.





 
 
 

- To prevent the oven from damaging, do not use it without liquids or food inside.
- Clean the oven on a regular basis and remove any food residue. The failure to comply with the appliance cleaning and maintenance precautions may damage the surface and jeopardize the status of the appliance itself, as well as causing danger situations.
- To ensure an adequate ventilation, leave a space of min. 0 cm between the wall and the rear side of the oven, 20 cm from the sides and 30 cm from the top.
- Do not place rags or dishes underneath the appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- **WARNING:** if the door seals are damaged, the oven must not be operated until it has been repaired by a trained person.
- **WARNING:** it is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
- When heating food in plastic or paper containers keep an eye on the oven due to the possibility of ignition.
- Microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

- Contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- The appliance shall not be cleaned with a steam cleaner.

key

- A Rotating ring
- B Glass base
- C Door handle
- D Bake tray (only be used in Air Fry function and be placed on the high grill)
- D1 High grill
- D2 Lower grill

control panel description

- E  Display
- F  "Microwave" button (microwave cooking)
- G  "Grill / Combi. / Convection" button (Combined cooking / Grill / convection cooking)
- H  "Weight / Time Defrost" button (defrosting weight/ time)
- I  "Kitchen Timer / Clock" button (Timer / Clock setting)
- L  "Time" / "Weight" / "Auto Menu" dial (Time setting / Weight / Pre-set menu)
- M  "Stop / Cancel" button (Stop / Reset)
- N  "Start / +30 sec." button (Start)

The microwaves are electromagnetic radiations that are also present in nature in the form of light waves (e.g. sunlight) and that, inside the oven, go through food from any directions and warm up the molecules of water, fat, and sugar. The heat is produced very quickly only in food, while the container warms up

only indirectly for heat transfer from hot food. This prevents the food from adhering to the container, therefore it is possible to use very little fat or to avoid its use during the cooking process. The microwave cooking is deemed to be very healthy and dietetic since it is low fat. Furthermore, in comparison with the traditional systems, as cooking is at a lower temperature, the food dehydrates less, does not lose its nutrients and preserves its flavour more.

how to operate

CLOCK SETTING

When the microwave oven is plugged in, the display (E) will show "0:00" and a "beep" will be emitted.

- Press the button (I) "Kitchen Timer / Clock" button once. "00:00" displays,
- Rotate the dial to increase or the decrease the values of hours (from 0 to 23).
- Press the button "Kitchen Timer / Clock" button, the minute indicator will start blinking.
- Rotate the dial to increase or decrease the values of minutes (from 0 to 59).
- Press the button "Kitchen Timer / Clock" button to confirm setting; the sign ":" will flash and the display (E) will show the time set.

WARNING:

The clock is a 24-hour display. If the clock is not set, it would not work when powered.

WARNING:

To reset the clock, please repeat step 1 to step 5.

KITCHEN TIMER SETTING

- Press the button (I) "Kitchen Timer / Clock" button twice, the screen will display " 00:00 ".
- Rotate the dial to enter the desired time (The maximum time value is 95 minutes).
- Press the button "Start/+30Sec." to confirm setting.

WARNING:

When the kitchen time is reached, the buzzer will ring 5 times.

WARNING:

The kitchen Timer is different from 24-hour system. Kitchen Timer is a timer.

"MICROWAVE" COOKING

- Pressing the button "Microwave", the display (E) will show the power "P100".
- Press the button "Microwave" several times or rotate the dial for increasing or decreasing the values to select the required power, which will be shown on the display (E) ("P100" corresponds to 100%, "P80" to 80%, "P50" to 50%, "P30" to 30%, or "P10" to 10%).
- Press the button "Start / +30 sec." to confirm power.
- Rotate the dial to increase or decrease the values of the cooking time (from 0:05 to 95:00 min.).
- Press the button (N) "Start / +30 sec." again to confirm the cooking time.

Example: If it is required to use 80% of the oven power to cook for 20 minutes, proceed as described below:

- 1) Press the button "Microwave" once, the display will show "P100" flashing.
- 2) Press the button "Microwave" once more or rotate the dial to select 80% of microwave power.
- 3) Press the button (N) "Start / +30 sec." to confirm, the display will show "P80".
- 4) Rotate the cooking setting dial until the display shows "20:00".
- 5) Press the button "Start / +30 sec." to start cooking.

Note: the amount of steps visualised for cooking time setting are as follows:

WARNING:

Do not use the lower and high grill for microwave cooking; for the combined cooking of the grill, the grills must be always positioned on the glass tray.

Time interval	Visualised steps
from 0 to 1 min.	5 sec.
from 1 to 5 min.	10 sec.
from 5 to 10 min.	30 sec.
from 10 to 30 min.	1 min.
from 30 to 95 min.	5 min.

GRILL COOKING

- Press the "Grill / Combi. / Conv." button, the display (E) will show "G-1".
- Press the "Start / +30 sec." button to confirm power.
- Rotate the dial to increase or decrease the cooking time values (from 0:05 to 95:00 min.).
- Press the "Start / +30 sec." button (N) again to confirm cooking time and start cooking.
- When half of the time has passed, the buzzer will sound to remind you to turn the food over. If no operation, the oven will continue working.

Example: If it is required to use the grill power to cook for 10 minutes, proceed as described below:

- 1) Press the "Grill / Combi. / Conv." button once, the display will show "G-1".
- 2) Press the "Start / +30 sec." button to confirm.
- 3) Rotate the dial to set cooking time until the display shows "10:00".
- 4) Press the "Start / +30 sec." button to start cooking.

COMBINATION COOKING

- Press the "Grill / Combi. / Conv." button, the display (E) will show "G-1".
- Press the "Grill / Combi. / Conv." button several times or rotate the dial to select the required power, which will be shown on the display (E) ("G-1", "C-1", "C-2", "C-3", "C-4").
- Press the "Start / +30 sec." button to confirm power.
- Rotate the dial to increase or decrease the cooking time values (from 0:05 to 95:00 min.).
- Press the "Start / +30 sec." button again to confirm cooking time and start cooking.
- To stop cooking, open the door or press the "Stop / Cancel" button: the program set will be paused and the remaining time will stop on the display.

Display	Micro-wave	Grill	Con-vection
C-1	•		•
C-2	•	•	
C-3		•	•
C-4	•	•	•

CONVECTION COOKING (WITH PREHEATING FUNCTION)

- Keep pressing the "Grill / Combi. / Conv." button or rotate the dial to select the convection temperature (the temperature can be chosen from 150 degrees to 240 degrees).
- Press the "Start / +30 sec." button to confirm the temperature.
- Press the "Start / +30 sec." button to start preheating. When the preheating temperature arrives, the buzzer will sound twice to remind you to put the food into the oven. And the preheated temperature is displayed and flash.
- Put the food into the oven and close the door.
- Rotate the dial to adjust the cooking time (the maximum setting time is 95 minutes).

- Press the "Start / +30 sec." button to start cooking.

CONVECTION COOKING (WITHOUT PRE-HEATING FUNCTION)

- Keep pressing the "Grill / Combi. / Conv." button or rotate the dial to select the convection temperature (the temperature can be chosen from 150 degrees to 240 degrees).
- Press the "Start / +30 sec." button to confirm the temperature.
- Rotate the dial to adjust the cooking time (the maximum setting time is 95 minutes).
- Press the "Start / +30 sec." button to start cooking.

DEFROSTING BY WEIGHT

- Press the "Weight/Time Defrost" button once and the display (E) will show "d-1".
- Rotate the dial to set the weight of food (from 100 g to 2000 g).
- Press the button "Start / +30 sec." to start defrosting.
- When half of the time has passed, the buzzer will sound to remind you to turn the food over. If no operation, the oven will continue working.

DEFROSTING BY TIME

- Press the "Weight/Time Defrost" button twice and the display (E) will show "d-2".
- Rotate the dial to set the required defrosting time (max. 95 minutes).
- Press the "Start / +30 sec." button to start defrosting. The defrosting power is equal to 30% (P30) and cannot be modified.

MULTI-FUNCTION COOKING

Two stages can be maximally set. If you set defrost function, it will work automatically in the first stage. The buzzer will ring once after each stage and the next stage will begin.

Note: Auto menu and preheating cannot be set as one of the multi-stage.

Example: To defrost food for 5 minutes and cook them at 80% power with the microwave function for 7 minutes, proceed as follows:

- Press the "Weight/Time Defrost" button twice and the oven will show "d-2".
- Rotate the dial to set the defrosting time up to "05:00".
- Press the button "Microwave", the display (E) will show the power "P100".
- Press the button "Microwave" again to choose 80% microwave power then "P80" displays.
- Press the button "Start / +30 sec." to confirm, the display will show "P80".
- Rotate the dial to set the cooking time up to "07:00".
- Press the button "Start / +30 sec." to start cooking.

SPEEDY COOKING

- In standby mode, turn the setting dial left to set the cooking time with 100% power. Continue to turn the knob to adjust the cooking time.
- Then press the "Start / +30 sec." button to start cooking. This program can be set as the first one of multi-stage.

AUTO MENU

- Without setting, rotate the dial right to choose the function wanted, and "A1", "A2", "A3".... "A1 " "H-01", "H-02".... "H-09" will be displayed.
- Press the button "Start / +30 sec." to confirm the menu.
- Rotate the dial to set the weight, as shown on the table below.
- Press the button "Start / +30 sec." to start cooking.

NOTE:

Opening the oven door or pressing the button "Stop/Cancel" during operation will interrupt the current mode.

It is necessary to turn the dial right first in the standby mode for selecting "Auto Menu". Turning the dial left first in the speedy cooking for selecting cooking time.

Menu	Weight	Display	Power
A-01 Auto reheat	150 g	150	P100
	250 g	250	
	350 g	350	
	450 g	450	
	600 g	600	
A-02 Potato	1 (about 230 g)	1	P100
	2 (about 460 g)	2	
	3 (about 690 g)	3	
A-03 Meat	150 g	150	P80
	300 g	300	
	450 g	450	
	600 g	600	
A-04 Vegetables	150 g	150	100%
	350 g	350	
	500 g	500	
A-05 Fish	150 g	150	P80
	250 g	250	
	350 g	350	
	450 g	450	
	650 g	650	
A-06 Pasta	50 g (with 450 g cold water)	50	P80
	100 g (with 800 g cold water)	100	
	150 g (with 1200 g cold water)	150	
A-07 Soup	200 ml	200	P100
	400 ml	400	
	600 ml	600	
A-08 Cake	475 g	475	Preheat to 180°C
A-09 Pizza	200 g	200	C-4
	300 g	300	
	400 g	400	
A-10 Chicken	500 g	500	C-4
	750 g	750	
	1000 g	1000	
	1200 g	1200	

AIR FRY FUNCTION

- Place the high grill (D1) on the glass base (B), then place the back tray (D) on the high grill (D1) with the food to be cooked in Air Fry mode.
- Without setting, rotate the dial right to choose the function wanted: "H-01", "H-02"...."H-09" will be displayed.

- Press the button "Start / +30 sec." to confirm the menu.
- Rotate the dial to set the weight, as shown on the table below.
- Press the button "Start / +30 sec." to start cooking.

Menu	Display	Weight	Cooking time
H-01 Frozen French fries	300 g	300 g	6:00/16:00
H-02 Frozen potatoes balls	350 g	350 g	16:00
H-03 Frozen squid ring	250 g	250 g	16:00
H-04 Frozen onion rings	250 g	250 g	16:00
H-05 Frozen chickens	350 g	350 g	20:00
H-06 Steak	400 g	400 g	22:00
H-07 Shrimp	250 g	250 g	18:00
H-08 Vegetables	200 g	200 g	16:00
H-09 Spring roll	300 g	300 g	18:00

- Note: Buzzer will sound during cooking to remind you to turn over the food.

UNPLUG THE APPLIANCE BEFORE MOUNTING OR REMOVING THE SINGLE PARTS OR BEFORE CLEANING.

SAFETY FUNCTION FOR CHILDREN

- You can use this function to prevent children from accidentally turning the oven on.

To activate the lock:

- In standby mode, press and hold the button "Stop / Cancel" for 3 seconds; the appliance will emit a long sound indicating the start of the safety state for children.

To deactivate the lock:

- In locked state, press and hold the button "Stop/Cancel" for three seconds. A long beep sounds.

- The oven cavity must always be clean. When there are food/liquid residues inside the oven, clean the sides with a damp cloth. If the oven is very dirty, a mild detergent may be used. Avoid sprayers or too aggressive detergents as they may leave stains or strips or opacify the door surface.
- The outside surface are to be cleaned with a damp cloth only. To prevent the operating parts inside the oven from damaging, there must be no water traces in the ventilation openings.
- Often clean the door and the window on both sides, the sealed locks and the parts nearby, using a damp cloth, to remove squirts or residues. Do not use an abrasive detergent in any case.
- The control panel must always be dry. Clean it with a soft, damp cloth. When carrying out this procedure, leave the door open to prevent the oven from starting accidentally.

cleaning and maintenance

ATTENTION:

NEVER IMMERSE THE APPLIANCE BODY, THE PLUG AND THE POWER CORD IN WATER OR OTHER LIQUIDS, USE A DAMP CLOTH FOR CLEANING.

EVEN WHEN NOT IN USE,

- Wipe steam from the inner/outside part of the door by means of a soft cloth. This may occur when working in high-humidity conditions and, therefore, it is normal.
- Sometimes, it is necessary to remove the glass base to clean it. Clean the base with soapy, warm water or a dish detergent.
- The rotating ring and the bottom of the oven must be kept cleaned to avoid too much noise, therefore clean them with water and mild detergent or a dish detergent. After having removed the ring for cleaning, re-position it properly.
- Remove the smell from the oven cavity by mixing a cup of water and the lemon juice and peel in a deep microwave container, put it into the oven and let the latter work for 5 minutes. Clean thoroughly and wipe with a soft cloth.
- For replacing the oven light, contact the dealer.
- Clean the oven on a regular basis and remove any food residue. Otherwise, the surfaces may deteriorate, thus reducing the appliance life or causing a risk condition.



**IMPORTANT INFORMATION
FOR CORRECT DISPOSAL
OF THE PRODUCT IN
ACCORDANCE WITH THE
EUROPEAN DIRECTIVE ON
WASTE ELECTRICAL AND
ELECTRONIC EQUIPMENT
(WEEE)**

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

service and customer care

- If you experience any problems with the operation of your appliance, before requesting assistance visit www.kenwoodworld.com.
- Please note that your product is covered by a warranty, which complies with all legal provisions concerning any existing warranty and consumer rights in the country where the product was purchased.
- If your Kenwood product malfunctions or you find any defects, please send it or bring it to an authorised KENWOOD Service Centre. To find up to date details of your nearest authorised KENWOOD Service centre visit www.kenwoodworld.com or the website specific to your Country.
- Made in China.



a

e

