

**WITH REGARD TO THIS MANUAL**

This appliance is made in conformity with appropriate European regulations in force, to protect the user wherever possible from potential hazards. Even if you are familiar with this type of appliance, carefully read this manual before use. Only use this appliance for the purpose it is designed for in order to prevent accidents and damage. Keep this manual close by for future consultation. If you should decide to give this appliance to other people, remember to also include these instructions.

**INTENDED USE**

You can use the appliance for boiling water only. Any other use of the appliance is not intended by the Manufacturer who does not accept any responsibility for damages of any kind caused by improper use of the appliance itself. Improper use also results in any form of warranty being forfeited.

**WARNINGS ON BURNS**

- Never fill the appliance beyond the maximum limit; there is a risk of boiling water spilling out.
- Be careful not to come into contact with the hot water while preparing beverages or cleaning; danger of burns.
- When filling the kettle, avoid contact with the steam that escapes from the spout and lid.
- WARNING:** do not remove the lid while the water is boiling.
- Lift the kettle by its handle.
- During the use, the appliance heats up. Avoid contact with the kettle.

**IMPORTANT SAFEGUARDS****READ THESE INSTRUCTIONS CAREFULLY.**

- This appliance is designed solely for household and similar uses such as:
- in cooking areas used by personnel of shops, offices and other professional environments;
- on farms;
- guests of hotels, motels and other residential environments;
- bed and breakfast type of environments.
- We decline any responsibility resulting from misuse or any use other than those covered in this booklet.

It is recommended to keep the original packaging, because the free repair service does not cover failures caused by inadequate packaging of the product when shipped to an authorized Service Center.

Using accessories not recommended or not supplied by the manufacturer of the appliance may entail risks of fire, electric shock or injuries to people.

The appliance complies with Regulation (EC) No 1935/2004 of 27/10/2004 on the materials in contact with food.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Warning to avoid spillage on the connector.

Statement that the heating element surface is subject to residual heat after use.

Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its power cord out of the reach of children under the age of 8.

Children shall not play with the appliance or its components.

Do not let the power cord hang in a place where it could be grasped by a child.

Do not leave the packaging near children because it is potentially dangerous.

In the event that this appliance is to be disposed of, it is suggested that the power cord is cut off. It is also recommended that all potentially dangerous components including the power cord are rendered harmless to prevent personal injury. Do not let children play with the appliance or its components.

Unplug the appliance when the kettle is not being used and before all maintenance and cleaning operations.

Always turn off the appliance and unplug the power cord from the electrical outlet before filling the kettle with water. Do not go past the MAX level.

Do not immerse the appliance in water or other liquids.

- Never put live parts into contact with water: Risk of short circuit and/or electric shock.
- Never leave the appliance unattended when it is connected to the power supply.
- The appliance must be used and left at rest on a stable surface.

- The appliance must not be used if it has been dropped, if there are visible signs of damage or leaks of water. Do not use the appliance if the power cord or the plug are damaged, or if the appliance is faulty. To prevent any accident, all repairs, including the replacement of the power cord, must be carried out by an Authorised Service Centre or by suitably qualified personnel.

- Place the appliance in an adequately illuminated environment and with the power outlet easily accessible.
- ATTENTION:** do not use the appliance on an inclined surface.
- ATTENTION:** make sure the appliance is turned off before removing the kettle from the power base.

- Not to lift the appliance by grasping its body or the power base but holding it by the handle.
- Only use the power supply base supplied: keep the base clean and dry.

- Never fill the appliance beyond the maximum limit; there is a risk of boiling water spilling out.
- Make sure the lid is correctly placed on the kettle before turning on the unit.
- Do not use the appliance without water.
- Never fill the kettle with hot or boiling water.
- The cable must not touch the hot parts of the appliance.
- The product cannot be powered by external timers or with separate remote control systems.
- Do not touch the hot surfaces. Use pot holders or tea towels.
- Do not use sparkling (carbonated) water.
- Do not use the appliance outdoors.
- Never put the appliance on or near gas stoves or electric hotplates.
- Do not leave the appliance exposed to weathering (rain, sun, etc.).

- After disconnecting the power plug and after the hot parts have cooled, the appliance must be cleaned only with a non-abrasive cloth slightly moistened by adding a few drops of mild, non-aggressive detergent (never use solvents that damage plastic).
- For proper disposal of the product in accordance with the European Directive 2012/19/EU please read the dedicated leaflet attached to the product.

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.****DESCRIPTION OF THE APPLIANCE**

- Lid
- Kettle
- Operation indicator
- Power supply base
- On/Off button
- Cord storage device
- Power cord + Plug

**PRELIMINARY PHASES FOR USE**

**Starting the appliance**  
Before connecting the appliance to the mains check that the voltage indicated on the rating plate under the appliance matches with the local mains. Place the appliance on a horizontal and stable surface.

**Warning!**  
Do not place the appliance or the power cord near or on gas/electric stoves when they are hot, or near microwaves oven.

Prevent the cord from protruding beyond the edge of the table or surface. Prevent children from grabbing the cord, in this way tipping over the appliance.

If the power cord is too long, wrap it around the power supply base cord storage device (Fig. 3). The cable must not touch the hot parts of the appliance.

Position the appliance so that children cannot reach the hot parts.

**INSTRUCTIONS FOR USE**

**Warning!**  
The water filling and emptying operations must be performed with the kettle separated from the power supply base.

Before connecting or disconnecting the appliance from the socket, check that the on/off button is pressed in the "0" position.

Do not use the kettle without water.

Boil the water the first time the appliance is turned on. Empty and rinse the kettle. Repeat the operation two or three times. Fill the kettle with cool tap water until the desired level.

**Do not go past the MAX level.**

Close the cover. Place the kettle on the power supply base (4). Insert the plug into the socket, which must be earthed. Move the On/Off button (5) to position "1". The operation light (3) turns on. When the water reaches a boil, the appliance automatically turns off. The On/Off button goes back to "0" and the indicator light turns off.

reaches a boil, the appliance automatically turns off. The On/Off button goes back to "0" and the indicator light turns off.

**Warning!**  
Do not open the kettle lid while the water is boiling. Danger of splashing from boiling water.

Make sure that the kettle is off before lifting it from its power supply base. Grasp the kettle by its handle. Lift the kettle away from its power supply base. Pour the water into the cups. Empty any water remaining in the kettle after every use.

If you turn on the kettle when the water inside is below the level indicated by Min, the appliance turns off automatically. To boil water again, wait a few seconds to allow the boil dry protection device to reset.

If the kettle should turn on and off during use, or if it turns off before coming to the boil, check the appliance for an accumulation of scale (see "Scale removal").

Any drops of water under the kettle is entirely normal: it is only condensation.

**CLEANING THE APPLIANCE**

**Warning!**  
All cleaning operations described below must be carried out with the appliance switched off and with the plug disconnected from the socket.

Regular maintenance and cleaning preserve and maintain the appliance efficient for a longer period. Never wash the appliance components in the dishwasher. Do not use direct jets of water.

Every operation must be carried out when the appliance is cold.

**Cleaning the kettle and power supply base**

**Warning!**  
Do not wash the appliance in a dishwasher.

Clean the appliance using a damp, non-abrasive cloth so as to not damage the body. Dry thoroughly with a soft cloth.

**Removing lime**

A good maintenance and regular cleaning preserve and maintain the appliance operating efficiently for a longer period greatly reducing the risk of scale formation inside the appliance. If despite this, after some time, the appliance operation is compromised, due to constant use of hard and very calcareous water, the appliance can be decalcified to eliminate the malfunction. For this purpose you must use only a citric acid-based decalcifying products. This product is easily available at technical assistance centres. Ariete does not accept any responsibility for damage to internal components caused by the use of non-conforming products due to the presence of chemical additives. If a descaling is required, observe the directions on the instruction sheet of the descaling product.

**SETTING THE MACHINE OUT OF SERVICE**

In the case of decommissioning of the appliance, it must be electrically disconnected. Cut the power cord.

In case of scrapping you will be required to separate the various materials used in the construction of the appliance and dispose of them according to their composition and to the applicable laws in the country of use.

**EL****ΣΧΕΤΙΚΑ ΜΕ ΤΟ ΠΑΡΟΝ ΕΓΧΕΙΡΙΔΙΟ**

Αυτή η συσκευή καποκεντάκη σύμφωνα με τους ισχύοντες Ευρωπαϊκούς κανονισμούς, για την προστασία του χρήστη, όπου αυτό είναι δυνατό, από μέσους κινδύνου:

Άκρη και αν έστειλεκμένοι με αυτόν τον τύπο συσκευής, διαβάστε προσεκτικά αυτό το εγχείριο πριν από την χρήση. Χρησιμεύτηκε τη συσκευή μόνο για το σκοπό που προβλέπεται, ώστε να αποφύγεται απηχημάτων και ζημιών. Φυλάξτε το παρόν εγχείριο για να μπορείτε να συμβούλευστε στο μέλλον. Εάν δωστε τη συσκευή σε κάποιο άλλον, δημιουργήστε τη συσκευή σαν νέα.

**ΠΡΟΒΛΕΨΟΜΕΝΗ ΧΡΗΣΗ**

Μπορείτε να χρησιμοποιήστε τη συσκευή μόνο για να βράσετε νερό. Οποιαδήποτε άλλη χρήση, παρότι μπορείτε να γίνεται, δεν πρέπει να γίνεται.

• Κατά την προετοιμασία των ροφημάτων και όταν καθαρίζετε τη συσκευή, πρέπει να προσέχετε να μην αγγίξετε το ζεστό νερό; κίνδυνος εκτόξευσης.

• Όταν γεμίζετε το βραστήρα, να αποφεύγετε την επαφή με τον απόμερο του εκρύψιμο ακρούτσιο.

• **ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** μην αφαιρείτε το καπάκι, όποιο βράζει το νερό.

• Αναστρέψτε το βραστήρα από τη χειρολαβή του.

• Η συσκευή ζεσταίνεται κατά τη διάρκεια της χρήσης. Αποφύγετε την επαφή με το βραστήρα.

• Δεν πρέπει να χρησιμοποιείτε τη συσκευή αν έπεσε κάποια, αν υπάρχουν εμφανείς ζημιές ή να παρουσιάζει διαρροή νερού. Μην χρησιμοποιείτε τη συσκευή αν έχει ζημιά το καλώδιο ή το ηλεκτρικό τροφοδοτικό.

• Μην αφήνετε τη συσκευή σε νέα μερικά πατάσια, ώστε να αποφύγετε την επέμβαση συντήρησης ή καθαρισμού.

• Μην αφήνετε το καλώδιο να κρέμεται σε μια θέση που μπορεί να φτάσει το πατάσιο.

• Μην βιθίζετε τη συσκευή σε νέρο ή άλλα υγρά.

• Μην βρέχετε ποτέ τη μέρη της συσκευής που έχουν ηλεκτρική τάση: κίνδυνος βραχυκυκλώματος ή/και ηλεκτροπλήξιας.

• Μην αφήνετε τη συσκευή στην πρίζα, όταν απομακρύνετε από το χώρο που βρίσκεται.

• Πρέπει να χρησιμοποιείτε και να ακουμπάτε τη συσκευή σε μια σταθερή επιφάνεια.

• Δεν πρέπει να χρησιμοποιείτε τη συσκευή αν έπεσε κάποια, αν υπάρχουν εμφανείς ζημιές ή να παρουσιάζει διαρροή νερού. Μην χρησιμοποιείτε τη συσκευή αν έχει ζημιά το καλώδιο ή το ηλεκτρικό τροφοδοτικό.

• Λειτουργία: Οι επιλογές που θα ανάμετε τη συσκευή, βράστε τη συσκευή στην πρίζα, από την θέση "0".

• Στο παρόν εγχείριδο, προτίθεται το βραστήρα στην θέση "1". Ανάβετε τη συσκευή στην θέση "1". Τον βράστε στην θέση "1". Ανάβετε τη συσκευή στην θέση "0".

• Στην θέση "1", ανάβετε τη συσκευή στην θέση "0". Ανάβετε τη συσκευή στην θέση "1". Τον βράστε στην θέση "1". Ανάβετε τη συσκευή στην θέση "0".

• Στην θέση "0", ανάβετε τη συσκευή στην θέση "1". Τον βράστε στην θέση "1". Ανάβετε τη συσκευή στην θέση "0".

• Στην θέση "1", ανάβετε τη συσκευή στην θέση "0". Ανάβετε τη συσκευή στην θέση "1". Τον βράστε στην θέση "1". Ανάβετε τη συσκευή στην θέση "0".

• Στην θέση "0", ανάβετε τη συσκευή στην θέση "1". Τον βράστε στην θέση "1". Ανάβετε τη συσκευή στην θέση "0".

• Στην θέση "1", ανάβετε τη συσκευή στην θέση "0". Ανάβετε τη συσκευή στην θέση "1". Τον βράστε στην θέση "1". Ανάβετε τη συσκευή στην θέση "0".