

ABOUT THIS MANUAL

The appliance has been manufactured in compliance with the specific European Standards in force and all the parts potentially dangerous to the user are protected. Read this manual carefully before use. Use the appliance only for its intended use to avoid possible injury and damage. Keep this manual handy for future reference. Should you decide to give this appliance to other people, remember to include these instructions as well.

INTENDED USE

The appliance can be only used to boil water. This appliance shall not be used for commercial and industrial purposes. Any other use of the appliance is not intended by the Manufacturer, which is exempt from any liability for damages of any kind, generated by improper use of the appliance. Improper use also results in voiding any form of warranty.

WARNING OF BURNS

- Never exceed the MAX level when filling the appliance. Steam or splashes of boiling water may escape from the body of the appliance.
- During the appliance operation, steam or splashes of boiling water may escape from the body of the appliance. Danger of burns. Keep your hands and face away from the appliance.
- **WARNING.** Do not open the lid while the water is boiling. Steam or splashes of boiling water may escape from the body of the appliance. Danger of burns. Keep your hands and face away from the appliance.
- Hold the appliance only by the handle.
- During use, the appliance reaches high temperatures. Keep your hands and face away from the appliance.
- Do not touch the body of the appliance when the appliance is in use or in the minutes following its turning off.
- Unplug the appliance from the power outlet and wait for the hot parts to cool down before carrying out any cleaning and maintenance operations.

SAFETY WARNINGS

READ THE INSTRUCTIONS CAREFULLY BEFORE USE.

- The appliance has been designed to be used for household purposes or similar, such as:
 - in cooking areas reserved for shop staff, offices and other professional environments
 - on farms
 - hotels, motels, bed & breakfasts and other residential facilities (for use by guests).
- Do not use the appliance for purposes other than those described in this manual. The manufacturer declines any responsibility for misuse or for any use other than those specified in this manual. Improper use also results in voiding any form of warranty.
- We suggest keeping the original packaging, as free assistance is not provided for failures resulting from inadequate packaging of the product at the time of shipping to an authorized Service Centre.
- In order not to compromise the safety of the appliance, use only original spare parts and attachments authorized by the Manufacturer.
- The appliance complies with the Regulation (EC) No. 1935/2004 of 27/10/2004 concerning the materials intended to come into contact with food products.
- The appliance can be used by children over 8 years of age and by people with reduced physical, sensory or mental capacities, or who lack experience or knowledge, only if they are supervised by a responsible person or if they have received and understood the instructions and the existing dangers when using the appliance.
- Children shall not play with the appliance.
- Warning to avoid spillage on the connector.
- Statement that the heating element surface is subject to residual heat after use.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its power cord out of the reach of children under the age of 8.
- Do not let the power cord hang in a place where it could be grasped by a child.
- Position the appliance so that children cannot reach the hot parts.
- Do not leave the packaging near children as it is a potential source of danger.
- If you decide to dispose of this appliance as

waste, it is recommended to make it inoperative by cutting the power cord. It is also recommended to make harmless the parts of the appliance which could constitute a danger, especially for children who could use the appliance as a game.

- Always connect the appliance to an earthed socket.
- Do not use the appliance if your hands are wet or if you are barefoot.
- Always unplug the appliance from the power outlet before filling it with water. Never exceed the MAX level when filling the appliance.
- Always remove the appliance from the power base before filling with water and emptying the appliance.
- Never immerse the appliance, the plug and the power cord in water or other liquids.
- Never put live parts in contact with water: risk of short circuit and/or electric shock.
- Do not leave the appliance unattended while connected to the power supply.
- Place the appliance in an environment that is sufficiently lit, clean and where the power outlet is easily accessible.
- The appliance shall be used and left at rest on a stable surface.
- The appliance shall not be used if it has been dropped or if there are visible signs of damage. Do not use the appliance if the power cord or the plug are damaged, or if the appliance is faulty. All repairs, including the power cord replacement, shall be carried out only by an Ariete Service Centre or by Ariete authorized technicians, in order to prevent any risk.
- **WARNING:** do not use the appliance on an inclined surface.
- **CAUTION:** always unplug the appliance from the power outlet before removing it from its power base.
- In order to lift the appliance, hold it by the handle.
- Use only the power base supplied with the appliance: keep the power base clean and dry.
- Check that the lid is properly closed before turning the appliance on.
- Do not operate the appliance dry, without water.
- Never fill the appliance with hot or boiling water.
- Do not use sparkling water (with added carbon dioxide).
- The power cord shall not touch hot surfaces.
- The appliance must not be power supplied by external timers or separate remote-controlled systems.
- Do not use the appliance outdoors.
- Do not place the appliance or the power cord near or over hot electric or gas stoves, or near a microwave oven.
- Do not leave the appliance exposed to weathering (such as rain or sun).
- After unplugging the appliance and when hot parts have cooled down, only clean the appliance using a damp, non-abrasive cloth and a few drops of mild, non-aggressive detergent.
-  For the proper disposal of the product in accordance with the European Directive 2012/19/EU, please read the leaflet attached to the product.
- **ALWAYS KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

DESCRIPTION OF THE APPLIANCE

- A - Power base
- B - Body of the appliance
- C - Filter
- D - Lid
- E - Lid opening handle
- F - ON/OFF button
- G - Handle
- H - Water level indicator (MAX and MIN)
- I - Cord storage device
- J - Power cord

BEFORE USE

Check the voltage indicated on the data plate under the appliance matches the local voltage supply.

Warning!

Place the appliance at a distance of at least 10 cm from walls, furniture or other appliances.

- 1 Place the appliance on a flat, stable and heat resistant surface.
- 2 Fully unwind the power cord.

INSTRUCTIONS FOR USE

Warning!

Always remove the appliance from the power base before filling with water and emptying the appliance.

Before plugging the appliance into the power supply, check that the ON/OFF button is in the "0" position.

Warning!

Do not operate the appliance dry, without water.

When using the appliance for the first time, fill the appliance with water and let it boil. Empty and rinse the appliance. Repeat this procedure two or three times.

- 1 Use the lid opening handle (E) to lift the lid (D). Fill the appliance with fresh still water up to the desired level.

Never exceed the MAX level when filling the appliance.

- 2 Close the lid (D). Place the appliance on the power base (A).

Warning!

Check that the lid is properly closed before turning the appliance on.

- 3 Plug the appliance into the power outlet.

- 4 Set the ON/OFF button (F) to the "1" position. The operation indicator inside the appliance turns on blue.

The appliance automatically turns off once the water reaches boiling point. The ON/OFF button goes back to the "0" position. The operation indicator turns off.

If the water inside the appliance is below the MIN level, the appliance turns off automatically. To boil the water again, wait a few seconds before starting the appliance.

Warning!

Do not open the lid while the water is boiling. Steam or splashes of boiling water may escape from the body of the appliance. Danger of burns.

- 5 Unplug the appliance from the power outlet.

Check that the appliance is turned off before removing it from the power base.

- 6 Hold the handle (G) and remove the appliance from the power base (A). Pour the water into cups.

- 7 After each use, empty the appliance from any residual water.

- After use, it is recommended to use the cord storage device (I) to wind the power cord (J) around the power base (A) of the appliance (Fig. 2).

If the appliance turns on and off during use, or if the appliance turns off before the water comes to a boil, check that there are no limescale residues inside the appliance (read the paragraph "Descaling").

The presence of water droplets under the appliance is perfectly normal: it is just condensation.

CLEANING AND MAINTENANCE

Warning!

Unplug the appliance from the power outlet and wait for the hot parts to cool down before carrying out any cleaning and maintenance operations.

Regular and daily cleaning maintains the appliance efficient and extends the life of the appliance. Never wash the appliance components in the dishwasher. Do not use direct jets of water.

Cleaning the appliance and the power base

Warning!

Danger of electric shock. Never immerse the appliance, the plug and the power cord in water or other liquids.

Clean the fixed parts of the appliance using a non-abrasive damp cloth to prevent damaging the coating. Dry using a dry cloth.

Cleaning the filter

- 1 Use the lid opening handle (E) to lift the lid (D).
 - 2 Remove the filter (C) from its seat (Fig. 3).
 - 3 Wash the filter under running water. If necessary use a soft brush. Rinse thoroughly.
 - 4 Place the filter back into its seat.
- Alternatively, leave the filter inside the appliance and proceed with descaling, as described in the paragraph "Descaling".

Descaling

Good maintenance and regular cleaning preserve and keep the appliance efficient for a longer period of time, as well as significantly reduce possible limescale deposits in the appliance. Should the appliance operation be compromised after some time, due to frequent use of hard and very calcareous water, carry out the appliance descaling in order to remove the malfunction. Use a citric acid-based descaling product. This product can be easily found at an authorized Service Centre. The Manufacturer assumes no responsibility for damage to internal components of the appliance caused by the use of non-compliant products due to the presence of chemical additives. Follow the instructions given in the instructions for use of the descaling product.

DECOMMISSIONING

In the event of the appliance decommissioning, disconnect the power plug from the power outlet. Should the appliance be disposed of, separate the various materials used in the construction of the appliance and dispose of them according to their composition and the legal provisions in force in the country of use.

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2012/19/EU



At the end of its working life, the product must be not disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

WARRANTY

PLEASE AFFIX YOUR RECEIPT/PROOF OF PURCHASE HERE.


IN THE EVENT OF A CLAIM UNDER THIS WARRANTY THE AFORESAID RECEIPT/PROOF OF PURCHASE MUST BE PRODUCED TOGETHER WITH THIS WARRANTY.

Mode number	(Lot number:)
Product name	
Date of purchase	
Place of purchase	

1. The party selling the product ("the seller") to the original purchaser of this product ("the customer") hereby warrants that this product will be of good quality and, in good working order and, free of defects and suitable for its intended purpose under normal household use, for a period of 1 (one) year from the date of purchase ("warranty period") of this product.
2. In the event that the warranty period has not lapsed and the product is not of a good quality, or in good working order or, is defective or is not suitable for its intended purpose under normal household use, the customer may, subject to paragraph 3 below, return the product to the seller and have the following options available:
 - 2.1 Within the first 6 (six) months of the warranty: to receive a refund of the actual price paid or exchange the product for the same or similar product of the same purchased value;
 - 2.2 Within the second 6 (six) months of the warranty: to have the product exchanged for the same or similar product of the same purchased value.
3. The seller will not replace the product or refund the customer in terms of this warranty if the product:
 - 3.1 has been altered contrary to the instructions provided in the product manual;
 - 3.2 has been misused, abused or tampered with;
 - 3.3 is defective or not in working order due to ordinary wear and tear;
 - 3.4 is damaged resulting from the customer's gross negligence, recklessness, malicious behavior or criminal conduct;
 - 3.5 has been utilised for commercial use.
4. This warranty applies only to the product that has been purchased from the seller and not to any expendables attached to or installed on the product by the customer.
5. Any claim in terms of this warranty must be supported by the original proof of purchase.
6. Note that the exchange item will only carry the balance of the warranty period as from the original date of purchase.
7. Spares: selected spares can be purchased from:

ServiceTec
10 Saddle Drive
Woodmead Office Park
Woodmead

Email: spares.za@delonghigroup.com
Tel: +27 11 474 0153

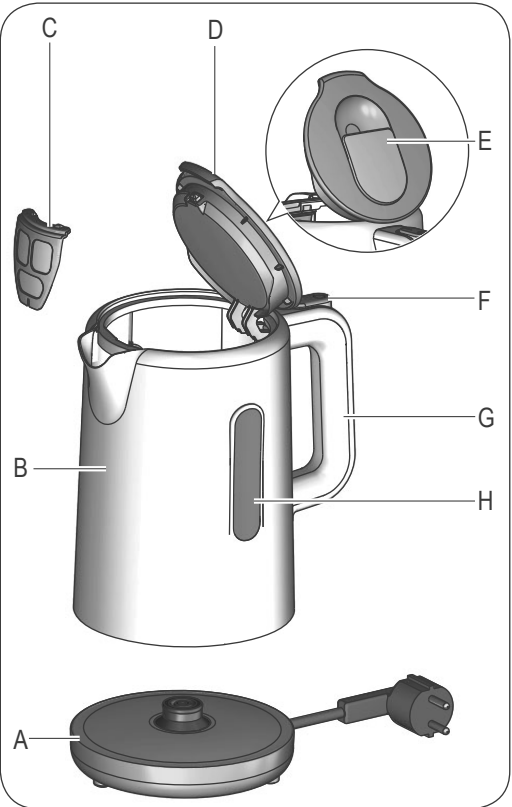

Cod.6365101000 Rev. 1 del 15/03/2024

Fig. 1

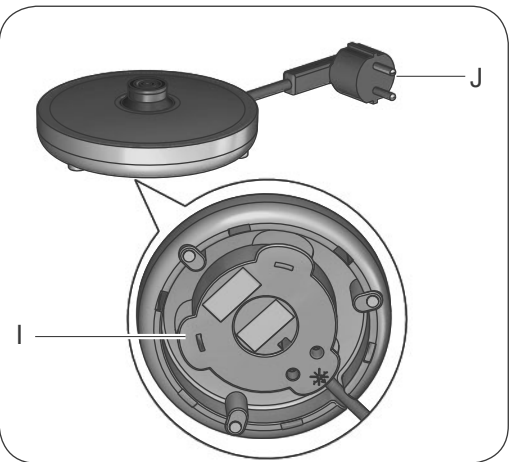


Fig. 2



Fig. 3



Kettle