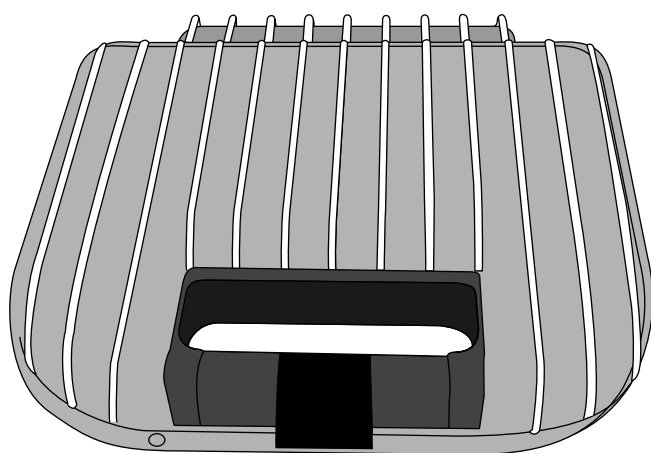 
 
 
 
 
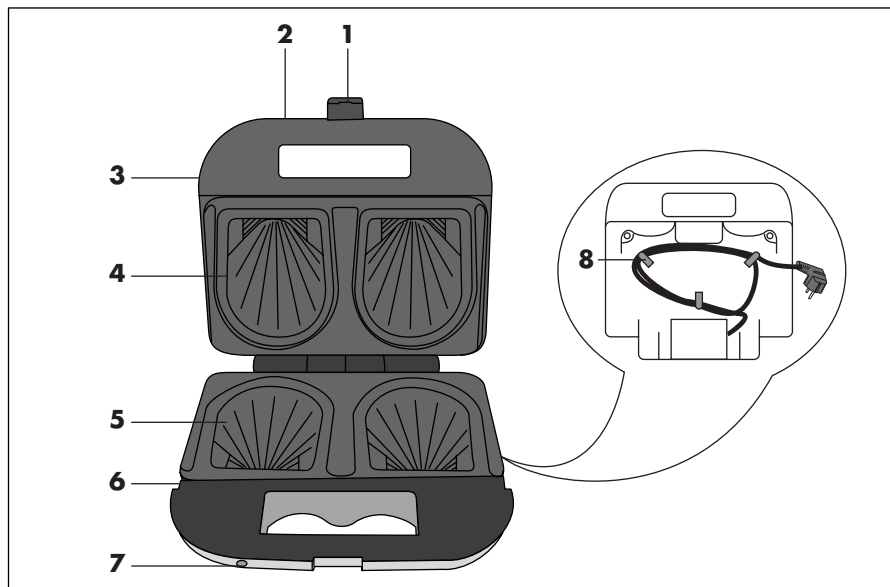 

TOASTER



Instructions for use



**DESCRIPTION**

- 1) CLOSING HOOK
- 2) HANDLE
- 3) TOP COVER
- 4) TOP NON-STICK PLATE
- 5) BOTTOM NON-STICK PLATE
- 6) BOTTOM COVER
- 7) "READY FOR USE" INDICATOR LIGHT
- 8) CORD WINDER