 
 
 
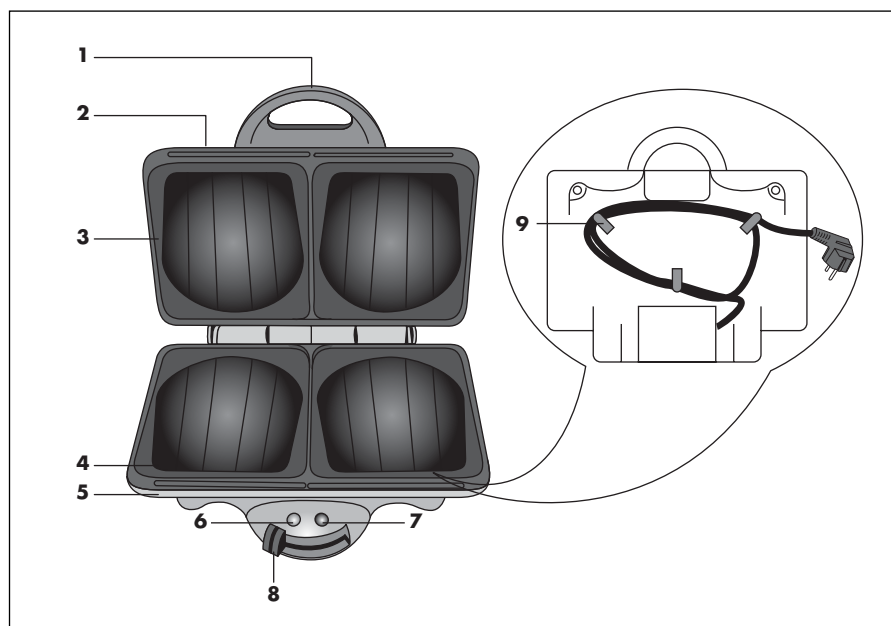 

TOASTER

Instructions for use





DESCRIPTION

- 1) HANDLE
- 2) TOP COVER
- 3) TOP NON-STICK PLATE
- 4) BOTTOM NON-STICK PLATE
- 5) BOTTOM COVER
- 6) RED "POWER" INDICATOR LIGHT
- 7) GREEN "READY FOR USE" INDICATOR LIGHT
- 8) THERMOSTAT
- 9) CORD WINDER