


instructions

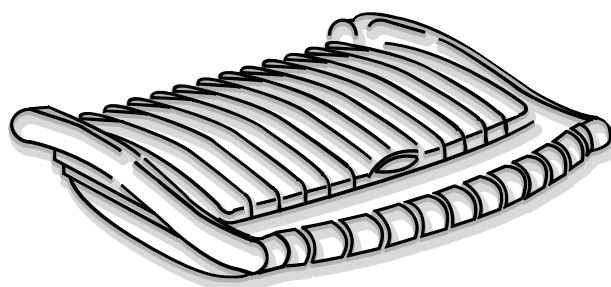


## SANDWICH PRESS SM700



*Living innovation*

## Description of Appliance

The following terms are used throughout the instruction manual

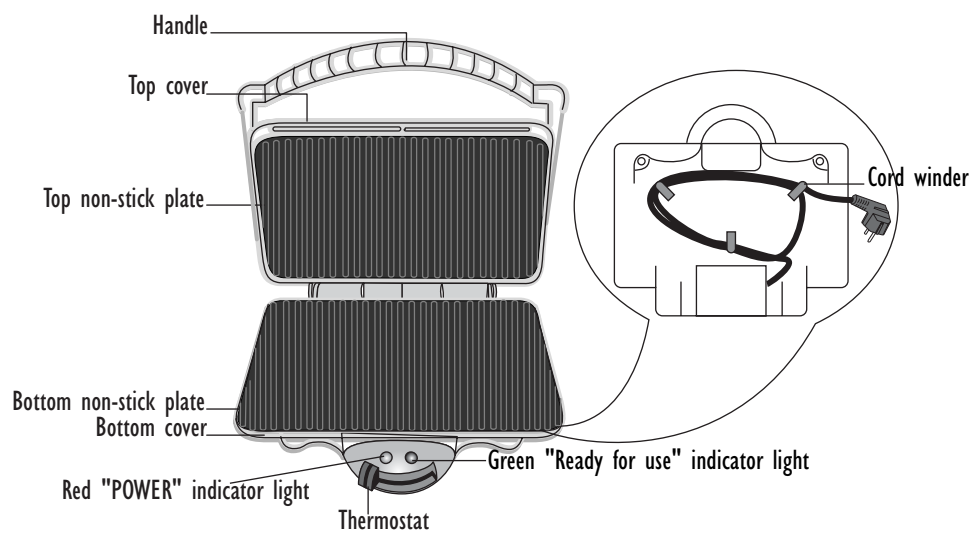

**Thank you for choosing this De'Longhi sandwich press. To get the best results from your new sandwich press it is advisable to read these instructions carefully before using the appliance.**

**This is the only way to ensure optimum results and maximum safety.**

### **Installation**

- Before using, check that the appliance has not been damaged during transport.
- Install the appliance on a horizontal surface, and out of the reach of children, some parts of the appliance reach very high temperatures during operation.
- Before inserting the plug in the power point, check that:
  - your mains voltage corresponds to the value on the rating plate underneath the appliance.
  - the power point has a minimum rating of 10A.
  - the power point is suitable for the plug, otherwise replace the plug.
  - the power point is suitably earthed. The manufacturer declines all liability if this instruction is not respected.
- Operate the appliance for at least 5 minutes and air the room, in order to eliminate the "new smell"
- Before use clean the plates using a sponge or damp cloth and then dry carefully.

### **Using the Sandwich Press**

#### **Toasted Sandwiches**

- Close the press and insert the plug into the socket.
- The red power indicator will turn on.
- Slide the thermostat to the maximum position. After preheating for around 4 minutes, the press will be ready.
- The green "ready for use" indicator will turn on.
- The press is now ready for use. (Always preheat the appliance before use).
- Slide the thermostat to the desired position.
- The thermostat will keep the correct temperature by turning the press on and off intermittently. Always use the press in its closed position.
- To enhance the taste and appearance of the toasted sandwich, spread the OUTSIDE of the bread with butter or a spread suitable for cooking. Place the first slice of bread, buttered side down, on the press bottom plate. Then place or spread the filling on piece of bread. Be careful not to use too much filling to towards the edges of the bread as this may cause the filling to overflow. At the same time, ensure there is sufficient filling for your sandwich.

- Finally, place the second slice of bread on the filling and then close the cover by gently pressing the handle until the plates are closed.
- Toast the sandwiches to the degree of toasting desired.
- Open the cover and remove the sandwiches using a plastic or wooden utensil, to avoid damaging the toaster's non-stick surface. Never use sharp or metal objects.
- When cooking is complete, remove the food using a plastic or wooden utensil, so as not to ruin the non-stick surface of the plates. Never use sharp or metallic objects.

**Warning: Wait several minutes before eating the sandwich to prevent burning your mouth and tongue.**

- Remove the plug after use.

### Cooking Vegetables

The Sandwich Press can also be used to cook a variety of vegetables.

- Pre-heat the press following the first three instructions in the 'Toasted Sandwiches' paragraph.
- When the green light is lit, slide the thermostat to the desired position for the food you wish to cook.
- Open the top cover and place the food evenly on the bottom plate, there is no need to use cooking oil.
- Close the cover.
- If necessary turn the food halfway through cooking.
- Check food whilst cooking to monitor progress.
- Cooking times may vary dependant upon individual taste.
- Always use the appliance in the closed position.
- When cooking is complete, remove the food using a plastic or wooden utensil, to avoid damaging the non-stick surface of the plates. Never use sharp or metallic objects.
- After grilling, remove the plug and allow to cool.

### Cleaning and maintenance

Warning: Pull the plug out of the socket and let the press cool down before cleaning it. Never place any part of this equipment in water or other liquids.

After each use, clean the plates with a sponge or a warm, damp cloth and then dry them carefully. To remove possible crusty matter, use a plastic scouring pad or another product made specifically for stick-proof surfaces.

### Safety warnings

- Before inserting the plug, check that the voltage figure on the equipment's identification plate conforms to that of your electrical system.
  - During use do not touch hot parts. Use the handles.
  - Never place this equipment in water. To clean the press, all you need is a damp cloth.
  - While using this press, ensure there is enough space so air can circulate freely.
  - This appliance is suitable for cooking foods. It must not therefore be used for other purposes or altered or tampered with in any way. Any other use is to be considered improper and thus dangerous. The manufacturer cannot be considered responsible in any manner whatsoever for eventual damage resulting from improper, mistaken and unreasonable use of this equipment or from repairs made by unqualified individuals.
  - If the equipment is connected to the electrical network, keep in mind the following basic rules of safety:
    - do not touch the press when your hands are wet or damp;
    - do not use this equipment if you are barefoot or if your feet are wet;
    - do not pull the cable or the press itself when detaching the plug from the electrical socket;
    - do not leave the appliance within the reach of children or leave unattended whilst in operation.
    - do not leave the press plugged in when not in use because it could become a potential source of danger;
    - this equipment's power cable must never be replaced by the user; if the cable is damaged, contact only a service centre authorised by the manufacturer.
  - in the event that you decide not to make any further use of this press, we recommend that you cut the cable make it unusable.
- Keep these instructions in a safe place.  
The materials and objects intended for contact with foodstuffs are in compliance with EEC directive 89/109.

 
### Electrical connection (UK only)

A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below. **warning:** Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard. With alternative plugs not incorporating a fuse, the circuit must be protected by a 15 Amp fuse. If the plug is a moulded-on type, the fuse cover must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.


warning - this appliance must be earthed  
important

The wires in the mains lead are coloured in accordance with the following code:

Green and	yellow	Earth
Blue	Neutral	
Brown	Live	



As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The green and yellow wire must be connected to the terminal in the plug marked with the letter E or the earth symbol  or coloured green or green and yellow.

The blue wire must be connected to the terminal marked with the letter N or coloured black.

The brown wire must be connected to the terminal marked with the letter L or coloured red.

