

We were thinking of you when we thought of it

WALL MOUNTED TOWEL WARMER

Proudly distributed by **De'Longhi**

25 CARBINE ROAD
MT WELLINGTON
PO BOX 58056
GREENMOUNT
Auckland, New Zealand

Customer Service Ph: (05) 0820 0300

Fax: (09) 915 7280

e-mail:delonghi@delonghi.com.nz

Australia

P.O.Box 597

Riverwood NSW 2208

Customer Service Ph: 1800 126659

Fax: 1800 706932

e-mail: delonghi@delonghi.com.au

ELECTRICAL CONNECTION (U.K. ONLY)

A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below.

WARNING: Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard. With alternative plugs not incorporating a fuse, the circuit must be re-fitted when changing the fuse using a 13 Amp

Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.

B) If your appliance is not fitted with a plug, please follow the instructions provided below:

WARNING: THIS APPLIANCE MUST BE EARTHED


IMPORTANT
The wires in the mains lead are coloured in accordance with the followin code:


Blue: Neutral Brown: Live


As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:


The wire which is coloured blue must be connected to the terminal which is marked with the letter ${\sf N}$ or coloured black.

The wire which is coloured brown must be connected to the terminal which si marked with the letter L or coloured red.

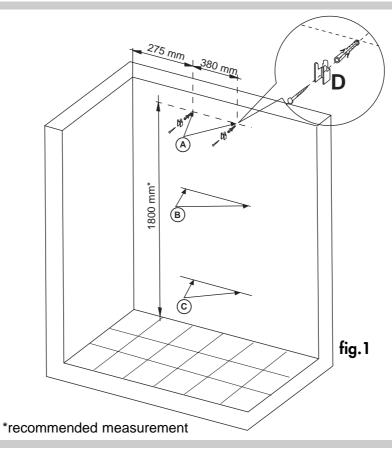

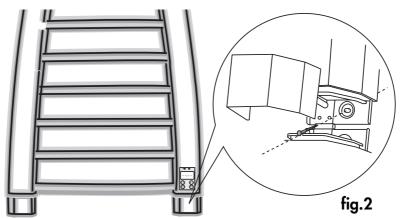

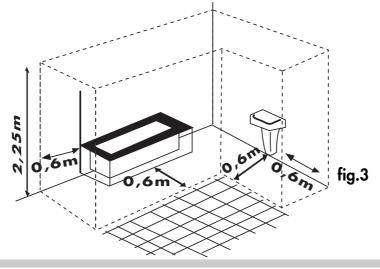

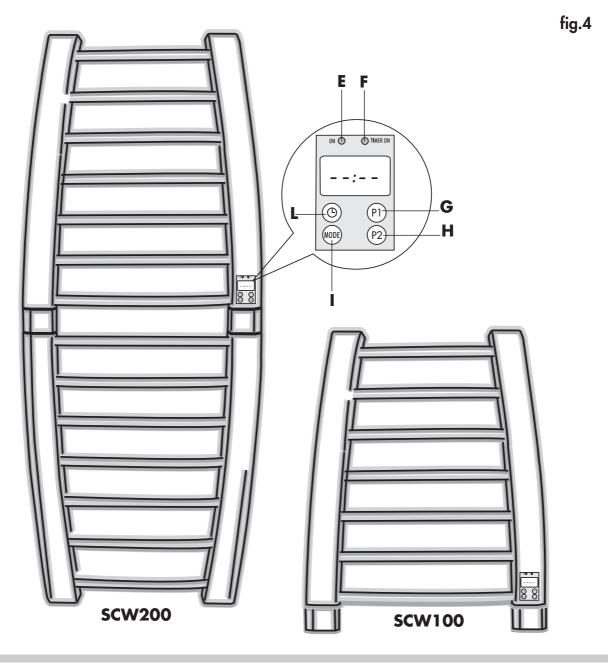

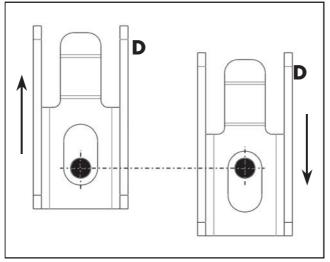


fig.5