



*We were thinking of you
when we thought of it*

OIL HEATER



Reg. No. 910
ISO 9002
Certified

Made in ITALY

Proudly distributed by

Parex Industries Limited

25 CARBINE ROAD,

MT WELLINGTON

PO BOX 58056

GREENMOUNT

Auckland, New Zealand

Customer Service Ph: (09) 915 7273

Fax: (09) 915 7280

e-mail: custserv@parex.co.nz

Australia

P.O.Box 597

Riverwood NSW 2210

Customer Service

Ph: 1800 126659

Fax: 1800 706932

e-mail: custserv@parex.co.nz

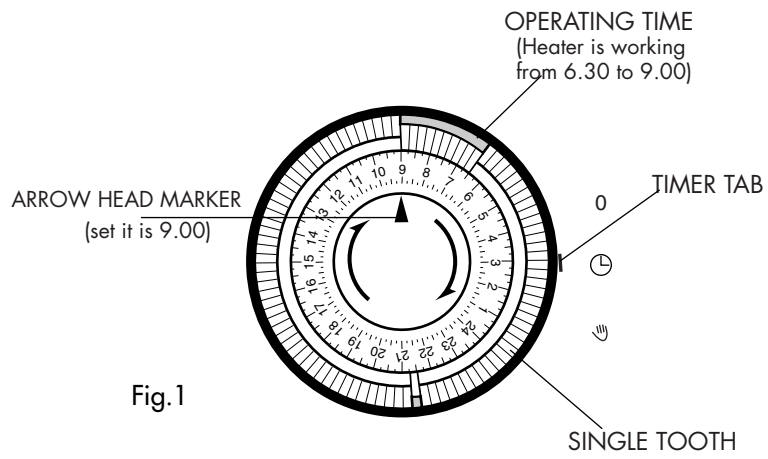


Fig.1

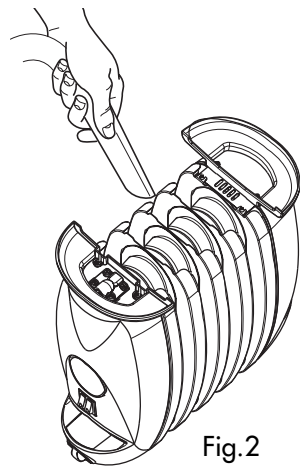


Fig.2

1. GENERAL INSTRUCTIONS

Remove the heater from the packaging. Turn upside down and rest on the polystyrene. Check that neither the heater nor the power cable has been damaged in any way during transportation.

Do not operate the heater if damaged.

2. ELECTRICAL CONNECTION

- Before plugging the radiator into the mains, check that your supply voltage is the same as that shown on the rating plate of the appliance.
- If using more than one appliance at a time, it is important to ensure that the ring main is adequate to cope with the power requirements.
- **It is important to ensure that the socket is adequately earthed.**
- This appliance complies with EEC Directive 89/336 relating to electromagnetic compatibility.

3. HOW TO USE IT

Switching on

Plug the heater in; turn the thermostat control knob clockwise to the highest setting (6).

Check that the timer tab (fig.1) on the outside rim of the timer is lined up with the manual "☞" symbol.

NOTE: If the timer tab is lined up with the "0" heater off symbol, the heater will not operate.

Switch it on as follows;

a) units with a single heat setting:

- switch down = ON
- switch up "0" = OFF

b) units with three heat settings:

- only left switch on = low heat
- only right switch on = medium heat
- both switches on = maximum heat

To fully turn the heater off, switch off both switches and remove plug from wall socket.

Adjusting the thermostat

Leave the thermostat at its highest setting until the room has reached the required temperature. Then slowly turn the thermostat back until the indicator light goes off (or until you hear a click). The temperature selected in this way will then be regulated automatically and kept constant by the thermostat.

Frost protection function

Turn the thermostat dial to the * position and press the switches. The appliance will maintain a minimum room temperature of approximately 5°C thus preventing freezing with a minimum energy consumption.

c) Models with a 24 hour time-clock (fig. 3-4)

To programme the timer;

- Align the timer tab (fig.1) to the "☹" timed operation symbol.
- Check the time on your watch. If for example it is 10am, turn the number disc of the timer in a clockwise direction until the number 10 on the disc lines up with the arrow head marker ▲ on the time-clock. The timer is normally supplied with all the teeth pushed into the centre allowing continuous operation. To set the periods of time you would like the appliance to be off continue as follows;
- Each tooth corresponds to a period of 15 minutes of time. Push the teeth with your thumbnail to the outer rim of the timer. At this point, the sectors that correspond to the periods to be on and off will be visible.
- Turn the appliance on and set it to the heat setting and temperature level on the thermostat that is required.

- The heater will now function automatically everyday, switching on and off according to your selection.
(Important; the plug must always be inserted into the electrical socket and switched on)
- To vary the programming times, simply return the teeth to their original position and set new periods of functioning.
- If you desire to operate the heater without programming it, push all the teeth toward the centre (i.e. in the mode as normally supplied)
- To completely turn off the heater, turn off all the switches and remove the plug from the mains socket.

Timer Override

If you wish to override the timer settings, move the timer tab up to the "☞" manual (timer override) position (Fig. 1).

On using the appliance for the first time, turn it on to the maximum power setting for at least 8 hours. This is to eliminate the 'new odour', which is released by the appliance. During this time ensure that the room is well ventilated.

5. MAINTENANCE

Before carrying out any maintenance, unplug the heater from the mains and wait for it to cool. The oil-filled electric radiator requires no particular maintenance. It is sufficient to remove the dust with a soft, dry cloth. Never use abrasive powders or solvents. If necessary remove concentrated areas of dirt with a vacuum cleaner (Fig. 2).

6. WARNINGS

- Do not make use of this heater in the immediate proximity of showers, bathrubs, sinks, swimming pools etc.
- Never use the heater to dry laundry.
- Never place the power cable on top of the heater while it is hot.
- The appliance is not intended for use by young children or the infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- Only use the heater in an upright position.
- The heater must be positioned at least 50cm from furniture or other objects.
- If the power cable is damaged, it must be replaced by the manufacturer or an authorised technical service centre.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not locate the heater in the immediate below a socket-outlet.
- Do not use the heater in the immediate surroundings of a bath, a shower or swimming pool
- Do not position the heater in close proximity to curtains or other combustible materials.
- When used in a bathroom, the heater must be installed such that the controls can not be touch by a person in the bath or shower.
- This heater is filled with a precise quantity of special oil. Repairs requiring opening of the oil container are only to be made by the manufacturer or his service agent who should be contacted if there is an oil leakage.
- Regulations concerning the disposal of oil when scrapping the appliance have to be followed.
- It is normal for the heater to make 'crackling' noises during the first time it is switched on (or in the case of infrequent use)
- The body of the heater is filled with an exact quantity of oil. If repairs are necessary which call for the opening of the heater, they must be done only by the manufacturer or by an authorised service centre. In the unlikely event of oil leakage, contact the manufacturer or by an authorised service centre.

- Do not use this appliance in rooms which have an area smaller than 4m²
- The heater must never be placed immediately under a fixed mains socket.
- When scrapping the appliance, respect legislation on the disposal of oil.
- **IMPORTANT:** Never for any reason cover the appliance during operation as this could lead to dangerous overheating.
- The use of an extension lead is not recommended, as overheating of the extension lead may occur during the operation of the heater.
- As with any electrical appliance, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating your appliance, particularly in the vicinity of young children.

The appliance is fitted with a **safety device** which will switch off it in case of accidental overheating. To reset, disconnect the plug from the power for 30 minutes, remove the cause of overheating then plug the appliance in again.

ATTENTION: in order to avoid any danger caused by an accidental resetting of the safety system, this appliance must not be powered through an external timer.

