 



instructions

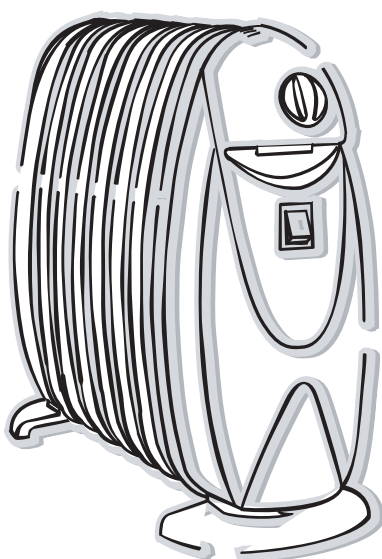

Bambino Oil Filled Radiators



 Living innovation

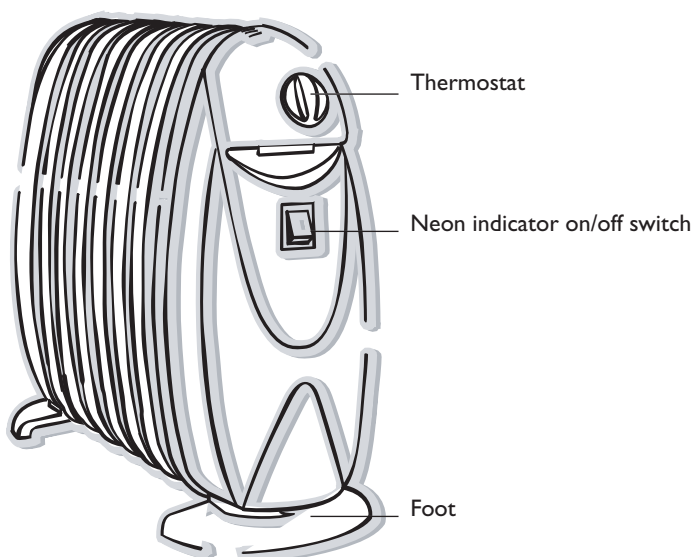

Thank you for choosing this oil filled radiator. To get the very best out of your new radiator it is advisable to read these instructions before using the appliance. This is the only way to ensure optimum results and maximum safety.

General instructions

Remove the heater from the packaging.

Check that neither the heater nor the power cable has been damaged in any way during transportation.

Do not operate the heater if damaged.

Using for the first time

On using the appliance for the first time, turn it on to the maximum power setting for at least 8 hours. This is to eliminate the 'new odour', which is released by the appliance. During this time ensure that the room is well ventilated.

Electrical connection

- Before plugging the radiator into the mains, check that your supply voltage is the same as that shown on the rating plate of the appliance.
- If using more than one appliance at a time, it is important to ensure that the ring main is adequate to cope with the power requirements.
- It is important to ensure that the socket is adequately earthed.
- This appliance complies with EEC Directive 89/336 relating to electromagnetic compatibility.

How to use it

Switching on

Plug it in, turn the thermostat control knob clockwise to the highest setting (6) and switch on as follows:

- a) units with a single heat setting:
 - switch in «I» position = ON (indicator light on);
 - switch in «O» position = OFF (indicator light off)
 - b) units with three heat settings:
 - only the right switch (marked “L”) on «I» = minimum heat (indicator light on);
 - only the left switch (marked “=”) on «I» = medium heat (indicator light on);
 - both switches on «I» = maximum heat (indicator light on);
- To turn appliance off, switch off both switches and switch off at the wall socket.

Adjusting the thermostat

Leave the thermostat at its highest setting until the room has reached the required temperature. Then slowly turn the thermostat back until the indicator light goes off (or until you hear a click). The temperature selected in this way will then be regulated automatically and kept constant by the thermostat.

Frost protection function

Turn the thermostat dial to the * position and press the switches. The appliance will maintain a minimum room temperature of approximately 5°C thus preventing freezing with a minimum energy consumption.

Maintenance

Before carrying out any maintenance, unplug the heater from the mains and wait for it to cool.

The oil-filled electric radiator requires no particular maintenance. It is sufficient to remove the dust with a soft, dry cloth. Never use abrasive powders or solvents. If necessary remove concentrated areas of dirt with a vacuum cleaner (Fig. 1).

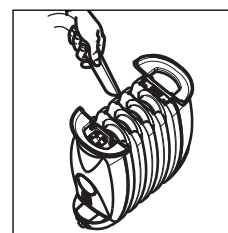 


fig. 1

Warnings

- Do not make use of this heater in the immediate proximity of showers, bathtubs, sinks, swimming pools etc.
- Never use the heater to dry laundry.
- Never place the power cable on top of the heater while it is hot.
- Only use the heater in an upright position.
- The heater must be positioned at least 50cm from furniture or other objects.
- If the power cable is damaged, it must be replaced by the manufacturer or an authorised technical service centre.
- It is normal for the heater to make 'crackling' noises during the first time it is switched on (or in the case of infrequent use)
- The body of the heater is filled with an exact quantity of oil. If repairs are necessary which call for the opening of the heater, they must be done only by the manufacturer or by an authorised service centre. In the unlikely event of oil leakage, contact the manufacturer or by an authorised service centre.
- The heater must never be placed immediately under a fixed mains socket.
- When scrapping the appliance, respect legislation on the disposal of oil.
- IMPORTANT: Never for any reason cover the appliance during operation as this could lead to dangerous overheating.
- The use of an extension lead is not recommended, however if it is necessary then follow carefully the extension lead's instructions, and most importantly ensure that the extension lead is correctly rated in accordance with the heater being used and NEVER overloaded.

- As with any electrical appliance, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating your appliance, particularly in the vicinity of young children.

The appliance is fitted with a safety device which will switch off it in case of accidental overheating. To reset, disconnect the plug from the power for 30 minutes, remove the cause of overheating then plug the appliance in again.

ATTENTION: in order to avoid any danger caused by an accidental resetting of the safety system, this appliance must not be powered through an external timer.

Electrical requirements

Before using this appliance ensure that the voltage indicated on the product corresponds with the main voltage in your home, if you are in any doubt about your supply contact your local electricity company.

The flexible mains lead is supplied connected to a B.S. 1363 fused plug having a fuse of 13 amp capacity. Should this plug not fit the socket outlets in your home, it should be cut off and replaced with a suitable plug, following the procedure outlined below.


Note: Such a plug cannot be used for any other appliance and should therefore be properly disposed of and not left where children might find it and plug it into a supply socket - with the obvious consequent danger.

N.B. We recommend the use of good quality plugs and wall sockets that can be switched off when the machine is not in use.

important: the wires in the mains lead fitted to this appliance are coloured in accordance with the following code:

GREEN AND YELLOW	EARTH
BLUE	NEUTRAL
BROWN	LIVE

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol  or coloured green or green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

When wiring the plug, ensure that all strands of wire are securely retained in each terminal. Do not forget to tighten the mains lead clamp on the plug. If your electricity supply point has only two pin socket outlets, or if you are in doubt, consult a qualified electrician.

Should the mains lead ever require replacement, it is essential that this operation be carried out by a qualified electrician and should only be replaced with a flexible cord of the same size.

After replacement of a fuse in the plug, the fuse cover must be refitted. If the fuse cover is lost, the plug must not be used until a replacement cover is obtained. The colour of the correct replacement fuse cover is that of the coloured insert in the base of the fuse recess or elsewhere on the plug. Always state this colour when ordering a replacement fuse cover.

Only 13amp replacement fuses which are approved to B.S. 1362 should be fitted.

This appliance conforms to the Norms EN 55014 regarding the suppression of radio interference.

Warning - this appliance must be earthed

