DRAGON CLIMATE CONTROL OIL FILLED RADIATORS WITH ELECTRONIC CLIMATE CONTROL



Fig.1

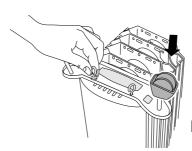


Fig.2

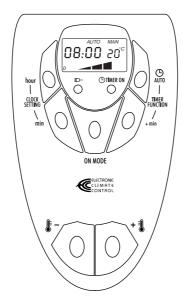


Fig.3



Fig.4

1. GENERAL INSTRUCTIONS

Remove the heater from the packaging. Turn upside down and rest on the polystyrene.

Check that neither the heater nor the power cable has been damaged in any way during tran-

Do not operate the heater if damaged.

2. FITTING THE BRACKETS AND CASTORS

Insert the 2 tabs in the centre of the brackets into the location slots in the end column (at both ends of the heater) (fig. 1).

Use the 4 eye bolts supplied with the appliance to fasten the brackets in position (fig. 2) screwing them into the plastic fixing strip.

Fit the castors to the pins on the feet and push firmly until they click into position. Pull each wheel to check that it is correctly inserted.

After fitting, turn the radiator to its upright operating position. Check that no pieces of polystyrene or other packaging material have been left between the elements of the heater.

3. ELECTRICAL CONNECTION

- Before plugging the radiator into the mains, check that your supply voltage is the same as that shown on the rating plate of the appliance.
- If using more than one appliance at a time, it is important to ensure that the ring main is adequate to cope with the power requirements.
- It is important to ensure that the socket is adequately earthed.
- This appliance complies with EEC Directive 89/336 relating to electromagnetic compatibility.

ELECTRICAL CONNECTION (U.K. ONLY)

- If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below.
 - WARNING: Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a
- With alternative plugs not incorporating a fuse, the circuit must be protected by a 15 Amp fuse

If the plug is a moulded-on type, the fuse cover must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.


If your appliance is not fitted with a plug, please follow the instructions provided below:

WARNING - THIS APPLIANCE MUST BE EARTHED IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Green and yellow: Farth Blue:

Neutra Brown

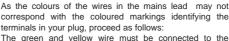

The green and yellow wire must be connected to the terminal in the plug marked with the letter E or the earth symbol $\stackrel{\bot}{=}$ or coloured green or green and yellow.

The blue wire must be connected to the terminal marked with the letter N or coloured black.

The brown wire must be connected to the terminal marked with the letter L or coloured red

OPERATION AND USE

Plug the heater into the electric socket and the light D- will come on.

1) SETTING THE CLOCK

Set the clock to the correct time, proceeding as follows:

- Press the "hour" button until the display shows the hours for the correct time, then release the button.
- Press the "min" button until the display shows the minutes for the correct time, then release

When setting the correct time, the numbers will flash on the display.

The clock will continue to flash for a few seconds after the adjustment has been made then stop on the correct time and start working.

To change the time, press the "hour" or "min" button for at least 5 seconds, then proceed as above to modify both hours and minutes.

To move through the hours or minutes quickly keep the relevant button pressed for longer than 3 seconds.

2) OPERATION OF HEATER - WITHOUT TIMER - (MANUAL)

To operate the heater without timer press the "ON MODE" button. By pressing the "ON MODE" button one or more times, the appliance will select the operating heating power, as follows:



If Maximum power has been selected, press the " & +" or " & -" button to select the desired comfort temperature from 5 to 35°C. By pressing the " & +" or " & -" button the desired temperature (shown on the right side of the display) will increase or decrease by 1°C. Keep pushbutton pressed to move through the temperature in fast mode.



This heater has Electronic Climate Control which automatically monitors and selects the ideal power setting to maintain your chosen temperature.

If the selected temperature is higher than the actual room temperature, the appliance will start automatically and rapidly heat the room until it reaches the selected temperature. The unit will automatically maintain the temperature at a constant level, by switching between maximum,

If medium power level has been selected using the "ON MODE" button, the appliance will modulate between medium, minimum power and OFF to maintain a selected temperature.

Note: the display will always show the power setting you have chosen, not the one it is currently working at.

FROST STAT FUNCTION

Press the "ON MODE" button (it is recommended to select the maximum power level). Set the temperature to 5°C with the " & -" button. When set in this way, the appliance will switch on automatically only if the room temperature falls below 5°C, thereby preventing freezing, at minimum energy consumption.

N.B.This function is not guaranteed in the event of power failures, lasting more than 2 minutes.




3) PROGRAMMING THE ELECTRONIC TIMER

The timer allows you to set 2 programmes in a 24 hour period.

To programme the timer:

1-Press the " AUTO" button, this accesses the 1st programme (programme A). The yellow timer ON lamp will light up.

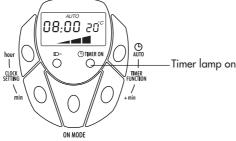

- **2-**Set the start time for your programme by pressing the "HOUR" button to set the hour and the "MIN" button to set the minutes.
- **3-**To select how long you require the heater to be on, push the "+min" button repeatedly until your chosen operating timespan appears. The time periods you are able to choose from are (15', 30', 45', 1hr, 2hr, 4hr (max)).



Display when setting programme A



Display when setting programme B



Display when setting for 45 mins operating time

4- To program a second time period (programme B), press the " \bigcirc AUTO" button twice and then proceed as above to select the start hours and minutes. The set time will be the same as for the first programme. When the operating time is changed, the time of both programmes is updated.

Important: the **operating time** period must be the same as in Programme A. If the operating time is changed e.g. from 45 min. to 1 hour, both programmes will operate for 1 hour.

5- Use the "\$+" or "\$-" buttons to set the desired comfort temperature, as described above.

6-When set in this way the heater will automatically switch on at the set time for the designated time period and automatically maintain the preset comfort temperature. To cancel a programme, press the "⑤AUTO" button and then the "hour" buttons until the display shows as below.

TIMER OVERRIDE

To operate the appliance without using the timer, press the "ON MODE" button (Fig.3). The yellow lamp will go off.

To go back to timed operation press "

AUTO".

IMPORTANT

You must leave the heater plugged in at the mains socket to keep the heater's memory programmed. If the heater loses its electricity supply for more than 2 minutes, e.g. if unplugged or in the event of a power failure, the heater's programmes will be lost, and the timer will not work until reset. In such an instance the display will show flashing numbers.

On using the appliance for the first time, turn it on to the maximum power and the highest temperature setting for at least 8 hours. This is to eliminate the 'new odour', which is released by the appliance. During this time ensure that the room is well ventilated.

5. MAINTENANCE

Before carrying out any maintenance, unplug the heater from the mains and wait for it to cool. The oil-filled electric radiator requires no particular maintenance. It is sufficient to remove the dust with a soft, dry cloth. Never use abrasive powders or solvents. If necessary remove concentrated areas of dirt with a vacuum cleaner. (Fig. 4)

6. WARNINGS

- Do not use the heater in a bathroom or in the vicinity of bathtubs, washbasins, showers or swimming pools.
- Never use the heater to dry laundry.
- Never place the power cable on top of the heater while it is hot.
- Only use the heater in an upright position.
- The heater must be positioned at least 50cm from furniture or other objects.
- If the power cable is damaged, it must be replaced by the manufacturer or an authorised technical service centre.
- It is normal for the heater to make 'crackling' noises during the first time it is switched on (or in the case of infrequent use)
- The body of the heater is filled with an exact quantity of oil. If repairs are necessary which call for the opening of the heater, they must be done only by the manufacturer or by an authorised service centre. In the unlikely event of oil leakage, contact the manufacturer or by an authorised service centre.
- Do not use this appliance in rooms which have an area smaller than 4m²
- The heater must never be placed immediately under a fixed mains socket.
- When scrapping the appliance, respect legislation on the disposal of oil.
- The use of an extension lead is not recommended, as overheating of the extension lead may occur during the operation of the heater.
- As with any electrical appliance, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating your appliance, particularly in the vicinity of young children.



IMPORTANT: Never for any reason cover the appliance during operation as this could lead to dangerous overheating.

5710003500/07.01