

Timer operation

First set the digital clock to the correct time

- Press hour button until the display shows the correct hours
- Press min button until the display shows the correct minutes

To adjust time once set, hold the hour or min button down for at least 5 seconds until the display starts flashing, then proceed as above.

To set the timer

 
Make sure the display shows the correct time

- 1) Press the timer button **A** or **B** once

You are able to set 2 timed operation periods (programme A and programme B)

- 2) To set the start time for programme A, press hour and minute buttons until the display shows the time you wish the heater to come on

- 3) To set the off time, press the timer button **A** again and proceed as above. Finally, to confirm the OFF time, press the timer button A again.

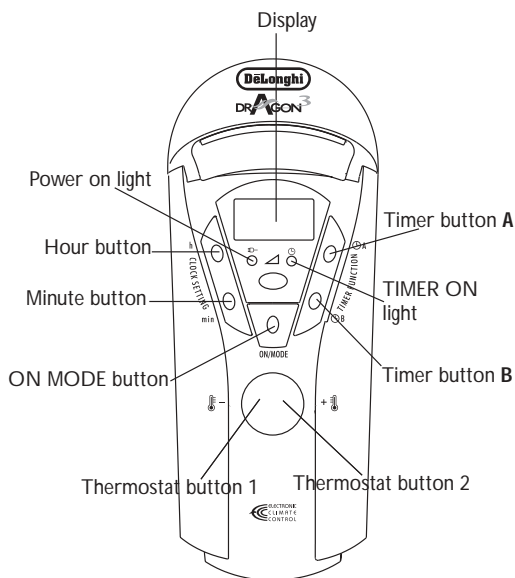


To set programme B:

*Follow the same procedure using timer **B** button.*

Finally set the confort temperature using thermostat buttons 1 and 2

The set temperature is shown on the right hand side of the display

 *To cancel a programme, press timer button **A** or **B** once and then press the hour button until the display shows " - - : - - ".*



Timer Override

To operate the appliance without using the timer, press ON/MODE button

The yellow TIMER ON lamp will go off

To go back to timed operation press timer button **A** or **B**.

To switch the heater on

- 1) Press ON/MODE button as shown below:

 
Press once for
Maximum Power:




Press twice for
Medium Power:



Press three times
for Minimum Power:



Press four times
for Off:

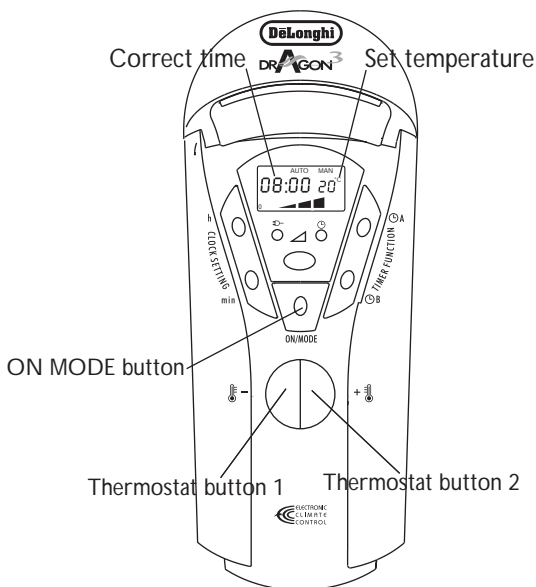 

- 2) Set the comfort temperature required by using thermostat buttons 1 and 2. The set temperature is shown on the right hand side of the display
- 3) The Electronic Climate Control selects the ideal power setting to maintain your chosen temperature.

Please note: The power setting you have selected will be the maximum setting the heater works at.

If your heater is not working:

- Check the timer light is not on. If it is, press the ON/MODE button to return to manual function.
- The room temperature may be higher than the selected temperature; therefore the heater has turned itself off.

For full details please read the instruction booklet