



De'Longhi Kenwood A.P.A.Ltd Consumer Care Centre  
De'Longhi Kenwood A.P.A.Ltd 客戶服務中心

客戶服務熱線 Customer Service Hotline: 2237-1313  
網頁 Website: [www.delonghigroup.com](http://www.delonghigroup.com)  
電子郵箱 E-mail: [info.hk@delonghigroup.com](mailto:info.hk@delonghigroup.com)

維修地址(香港) : 香港德輔道中288號易通商業大廈6樓C室  
Address (HK Island) : 6/F, Flat C, Eton Building, 288 Des Voeux Road Central, HK

維修地址(九龍) : 葵涌葵昌路56號貿易之都1603室  
Address (Kowloon) : Room 1603, Millennium Trade Centre, 56 Kwai Cheong Road, Kwai Hing

---

E024 Series

電焗爐

ELECTRIC OVEN



---

**DeLonghi**

### ELECTRICAL CONNECTION (UK ONLY)

A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below.

**WARNING:** Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard.

With alternative plugs not incorporating a fuse, the circuit must be protected by a 15 Amp fuse. If the plug is a moulded-on type, the fuse cover must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.

B) If your appliance is not fitted with a plug, please follow the instructions provided below:

#### **WARNING - THIS APPLIANCE MUST BE EARTHED**

#### **IMPORTANT**

The wires in the mains lead are coloured in accordance with the following code:

Green and yellow:	Earth
Blue:	Neutral
Brown:	Live




As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The green and yellow wire must be connected to the terminal in the plug marked with the letter E or the earth symbol  or coloured green or green and yellow.

The blue wire must be connected to the terminal marked with the letter N or coloured black.

The brown wire must be connected to the terminal marked with the letter L or coloured red.

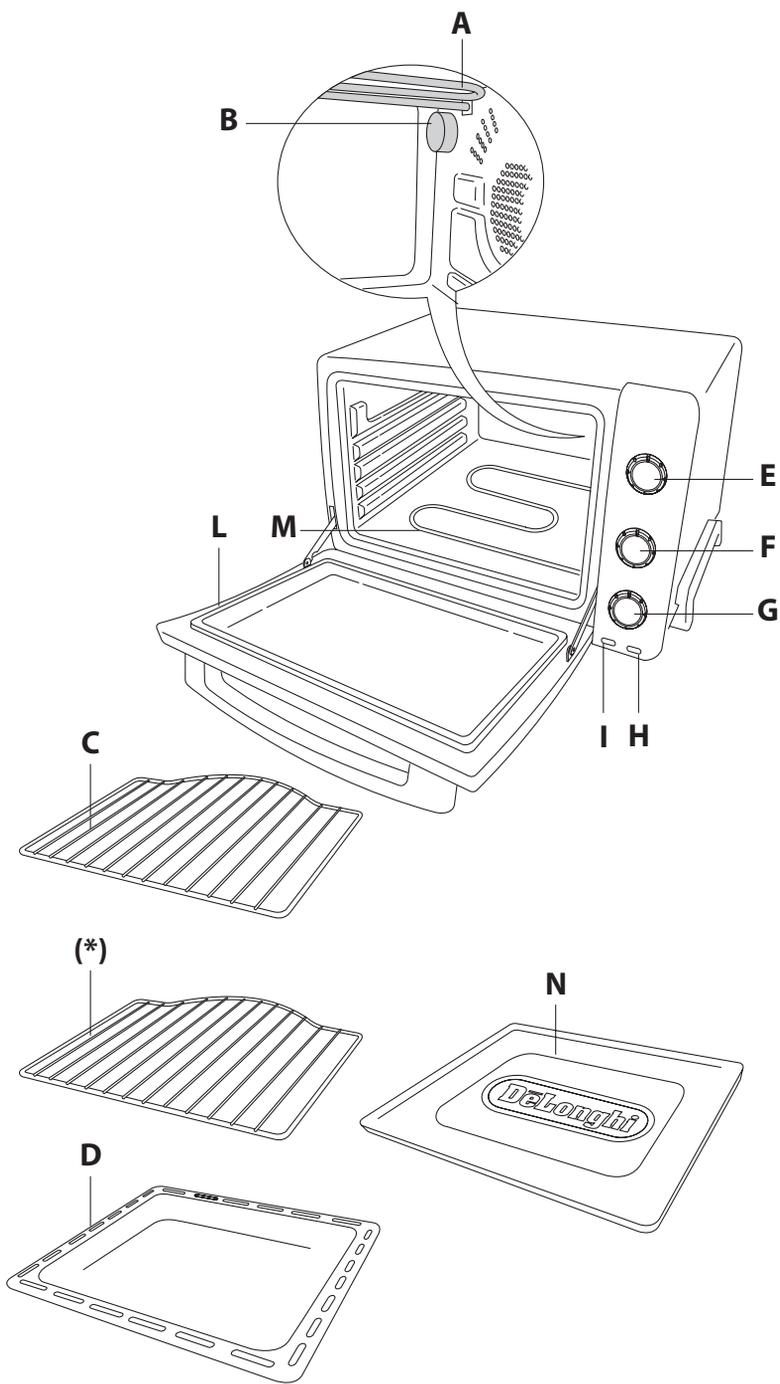

## 焗爐部件說明

- A 頂部發熱線
- B 內部照明燈 (僅限於部分機型)
- C 網架 - (\*) (僅限於部分機型)
- D 滴油盤
- E 溫度設定掣
- F 時間掣
- G 功能選擇掣
- H 綠色溫度指示燈
- I 紅色 ON 指示燈
- L 玻璃門
- M 底部發熱線
- N 碎屑盤

## 技術規格

電壓：	220-240伏特~50-60赫茲
吸收功率：	1800瓦 2000瓦 (對流加熱焗爐)
尺寸 長x高x闊度：	495x305x450毫米
重量：	11.3公斤 (最重)

## 功能

-  脆烤功能，非常適合令食物變香脆 (僅限於部分機型)
-  燒烤功能，非常適合用於燒烤食物
-  傳統焗爐功能，非常適合各類傳統烹調
-  除霜功能，非常適合對所有食物進行除霜 (僅限於部分機型)
-  熱風對流，非常適合較快、較均勻烹調 (僅限於部分機型)
-  精細烹飪功能，適合用於最後烹調階段，令食物色澤更均勻，特別是食物底部。
-  食物保溫功能

## 指示燈

-  ON ☺ 焗爐接通電源時，紅色 ON 指示燈亮起
-  焗爐達到所需溫度時，綠色溫度指示燈亮起

## 重要安全事項

使用焗爐前請仔細閱讀所有說明。請妥善保存本說明書。

### 請注意：

此標誌表示對用戶非常重要的建議或資訊。

- 首次使用本機前，請將焗爐內的紙張及其它物料取出，例如保護紙板、小冊子、塑膠袋。
- 本機必須距離電源插座最少20厘米。
- 首次使用本機前，將溫度設定掣調到最大並空爐操作15分鐘，以便消除「新機」氣味以及運輸前塗在發熱線上的防護物質所產生的煙霧。操作時，須確保室內空氣流通。
- 使用前徹底清洗所有配件。
- 若要設定低於20分鐘的時間，請先將計時器旋扭到最大，然後再旋扭到所需的時限。

### 重要提示！

不遵守警告事項可能會引致身體受傷或焗爐損壞。

- 本機用於烹飪食物。切勿將它用於其它用途，或以任何方式對其進行改裝。
- 當取出本產品時，確認焗爐門完好無損且能正常使用。焗爐門由玻璃製成，因此很容易碎裂。如果上面有明顯的碎裂、裂紋或有刮花痕跡，應予以更換。當使用、清洗或移動焗爐時，應避免用力關閉或撞擊玻璃門。當機體溫度很高時，切勿使用冷的液體潑向玻璃門。
- 本機應放在高度最小為85厘米的水平面上及兒童接觸不到的地方。
- 本機適用於8歲以上兒童。具有身體、感官或精神缺陷的人士，或者缺乏相關經驗和知識的人士，須在監護人的監督或指導下，並知悉洩及危險，方可使用本機。成人應該監督兒童不要把玩本機。不應該由兒童清理本機，除非他們是8歲以上和在成人監督下。

- 保持本機遠離8歲以下兒童。
- 切勿移動使用中的焗爐。
- 以下情況下不得使用本機：
  - 電源線有缺陷；
  - 機體曾經跌下而引致受損或故障的情況。在這些情形下，為了避免一切風險，請將焗爐送到指定的授權客戶服務中心進行修理。
- 切勿將本機放在發熱源附近。
- 切勿將本機當作發熱源使用。
- 切勿在本機內放入紙張、紙板或塑膠物品，而且切勿在本機頂部擺放任何物品(工具、網架或其他物件等)。
- 切勿以任何物品阻塞通風口。確保通風口暢通無阻。
- 本機不得進行內嵌式安裝。
- 切勿在打開的焗爐門上放置任何重物、煮鍋或容器。  
切勿向下拉扯門把手。
- 如果將本機用於商業用途、以不適當的方式使用本機或者不遵守相關說明，製造商將不會承擔一切責任與及保養條款將失效。
- 本機僅為家用電器。  
不應該在以下場所內使用本產品：商店、辦公室及其他工作環境中的員工廚房；農舍；酒店、旅館及其它居住環境；如民宿。
- 本機不使用時和清洗前，務必將插頭拔出。
- 本機的操作設計是不能與外置時間掣或獨立遙控裝置一併使用。
- 必須在背面靠近牆壁的情況下擺放和使用本機。
- 切勿用尖銳或銳利的金屬物體擦洗麵包烤盤。
- 清洗前務必將時間掣調到「0」的位置並將插頭從電源插座中拔出，以確保本機關閉。

- 此產品的用途及設計並不適用於食品保存。  
烹調配件不適用於酸性的食品醃製。請避免讓酸性材料(例如檸檬汁或醋)長期殘留於配件表面。若容許檸檬汁、蕃茄、醋與相類的酸性材料長時間殘留於配件表面，或有機會損壞及削弱其塗層。

### **灼傷危險！**

不遵守警告事項可能會引起燙傷或灼傷。

- 本機運作時，焗爐門和可觸及的表面可能會很燙。務必使用旋鈕、把手和按鈕。切勿觸摸金屬部件或玻璃門。必要時使用焗爐手套。
- 本機在高溫運作時，有可能引致灼傷。
- 切勿在本機附近或其櫃面下方放置易燃品。
- 切勿在壁櫥或擱物架下方或者窗簾、百葉窗等易燃物品附近使用焗爐。
- **如爐內食物或其他部份起火，切勿嘗試用水滅火。**  
**應當關上焗爐門、將插頭從電源插座中拔出並用濕布將火澆熄。**

### **危險！**

不遵守警告事項可能會引起危及生命的觸電傷害。

- 將插頭插入電源插座前，請確認以下各項：
  - 電源之電壓要與本機標牌上所標明之電壓相同。
  - 電源插座的最小額電流為16安培並有地線。
- 如果不遵守這條重要的事故預防守則，製造商將不會承擔一切責任。
- 切勿讓電源線搖擺，而且應當避免觸摸本機的高溫部件。

切勿透過拉扯電源線的方式拔出本機插頭。

- 如果打算使用延長電源線，應確保其完好無損、插頭接地面而且延長電源線之規格與機體電源線之規格一樣。
- 為了避免一切觸電危險，切勿將電源線、插頭或焗爐本身浸入水中。
- 如果電源線發生損壞，必須由製造商、指定的客戶服務中心或合格的電工進行更換以免發生觸電危險。
- 為了您的個人安全考慮，切勿自行拆卸本機。如需拆卸，務必與客戶服務中心聯絡。



此產品符合歐盟頒布針對與食品接觸物質的指令1935/2004。

#### 處置



本機不能與一般家居垃圾一同處理，而是應當送到授權的垃圾分類和回收中心進行處理。

## DESCRIPTION OF APPLIANCE

---

- A Top heating element
- B Inside light (some models only)
- C Wire rack – (\*) Some models only
- D Drip pan
- E Thermostat dial
- F Timer dial
- G Function selector dial
- H Green °C light
- I Red ON light
- L Glass door
- M Bottom element
- N Crumb tray

## TECHNICAL DATA

---

Voltage:	220-240 V ~ 50-60Hz
Absorbed power:	1800 W
	2000 W (convection mode)
Size LxHxP:	495 x 305 x 450 mm
Weight:	11.3 kg (max)

## FUNCTIONS

---



GRATIN FUNCTION ideal for browning food  
(some models only)



GRILL FUNCTION ideal for grilling food



TRADITIONAL OVEN FUNCTION ideal for all types of  
traditional cooking



DEFROSTING FUNCTION ideal for defrosting all products  
(some models only)



CONVECTION HEAT ideal for quicker more even  
cooking (some models only)



DELICATE COOKING FUNCTION ideal for adding the  
finishing touches to cooking food, particularly at the  
bottom



KEEPING FOOD WARM

## LIGHTS

---

ON 



the red ON light comes on when the oven is on

 °C



the green °C light comes on when the oven reaches  
the required temperature

## IMPORTANT SAFEGUARDS

---

**Read all the instructions carefully before using the appliance. Keep these instructions.**



### Please note:

This symbol identifies important advice or information for the user.

- Before using the oven for the first time, remove any paper and other material inside the oven such as protective cardboard, booklets, plastic bags, etc.
- The appliance must be kept at a distance of at least 20 cm from the mains power socket to which it is connected.
- Before using for the first time, operate the oven empty with the thermostat at maximum for at least 15 minutes to eliminate the “new” smell and any smoke caused by the presence of protective substances applied to the heating elements before transport. Ventilate the room.
- Wash all accessories before use.
- To set times less than 20 minutes, first turn the timer dial all the way round, then back to the desired time.



### Important!

Failure to observe the warning could result in injury or damage to the appliance.

- This oven is designed to cook food. It must never be used for other purposes, modified or tampered with in any way.
- After unpacking the appliance, make sure the door is undamaged and working correctly.  
The door is made from glass and is therefore fragile. If it is visibly chipped, scored or scratched, it should be replaced. While using, cleaning or moving the appliance, avoid slamming or knocking the door violently. Do not pour cold liquid onto the glass while the appliance is hot.
- Place the appliance on a horizontal surface at a height of at least 85 cm and out of reach of children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the

appliance.

Cleaning and user maintenance shall not be made by children, unless they are more than eight years old and under constant supervision.

- Keep the appliance and power cable away from children under eight years of age.
- Do not move the appliance while in use.
- Do not use the appliance if:
  - The power cable is faulty
  - The appliance has been dropped, is visibly damaged or malfunctioning.In these cases, to avoid all risk take the appliance to your nearest authorised customer services.
- Never position the appliance near heat sources.
- Do not use the appliance as a heat source.
- Never place paper, cardboard or plastic inside the oven and never rest anything on top of the appliance (utensils, wire racks, other objects).
- Never insert anything into the ventilation openings. Make sure they are unobstructed.
- This oven is not designed for built-in installation.
- Do not rest heavy objects, boiling pans or containers on the open door.  
Do not pull the handle downwards.
- Professional or inappropriate use, or failure to observe the instruction for use absolves the manufacturer from all responsibility and invalidates the guarantee.
- This is a household appliance only.  
It is not intended to be used in: staff kitchen areas in shops, offices and other working environments, farm houses, hotels, motels and other residential type environments, bed and breakfast type environments.
- When not in use and before cleaning, always unplug the appliance.
- This appliance must not be operated

by a timer or a separate remote control system.

- The appliance must be placed and operated with the back next to the wall.
- Do not use pointed or sharp metal objects to clean the bread pan.
- Before cleaning, always turn the appliance off by setting the timer to "0" and unplugging it from the mains socket.
- This product is not intended and engineered for food preservation.

Accessories for cooking are not suitable for acid food preservation. Avoid leaving for prolonged time acid substances as lemon juice or vinegar on surface of accessories. If left on surface of accessories for prolonged time, acid substances as lemon juice, tomato, vinegar and similar, may damage and impair the coating.

### **Danger of burns!**

Failure to observe the warning could result in scalds or burns.

- When in operation, the door and accessible external surfaces could become very hot. Always use the knobs, handles and buttons. Never touch metal parts or the glass. Use oven gloves if necessary.
- This electrical appliance operates at high temperatures which could cause burns.
- Do not leave inflammable products near the oven or under the work surface where it is located.
- Never operate the appliance under a wall cupboard or shelf or near inflammable materials such as curtains, blinds, etc.
- **If food or other parts of the oven catch fire, never try and put out the flames with water. Close the door, unplug from the mains and smother the flames with a damp cloth.**

### **Danger!**

Failure to observe the warning may result in life threatening injury by electric shock.

- **Before plugging into the mains, make sure that:**
  - **The mains voltage corresponds to the voltage indi-**

**cated on the rating plate.**

- **the mains socket is earthed and has a minimum rating of 16A.**

**The manufacturer declines all liability in the event that this important accident-prevention rule is not respected.**

- Do not let the power cable dangle and avoid touching hot parts of the oven.  
Never unplug the appliance by pulling on the power cable.
- If you intend to use an extension, make sure it is in good condition, that the plug is earthed and that the cross section of the wires is at least equal to that of the power cable provided with the appliance.
- To avoid all risk of electric shock, never immerse the power cable, plug or appliance itself in water.
- **If the power cable is damaged, it must be replaced by the manufacturer, the manufacturer's customer services or a qualified electrician in order to eliminate all risk.**
- For your personal safety, never take the appliance to pieces on your own. Always contact customer services.

























This appliance conforms to EC Regulation 1935/2004 on materials and articles intended to come into contact with food.

## **DISPOSAL**















The appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

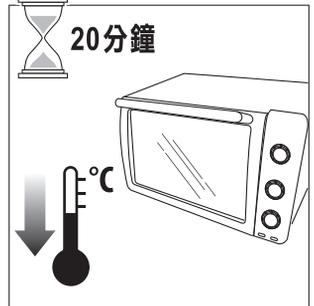
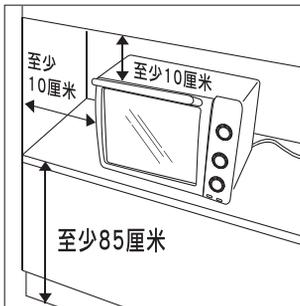
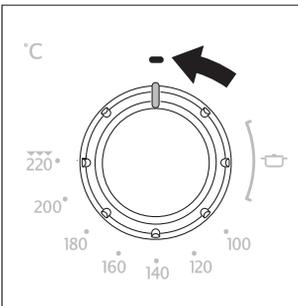
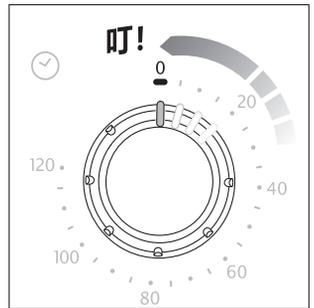
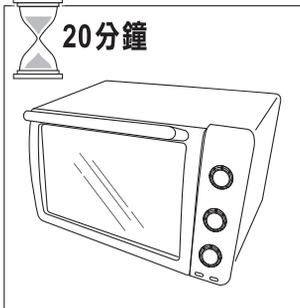
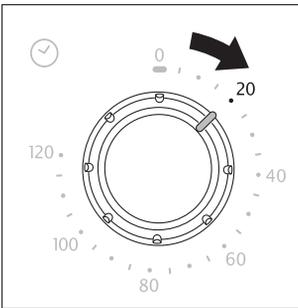
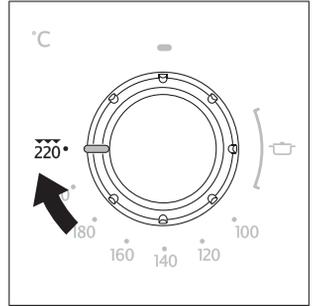
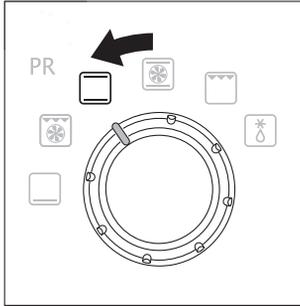
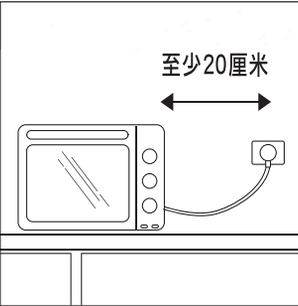
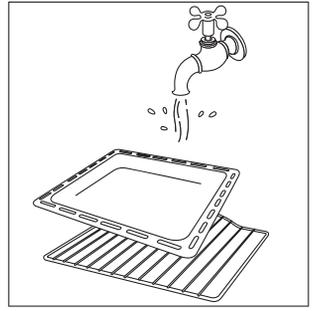
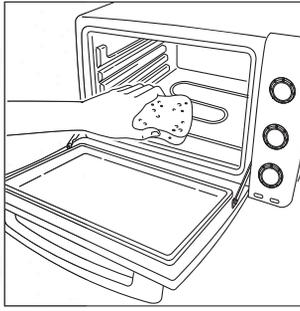


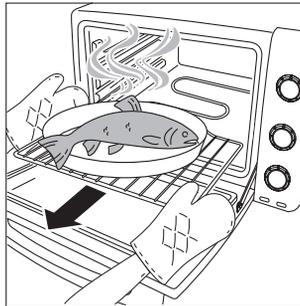
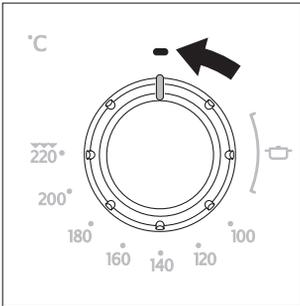
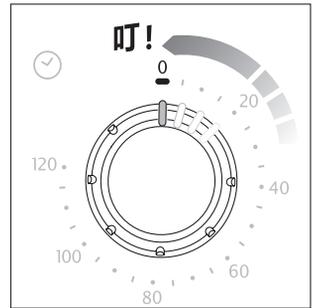
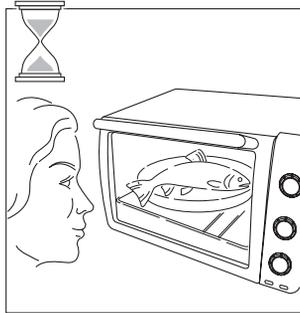
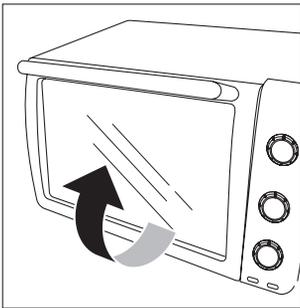
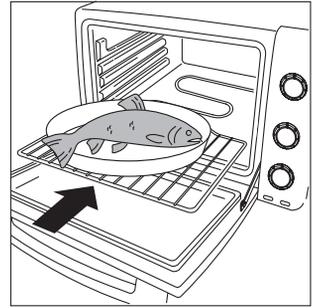
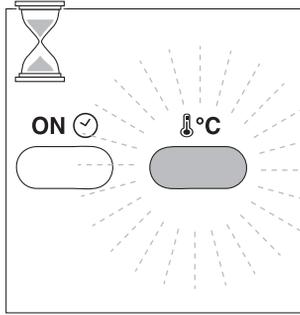
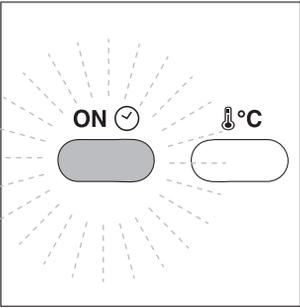
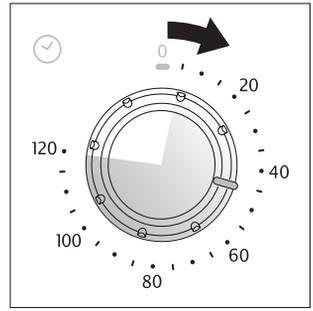
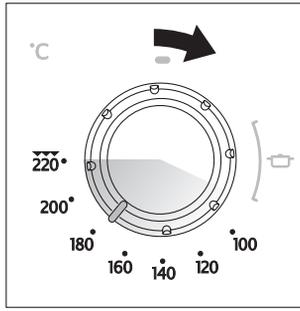
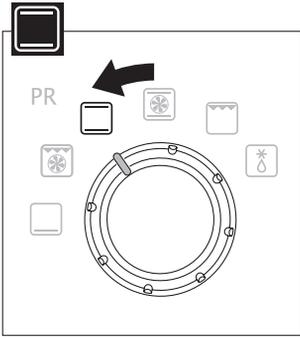




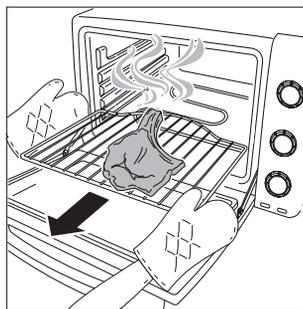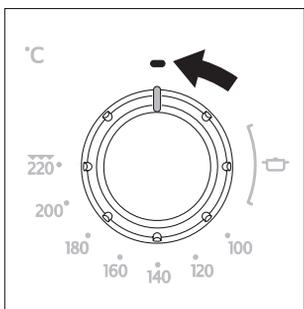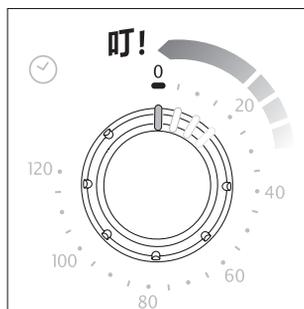
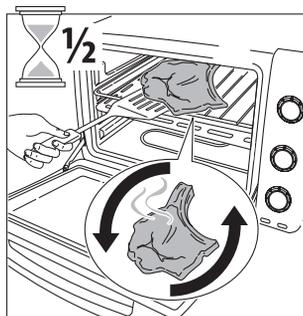
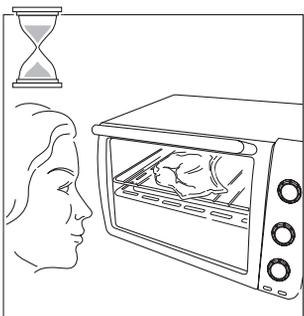
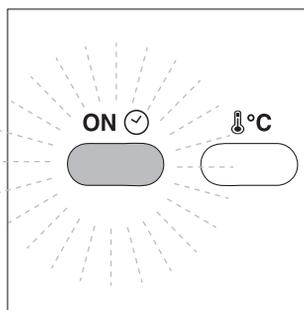
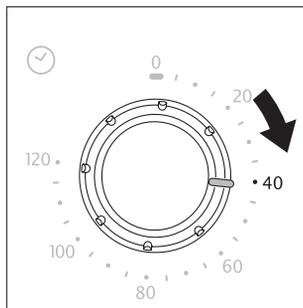
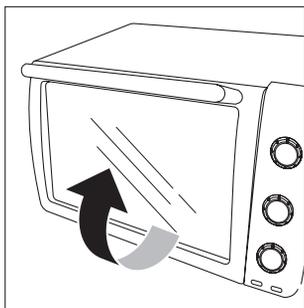
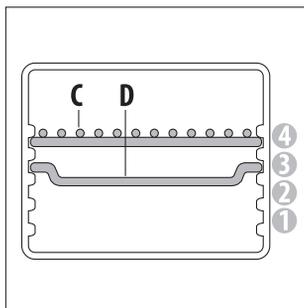
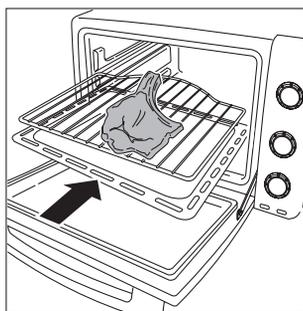
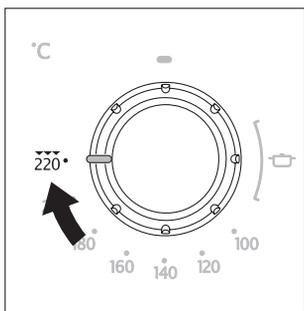
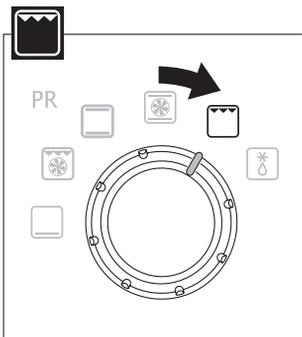


 
 
 
 
 
 
 


 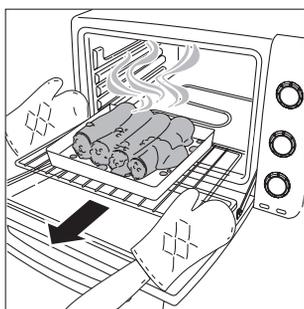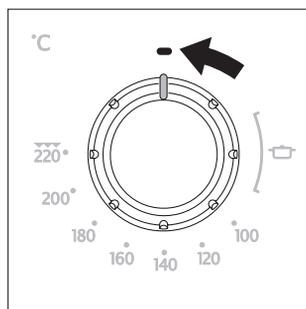
 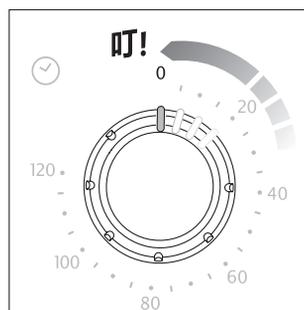
 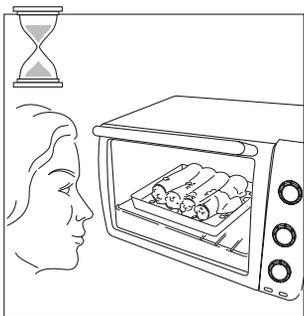
 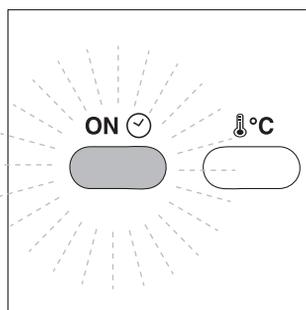
 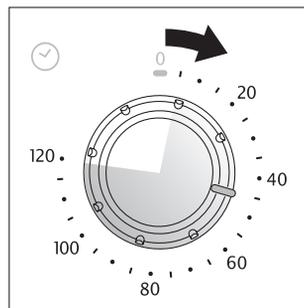
 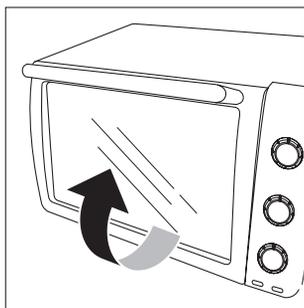
 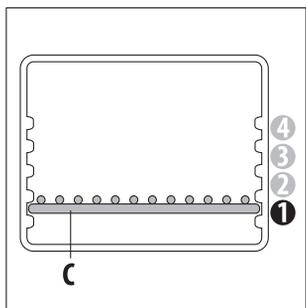
 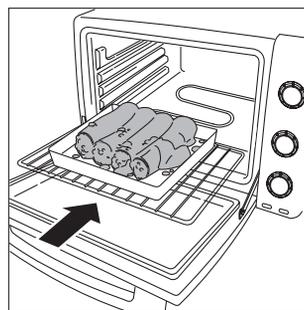
 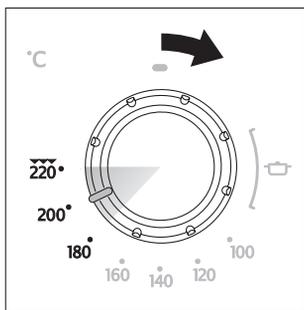
 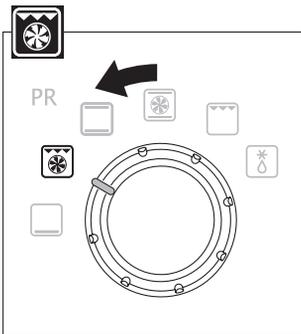


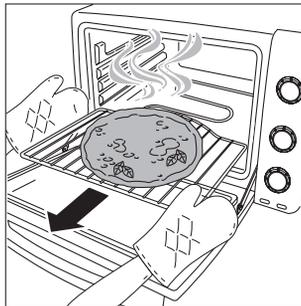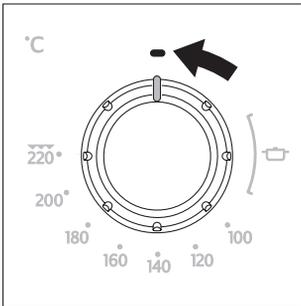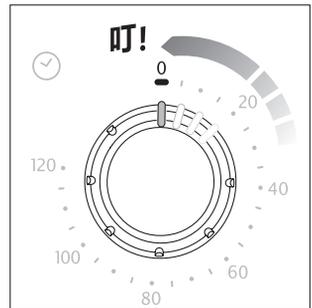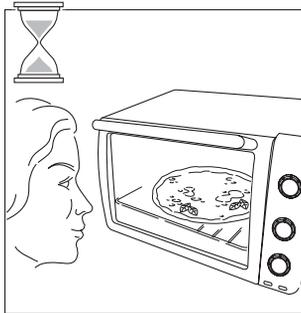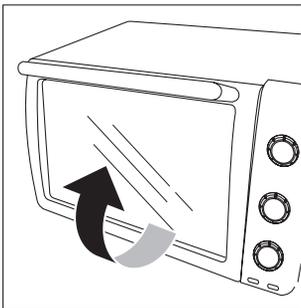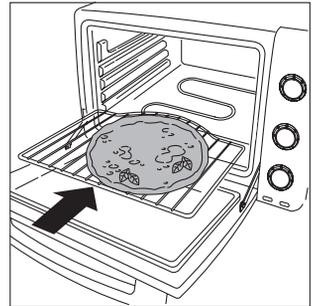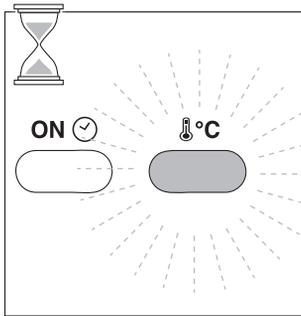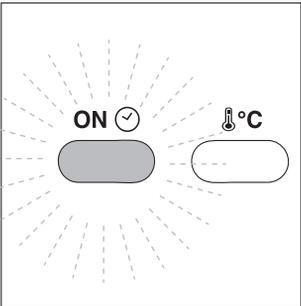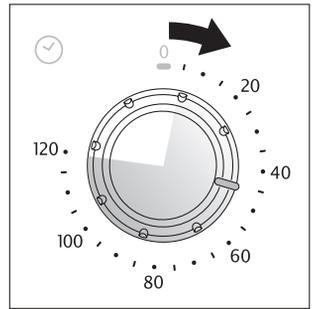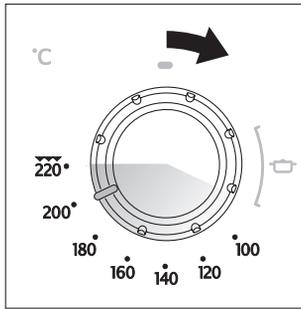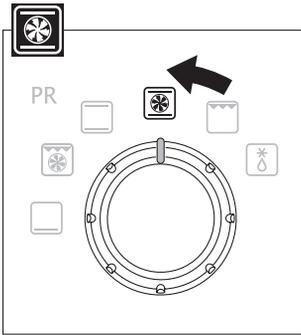



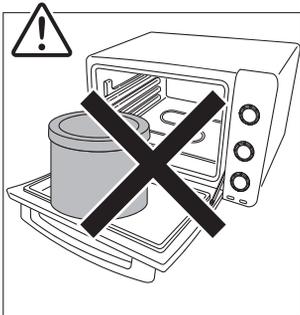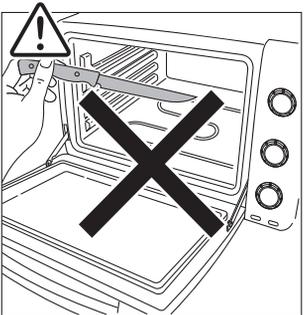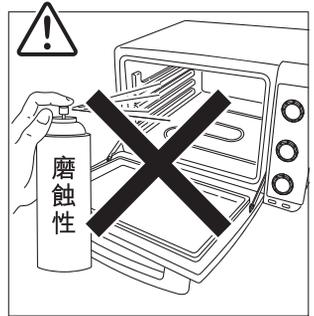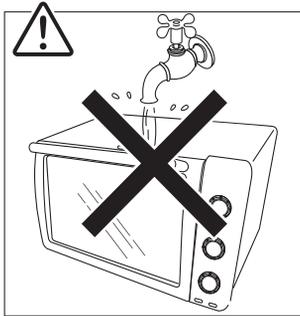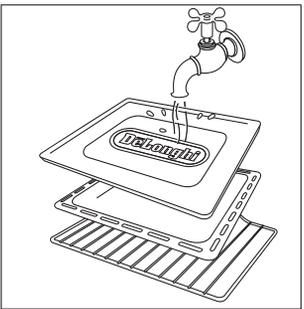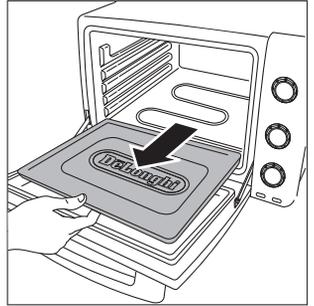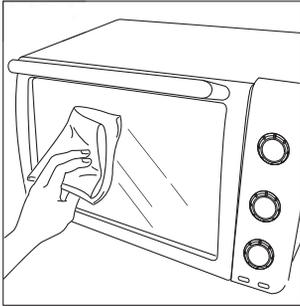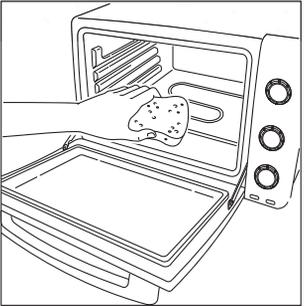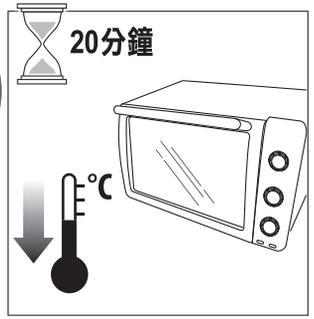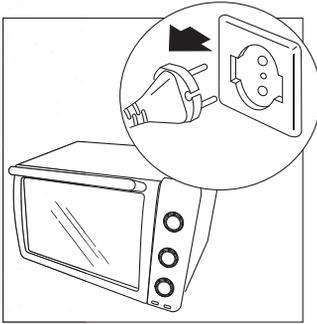

	 千克				
	700克		 	180 °C	45-50 分鐘 30-35 分鐘
	750克			200 °C	25-30 分鐘
 ***	450克		 	200 °C	20-22 分鐘 15-17 分鐘
	500克			180 °C	35-40 分鐘
	1500克		 	180 °C 200 °C	35-40 分鐘 30-35 分鐘
	1300克		 	190 °C	100-105 分鐘 80-85 分鐘
	700克		 	190 °C	65-70 分鐘 50-55 分鐘
	1000克		 	190 °C	90-95 分鐘 75-80 分鐘
	1200克			180 °C	55-60 分鐘
	750克			220 °C	25-30 分鐘

	1000克			200 °C	25-30 分鐘
	1000克		 	200 °C	65-70 分鐘 45-50 分鐘
	1000克		 	200 °C	55-60 分鐘 45-50 分鐘
	1000克			220 °C	15-20 分鐘
	300克			180 °C	15-20 分鐘
	6		 	180 °C	20-22 分鐘 13-15 分鐘
	850克		 	180 °C	40-45 分鐘 30-35 分鐘
	850克		 	180 °C	40-45 分鐘 30-35 分鐘
	900克		 	180 °C	35-40 分鐘 25-30 分鐘
	12			170 °C	20-25 分鐘
	900克			160 °C	85-90 分鐘