




咖啡机

COFFEE MAKER
Instruction for use

使用说明书

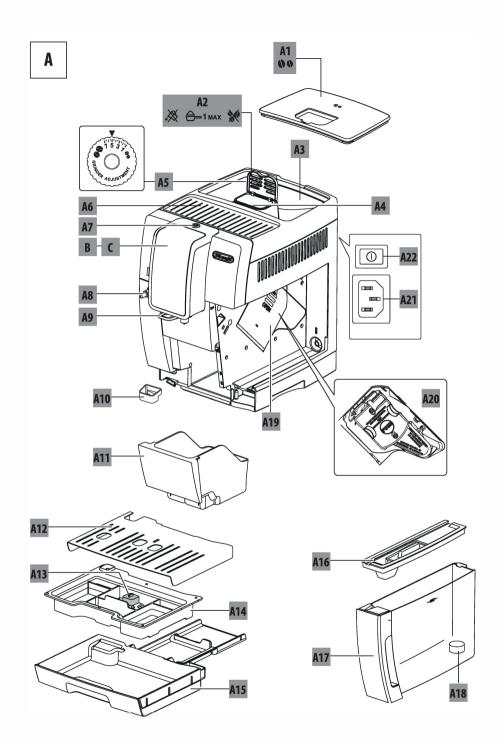

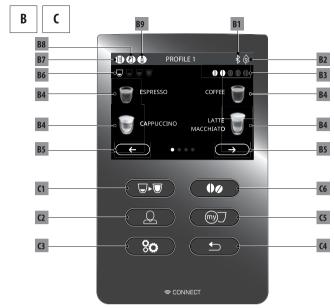

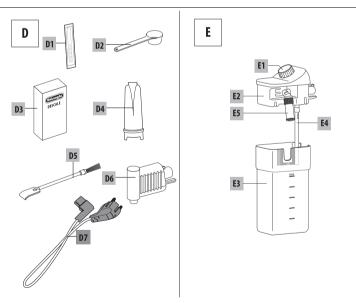

目 录

1. 基本安全警告	4	10.1 使用咖啡豆制作咖啡	
o # _ # _ # _ # _ # _ # _ # _ # _ # _ #	_	10.2 选择咖啡口味	
2. 基本信息	5	10.3 设置咖啡杯量	
2.1 使用说明	5	10.4 使用咖啡粉制作咖啡	
		10.5 调节咖啡豆研磨程度	
3. 使用之前	5	10.6 制作更热咖啡的小贴士	13
3.1 机器检查	5		
3.2 机器安装	5	11. 德龙醇萃冰咖	13
3.3 机器连接	5	— 20	
3.4 机器设置		12. 🕙 制作含牛奶的饮品	13
3.5 与食品接触部分的清洁与维护	5	12.1 倒入牛奶并安装牛奶容器	13
3.6 制作卡布奇诺和牛奶咖啡	6	12.2 调节牛奶泡沫的量	14
		12.3 自动制作含牛奶的饮品	14
4. 介绍	6	12.4 每次使用后清洁牛奶容器	15
4.1 括号之内的字母	6		
4.2 故障处理和检修	6	13. 咖啡壶	16
4.3 APP下载	6		
	_	14. 関 制作热水	16
5. 产品描述	7	5	
5.1 机器描述	7	15. 🛚 定制饮品 🏐	16
5.2 主屏描述	7	5	
5.3 控制面板描述		16. 图 保存您的个人用户选择	17
5.4 配件描述	7	10. [5] W.H.W.H.J. 1. 2011. 12. 12.	1 /
5.5 牛奶容器描述		17. 🗷 清洁	17
9.9 「外在冊面定	,	17.1 清洁机器	17
6. 🕅 机器设置	7	17.2 清洁机器内部回路	17
0. 图 机耐吸重	,	17.3 清洁咖啡盛渣盒	17
7. 图 开启机器	0	17.4 清洁滴水盘和凝水盒	10
7. 以 开户机器	0	17.5 清洁咖啡机内部	10
8. 关闭机器	0	17.6 清洁水箱	
0. 大例が品	9	17.6 捐行小相	10
9. 图 菜单设置	0	17.7 有石咖啡机岀口	19
9.1 进入菜单	9		
9.2 退出菜单	9	17.9 清洁萃取器	
		17.10 清洁牛奶容器	20
9.3 冲洗		17.11 清洁热水喷嘴	20
9.4 除垢	9	18. 图除垢	• •
9.5 软水过滤器		18. 🖭 除垢	20
9.6 饮品设置		- B	
9.7 自动关机 (待机)		19. ② 设置水硬度 19. 1 测试水硬度	22
9.8 节能模式	10	19.1 测试水便度	22
9.9 咖啡温度		19.2 设置水硬度	22
9.10 水硬度		a	
9.11 设置语言		20. 🕙 软水过滤器	22
9.12 提示音		20.1 安装软水过滤器	22
9.13 蓝牙	10	20.2 更换软水过滤器	23
9.14 出厂默认值	11	20.3 移除软水过滤器	24
9.15 数据统计	11	5	
9.16 个性化设置	11	21. 🗓 显示信息	25
10. 图 制作咖啡	11	22. 🛚 故障处理	30

1. 基本安全警告

- •有心理、身体或者感官障碍、或不具备足够的经验或者知识的人员(包括儿童)不允许使用该机器,除非有对他们的安全负责的人密切监督并进行指导。
- •必须监督儿童,确保他们不玩弄该电器。
- •指定用途:本机器的设计和制造的用途是制作咖啡、含牛奶饮品和热水。除此之外的用途都是不正确的。在水箱中仅能使用饮用水。切勿制作配件制作说明书上未标明的饮品。制造商对于未正确使用该电器引起的损害概不负责。
- •机器使用后加热部件的表面会持续发烫,机器外部也会根据使用情况持续发烫几分钟。
- •彻底清洁所有部件,特别注意与牛奶接触的部件。
- •请勿让儿童在无人监管的情况下清洁和维修保养本机。
- •在清洗的过程中, 切勿将机器浸入水中。
- 重要提示:为防止损坏机器,请勿使用碱性清洁剂清洁;请使用软布,以及在适用情况下使用中性清洁剂清洁机器。
- •本电器仅限家庭使用,不能用于以下场所: 商场的员工餐厅,办公室或其他工作环境; 牧场旅馆; 旅馆、汽车旅馆或其他住宅性环境; 家庭式旅馆。
- •如果机器插头或电源线损坏,必须且只能由德龙指定的售后服务人员进行更换,以避免发生各种危险。
- •带有可拆卸电源线的机器:避免机器背面的电源线连接器或插座被溅水。
- •重要提示:带有玻璃表面的型号请注意:如果表面破裂,请勿使用。
- •使用过程中,切勿将咖啡机放在橱柜或厨房单元格内。

这是一台电器设备,因此可能导致触电。因此 您应该遵守以下安全警告:

- •切勿用湿的手或湿的脚接触该机器。
- •切勿用湿的手接触插头。
- •确保能随时接近机器使用的插座,必要时能拔下机器的插头。
- 直接拔下电源插头,切勿拉扯电源线,以免损坏电源线。
- •要完全断开机器的电源,请拔下电源线插头。
- •如果机器发生故障,不要试图自己检修。关闭 电源,拔下插头,并与售后服务中心联系。
- •在对机器进行清洁之前,请先关闭电源,拔下插头,并等待机器冷却。



重要!

各种包装(塑料袋、聚苯乙烯泡沫塑料)必须 远离儿童存放。

窒息危险。本产品可能含有较小的零部件。清 洗和维护期间可能需要拆卸。

其中的一些小零件。请小心装卸,把小零件置 于儿童够不到的地方。



烫伤危险!

本机器运作时可能会产生热水和蒸汽,在操作 过程中,请避免接触飞溅的热水或者蒸汽,且 机器运行时咖啡杯架可能会变得很烫。

2. 基本信息

2.1 使用说明

使用本机器之前请仔细阅读此说明书。不遵循 本机器使用说明可能导致烧伤或者损坏电器。 制造商对未正确使用该机器引起的损害概不负 责。



请注意:

此安全警告适用于所有德龙品牌的咖啡机。 保存本说明书。如果转让该机器给其他人,请 确保将说明书同时附送。

3. 使用之前

3.1 机器检查

打开包装后,确保机器表面完好且没有被损坏,同时所有的配件齐全。如果机器存在明显的损坏,切勿使用该机器。请与德龙授权的售后服务中心联系。

3.2 机器安装

安装机器的时候,应该重视以下安全警告:

- •本电器会释放出热量,因此将机器放置于工作台时,机器表面、侧面及靠墙部分需留出至少3厘米的空间,咖啡机上方需要留出至少15厘米的空间。
- •若有水渗入,会损坏机器。切勿将该机器放置 在水龙头或者水槽附近。
- •若机器中的水结冰会损坏机器。切勿将机器安放在一个室温可能低于零度的房间内。
- 电源线切勿放置在尖锐物质的边缘或接触热的物体表面(如: 电热板),这样会损坏电源线。

3.3 机器连接

请检查并确认所使用的电源电压与该机器铭牌 所标示的电源电压是否一致。

本机器必须与具备有效地接地线的电源正确连接,且最小的额定电流只能为**10**安培。

如果电源插座与机器插头不匹配,需由具有专 业资质的技术人员来替换相匹配的插座。

3.4 机器设置

在您第一次使用咖啡机时,水回路是空的,机 器操作的声音可能较大。水回路满之后声音会 降低。

3.5 与食品接触部分的清洁与维护

•首次使用本机器或超过3或4天未使用本机器时,请用热水冲洗可能与水或牛奶接触的所有可拆卸配件。

- •如本机器超过3或4天未使用,请在制作第一杯 饮料前,按照使用说明书中的说明冲洗水回路。
- •当机器通过显示屏或说明书中描述的指示灯向 您提出建议时,请严格按照建议执行自动清洁, 或按照机器指示讲行维护。

3.6 制作卡布奇诺和牛奶咖啡

- •本机器已通过测试,可用于含牛奶或以下植物来源的产品:大豆、大米和杏仁。不得使用其他类型的牛奶或植物来源的产品。
- •在使用任何类型的牛奶后,请对系统进行清洁。 请遵循说明书中描述的标准程序进行操作。
- 由制造商提供的,或在说明书中描述的清洁方法无法保证完全去除过敏原。

如果发现已确认或疑似的过敏或不耐受症状, 确保您的机器在以前没有使用过含有能使您产 生过敏反应的过敏原或能使您产生不耐受反应 的任何以生奶或植物来源为基础的产品。

4. 介绍

首先感谢您选择德龙全自动意式浓缩咖啡机。 在使用前,请先花几分钟阅读此说明书,以避 免各种危险和损坏机器。

4.1 括号之内的字母

括号之内的这些字母与本说明书第**1-2**页上的图例相对应。

4.2 故障处理和检修

出现问题时,首先按照"21.显示信息"和"22.故障 处理"章节中的信息来尝试解决问题。

如果仍不能解决问题或者您需要更详细的信息, 请致电保修卡上的电话号码,咨询售后服务中 心。

4.3 App下载



本机器可以通过德龙Coffee Link App远程操作一系列功能。

在App中,您可以在指点之间获得咖啡世界的相 关信息、建议和有趣的内容,并了解机器的相 关信息。



的 此标志标明您可以在App中控制或查询的功能。

您最多可以创建**3**种新饮品的配方,并将配方保存在设备中。

请注意:

请前往"compatibledevices.delonghi.com"查看兼容设备。

5. 产品描述

5.1 机器描述(第1页-A)

A1.咖啡豆容器盖

A2.咖啡粉进料管盖

A3.咖啡豆容器

A4.咖啡粉讲料管

A5.咖啡豆研磨程度调节旋钮

A6.暖杯架

A7.() 按钮: 打开/关闭机器 (待机)

A8.热水喷嘴连接器

A9.咖啡流出口(可调节高度)

A10.凝水盒

A11.咖啡盛渣盒

A12.咖啡杯托盘

A13.滴水盘水位指示浮标

A14.滴水盘网格盖板

A15.滴水盘

A16.水箱盖

A17.水箱

A18.软水过滤器支架

A19.萃取器门

A20.萃取器

A21.电源线插座连接口

A22.主电源开关

5.2 主页描述 (第2页-B)

B1.蓝牙已启用

B2.节能模式已启用

B3.咖啡口味选择显示

B4.直接可选饮品

B5.滚动箭头

B6. 杯量选择

B7.除垢警报

B8.清洁牛奶容器提示

B9.更换软水过滤器提示

5.3 控制面板描述 (第2页-C)

C1. □▶■: 饮品杯量选择

C2. Q: 定制用户选择

C3. 😋 : 机器设置菜单

C4. ← : 按下后退出所选功能,返回主菜单

C5. (一): 我的饮品选择菜单。如从未设置菜单(参考"15.定制饮品"章节的描述进行设置),

饮品设置即保存为您第一次使用机器时的设 置。

C6. ● # : 咖啡口味选择

5.4 配件描述(第2页-D)

D1.水硬度试纸(黏附在说明书上)

D2 咖啡粉量勺

D3.除垢液

D4.软水过滤器(部分特定型号配备)

D5.清洁刷

D6.热水喷嘴

D7. 电源线

5.5 牛奶容器描述 (第2页-E)

E1.奶泡调节和清洁旋钮

E2.牛奶容器盖

E3.牛奶容器

E4. 牛奶吸入管

E5. 牛奶泡沫喷嘴(可调节)



请注意:

我们不断改进产品,因此德龙公司保留一切更 改产品技术参数和外观特点的权利,且恕不需 另行通知。

6. 机器设置

请注意!

•在您第一次使用咖啡机时,水回路是空的,机 器操作的声音可能较大。水回路满之后声音会 降低。


•咖啡机在出厂前都会进行测试,所以在机器内存有一点点咖啡粉是正常现象,我们确保本机器是全新的。

•请您尽快参考"19.设置水硬度"章节的描述设置 水硬度。


1.将电源线(D7)插入到机器背面的插座连接口上,然后接通机器的电源(如图1),并确保机

器背面的主电源开关(A22)处于开启的状态 (如图2):


根据显示屏显示的指引操作:

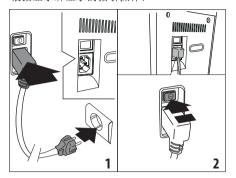


2. "SELECT LANGUAGE" (选择语言) 按 下 (Next >) 直至显示屏显示所需语言, 然 后按下国旗选择语言。

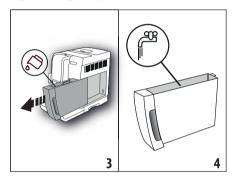

3. "FILL TANK WITH FRESH WATER" (在水箱 中注入清水): 取出水箱(A17)(如图3),注 入清水至-MAX-(标志在水箱内部的最高位置) 线(如图4), 然后再将水箱装回机器(如图5):

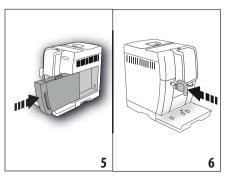

4."INSERT WATER SPOUT" (插入热水喷嘴): 热水喷嘴(D6)插入热水喷嘴连接器(A8)(如 图6),并在其下方放置一个最小容积为100毫 升的容器(如图7):

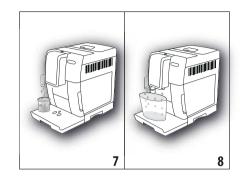

5. "WATER CIRCUIT EMPTY PRESS OK TO START"(回路中无水,按下OK开始):接下 (Ok √) 确认。机器从热水喷嘴释放热水(如 图8) 停止后自动关机。机器可开始正常使用。



【i】_{请注意!}

在最初使用机器时,可能需要制作4-5杯卡布奇 诺后,才能达到令人满意的效果。

•为了能感受到更好的咖啡体验并提升机器的表 现,我们建议您参考"20.软水过滤器"章节的描 述安装软水过滤器(D4)。

7. 图 开启机器



请注意!

在开启机器前,请确认主电源开关(A22)已开 启(如图2)。

每次开启机器时,机器会自动完成一次预热和 冲洗,此过程不能中断。机器只有在完成此循 环后方可使用。

•按下(1)按钮(A7)开启机器(如图9),显示 屏显示"HEATING UP UNDERWAY PLEASE WAIT"(正在加热, 请稍候)。



预热完成后,显示屏显示: "RINSING UNDERWAY PLEASE WAIT"(正在冲洗,请 稍候)。机器同时会预热锅炉和机器内部部件。 机器到达工作温度后,显示屏显示主屏幕(主 页)。

8. 关闭机器

每次使用完后关闭机器, 机器都会进行一次自 动地冲洗。

按下(1) 按钮(A7)关闭机器(如图9)。 显示屏显示"TURNING OFF, PLEASE WAIT" (正在关闭,请稍候),然后机器会进行一次 循环冲洗, 然后再关闭(待机模式)。

【i】_{请注意!}

如果您有很长一段时间不会使用机器, 请从主 电源插座拔下电源插头:

- •首先, 按下 (¹) 按钮, 关闭机器 (如图9);
- •按下机器背面的主电源开关(A22-如图2)。



切勿在机器开启的状态下, 关闭机器的主电源 开关。



9.1 进入菜单

- 1.按下 **☆** 按钮 (C3) 进入菜单。
- 2.按下(Next) 滚动菜单项,直至显示屏显示 所需菜单项:
- 3.按下想选择的菜单项。

9.2 退出菜单

完成调整后,按下(**5** Esc) 返回主页。

9.3 冲洗 @

使用此功能, 热水可以从咖啡流出口(A9)和 热水喷嘴(D6)(如安装)流出,可以清洁和 预热机器的内部同路。

- 1.在咖啡和热水流出口的下方放置一个最小容 积为100毫升的容器(如图8)。
- 2. 选择"RINSING"(冲洗)几秒钟后,热水首 先从咖啡流出口流出,然后从热水喷嘴(如果 插入)流出(如图7)。
- 3.如需停止释放热水请按下(Stop× , 或等 待机器自动停止制作热水。

(i)请注意!

- •如果机器超过3-4天未使用,我们强烈地建议 您, 在开机使用前, 请先冲洗2-3遍:
- •冲洗后,咖啡盛渣盒(A11)有水是正常现象。

9.4 除垢 🖽

请参考"18.除垢"章节的描述进行除垢。

9.5 软水过滤器 ↑

请参考"20.软水过滤器"章节的描述安装软水过 滤器(D4)。

9.6 饮品设置 (i)

在此章节中, 您可以查询个性化设定, 可以重 置饮品和用户的默认值。

- 1.进入设置菜单,按下"DRINK SETTINGS"(饮 品设置),显示屏显示第一种饮品的参数;
- 2.以垂直显示条显示值。默认值以 标志表 示, 当前参数设置以实心的垂直显示条突出显 示:
- 3.按下 (**与** Esc) 返回设置菜单。如需滚动和显示 饮品,请按下(Next);
- **4.**按下 (Reset □) 重置饮品默认值;

5.显示"CONFIRM RESET?"(是否确认重置?): 6.显示"DEFAULT VALUES SET"(默认值设置): 接下 Ok ✓ 。

该饮品已被重置为默认值。您可选择其他饮品, 或按下 (Brc) 两次返回主页。

(i 】_{请注意!}

如需改变其他用户的饮品设置,请返回主页, 选择所需的用户,并重复以上操作。

9.7 自动关机(待机)(¹)

可以设置在15分钟、30分钟或1、2、3小时后, 自动地关闭机器。

如需启动该程序, 请按如下步骤操作:

- 1. 按"AUTO-OFF"(自动关机):
- 2.按下 (增加) 或((减少)) 箭头选择所需 的时间间隔:
- 3.如需确认,请按 **Ok √** 自动关机设置已完成。

9.8 节能模式 🕏

此功能可以启用或禁用节能模式。启用节能模 式可以减少能源的消耗。

如需启用或禁用节能模式,请按如下步骤操作:

1.按下"ENERGY SAVING"(节能模式)禁用 (OFF) 或启用 (N) 节能模式;

主页顶栏出现相应的标志(B2),表示该功能 已启用。



如果启用了节能模式,制作咖啡前您可能需要 等待片刻。

9.9 咖啡温度

如需更改制作咖啡的水的温度, 请按如下步骤 操作:

1.接下"COFFEE TEMPERATURE"(咖啡温度)。 显示屏(B)上出现可选参数(当前值以下划线 标示),

2. 选择所需温度(LOW低温、MEDIUM中温、 HIGH高温、MAXIMUM最高)。

9.10 水硬度 🥳

请参考"19.设置水硬度"章节的描述进行水硬度

9.11 设置语言 ()

如需更改显示屏显示的语言, 请按如下步骤操 作.

- 1. 按下"SET LANGUAGE"(设置语言):
- 2.按下国旗选择所需设置的语言(按下(Next) 显示所有可用语言)。

9.12 提示音 🗐 🕽

此功能可以启用或禁用每次按下图标或者安装/ 移除配件时机器发出的提示音。如需启用或禁 用提示音功能,请按如下步骤操作:

1.按"BEEP"(提示音)禁用 OFF 或启用 UN 提示 音功能:

9.13 蓝牙 ⊀

此功能可启用 off PIN码,请按如 下步骤操作:

- 1.按下"BLUETOOTH"(蓝牙)。机器的序列号 (19位)和一个4位数字(PIN码)出现在显示 屏(B)上:
- 2. 当您通过应用程序连接时,按下(OFF)或 (),禁用或启用PIN码保护功能。

PIN码初始值是"0000"。您也可以通过APP进行 PIN码设置。

请注意!

设备的序列号在"蓝牙"功能中可见,当与应用程序建立连接时,设备的序列号可被明确识别。

9.14 出厂默认值 🔤

选择该程序,所有的菜单和杯量设置将恢复为出厂默认值(除了语言设置之外)。

如需重置出厂默认值,请按如下步骤操作:

9.15 数据统计

此功能可以显示机器相关数据。如需显示数据, 请按如下步骤操作:

1.接下"STATISTICS"(数据统计),然后接下(Next)滚动浏览所有数据。

咖啡总计

牛奶总计

热水总计

除垢总计

清洁总计

软水过滤器总计

9.16 个性化设置

自定义当前用户图标,请按如下步骤操作:

1.按下"CUSTOMISE PROFILE"(个性化设置); 2.按住所需图标。主页顶栏上将显示带有颜色 的图标。

10. 图 制作咖啡


10.1 使用咖啡豆制作咖啡

重要!

请勿使用咖啡生豆、已焦糖化的或有糖渍的咖

啡豆,因为可能会粘住咖啡研磨器,使其无法 使用。

1. 将咖啡豆装入咖啡豆容器(A3)(如图10):

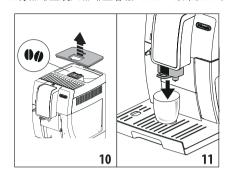

- 2.在咖啡流出口(A9)下方放置咖啡杯;
- 3.调低咖啡流出口使其尽量靠近咖啡杯(如图 11),这样制作出来的咖啡油脂更丰富;
- 4.然后选择所需制作的咖啡:
 - ESPRESSO意式浓缩咖啡
 - LONG美式咖啡
 - COFFEE咖啡
 - · DOPPIO+双倍意式咖啡
 - 2XFSPRFSSO 2X意式浓缩咖啡

5.开始制作咖啡,显示屏上显示所选饮品的图片,同时显示一个进度条,进度条随咖啡制作过程逐渐满格。

请注意:

- •您可以同时制作2杯意式浓缩咖啡,只需要在制作1杯意式浓缩咖啡时按下2X (此图标会在制作开始的几秒钟显示)。
- •当机器制作咖啡时,可在任意时候按下 Stop X 停止制作咖啡。
- 一旦咖啡制作完成,机器可再次准备就绪制作 下一杯咖啡。

请注意!

•咖啡机使用时显示屏上可能会有各种警示信息 (如:在水箱中注入清水,清空咖啡渣盒等)。 关于其含义,请参考"21.显示信息"章节的描述。

- •如需制作更热的咖啡,详见"10.6.制作更热咖啡的小贴士"竟节的描述。
- ·如果咖啡一滴滴地流出或流出太快,咖啡油脂不丰富,或者太凉等问题出现,请参考"10.5 调节咖啡豆研磨程度"和"22.故障处理"章节的描述。
- •每种咖啡均可定制(请参考"15.定制饮品"和 "16.保存您的个人用户选择"章节的描述)。

10.2 选择咖啡口味

按下 **●** Ø 按钮 (C6):

my	定制量杯(如设置)/ 标准量杯
00000	超淡口味
00000	淡口味
00000	中等口味
00000	浓口味
00000	特浓口味
	(请参考"10.4 使用咖啡粉制作咖啡"章节的描述)

10.3 设置咖啡杯量

my 📳	定制量杯(如设置)/ 标准量杯
	小杯量
	中杯量
	大杯量
	超大杯量

制作完饮品后,杯量设置会重置回 my 我的 参数。

10.4 使用咖啡粉制作咖啡

重要!

- •切勿在机器关闭的状态下加入咖啡粉,这会导致咖啡粉散落在机器内部弄脏机器,甚至损坏机器。
- •切勿加入超过1量勺(D2)的咖啡粉,否则会 弄脏机器内部或堵塞咖啡粉进料管(A4)。
- •如果您使用咖啡粉制作咖啡,一次只能制作一杯咖啡。
- 1.反复按下 **●** (口味)选择按钮(C6),直至显示屏显示 **●** (咖啡粉)。
- 2.打开咖啡粉进料管盖(A2)。
- 3.确保咖啡粉进料管(A4)没有被堵塞,然后加入一量勺咖啡粉(如图12)。



- 4.在咖啡流出口(A9)的下方放置一个咖啡杯。 5.选择需要制作的咖啡饮品:
 - ESPRESSO意式浓缩咖啡
 - LONG美式咖啡
 - COFFEE咖啡
- 6.开始制作咖啡,显示屏上显示所选饮品的图案,同时显示一个进度条,进度条随咖啡制作过程逐渐满格。
- 一旦咖啡制作完成,机器可再次准备就绪制作 下一杯咖啡。

重要! 制作美式咖啡:

咖啡制作到一半时,显示屏显示"ADD GROUND COFFEE,MAXIMUM ONE MEASUERE"(加入咖啡粉,最多一匙份量)

请加入一量勺咖啡粉,按下 (Ok)



10.5 调节咖啡豆研磨程度

咖啡豆研磨器在出厂时已设定好, 在最初使用 时无需调节。

但是如果在制作了几杯咖啡后, 您觉得咖啡不 够浓月油脂不够丰富或咖啡流出的速度太慢 (一滴滴滴下来),那么可以通过调节咖啡豆 研磨程度调节旋钮(A5)来校正并解决这个 问题(如图13)。



请注意!

只有在开始制作咖啡,咖啡豆研磨器在运作的 时候,才能转动研磨程度调节旋钮。



如果咖啡流出的速度太慢或 根本不流出,请朝顺时针方 向旋转一格。

若要做出油脂更为丰富的咖 啡,可朝逆时针方向转动一

格(每次转动不要超过一格,否则咖啡会一滴 一滴滴下来)。

至少制作两杯咖啡以后,调节研磨的效果才会 显现出来。若调节后仍未达到理想的效果,可 将研磨程度调节旋钮再转动一格。

10.6 制作更热咖啡的小贴士

如需制作一杯更热的咖啡, 请按如下步骤操作:

- •在菜单设置中, 选择冲洗功能进行一次循环冲 洗。(请参考"9.3 冲洗"章节的描述):
- 使用热水功能进行暖杯(请参考"14.制作热水" 章节的描述):
- •在菜单设置 💝 (C3) 中调高咖啡的温度(请 参考"9.9 咖啡的温度"章节的描述)。

11.德龙醇萃冰咖

- 1.在主屏上选择"德龙醇萃冰咖";
- 2.按"+"或"-"选择所需的杯量(推荐 🔲 🗑 中杯量)和口味: 然后按下(Next):
- 3.在一个大玻璃杯中加入3块冰块, 并将玻璃杯 置于咖啡流出口:
- 4.按 Ok ✓ 开始制作:
- 5. 再往杯中加3个冰块, 然后根据需要加上糖 浆、甜味剂或牛奶,即可享用。

咖啡饮品	杯量	可调节杯量	冰块数量
德龙醇萃冰咖	□ □ □ □ ≈100ml	约40~240毫升	6块 (约13g/块)

请注意:

如需定制德龙醇萃冰咖的杯量,请参考"15.定 制饮品 (my) "章节的描述进行设置。



重要!

请始终使用耐热的杯子制作饮品。


制作含牛奶的饮品

请注意!

为了避免奶泡稀少或奶泡过大,请按"12.4 每次 使用后清洁牛奶容器"、"17.10 清洁牛奶容器"和 "17.11 清洁热水喷嘴"章节的描述来清洁牛奶容 器盖(E2)和热水喷嘴连接器(A8)。

12.1 倒入牛奶并安装牛奶容器

1.取下牛奶容器盖(E2)(如图14):

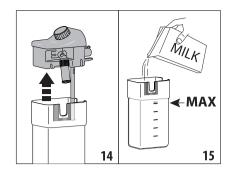


2.在牛奶容器 (E3) 中倒入足够量的牛奶,但不要超过牛奶容器把手上标注的-MAX-(最高位置)线(如图15)。标注的每一格之间的间距为100毫升;



请注意!

- •为了打出绵密顺滑的牛奶泡沫,请使用脱脂或 半脱脂的冰箱冷藏的牛奶(大约5°C)。
- •如果启用了节能模式,在制作饮品前您可能需要等待片刻。
- 3.确保牛奶吸入管(E4)已正确地插入到牛奶容器盖的底部(如图16);

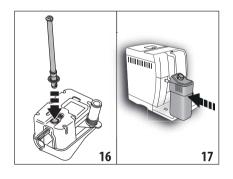

- 4.将牛奶容器盖装回牛奶容器:
- 5.取下热水喷嘴(D6);
- 6.将牛奶容器(E)连接到喷嘴连接器(A8)上, 并尽量往里推(如图17)。此时,机器会发出 一声蜂鸣声(在提示音功能启动的情况下);

7.在咖啡流出口(A9)和牛奶流出口(E5)的下方放置一个足够大的杯子,可调节牛奶流出口的高度。仅需将其向下拉,使之尽量的靠近咖啡杯(如图18);



8.每一项功能操作请遵循以下操作。

12.2 调节牛奶泡沫的量

旋转奶泡调节旋钮(E1)可以调节卡布奇诺或含牛奶饮品中牛奶泡沫的量。

奶泡调节 旋钮的 位置	描述	建议制作的饮品
	无牛奶泡沫	热牛奶(无奶泡)/ 咖啡拿铁
	最少量的 牛奶泡沫	拿铁玛奇朵/澳白
	最大量的 牛奶泡沫	卡布奇诺/卡布奇诺+/ 混合卡布奇诺/浓缩玛 奇朵/热牛奶(含奶泡)

12.3 自动制作含牛奶的饮品

1.往牛奶容器(D)中倒入牛奶,并按之前章节的描述安装牛奶容器:

- 2.选择所需的饮品:
 - CAPPUCCINO 卡布奇诺
 - LATTE MACCHIATO 拿铁玛奇朵
 - HOT MILK 热牛奶
 - CAPPUCCINO+ 卡布奇诺+

- CAPPUCCINO MIX 混合卡布奇诺
- CAFFELATTE 咖啡拿铁
- FLAT WHITE 澳白
- ESPRESSO MACCHIATO 浓缩玛奇朵
- 3.显示屏显示指示信息,提示将奶泡调节旋钮 (E1)按照饮品的原始配方调节至相应的位置。 旋转牛奶容器盖上的旋钮。
- 4.几秒钟后,机器开始自动制作饮品,显示屏显示所选饮品的图案。同时显示一个进度条,进度随饮品制作过程逐渐满格。
- 一旦咖啡制作完成,机器可再次准备就绪制作 下一杯咖啡。

请注意:制作含牛奶饮品时机器会显示通用提 示信息


- **与** Esc): 按下后停止制作并返回主页。
- **Stop X** 停止:按下后暂停牛奶或咖啡制作,然后进入下一个制作环节(如后续有制作步骤未完成)完成饮品制作。
- •每种咖啡均可定制(请参考"15.定制饮品"和 "16.保存您的个人用户选择"章节的描述)。
- •请勿将牛奶容器长时间放置于冰箱之外。牛奶温度越高(理想温度为5℃),打出的奶泡质量越差。

12.4 每次使用后清洁牛奶容器


每次使用牛奶容器后,显示屏显示"TURN MILK FROTH ADJUSTMENT DIAL TO CLEAN POSITION"(转动奶泡调节旋钮至CLEAN位置),必须清洗牛奶容器盖:

- 1.将牛奶容器(D)安装在机器上(无需清空牛奶容器):
- 2.在牛奶流出口的下方放置一个杯子或其他容器:
- 3.将奶泡调节旋钮(E1)旋转至CLEAN(清洁)的位置(如图19),此时显示屏上显示"CLEANING UNDERWAY RECIPIENT UNDER SPOUT"(正在清洁,容器置于喷嘴下方),同

时伴有相应的进度条,进度条随着清洗过程逐渐满格(如图20)。蒸汽和热水会从牛奶流出口中流出。清洁完成后,机器会自动停止:

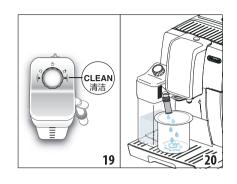

- **4.**将牛奶泡沫旋钮旋转回任意一个牛奶泡沫的位置:
- 5.取出牛奶容器,用一块海绵清洁热水喷嘴连接器(A8)(如图21)。

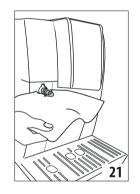

请注意!

如需制作多杯卡布奇诺或含牛奶的饮品,仅需在制作完最后一杯后再清洁牛奶容器。

如果需要继续制作下一杯饮品,当机器提示 "CLEAN"(清洁)信息时,请按下 每 Esc)。

- •如果您没有清洗牛奶容器,显示屏会显示 ② 信号提示您需要清洗牛奶容器。
- •牛奶容器可以置于冰箱冷藏。
- •在某些情况下,清洁前您必须等待机器完成预 热。

13. 咖啡壶

1.在咖啡流出口(A9)下放置一个咖啡壶。在 选择要使用的咖啡壶时,请牢记需制作饮品的 数量,即.

杯量选择	杯量(ml)
2	250
4	500
6	750

- 2.按"咖啡壶"、"咖啡选择口味"、"杯量";
- 3.按下 (Ok **√**)。
- 4.几秒钟后,机器开始自动制作饮品,显示屏显示所选饮品的图案。同时显示一个进度条,进度随饮品制作过程逐渐满格。
- 一旦咖啡制作完成,机器可再次准备就绪制作 下一杯咖啡。

请注意:

• (**5** Esc): 按下后停止制作并返回主页。

安全警告:

制作完一壶咖啡后,让机器冷却5分钟,然后再制作下一种饮品。当心饮品过热!

14. 制作热水

- 1.确保热水喷嘴(D6)已正确连接到热水喷嘴 连接器(A8);
- 2.在热水流出口下方放置一个容器(尽可能地靠近热水流出口,以避免热水飞溅);
- 3.按下"HOT WATER"(热水),显示屏会显示 对应的图案,同时显示一个进度条,进度条随 着制作过程逐渐满格。
- 4.机器释放热水,制作完毕后自动停止。如需 手动停止出热水,请按下(StopX)。

请注意!

- •如果启用了节能模式,在制作热水前您可能需要等待片刻。
- •水的杯量可定制(请参考"15.定制饮品"和"16. 保存您的个人用户选择"章节的描述)。

15. 🖹 定制饮品 🔍 🗍

可以定制咖啡口味 (需要时)和饮品杯量。

- 1.请确认您希望定制口味的用户己启用。您可以 为每个用户设定 (my) 我的饮品;
- 2.按下 (my) (C5);
- 3.选择您想要定制的饮品进入定制页面。饮品相应的配件器具需安装在机器上:
- **4.** (仅咖啡饮品) "CHOOSE COFFEE AROMA" (选择咖啡口味): 按下"-"或"+"选择所需的口味, 然后按 Ok **√** ;
- 5."COFFEE QUANTITY STOP TO SAVE" (咖啡杯量,按下STOP保存): 机器开始制作咖啡,显示屏用垂直显示条显示定制的杯量。显示条旁边的星星符号代表当前杯量:
- 6. 当杯量达到最少杯量时,显示屏显示 (Stop**X**);
- 7. 当杯中的杯量达到期望杯量时,请按下 (Stop X);
- 8."SAVE NEW SETTINGS?" (保存新设置?): 按下 Ok √ 保存,(或按下 与 Esc 取消该操作)。

机器确认是否已保存杯量设定(根据上一步的选择)。按下 Ok √ 。 机器返回主页。

请注意!

- •卡布奇诺和含牛奶的饮品:首先保存咖啡口味,然后保存牛奶杯量,再保存咖啡杯量;
- •热水: 机器制作热水。按下 (Stop X) 保存所需 杯量。
- •您也可以连接德龙Coffee Link App定制饮品。
- •按下 **5** Esc 退出设定。口味和杯量值将不会被保存。

饮品杯量表			
饮品	标准杯量	可设定杯量	
意式浓缩咖啡	40毫升	20-180毫升	
美式咖啡	160毫升	115-250毫升	
咖啡	180毫升	100-240毫升	
双倍意式咖啡	120毫升	80-180毫升	
热水	250毫升	20-420毫升	

16. 保存您的个人用户选择

本机器可保存3个个人用户选择,每个都有特定的图标。

定制的 (m) 饮品"口味"和"杯量"值保存在 个人用户选择中(请参考"15.定制饮品")。所 有饮品会根据使用的频率进行排序。

请注意!

- ②(客人):选择该用户,使用出厂默认值制作饮品。
- •您可以连接"德龙Coffee Link App"重命名您的 个人用户(只会显示前三个字符)。
- •如需自定义用户图标,请参考"9.16个性化定制" 章节的描述。

17. 图 清洁

17.1 清洁机器

以下咖啡机部件必须定时清洁:

- •咖啡机内部回路;
- •咖啡盛渣盒(A11):
- ·滴水盘(A15),凝水盒(A10),滴水盘网格盖板(A14)和滴水盘水位指示浮标(A13);
- •水箱(A17);
- •咖啡流出口(A9):
- •咖啡粉进料管(A4);
- •萃取器(A20),打开萃取器门(A19)后可触及的部位;

- •牛奶容器(E):
- •热水喷嘴连接器(A8):
- •触摸屏(B)。

重要!

- •切勿使用化学溶剂、有腐蚀性的清洁剂或酒精 清洗咖啡机。 德龙超级全自动咖啡机无需使用 任何化学物质进行清洁。
- •除了滴水盘网格盖板(A14)和牛奶容器(D) 以外,咖啡机的其他部件都不可用洗碗机清洗。
- 切勿使用金属物体除水垢或咖啡沉淀物,以免擦伤金属或塑料表面。

17.2 清洁机器内部回路

如果机器超过3-4天没有使用,再次使用之前, 我们强烈建议打开开关进行如下操作:

- •选择冲洗功能进行2-3次循环冲洗(请参考"9.3 冲洗 4900 "章节的描述):
- •制作热水, 让热水流几秒钟(请参考"14.制作 热水"章节的描述)。

请注意!

冲洗后,咖啡盛渣盒(A11)有水是正常现象。

17.3 清洁咖啡盛渣盒

当显示屏显示"EMPTY GROUNDS CONTAINER"(清空咖啡渣盒)时,咖啡盛渣盒必须清空并进行清洗。在清空咖啡盛渣盒(A11)前,机器不能制作咖啡。当第一杯咖啡制作完72小时后,清空咖啡盛渣盒指示信号会出现在显示屏上,即使此时咖啡盛渣盒未满。为了正确计算72小时,请勿关闭主电源开关(A22)。

重要! 烫伤危险

如果您连续制作了几杯卡布奇诺后,金属的咖啡杯托盘(A12)会变烫。等其冷却后方可触碰,且只能接触前面。

清洁咖啡盛渣盒(开机状态下):

1.取出滴水盘(A15)(如图22),清空并清洗。



2.清空咖啡盛渣盒(A11),并彻底地清洗,以去除残留在底部的咖啡残渣。可用配备的清洁刷(D5)上的清洁铲进行清理。

3.如有必要,检查凝水盒(A10)(红色)并清空。


重要!

取出滴水盘后,即使只有一点点咖啡渣也必须清空咖啡盛渣盒。如果未清理,您之后制作咖啡的时候,咖啡残渣可能会超过盛渣盒底部的高度,导致阻塞机器。

17.4 清洁滴水盘和凝水盒

重要!

滴水盘(A15)配有一个红色的水位指示浮标(A13)(红色),显示其中的水量(如图23)。

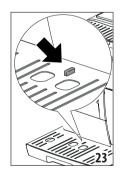

该水位指示浮标从咖啡杯托盘(A12)中浮出来前,必须清空滴水盘并清洗,否则水会从滴水盘的边缘溢出来,损坏机器和放置机器的桌面及其四周。

按如下步骤取出滴水盘:

- 1.取出滴水盘和咖啡盛渣盒(A11)(如图22);
- 2.取出咖啡杯托盘(A12)和滴水盘网格盖板(A14),清空滴水盘和咖啡盛渣盒并清洗所有部件:
- 3.如有必要,检查凝水盒(A10)(红色)并清空:
- **4.**将滴水盘、网格盖板和咖啡盛渣盒一起安装 回机器。

17.5 清洁咖啡机的内部

触电危险!

在清洁机器的内部部件前,请先关闭机器(详见"8.关闭机器"章节的描述),然后拔下电源插头。切勿将机器浸入水中。

- 1.定期检查(大约一月一次)机器的内部部件 是否很脏(取出滴水盘后可接触部分-A15)。 如有必要,可以用配备的清洁刷(D5)以及海 绵来清除咖啡沉淀物。
- 2.用吸尘器来清除咖啡残留物(如图24)。



17.6 清洁水箱

- 1.大约一个月一次,以及在更换软水过滤器 (D4) (如配备)的时候,请用湿布和少量的中性清洁剂清洁水箱 (A17)。在往水箱中加水并安装回机器前需要彻底冲洗水箱:
- **2.**取出水软化过滤器(如配备),并用流动的水冲洗:

- 3.更换水软化过滤器(如配备),往水箱中倒入 清水,然后将水箱装回原位;
- **4.** (配备软水过滤器的情况下)释放大约**100**毫升的热水,重新启动软水过滤器。

17.7 清洁咖啡流出口

- 1.用海绵或布定期地清洁咖啡流出口(A9)(如 图25A):
- 2.检查咖啡流出口上面的小洞是否阻塞,如有必要,请用牙签进行清洁(如图25B)。



17.8 清洁咖啡粉进料管

定期地检查咖啡粉进料管 (A4) 是否阻塞 (大约一个月一次)。如有必要,请用机器配备的清洁刷 (D5) 进行清洁。


17.9 清洁萃取器

至少一个月清洗一次萃取器(A20)。

重要!

在机器开启的状态下, 切勿取出萃取器。

- **1.**确保机器已正确关闭(参考"**8.**关闭机器"章节的描述):
- 2.移除水箱(A17)(如图3);
- 3.打开机器右边的萃取器门(A19)(如图26):

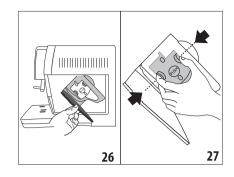

- **4.**往里按住两个带颜色的按钮,同时将萃取器往外拔(如图**27**);
- 5.将萃取器在水中浸泡5分钟,然后用自来水冲洗。

重要!

只能用水冲洗。

切勿使用洗涤剂,不可机洗。


如使用洗涤剂清洗萃取器,可能会将其损坏。


- 6.通过萃取器的门可以将看得见的咖啡残渣用 清洁刷(D5)进行清洁:
- 7.清洁完毕后,将萃取器推入内部支架(如图 28),然后按住PUSH(按)标志直至其安装 回原位:

请注意!

如果萃取器很难安装回原位,则可按压图**29**中 所示的两个操作杆使它适应正确的尺寸。

9.一旦将萃取器安装回原位,请确保两个红色的按钮都已弹出(如图30)。

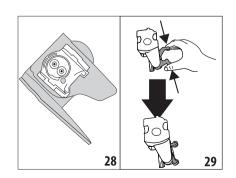

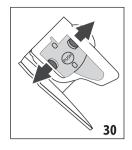


10.关上萃取器的门; 11.把水箱重新装上。

17.10 清洁牛奶容器 为了保持有效地制作 奶泡,请按照如下步 骤操作每两天进行一 次牛奶容器的清洁:

1.取出牛奶容器盖(E2);

2.取出牛奶泡沫喷嘴(E5)和牛奶吸入管(E4)(如图31):

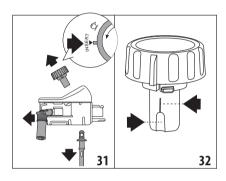

3.逆时针方向旋转奶泡调节旋钮(E1)至 "INSERT"(插入)位置(如图31)然后向上拔出;

4.用热水和温和洗涤液彻底清洗所有的部件。所 有部件均可机洗,但需将它们放置于洗碗机最 上层的篮筐中。请确保旋钮下方的小洞和沟槽 中没有牛奶残留(如图32)。如有必要,请用



牙签清洁沟槽:

5.用流水冲洗奶泡调节 旋钮底座的内部 (如图33); 6.确认牛奶吸入管和牛奶泡沫喷嘴没有被牛奶 残留物堵塞:

7.安装奶泡调节旋钮(对准"INSERT"(插入)位置),牛奶泡沫喷嘴和牛奶吸入管;

8.将牛奶容器盖装回牛奶容器(E3)。

17.11 清洁热水喷嘴

每次准备牛奶饮品时,请用海绵清洁热水喷嘴连接器(A8),清除垫圈上的牛奶残留物(如图21)。



重要!

•在除垢前,请阅读说明书和除垢包装上的安全 警告。

•本机器只能使用德龙除垢液进行除垢。如使用 不合适的除垢液或未按正确的除垢步骤进行除 垢而引起的机器损坏,制造商不负任何责任。

当显示屏显示"DESCALING NEEDED PRESS OK TO START (~45min)"(需要除垢,按下0K 开始(约45分钟)): 如需立即除垢,请按下 Ok ✓)并按照第3条开始的指示进行除垢。


如想要稍后进行除垢,请按下 **与** Esc 。显示屏显示 **别**,提示您机器需要除垢(每次开机后都会显示)。

讲入除垢菜单:

1.按下 **℃** 按钮 (C3) 进入菜单设置程序;

2.按下"DESCALE"(除垢)并按照显示屏上的 指示操作:

3."REMOVE WATER FILTER"(移除软水过滤器) (如图34): 移除水箱(A17), 取出软水过滤器(D4 - 如配备),清空水箱。按下 (Next ➤) (下一步);

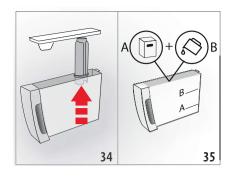

4."DESCALER (LEVEL A) AND WATER (LEVEL B)"(除垢剂(至A位置)和水(至B位置)(如图35);将除垢液倒入水箱中至水箱内侧标注的A位置(相当于100毫升),然后加入一升水至水箱B位置,将水箱安装回机器。按下(Next)(下一步);

5."EMPTY DRIP TRAY"(清空滴水盘)(图22):
 6.取出并清空滴水盘(A15)和咖啡盛渣盒(A11),然后将它们安装回机器。按下(Next)
 (下一步);

7."POSITION 2L CONTAINER""OK TO START"(在喷嘴下方放置2升容器,按下OK开始除垢):

在热水喷嘴(D6)和咖啡流出口(A9)的下方放置一个最小容积为2升的容器(如图8)。

重要! 烫伤危险

在除垢的过程中,酸性的热水会从热水/蒸汽喷嘴和咖啡流出口流出,请小心注意避免接触飞溅的热水。

8.按下 Ok √ 确认已添加除垢溶剂。显示屏显示"DESCALING UNDERWAY PLEASE WAIT"(正在除垢,请稍候):除垢程序开始进行且含有除垢液的液体从热水喷嘴和咖啡流出口流出。除垢程序自动进行一系列的冲洗和停顿以确保将机器内部的残垢完全去除。

大约25分钟后,机器停止除垢。

9."RINSE AND FILL WATER TANK UP TO MAX LEVEL"(冲洗水箱并加水至MAX位置)


(如图4): 现在可以用清水彻底冲洗机器。将盛接除垢溶液的容器清空。取出水箱,用流水冲洗后注入清水至-MAX-(最高位置)线,再安装回机器。

10."POSITION 2L CONTAINER OK TO START RINSING" (放置2升容器,按下OK开始冲洗):将清空后的之前用于盛除垢液的容器放置在咖啡流出口和热水喷嘴的下方 (如图8),并按下 Ok √);

11.显示屏显示"RINSING UNDERWAY"(正在冲洗),热水从咖啡流出口流出,然后从热水喷嘴流出。

12.当水箱中的水使用完毕后,清空装有冲洗后的水的容器。

13. (如安装过滤器) "INSERT FILTER INTO ITS HOUSING" (安装软水过滤器至其底座" (如图36)。按 Next 》 (下一步) 并取出水箱。安装之前移除的软水过滤器;

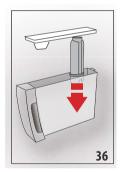

14."RINSE AND FILL WATER TANK UP TO MAX LEVEL"(冲洗水箱并加水至MAX位置)(如图4):注入清水加至-MAX-(最高位置)线;15."INSERT WATER TANK"(安装水箱)(如图5):将水箱安装回机器。

16."POSITION 2L CONTAINER OK TO START RINSING"(放置2升容器,按下OK开始冲洗):将清空后的之前用于盛除垢液的容器放置在热水喷嘴的下方(如图8),然后按下 Ok ✓ 。

17.热水从热水/蒸汽喷嘴流出,显示屏显示 "RINSING UNDERWAY PLEASE WAIT"(正在 冲洗,请稍候)。

18."EMPTY DRIP TRAY"(清空滴水盘)(图 22):第二次冲洗结束时,取出并清空滴水盘 (A15)和咖啡盛渣盒(A11),按下 Next ➤ 0."Descale complete"(除垢完成):按下 Ok ▼ ;

20."FILL TANK WITH FRESH WATER"(在水箱中注入清水):清空装有冲洗后液体的容器。取出水箱,注入清水至-MAX-(最高位置)线,再安装回机器。

除垢完成。

请注意!

- •如果整个除垢过程未正确完成(例如,过程中断电),我们建议您重新开始整个过程。
- •除垢后,咖啡盛渣盒(A11)有水是正常现象。
- •如果水箱中的水没有加到-MAX-(最高位置) 线,在两次冲洗后,机器会提示需要进行第三 次冲洗以确保机器内部回路中没有除垢液残留。 开始冲洗前,请记得先清空滴水盘;
- •机器可能会在较短的时间间隔内提示进行除垢。这是正常的,因为本机拥有先进的控制系统。

19. 设置水硬度

根据水硬度不同,机器使用一段时间后,显示 屏上会显示"DESCALING NEEDED-PRESS OK TO START (~45min) (需要除垢,按下 OK开始(约45分钟))。

出厂时默认的水的硬度为4。机器也可以根据不同地区实际的水硬度进行机器的水硬度设置,这样机器就可以降低除垢的频率。

19.1 测试水硬度

1.从包装纸上取出黏贴在说明书上的"TOTAL HARDNESS TEST"水硬度测试纸(D1);

2.将试纸完全浸入在一杯水中几秒钟。

3.从水中取出试纸,然后再轻轻地摇晃一下。 大约一分钟后,根据水硬度的不同,试纸上会 出现1、2、3或4个红色小方块。每个小方块代 表一个水硬度。

水硬度试纸	水硬度
	一级 - 软水
	二级 - 较硬水
	三级 - 硬水
	四级 - 很硬水

19.2 设置水硬度

- 1.按照"9.1 进入设置菜单"章节所述进入菜单设置程序;
- 2.按下"WATER HARDNESS"(水硬度, 当前 选项):
- 3."WATER HARDNESS""CURRENT VALUE UNDERLINED"(水硬度,当前值以下划线标示):按下所需级别(一级=软水;四级=很硬水);
- 4.按下 **与** Esc 返回主页。 此时,新的水硬度设置完成。

20. 软水过滤器

某些特定的型号配有软水过滤器(D4)。如果您所购买的机器没有配备软水过滤器,我们建议您向德龙售后服务中心购买。


如需正确地使用软水过滤器,请按如下步骤操作:

20.1 安装软水过滤器

- 1.从包装中取出软水过滤器(D4)。
- 2.按照"9.1 进入设置菜单"章节所述进入菜单设置程序:
- 3.按下"WATER FILTER", "TURN DATE INDICATOR TO NEXT 2 MONTHS" (软水过滤器",转动日期指示盘至2个月后) (如图37):

将日期指示盘上的时间调整到当前使用月份的 后两个月。

4.按下 (Next **>**) (下一步);

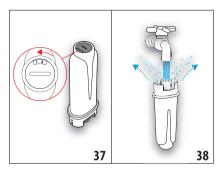


请注意

在机器正常使用的情况下,软水过滤器可以使 用两个月。如果机器在安装软水过滤器的情况 下不使用,那么软水过滤器最多只能使用三周。

5."RUN WATER INTO FILTER HOLE UNTIL IT COMES OUT"(往过滤器孔中注水直至溢出)(如图38):如需启用软水过滤器,请用流动的水对着如图所示的小孔冲洗,直到水从这个小洞的边缘溢出来超过一分钟。按下Next(下一步):

6.从机器中取出水箱(A17),然后注入清水。7."IMMERSE FILTERTO""EXPEL AIR BUBBLES"(将过滤器浸入水箱中,排出气泡)(如图39):将软水过滤器插入水箱,并完全浸没在水中大约10秒钟,并轻轻地摇晃一下,使里面的空气排出。按下(Next)(下一步)。

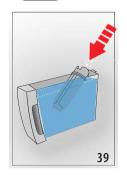

8."INSERT FILTER INTO ITS HOUSING"(安装软水过滤器至其底座":将软水过滤器插入软水过滤器支架(A18),并尽可能往下按(如图36)。按下(Next)(下一步);

9."INSERT WATER TANK"(安装水箱): 盖上水箱盖(A16),然后将水箱装回机器(如图5); 10."POSITION 0.5L CONTAINER""OK TO ENABLE FILTER"(放置0.5升容器,按下OK启 用过滤器)(如图7): 在热水喷嘴(D6)下方 放置一个容器,然后按下 Ok ✓ 。机器开始 制作热水并自动停止。

新的软水过滤器启用,机器可以正常地制作咖啡。

20.2 更换软水过滤器

当显示屏显示"REPLACE WATER FILTER""-PRESS OK TO START"(更换软水过滤器,按下OK开始)时需更换软水过滤器(D4):如即刻更换软水过滤器,则按下Ok√),请按照以下指示的第5条开始操作。

如想稍后更换软水过滤器,请按下 **与** Esc 。 显示屏显示 ① ,提示需要更换软水过滤器。 如需更换软水过滤器,请按如下步骤操作:

- 1.取出水箱(A17)和已使用过的软水过滤器;
- 2.从包装中取出新的软水过滤器;
- 3.按照"9.1 进入设置菜单"章节所述进入菜单设置程序;
- 4.按照上一章节第3条中描述进行操作。 新的软水过滤器启用,机器可以正常地制作咖啡。

请注意!

两个月后(参考日期指示盘),或是机器三周 未使用后,即使显示屏没有提示更换软水过滤 器的信息,您也应该更换软水过滤器。

20.3 移除软水过滤器

如果您想要在不使用软水过滤器(D4)的状态下使用咖啡机,您需要移除软水过滤器,并将机器设置为移除软水过滤器的状态。请按如下步骤操作:

- 1.取出水箱(A17)和已使用过的软水过滤器;
- 2.按照"9.1 进入设置菜单"章节所述进入菜单设置程序:
- 3.按下"WATER FILTER"(软水过滤器):
- **4.**按下与"REMOVE WATER FILTER"(移除软水 过滤器)相对应的选项:
- 5."CONFIRM FILTER REMOVAL" (确认移除过滤器):按下 Ok √ (或按下 与 Esc 返回设置菜单);
- **6.**"FILTER REMOVED"(过滤器已移除): 更 改设置已保存。按下 Ok √ 返回主页。

请注意!

两个月后(参考日期指示盘),或是机器三周,未使用后,即使显示屏没有提示更换软水过滤器的信息,您也应该更换软水过滤器。

21. 显示信息

显示信息	可能的原因	解决方法
在水箱中注入清水	水箱 (A17) 缺水	往水箱中加水并正确安装水箱,应该尽可能地将水箱推入,并听到咔嗒一声。
安装水箱	水箱(A17)未安装或安装不正确	正确安装水箱,应该尽可能地将水箱往里推。
清空咖啡渣盒	咖啡盛渣盒(A11)已满	清空咖啡盛渣盒和滴水盘(A15), 清洗后再装回机器。重要:取出滴 水盘后,即使只有一点点咖啡渣也 必须清空咖啡盛渣盒。如果未清理, 您之后制作咖啡的时候,咖啡残渣 可能会超过盛渣盒底部的高度,导 致阻塞机器。
装入咖啡渣盒	清洗完后,咖啡盛渣盒(A11) 没有装回机器	取出滴水盘(A15),然后将咖啡盛 渣盒装回机器。
加入咖啡粉 最多一匙份量	选择了使用咖啡粉制作咖啡,但 没有在咖啡粉进料管(A4)加入 咖啡粉	在咖啡粉进料管中加入咖啡粉(如图12)然后继续制作咖啡,或按下 与 Esc 退出制作

显示信息	可能的原因	解决方法
加入咖啡粉最多一匙份量	选择了使用咖啡粉制作美式咖啡	方法1:按下
咖啡豆容器中加入咖啡豆	咖啡豆用完	按下返回主菜单; 在咖啡豆容器(A3)中加入咖啡豆 (如图10)。
5 Esc	咖啡粉进料管(A4)堵塞	按下 与 Esc 返回主菜单; 按 "17.8 清洁咖啡粉进料管"章节的描述,用清洁刷(D5)清洁咖啡粉进料管。
咖啡粉过细,调节研磨器	咖啡豆研磨得太细,导致咖啡流 出速度很慢或根本不出咖啡	再制作一杯咖啡,当研磨器在磨豆时,朝"7"的方向转动咖啡豆研磨程度调节旋钮(A5)一格(如图13)。如果在至少制作2杯咖啡后,出咖啡的速度仍然很慢,那么再转动一格研磨调节旋钮,直到咖啡流出速度正常为止(详见"10.5咖啡豆研磨程度调节旋钮"章节的描述)。如果问题仍然存在,请确认水箱(A17)已正确安装。
	如果安装了软水过滤器(D6), 机器的内部回路可能有气泡阻碍 了咖啡的流出。	安装热水喷嘴 (D6),释放一些热水,直至水流正常。
选取较淡口味或減少咖啡用量	使用了太多的咖啡	按下 与 Esc 返回主菜单; 按下 ♠ 和ROMA (口味) 按钮 (C6) 选择较淡口味的咖啡,或者减少咖啡粉用量(最多使用一量勺的咖啡 粉)。

显示信息	可能的原因	解决方法
插入热水喷嘴	热水喷嘴 (D6) 未安装或安装不正确	安装热水流出口,尽可能往里推。
安装牛奶容器	牛奶容器(D)未正确安装	安装牛奶容器,尽可能往里推。
安装萃取器	萃取器(A20)清洗后未安装	按照"17.9 清洁萃取器"章节的描述安装萃取器。
水回路中无水,按下 OK开始	水回路空	按下 Ok √ ,从热水喷嘴 (D6) 释放热水,直至水流正常。如果问题仍然存在,请确认水箱 (A17) 已正确安装。

显示信息	可能的原因	解决方法
按下OK清洁或转动奶泡调节旋钮 Ok V	牛奶容器安装在机器上,但奶泡调节旋钮(E1)在"CLEAN"(清洁)的位置	如需进行清洁功能,请按下 Ok /),或将泡沫调节旋钮旋转 至任意一个牛奶泡沫的位置。
转动奶泡调节旋钮至 CLEAN (清洁) 位置	最近曾制作过牛奶饮品,牛奶容器(D)中的牛奶吸入管需要清洁	将奶泡调节旋钮(E1)旋转至CLEAN(清洁)的位置(如图19)。
转动奶泡调节旋钮	牛奶容器安装在机器上,但奶泡调节旋钮(E1)在"CLEAN"(清洁)的位置	将奶泡调节旋钮旋转到所需的牛奶 泡沫位置。
需要除垢,按下OK开始(约45分钟) ■ Esc Ok ✓	机器需要进行除垢	按下 Ok 即可开始除垢或者按

显示信息	可能的原因	解决方法
更换软水过滤器 按下OK开始 1	软水过滤器 (D4) 到期需更换	按下 Ok √ 即刻更换或移除软水过滤器,或者
一般警告:参考用户 手册 / APP	机器内部非常脏	按照"17.清洁"章节的描述,彻底清洁机器内部。如果清洗后还显示此内容,请与德龙售后服务中心联系。
2	牛奶容器(E)中的管道需要清洁	将奶泡调节旋钮(E1)旋转至 CLEAN (清洁) 的位置 (如图19)。
	机器需要更换软水过滤器(D4)。	按照"20.软水过滤器"章节的描述更 换或移除过滤器。
	机器需要进行除垢	按"18.除垢"章节的描述,对机器进行除垢。 机器可能会在较短的时间间隔内提示进行除垢。这是正常的,因为本机拥有先进的控制系统。
©	节能模式已启用	如需关闭节能模式,按照"9.8 节能模式"章节的描述进行操作。
*	机器通过蓝牙连接到其他设备。	
CLEANING UNDERWAY PLEASE WAIT 正在清洁,请稍候	机器内部回路有杂质	等待机器重新准备就绪可使用,重 新选择所需的饮品。如果问题持续 存在,请联系售后服务中心。

22. 🖹 故障处理

下表中汇总了使用中常见的问题。

如按照以下的描述,问题仍不能解决,请联系售后服务中心。

问题	可能的原因	解决方法
咖啡不热	咖啡杯没有预热	用热水冲洗咖啡杯使其变暖(请注意:您可以使用热水功能)。
	萃取器内部冷却了,由于距离 上次制作咖啡已超过了 2-3 分钟	在制作咖啡之前,使用冲洗功能预热萃取器(参考"9.3 冲洗"章节的描述)。
	咖啡温度设置过低	在菜单中设置较高的咖啡温度 (参考"9.9 咖啡温度"章节的描述)。
咖啡油脂不够丰富	咖啡豆研磨过于粗糙	在咖啡研磨器工作时,逆时针向"1"方向旋转咖啡豆研磨程度调节旋钮(A5)一格(如图13)。如果制作出的咖啡还是不够理想,继续转动一格。调节的效果要在制作2杯咖啡以后才会体现出来(请参考"10.5 调节咖啡豆研磨程度"章节的描述)。
	使用不合适的咖啡豆	使用适合制作意式浓缩咖啡的 咖啡豆。
	咖啡豆不新鲜。	咖啡包打开时间太长,已经失去香味。
咖啡流出的速度太慢或一滴一滴流出来	咖啡豆研磨得太细	在咖啡研磨器工作时,顺时针向"7"方向旋转咖啡豆研磨程度调节旋钮(A5)一格(如图13)。如果制作出的咖啡还是不够理想,继续转动一格。调节的效果要在制作2杯咖啡以后才会体现出来(请参考"10.5调节咖啡豆研磨程度"章节的描述)。
咖啡没有从咖啡流出口的一个口或两个口流出	咖啡流出口(A9)堵塞	用牙签清洁咖啡流出口(如图 25B)。
机器无法制作咖啡		等待机器重新准备就绪可使用 ,重新选择所需的饮品。如果 问题持续存在,请联系售后服 务中心。

问题	可能的原因	解决方法		
机器无法启动	未插入电源插座	将电源线的插头插入电源插座 (如图1)。		
	主电源开关(A22)未打开	按下主电源开关(如图2)。		
萃取器无法取出	没有正确地关闭机器	按下 人 按钮 (A7) 关闭机器 (参考"8.关闭机器"章节的描述)。		
除垢过程在两次冲洗后,机器提 示需要进行第三次冲洗	在两次除垢过程中,水箱没有加水至-MAX-(最高位置)线	清空滴水盘以免水溢出,然后 按照机器显示的指示操作。		
牛奶不从牛奶流出口(E5)流出	牛奶容器盖(E2)过脏	按照"17.10 清洁牛奶容器"的描述清洁牛奶容器盖。		
奶泡过大,从牛奶流出口(E5) 喷溅出,或者奶泡很少	牛奶不够冷或不是半脱脂牛奶	使用冰箱冷藏的脱脂或半脱脂牛奶(大约5℃)。如果结果不够理想,请更换牛奶品牌。		
	奶泡调节旋钮(E1)没有正确 安装	按照"12.制作含牛奶的饮品"章节 的描述进行调整。		
	牛奶容器盖(E2)或奶泡调节 旋钮(E1)过脏	按照"17.10 清洗牛奶容器"章节 的描述清洁牛奶容器盖和牛奶泡 沫调节旋钮。		
	热水连接喷嘴(A8)过脏	按照"17.11 清洁热水喷嘴"章节 的描述清洁喷嘴连接器。		
机器不使用时会发出噪音或冒 出少量蒸汽	机器准备就绪或刚刚关机时, 冷凝液会滴入热蒸发器	这属于正常现象。为了减少这种 情况的发生,请清空滴水盘。		

问题	可能的原因	解决方法		
德龙醇萃冰咖上几乎没有油脂	使用的冰太多或数量错误	请遵循"11. 德龙醇萃冰咖"章节的指示。		
	使用的咖啡豆不合适或者敞开 放置太久	使用"新鲜"咖啡豆,最好是 "罗布斯塔"咖啡豆。		
冰咖啡是热的	使用的冰块太少和/或数量错误	请遵循"11. 德龙醇萃冰咖"章节的指示。		

名称和产品中有害物质的含量

Name and content of hazardous substances in products

组件	有害物质						
名称	Hazardous substances						
Components	铅	汞	镉	六价铬	多溴二苯醚		
Name	Lead	Mercury	Cadmium	Hexavalent	Polybrominated	Polybrominated	
	(Pb)	(Hg)	(Cd)	Chromium	biphenyls	diphenyl ethers	
				(Cr (VI))	(PBB)	(PBDE)	
塑料外壳	塑料外壳 〇 〇 〇 〇		0	0 0	0		
和底盘							
Plastic enclosure							
and chassis							
印刷电路板	X	0	0	0	0	0	
组装							
Printed Circuit Board							
Assembly							
电机、阀门	X	0	0	0	0	0	
Motors, valves							
电缆和电线	0	0	0	0	0	0	
Cable and wiring							
金属零件	X	0	Х	0	0	0	
Metal parts							

本表格依据SJ/T 11364 的规定编制。This table is prepared in accordance with the provisions of SJ/T 11364.

- 〇:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。
- The content of such hazardous substance in all homogeneous material of such components is below the limit required by GB/T 26572.
- x:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。主要是由于受技术发展水平限制,暂时无法实现替代或减量化,但这部分零部件本身不直接与食物接触,正常使用条件下不会对使用者造成任何健康影响。我们的产品均通过食品安全监测,可安心使用。
- X: The content of such hazardous substance in a certain homogeneous material of such components is beyond the limit required by GB/T 26572, mainly due to the level of technical development situation, temporarily unable to achieve replacement or reduction.

The above cited parts marked with "X" are related to components non in contact with the food.

All parts of the appliance in direct contact with the food are safe under normal conditions of use.

_	NIENIS	10.4	Making conee using pre-ground conee	
1.	FUNDAMENTAL SAFETY WARNINGS35	10.5 10.6	Adjusting the coffee grinder Tips for a hotter coffee	
2.	GENERAL INFORMATION36		RUEBREW OVER ICE™ COFFEE	
2.1	Instruction for Use			
			NAKING MILK-BASED RECIPES 🖺	
	BEFORE USE	12. N	NAKING MILK-BASED RECIPES 😃 🛚	43
3.1	Checking the appliance	12.1	Filling and attaching the milk container	
3.2	Installing the appliance	12.2	Adjusting the amount of froth	
3.3	Connecting the appliance	12.3	Making cappuccinos and milk-based coffees automati	cally44
3.4	Setting up the appliance	12.4	Cleaning the milk container after use	45
3.5	Cleaning and maintenance of materials in contact with food	13 (OFFEE CARAFE	15
26	37 Making cappuccinos and milk-based coffees	13.0	OFFEE CARAFE	************
3.6	•		PELIVERING HOT WATER 📳	
4.	INTRODUCTION37	14. D	DELIVERING HOT WATER 😃	45
4.1	Letters in brackets37		USTOMISING THE BEVERAGES 📳	
4.2	Troubleshooting and repairs37	15. C	USTOMISING THE BEVERAGES ₹	46
4.3	Download the App!37			-2)
5.	DESCRIPTION38	16 A	MEMORISING YOUR OWN USER PROFILE	(₹)
5.1	Description of the appliance (page 3 - A)38	10.1	TEMORISING TOOK OWN USER PROFILE	. ب
5.2	Description of the homepage (page 2 - B)			46
5.3	Description of the control panel (page 2 - C)			
5.4	Description of the accessories (page 2 - D)	17.0	LEANING 🖭	46
5.5	Description of the milk container (page 2 - E)	17.1	Cleaning the machine	
	5	17.2	Cleaning the internal circuit	
	SETTING UP THE APPLIANCE	17.3	Cleaning the coffee grounds container	
6.	SETTING UP THE APPLIANCE 🖺38	17.4	Cleaning the drip tray and condensate tray	
		17.5	Cleaning the inside of the coffee machine	
7	TURNING THE APPLIANCE ON	17.6	Cleaning the water tank	
		17.7	Cleaning the coffee spouts	
8.	TURNING THE APPLIANCE OFF39	17.8	Cleaning the pre-ground coffee funnel	
	— 2)	17.9	Cleaning the infuser	
9.	MENU SETTINGS 🖳40	17.10	Cleaning the milk container	
		17.11	Cleaning the hot water nozzle	
9.1	Access the settings menu			
9.2	Exit the menu		ESCALING	
9.3 9.4	Rinse	18. D	PESCALING 🚇	49
9.4	Descaling40 Water filter40			
9.6		10 S	ETTING WATER HARDNESS	51
	Beverages settings	19.1	Measuring water hardness	51
9.7	Auto-off (standby)40	19.1	Setting water hardness	
9.8	Energy saving40	17.2	Setting water naturess	1
9.9	Coffee temperature40		\square_{j_j}	
9.10		20. V	VATER SOFTENER FILTER 🖺	51
9.11	3 - 3	20.1	Installing the filter	
9.12		20.2	Replacing the filter	
9.13		20.3	Removing the filter	
9.14				52
9.15			🔊 '	
9.16	Customise profile41	21. D	DISPLAYED MESSAGES 📳	53
4.0	MAYING COFFEE (R)"		[-]	
	MAKING COFFEE41	22.T	ROUBLESHOOTING 🖺	58
10.1	3			
10.2	<u> </u>			
10.3	Selecting the coffee quantity42			

1. FUNDAMENTAL SAFETY WARNINGS

- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Designated use: this appliance is designed and made to prepare beverages based on coffee, milk and hot water. Use drinking water only in the tank. Never use the accessories to make beverages other than those described in these instructions. Any other use is considered improper and thus dangerous. The manufacturer is not liable for damage deriving from improper use of the appliance.
- The surface of the heating element remains hot after use and the outside of the appliance may retain the heat for several minutes depending on use.
- Clean all the components thoroughly, taking particular care with parts in contact with the milk.
- Cleaning and user maintenance shall not be made by children without supervision.
- Never clean by immersing the appliance in water.
- IMPORTANT: to prevent damage to the appliance, do not clean with alkaline detergents; use a soft cloth and, where applicable, neutral detergent.
- This is an household appliance only. It is not intended to be used in: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- If the plug or power cord is damaged, it must be replaced by customer services only to avoid all risk.
- Appliances with removable cord: avoid splashes of water on the power cord connector or socket at the back of the appliance.
- IMPORTANT: Models with glass surfaces: do not use the appliance if the surface is cracked.
- The coffee maker must not be placed inside a cabinet or kitchen unit during use FOR EUROPEAN MARKETS ONLY:
- This appliance can be used by children aged from 8 years and above if they have been
 given supervision or instruction concerning use of the appliance in a safe way and
 understand the hazards involved. Cleaning and user maintenance shall not be made
 by children unless they are above 8 years old and supervised. Keep the appliance and
 power cord away from children under 8 years of age.

- The appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are supervised or have been given instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.
- Always unplug the appliance when left unattended and before assembly, taking apart or cleaning.



Surfaces marked with this symbol become hot during use (the symbol is present in certain models only).

This is an electrical appliance and may cause electric shock. You should therefore follow these safety warnings:

- Never touch the appliance with damp hands or feet.
- Never touch the plug with damp hands.
- Make sure the socket used is freely accessible at all times, enabling the appliance to be unplugged when necessary.
- Unplug directly from the plug only. Never pull the cord as you could damage it.
- To disconnect the appliance completely you must unplug it from the mains socket.
- If the appliance is faulty, do not attempt to repair. Turn it off, unplug from the mains socket and contact Customer Services.
- Before cleaning the appliance, turn it off, unplug from the mains socket and allow to cool.

Important!

Keep all packaging (plastic bags, polystyrene foam) away from children.

CHOKING HAZARD. The appliance might contain small parts. Some of those small parts might be required to get disassembled during cleaning and maintenance operations. Handle with care and keep small parts out of reach of children.

Danger of burns!

This appliance produces hot water and steam may form while it is in operation.

During operation (automatic rinsing, hot beverage delivery, steam delivery, cleaning), avoid contact with splashes of hot water or steam.

When the appliance is in operation, the cup shelf could become very hot.

2. GENERAL INFORMATION

2.1 Instruction for Use

Read all the Instruction for Use carefully before using the appliance. Failure to follow this Instruction for Use may result in burns or damage to the appliance.

The manufacturer is not liable for damage deriving from failure to respect this Instruction for Use.

Please note:

These safety warnings are valid for all De'Longhi coffee machines.

Keep this leaflet together with the instructions accompanying the appliance.

If the appliance is passed to other persons, they must also be provided with this Instruction for Use.

3. BEFORE USE

3.1 Checking the appliance

After removing the packaging, make sure the product is complete and undamaged and that all accessories are present. Do not use the appliance if it is visibly damaged. Contact De'Longhi Customer Services.

3.2 Installing the appliance

When you install the appliance, you should respect the following safety warnings:

- The appliance gives off heat. After positioning the appliance on the worktop, leave a space of at least 3 cm between the surfaces of the appliance and the side and rear walls and at least 15 cm above the coffee maker.
- Water penetrating the appliance could cause damage. Do not place the appliance near taps or sinks.

- The appliance could be damaged if the water it contains freezes. Do not install the appliance in a room where the temperature could drop below freezing point.
- Arrange the power cord in such a way that it cannot be damaged by sharp edges or contact with hot surfaces (e.g. electric hot plates).

3.3 Connecting the appliance

Check that the mains power supply voltage corresponds to that indicated on the rating plate on the bottom of the appliance. Connect the appliance to an efficiently earthed and correctly installed socket with a minimum current rating of 10A only. If the power socket does not match the plug on the appliance, have the socket replaced with a suitable type by a qualified professional.

3.4 Setting up the appliance

The first time you use the machine, the water circuit is empty and the appliance could be very noisy. The noise becomes less as the circuit fills.

3.5 Cleaning and maintenance of materials in contact with food

- The first time you use the appliance, or if it is not used for more than 3 or 4 days, rinse all removable accessories which may come into contact with water or milk with hot water
- If the appliance is not used for more than 3 or 4 days, before making the first beverage, rinse the water circuit as described in this Instruction for Use.
- You should carry out automatic cleaning and guided maintenance scrupulously when proposed by the appliance through the display or the lights described in the manual.

3.6 Making cappuccinos and milk-based coffees

- The appliance has been tested for use with cow's milk and the following products of plant origin: soya, rice and almond. No other type of milk or product of plant origin may be used.
- To clean the system, following use with any type of milk, please follow the standard procedures described in the instruction manual
- The cleaning methods provided by the manufacturer and described in the instructions do not guarantee the complete removal of allergens.
- In the case of confirmed or suspected allergies and intolerances, make sure that your machine has not been previously used with any milk or product of plant origin containing the allergens you are allergic or the substances you are intolerant to.

4. INTRODUCTION

Thank you for choosing this bean to cup espresso and cappuccino machine.

Take a few minutes to read this Instruction for Use. This will avoid all risks and damage to the appliance.

4.1 Letters in brackets

The letters in brackets refer to the legend in the description of the appliance on pages 2-3.

4.2 Troubleshooting and repairs

In the event of problems, first try and resolve them by reading the information given in sections "21. Displayed messages" and "22. Troubleshooting".

If this does not resolve the problem or you require further information, you should consult Customer Services by calling the number given on the annexed "Customer Service" sheet.

If your country is not among those listed on the sheet, call the number given in the guarantee. If repairs are required, contact De'Longhi Customer Services only. The addresses are given in the guarantee certificate provided with the machine.

4.3 Download the App!





A number of functions can be controlled remotely using the De'Longhi Coffee Link App.

In the App, you can also find information, tips and curious facts about the world of coffee, together with information on your machine at your fingertips.



This symbol highlights the functions you can control or consult using the App.

You can also create up to 3 new beverages and save them in your appliance.

Please note:

Check compatible devices on "compatibledevices.delonghi. com".

5. DESCRIPTION

5.1 Description of the appliance (page 3 - A)

- A1. Beans container lid
- A2. Pre-ground coffee funnel lid
- A3. Beans container
- A4. Pre-ground coffee funnel
- A5. Grinding adjustment dial
- A6. Cup shelf
- A7. () button: to turn the appliance on and off (standby)
- A8. Hot water connection nozzle
- A9. Coffee spouts (adjustable height)
- A10. Condensate tray
- A11. Coffee grounds container
- A12. Cup tray
- A13. Drip tray water level indicator
- A14. Drip tray grille
- A15. Drip tray
- A16. Water tank lid
- A17. Water tank
- A18. Water softener filter housing
- A19. Infuser door
- A20. Infuser
- A21. Power cord connector socket
- A22. Main switch

5.2 Description of the homepage (page 2 - B)

- B1. Bluetooth active symbol
- B2. Energy Saving active symbol
- B3. Selected aroma
- B4. Directly selected beverages
- B5. Scroll arrow
- B6. Quantity selected
- B7. Descale required alarm
- B8. Milk container needs cleaning alarm
- B9. Filter needs replacing alarm

5.3 Description of the control panel (page 2 - C)

C1.

□ ► □ : beverage quantity selection

C2. profile selection

C3. appliance settings menu

C4. press to exit from the selected function and go back to the main menu

C5. (my) : My beverages selection menu. Unless previously programmed from the settings menu as described in chapter "15. Customising the beverages ", the beverage is programmed directly the first time you use the appliance

5.4 Description of the accessories (page 2 - D)

- D1. "Total Hardness Test" indicator paper (attached to page 2 of the English instructions)
- D2. Pre-ground coffee measure
- D3. Descaler
- D4. Water softener filter (certain models only)
- D5. Cleaning brush
- D6. Hot water spout
- D7. Power cord

5.5 Description of the milk container (page 2 - E)


- E1. Froth adjustment and CLEAN dial
- E2. Milk container lid
- E3. Milk container
- E4. Milk intake tube
- E5. Frothed milk spout (adjustable)

6. SETTING UP THE APPLIANCE

₹


Please note!

- The first time you use the machine, the water circuit is empty and the appliance could be very noisy. The noise becomes less as the circuit fills.
- Coffee has been used to factory test the appliance and it is therefore completely normal for there to be traces of coffee in the grinder. The machine is, however, guaranteed to be new.
- You should customise water hardness as soon as possible following the instructions in section "19. Setting water hardness".
- Insert the power cable connector (D7) into the socket (A21) at the back of the appliance and connect the appliance to the mains electricity supply (fig. 1). Make sure the main switch (A22) at the back of the appliance is pressed (fig. 2);

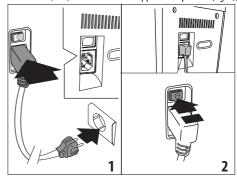


"SELECT LANGUAGE": Press and hold Next > until
the required language appears on the display, then press
the flag corresponding to the language.


Follow the instructions indicated on the appliance display:

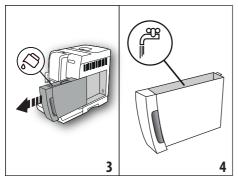

 "FILL TANK WITH" "FRESH WATER": remove the water tank (A17) (fig. 3), fill to the MAX line (marked on the tank) with fresh water (fig. 4, then put the tank back in the appliance (fig. 5);

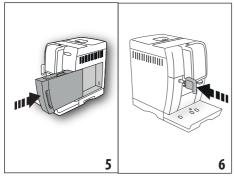

 "INSERT WATER SPOUT": Check that the hot water spout (D6) is inserted on the connection nozzle (A8) (fig. 6) and place a container holding a minimum of 100 ml underneath (fig. 7);

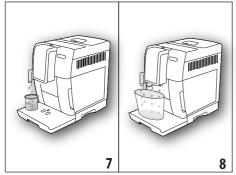

5. "WATER CIRCUIT EMPTY" "PRESS OK TO START": press

Ok

to confirm. The appliance delivers hot water from the spout (fig. 8) then goes off automatically.

The coffee machine is now ready for normal use.

Please note!

- The first time you use the appliance, you need to make 4-5 cappuccinos before it starts to give satisfactory results.
- To improve the performance of your appliance, we recommend installing a water softener filter (D7) as described in section "20. Water softener filter". If your model is not provided with a filter, you can request one from De'Longhi Customer Services.

7. TURNING THE APPLIANCE ON

E ON 🞚

Please note!

Before turning the appliance on, make sure the main switch (A22) is pressed (fig. 2).

Each time the appliance is turned on, it performs an automatic preheat and rinse cycle.

To turn the appliance on, press the button (A15) (fig. 9). The message "HEATING UP UNDERWAY" "PLEASE WAIT" appears on the display.



 When heating is complete, the message changes to: "RINSING UNDERWAY" "PLEASE WAIT". As well as heating the boiler, this also heats the internal circuits by circulating hot water.

The appliance is ready for use when the main screen (homepage) appears.

8. TURNING THE APPLIANCE OFF

Whenever the coffee machine is turned off after being used to make coffee, it performs an automatic rinse cycle.

- To turn the appliance off, press the **()** button (A15) (fig. 9).
- The message "TURNING OFF UNDERWAY" "PLEASE WAIT" appears on the display, then (if envisaged) the appliance performs a rinse cycle and goes off (standby).

Please note!

If you will not be using the appliance for some time, unplug from the mains socket:

first turn the appliance off by pressing the button (fig. 9);

 release the main switch (A22) at the back of the appliance (fig. 2).

Important!

Never press the main switch while the appliance is on.

9. MENU SETTINGS 📳

9.1 Access the settings menu

1. Press the "So" button (C3) to enter the menu;

Scroll through the menu items by pressing Next > until the required items is displayed;

3. Press the menu item you want to select.

9.2 Exit the menu

When you have made the adjustments, press until you are back on the homepage.



9.3 Rinse 🐠

Use this function to deliver hot water from the coffee spouts (A9) and hot water spout (D6), if inserted, to clean and heat the appliance's internal circuit.

- Place a container with a minimum capacity of 100ml under the coffee and hot water spouts (fig. 8).
- A few seconds after the "RINSING" item has been selected, hot water is delivered first from the coffee spouts and then from the hot water spout (if inserted) which cleans and heats the appliance's internal circuit (fig. 7).
- To stop rinsing, press Stop or wait for rinsing to stop automatically.

Please note!

- If the appliance is not used for more than 3-4 days, when you turn it on again, we strongly recommend performing 2/3 rinses before use;
- After cleaning, it is normal for the grounds container (A11) to contain water.

9.4 Descaling

For instructions on descaling, see section "18. Descaling".

9.5 Water filter

For instructions on how to install the filter (D7), see section "20. Water softener filter ".

9.6 Beverages settings **i**

In this section, you can consult your customised settings and, if you wish, reset the default values for each beverage and each profile.

 Once in the settings menu, press "DRINK SETTINGS". The values for the first beverage appear on the display;

- 2. The values are displayed on vertical bars. The default value is indicated by the solid part of the vertical bar;
- To reset the default values for the beverage displayed, press Reset ;
- 5. "CONFIRM RESET?": to confirm, press Ok √ (to cancel, press (sec));
- 6. "VALORI FABBRICA""IMPOSTATI": press Ok ✓

The beverage has been reset to the default values. Proceed with the other beverages or go back to the homepage by pressing

SEC twice.

Please note!

To change the beverages in another profile, go back to the homepage, select the required profile and repeat the procedure.

9.7 Auto-off (standby) (1)

Auto-off can be set so that the appliance goes off after 15 or 30 minutes, or 1, 2 or 3 hours.

To programme Auto-off, proceed as follows:

- 1. Press "AUTO-OFF";
- 2. Select the required time interval by pressing the selection arrows (\bigwedge) (increase) or (\bigvee) (decrease);
- 3. To confirm, press Ok V
 Auto-off is programmed.

9.8 Energy saving 🕏

Use this function to enable or disable energy saving. When enabled, the function reduces energy consumption in compliance with European regulations.

To disable or enable "Energy Saving", proceed as follows:

1. Press "ENERGY SAVING" to disable (OFF) or enable (OFF) the function;

The corresponding symbol (B2) appears on the top bar of the homepage to indicate that the function has been enabled.

Please note:

If "Energy Saving" is active, you may have to wait a few seconds before delivery.

.9 Coffee temperature

To modify the temperature of the water used to make the coffee, proceed as follows:

- Press "COFFEE TEMPERATURE". The selectable values appear on the display (B1) (the current value is underlined);
- Press the value you want to set (LOW, MEDIUM, HIGH, MAXIMUM).

9.10 Water hardness

For instructions on setting water hardness, see section "19. Setting water hardness".

9.11 Set language

To modify the language of the display, proceed as follows:

- Press "SET LANGUAGE":
- Press the flag corresponding to the language you want to set (press Next > to display all the languages available).

9.12 Beep □()))

This enables or disables the beep emitted by the machine each time an icon is pressed or an accessory is inserted/removed. To disable or enable the beep, proceed as follows:

1. Press "BEEP" to disable (OFF) or enable (ON) the function:

9.13 Bluetooth ∤

This function enables or disables the protection PIN to connect to the appliance from a device.

- 1. Press "BLUETOOTH". The serial number of the machine (19 digits) and a 4 digit number (PIN) appear on the display (B1);
- Press (OFF) to enable or (ON) to disable the request for the PIN when you connect via the App;

The preset PIN is "0000". You are recommended to customise the PIN directly from the APP.

Please note!

The serial number of the appliance, visible in the "Bluetooth" function, enables it to be identified unambiguously when an association is created with the APP.

9.14 Default values

This resets all menu settings and programmed quantities for all profiles back to the default values (with the exception of the language which remains as set).

To reset the default values, proceed as follows:

- 2. "DEFAULT VALUES SET": press Ok ✓) to confirm.

9.15 Statistics

This displays statistics relating to the machine. To view the statistics, proceed as follows:

1. Press "STATISTICS" and check all the statistics by scrolling through the items using Next >).

9.16 Customise profile

To customise the icon of the current profile, proceed as follows:

- 1. Press "CUSTOMISE PROFILE";
- Press the desired icon. On the homepage, the top band is displayed with the colour of the icon.

10. MAKING COFFEE


EE 😃

10.1 Making coffee using coffee beans

Important!

Do not use green, caramelised or candied coffee beans as they could stick to the coffee grinder and make it unusable.

1. Fill the container (A4) with coffee beans (fig. 10);

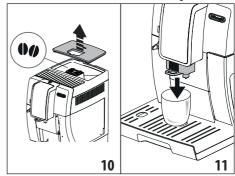

- 2. Place a cup under the coffee spouts (A9);
- Lower the spouts as near as possible to the cup (fig. 11).This makes a creamier coffee;
- 4. Then select your required coffee:
 - ESPRESSO
 - LONG
 - COFFEE
 - DOPPIO+
 - 2X ESPRESSO
- Preparation begins. An image of the selected beverage appears on the display, together with a progress bar which gradually fills as preparation proceeds.

Please note:

- You can prepare 2 cups of ESPRESSO coffee at the same time by pressing "2X " during preparation of 1 ES-PRESSO (the image is displayed for a few seconds at the start of preparation).
- While the machine is making coffee, delivery can be interrupted at any moment by pressing (Stop X).

Once the coffee has been delivered, the machine will be ready for further use.

Please note!

 Various alarm messages could be displayed while using the appliance (FILL TANK, EMPTY GROUNDS CONTAINER, ETC.). Their meaning is explained in section "21. Displayed messages".

- For hotter coffee, see section "10.6 Tips for a hotter coffee".
- If the coffee is delivered a drop at a time, too weak and not creamy enough or too cold, read the tips in sections "10.5 Adjusting the coffee grinder"r" and "22. Troubleshooting".
- Preparation of each coffee can be customised (see sections "15. Customising the beverages "and "16. Memorising your own user profile "E").

10.2 Selecting the coffee aroma

Press the button (C6):

my	Custom (if programmed) / Standard
00000	EXTRA LIGHT
00000	LIGHT
00000	MEDIUM
00000	STRONG
00000	X-STRONG
	(see "10.4 Making coffee using pre-ground coffee")

After delivering the beverage, the aroma setting is reset to the my value.

10.3 Selecting the coffee quantity

Press the button (C1):

my 📳	Custom (if programmed) / Standard
	SMALL SIZE
	MEDIUM SIZE
	LARGE SIZE
	EXTRA-LARGE SIZE

After delivering the beverage, the quantity setting is reset to the my value

10.4 Making coffee using pre-ground coffee

Important!

- Never add pre-ground coffee when the machine is off or it could spread through the inside of the machine and dirty it. This could damage the machine.
- Never use more than 1 level measure (D2) as it could soil the inside of the coffee machine or block the funnel (A4).

- When using pre-ground coffee, only one cup can be made at a time.
- 1. Press the button (C6) until " (ground) is displayed.
- 2. Open the pre-ground coffee funnel lid (A2).
- 3. Make sure the funnel (A4) is not blocked, then add one level measure of pre-ground coffee (fig. 12).



- 4. Place a cup under the coffee spouts (A9).
- 5. Then select your required coffee:
 - FSPRFSSO
 - LONG
 - COFFEE
- Preparation begins. An image of the selected beverage appears on the display, together with a progress bar which gradually fills as preparation proceeds.

Once the coffee has been delivered, the machine will be ready for further use.

Important! Making LONG coffee:

Halfway through preparation, the message "ADD GROUND COFFEE" "MAX. ONE MEASURE" is displayed. Add one level measure of pre-ground coffee and press $\bigcirc_{\mathbf{K}} \mathbf{V}$.

10.5 Adjusting the coffee grinder

The coffee grinder is set by default to prepare coffee correctly and should not require regulating initially.

However, if after making the first few coffees you find that the coffee is either too weak and not creamy enough or delivery is too slow (a drop at a time), this can be corrected by adjusting the grinding adjustment dial (A5) (fig. 13).



Please note!

The grinding adjustment dial must only be turned when the coffee grinder is in operation during the initial phase of coffee preparation.



If the coffee is delivered too slowly or not at all, turn one click clockwise towards 7. For fuller bodied creamier coffee, turn one click anticlockwise towards 1 (do not turn more than one click at a time otherwise the coffee could be delivered

a drop at a time).

These adjustments will only be evident after at least 2 cups of coffee have been delivered. If this adjustment does not produce the desired result, turn the dial another click.

10.6 Tips for a hotter coffee

For hotter coffee, proceed as follows:

- perform a rinse cycle by selecting the "Rinsing" function in the settings menu (section "9.3 Rinse "9");
- warm the cups with hot water using the hot water function (see section"14. Delivering hot water ");
- increase the coffee temperature in the settings menu "\$\to\"(C3) (see section "9.9 Coffee temperature \(\begin{array}{c}\text{"}\)").

11. TRUEBREW OVER ICE™ COFFEE

- 1. Select "Brew over ice" on the homepage;
- Select the desired quantity (medium size recommended) and aroma by pressi "+" or "-" (strong or extra strong recommended): then press (Next >);
- Place 3 ice cubes in a large glass and place the glass under the brewing unit;
- Press Ok √ to start delivery;
- Add 3 more ice cubes to the glass/coffee plus any syrup, sweetener or milk desired and enjoy

Recipe	Quantity	Programma- ble quantity (My)	N° of ice cubes
TrueBrew Over Ice coffee (B9)	≃ 100 ml	from $\simeq 40 \text{ ml to}$ $\simeq 240 \text{ml}$	6 (approx. 13gr each)

Important!

Always use glasses resistant to thermal shock.


12. MAKING MILK-BASED RECIPES

Please note!

To avoid milk with poor froth or large bubbles, always clean the milk container lid (E2) and hot water connection nozzle (A8) as described in sections "12.4 Cleaning the milk container after use", "17.10 Cleaning the milk container" and "17.11 Cleaning the hot water nozzle".

12.1 Filling and attaching the milk container

1. Remove the lid (E2) (fig. 14);

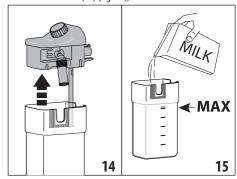


 Fill the milk container (E3) with a sufficient quantity of milk, not exceeding the MAX level marked on the container (fig. 15). Each mark on the side of the container corresponds to about 100 ml of milk;

Please note!

- For a denser more even froth, you must use skimmed or partially skimmed milk at refrigerator temperature (about 5°C).
- When/If using milk at ideal temperature (about 5°C), the thermal milk container guarantees LatteCrema system performance for about 30 minutes outside the refrigerator.
- Frothing quality may differ according to:
 - the type of milk or plant-based drink used, or
 - the individual brand, ingredients and nutritional values.

- If "Energy Saving" mode is enabled, you may have to wait a few seconds before the beverage is delivered.
- Make sure the milk intake tube (E4) is correctly inserted in the bottom of the milk container lid (fig. 16);

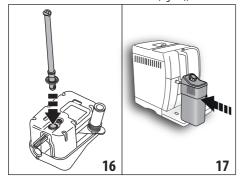

- Place the lid back on the milk container;
- 5. Remove the hot water spout (D6);
- Attach the milk container (E) to the connection nozzle (A8) and push as far as it will go (fig. 17). The machine emits a beep (if the beep function is enabled);
- Place a sufficiently large cup under the coffee spouts (A9) and the frothed milk spout (E5). Adjust the length of the milk spout. To move it nearer the cup, simply pull it downwards (fig. 18).



Follow the instructions below for each function.

12.2 Adjusting the amount of froth

Turn the froth adjustment dial (E1) to adjust the amount of froth on the milk delivered while making cappuccinos and milk-based coffees.

Dial position	Description	Recommended for
	NO FROTH	HOT MILK (not frothed) / CAFFELATTE

MIN. FROTH	latte macchiato/ FLAT WHITE
MAX. FROTH	CAPPUCCINO / CAPPUCCI- NO+ / CAPPUCCINO MIX / ESPRESSO MACCHIATO / HOT MILK (frothed)

Please note:

The characteristics of the milk system and the quality of the milk froth depend on the type of milk or vegetable drink. If the system does not foam properly, reduce / change the amount of foam of the selected recipe (see details in the previous table).

12.3 Making cappuccinos and milk-based coffees automatically

- 1. Fill the milk container (E) and attach it as described above.
- 2. Select the required beverage:
 - CAPPUCCINO
 - LATTE MACCHIATO
 - HOT MILK
 - CAPPUCCINO+
 - CAPPUCCINO MIX
 - CAFFELATTE
 - FLAT WHITE
 - ESPRESSO MACCHIATO
- A message on the display instructs you to turn the froth adjustment dial (E1) according to the froth required by the original recipe. Turn the dial on the milk container lid.
- After a few seconds, preparation begins automatically and an image of the selected beverage appears on the display, together with a progress bar which gradually fills as preparation progresses.

Once the coffee has been delivered, the machine will be ready for further use.


Please note: general indications when preparing all milkbased beverages

- (Esc): press to interrupt preparation completely and go back to the homepage.
- Stop X: press to interrupt milk or coffee delivery and move on to the next delivery (if applicable) to complete the beverage.
- Preparation of each coffee can be customised (see sections "15. Customising the beverages "and "16. Memorising your own user profile "E").
- Do not leave the milk container out of the refrigerator for long periods. The warmer the milk (5°C is ideal), the poorer the quality of froth produced.

12.4 Cleaning the milk container after use

Each time you use a milk function, "TURN MILK FROTH ADJUST-MENT DIAL" "TO CLEAN POSITION" appears on the display and the milk frother lid must be cleaned:

- Leave the milk container (E) in the machine (you do not need to empty it);
- 2. Place a cup or other recipient under the frothed milk spout;
- Turn the froth adjustment dial (E1) to "CLEAN" (fig. 19).
 "CLEANING UNDERWAY" "RECIPIENT UNDER SPOUT" appears on the display together with a bar which gradually fills as cleaning progresses (fig. 20). Steam mixed with hot water comes out of the frothed milk spout. Cleaning stops automatically;

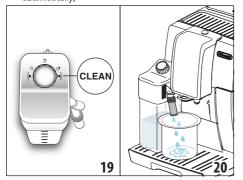

- 4. Turn the dial back to one of the froth selections;
- Remove the milk container and always clean the hot water connection nozzle (A8) with a sponge (fig. 21).



Please note!

- To prepare a number of cappuccinos and milk based coffees, clean the milk container after you have prepared
 the last beverage only. To proceed with making the next
 beverages, when the CLEAN message is displayed, press
- If you do not clean the milk container, the resulting symbol appears on the display to remind you that it needs cleaning.

- The milk container can be kept in the refrigerator.
- In some cases, to clean you must wait for the appliance to heat up.

13. COFFEE CARAFE

 Position a carafe under the coffee spouts (A9). When choosing the carafe to use, bear in mind the quantity to be delivered, namely:

Selected quantity	Quantity (ml)
2	250
4	500
6)	750

- Press "COFFEE POT", "SELECT AROMA" "AND NUMBER OF CUPS";
- B. Press Ok √
- After a few seconds, preparation begins automatically and an image of the selected beverage appears on the display, together with a progress bar which gradually fills as preparation progresses.

Once the coffee has been delivered, the machine will be ready for further use.

Please note:

• ESC : press to interrupt preparation completely and go back to the homepage.

SAFETY WARNING:

After making the pot of coffee, leave the appliance to cool for 5 minutes before making another beverage. Risk of overheating!

14. DELIVERING HOT WATER

- Make sure the hot water spout (D6) is attached correctly to the hot water connection nozzle(A8);
- Place a container under the spout (as close as possible to avoid splashes);
- Press "HOT WATER"; The corresponding image appears on the display, together with a progress bar which fills gradually as preparation proceeds;
- The machine delivers hot water, then delivery stops automatically. To interrupt hot water delivery manually, press
 Stop X

Please note!

 If "Energy Saving" mode is active, you may have to wait a few seconds before the hot water is delivered. Preparation of hot water can be customised (see sections "15. Customising the beverages "and "16. Memorising your own user profile "E").

15. CUSTOMISING THE BEVERAGES (



The aroma (when required) and quantity of the beverages can be customised.

- Make sure the user profile for which you want to customise the beverage is active. You can select "MY" beverages for each of the profiles;
- 2. Press my (C5)
- To access the customising screen, choose the beverage you want to customise. The corresponding accessories must be inserted:
- (Beverages including coffee only) "CHOOSE COFFEE AROMA": Select the required aroma by pressing "-" or "+" and press "(Ok √)";
- "COFFEE QUANTITY" "STOP TO SAVE": Preparation begins and the appliance displays the quantity customising screen in the form of a vertical bar. The star alongside the bar represents the current quantity;
- 6. When the amount reaches the minimum quantity you can set, Stop X is displayed;
- 7. Press Stop X when the required quantity in the cup is reached:

Please note!

- Cappuccinos and milk-based coffees: the coffee aroma is saved first, followed by the quantity of first milk, then coffee:
- Hot water: the appliance delivers hot water. Press
 Stop X to save the required quantity.
- You can also customise the beverages by connecting with the DeLonghi Coffee Link App.

Beverage quantit		
Beverage	Standard quantity	Programmable quantity
ESPRESSO	40 ml	20-180 ml
LONG	160 ml	115-250 ml

COFFEE	180 ml	100-240 ml
DOPPIO+	120 ml	80-180 ml
HOT WATER	250 ml	20-420 ml

16. MEMORISING YOUR OWN USER PROFILE

The appliance allows you to memorise 3 different profiles, each associated with a different icon.

The customised "MY" beverages "AROMA" and "QUANTITY" values are saved in each profile (see section "15. Customising the

beverages my ages are displaye

"). The order in which all the beveris based on the frequency of

To select a profile, press and select the desired profile.

Please note!

selection.

- "Q GUEST" profile: select this profile to deliver beverages with the default settings.
- You can rename your personal profile by connecting with the DeLonghi Coffee Link App (only the first three characters will be displayed).
- To customise the profile icon, see section "9.16 Customise profile".

17. CLEANING

17.1 Cleaning the machine

The following parts of the machine must be cleaned regularly:

- the appliance's internal circuit;
- coffee grounds container (A11);
- drip tray (A15), condensate tray (A10), drip tray grille (A14) and tray full indicator (A13);
- water tank (A17);
- coffee spouts (A9);
- pre-ground coffee funnel (A4);
- infuser (A20), accessible after opening the infuser door (A19);
- milk container (E);
- hot water connection nozzle (A8);
- touch screen (B).

Important!

- Do not use solvents, abrasive detergents or alcohol to clean the coffee machine. With De'Longhi superautomatic coffee machines, no chemical products are required for cleaning purposes.
- None of the components of the appliance can be washed in a dishwasher with the exception of the drip tray grille (A14) and milk container (E).

 Do not use metal objects to remove encrustations or coffee deposits as they could scratch metal or plastic surfaces.

17.2 Cleaning the internal circuit

If the appliance is not used for more than 3/4 days, before using it again, we strongly recommend switching it on and:

- performing 2/3 rinse cycles by selecting the "Rinse" function (section "9.3 Rinse");
- delivering hot water for a few seconds (section "14. Delivering hot water").

Please note!

After cleaning, it is normal for the grounds container (A11) to contain water.

17.3 Cleaning the coffee grounds container

When "EMPTY GROUNDS CONTAINER" appears on the display, the grounds container must be emptied and cleaned. The appliance cannot be used to make coffee until you have cleaned the grounds container (A11). Even if not full, the empty grounds container message is displayed 72 hours after the first coffee has been prepared. For the 72 hours to be calculated correctly, the machine must never be turned off with the main switch (A22).

Important! Danger of scalding

If you make a number of cappuccinos one after the other, the metal cup tray (A12) becomes hot. Wait for it to cool down before touching it and handle it from the front only.

To clean (with the machine on):

1. Remove the drip tray (A15) (fig. 22), empty and clean.



- Empty the grounds container (A11) and clean thoroughly to remove all residues left on the bottom. This can be done using the spatula on the brush (D5) provided.
- Check the condensate tray (A10) (red) and empty if necessary.


Important!

When removing the drip tray, the grounds container must be emptied, even if it contains few grounds. If this is not done,

when you make the next coffees, the grounds container may fill up more than expected and clog the machine.

17.4 Cleaning the drip tray and condensate tray *Important!*

The drip tray (A15) is fitted with a level indicator (A13) (red) showing the amount of water it contains (fig. 23).

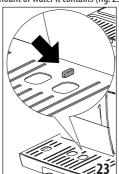

Before the indicator protrudes from the cup tray (A12), the drip tray must be emptied and cleaned, otherwise the water may overflow the edge and damage the appliance, the surface it rests on or the surrounding area. To remove the drip tray, proceed as follows:


- 1. Remove the drip tray and coffee grounds container (A11) (fig. 22);
- 2. Remove the cup tray (A12) and drip tray grille (A14), then empty the drip tray and grounds container and wash all components.
- Check the condensate tray (A15) (red) and empty if necessary;
- Put the drip tray complete with grille and grounds container back in the appliance.

17.5 Cleaning the inside of the coffee machine

Danger of electric shock!

Before cleaning internal parts, the machine must be turned off (see section "8. Turning the appliance off") and unplugged from the mains power supply. Never immerse the machine in water.

- Check regularly (about once a month) that the inside of the appliance (accessible after removing the drip tray (A15)) is not dirty. If necessary, remove coffee deposits with the brush (D5) supplied and a sponge.
- 2. Remove all residues with a vacuum cleaner (fig. 24).

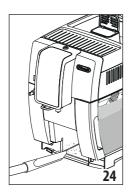

17.6 Cleaning the water tank

- Clean the water tank (A17) regularly (about once a month) and whenever the water softener filter (D7) (if installed) is replaced with a damp cloth and a little mild washing up liquid. Rinse thoroughly before filling the tank and putting it back in the appliance;
- Remove the filter (if installed) and rinse with running water:
- Replace the filter (if installed), fill the tank with fresh water and replace;
- 4. (Models with water softener filter only) Deliver about 100ml of hot water to reactivate the filter.

17.7 Cleaning the coffee spouts

 Clean the coffee spouts (A9) regularly with a sponge or cloth (fig. 25A);



2. Check the holes in the coffee spouts are not blocked. If necessary, remove coffee deposits with a toothpick (fig. 25B).

17.8 Cleaning the pre-ground coffee funnel

Check regularly (about once a month) that the pre-ground coffee funnel (A4) is not blocked. If necessary, remove coffee deposits with the brush (D5) supplied.


17.9 Cleaning the infuser

The infuser (A20) must be cleaned at least once a month.

Important!

The infuser cannot be removed when the machine is on.

- Make sure the machine is correctly turned off (see section "8. Turning the appliance off");
- 2. Remove the water tank (A17) (fig. 3);
- 3. Open the infuser door (A19) (fig. 26) on the right side of the appliance;
- 4. Press the two coloured release buttons inwards and at the same time pull the infuser outwards (fig. 27):
- 5. Soak the infuser in water for about 5 minutes, then rinse under the tap;

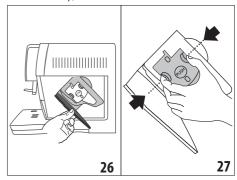


Important!

RINSF WITH WATER ONLY

NO WASHING UP LIQUID - NO DISH WASHER

Clean the infuser without using washing up liquid as it could be damaged.


- 6. Use the brush (D5) to remove any coffee residues left in the infuser housing, visible through the infuser door;
- After cleaning, replace the infuser by sliding it onto the internal support (fig. 28), then push the PUSH symbol fully in until it clicks into place;

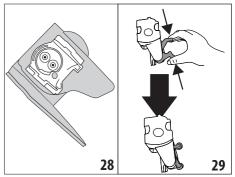

Please note!

If the infuser is difficult to insert, before insertion, adapt it to the right size by pressing the two levers shown in fig. 29.

Once inserted, make sure the two coloured buttons have snapped out (fig. 30);

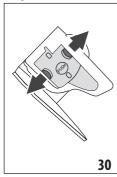


- Close the infuser door;
- 10. Put the water tank back.

17.10 Cleaning the milk container

To keep the frother efficient, clean the milk container every two days as described below.

- 1. Remove the lid (E2);
- 2. Remove the milk spout (E5) and intake tube (E4) (fig. 31);
- Turn the froth adjustment dial (E1) anticlockwise to the "INSERT" position (fig. 31) and pull it off upwards;

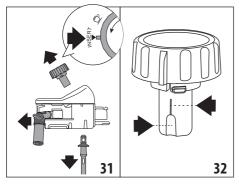

- 4. Wash all the components thoroughly with hot water and mild washing-up liquid. All components are dishwasher safe, but must be placed in the top basket of the dishwasher. Make sure there are no milk residues on the hollow and groove under the dial (fig. 32). If necessary, scrape the groove with a toothpick;
- Rinse inside the froth adjustment dial seat with running water (fig. 33);
- Check that the intake tube and spout are not clogged with milk residues;
- Replace the dial (in correspondence to the word "INSERT"), spout and milk intake tube;
- 8. Place the lid back on the milk container (E2).



17.11 Cleaning the hot water nozzle

Each time you prepare milk, clean the connection nozzle (A8) with a sponge to remove milk residues from the gaskets (fig. 21).

18. DESCALING

Important!


- Before use, read the instructions and the labelling on the descaler pack.
- You should use De'Longhi descaler only. Using unsuitable descalers, or failing to perform the descale procedure correctly, could lead to the machine developing faults not covered by the manufacturer's guarantee.
- The decaler may damage sensitive surfaces. If the product is accidentally spilled, please wipe it off immediately.

Necessary for descaling	
Descaler	De'Longhi descaler
Container	Capacity: 1,8 l
Time	~45min

Descale the appliance when "DESCALING NEEDED" "PRESS OK TO START (\sim 45min)" appears on the display: To descale immediately, press \bigcirc \bigcirc And follow the operations from point 3. To descale the appliance later, press \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc Symbol appears on the display to remind you that the appliance needs descaling. (the message appears each time you turn the appliance on).

To access the descaling menu:

- 1. Pressthe " button (C3) to enter the menu;
- Press "DESCALE" and follow the instructions on the display;
- "REMOVE WATER FILTER" (fig. 34): extract the water tank (A17), remove the water softener filter (D7) (if present) and empty the water tank. Press Next >);

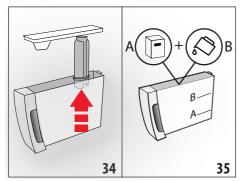

- "DESCALER (LEVEL A)" "AND WATER (LEVEL B)" (fig. 35); Pour the descaler into the tank up to the level A marked inside the tank (equal to one 100ml pack), then add water (one litre) up to level B and put the water tank back. Press Next >);
- 5. "EMPTY DRIP TRAY" (fig. 22):
- Remove, empty and replace the drip tray (A15) and grounds container (A11). Press Next >);
- 7. "POSITION 2I CONTAINER" "OK TO START":

Place an empty container with a minimum capacity of 2 litres under the hot water spout (D6) and coffee spouts (A9) (fig. 9);

Important! Danger of scalding


Hot water containing acid flows from the hot water and coffee spouts. Take care to avoid contact with splashes of this solution.

 Press "Ok V" to confirm that you have added the descaling solution. "DESCALING UNDERWAY" "PLEASE WAIT" is displayed: The descale programme starts and the descaler liquid comes out of the hot water and coffee spouts. A series of rinses is performed automatically to remove all the scale residues inside the coffee machine;

After about 25 minutes, descaling stops;

- "RINSE AND FILL WATER TANK" "UP TO MAX LEVEL" (fig.
 4): the appliance is now ready to rinse with fresh water.
 Empty the container used to collect the descaler solution.
 Extract the water tank, empty, rinse under running water,
 fill with fresh water up to the MAX level and put back in
 the appliance;
- 10. "POSITION 2I CONTAINER" "OK TO START RINSING": Place the container used to collect the descaler solution empty under the coffee spouts and hot water spout (fig. 9) and press Ok V ;
- Hot water is delivered first from the coffee spouts, then from the hot water spout and "RINSING UNDERWAY" is displayed;
- When the water in the tank has run out, empty the container used to collect the rinsing water;

 (If the filter is installed) "INSERT FILTER" "INTO ITS HOUS-ING" (fig. 36). Press "Next >" and extract the water tank. Replace the water softener filter if removed previously:

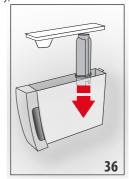

- "RINSE AND FILL WATER TANK" "UP TO MAX LEVEL" (fig. 4):
 Fill the tank up to the MAX level with fresh water;
- 15. "INSERT WATER TANK" (fig. 5): Put the water tank back in the appliance;
- 16. "POSITION 2I CONTAINER" "OK TO START RINSING": Place the container used to collect the descaler solution empty under the hot water spout (fig. 9) and press Ok V
- Hot water is delivered from the hot water/steam spout and "RINSING UNDERWAY" "PLEASE WAIT" is displayed;
- 18. "EMPTY DRIP TRAY" (fig. 22): At the end of the second rinse, remove, empty and replace the drip tray (A15) and grounds container (A11) and press (Next ➤);
- 19. "DESCALE COMPLETE": press Ok V
- "FILL TANK WITH" "FRESH WATER": empty the container used to collect the rinse water, remove the water tank and fill with fresh water up to the MAX level, then put back in the appliance.

The descaling cycle is now complete.

Please note!

- If the descaling cycle is not completed correctly (e.g. no electricity) we recommend repeating the cycle;
- After descaling, it is normal for the grounds container (A11) to contain water.
- If the water tank has not been filled to the MAX level, at the end of descaling, the appliance requests a third rinse to guarantee that the descaler solution has been completely eliminated from the machine's internal circuits. Before starting rinsing, remember to empty the drip tray;
- The appliance may request descaling cycles at very short intervals. This is normal and due to the appliance's advanced control system.

19. SETTING WATER HARDNESS



(!)" message is displayed after a period of time established according to water hardness.

The machine is set by default for a hardness value of "4". The machine can also be programmed according to the hardness of the mains water in the various regions so that the machine needs to be descaled less often.

19.1 Measuring water hardness

- Remove the TOTAL HARDNESS TEST indicator paper (D1) from its pack (attached to the English instructions).
- Immerse the paper completely in a glass of water for one 2. second.
- Remove the paper from the water and shake lightly. After about a minute, 1, 2, 3, or 4 red squares form, depending on the hardness of the water. Each square corresponds to one level.

Indicator paper	Water hardness
	Level 1 - soft water
	Level 2 - slightly hard water
	Level 3 - hard water
	Level 4 - very hard water

19.2 Setting water hardness

- 1. Access the menu as described in section "9.1 Access the settings menu";
- Press "WATER HARDNESS"; 2.
- "WATER HARDNESS" "CURRENT VALUE UNDERLINED": Press the required level (Level 1 = soft water; Level 4 = very hard water):
- Press " (**S** ESC)" to go back to the homepage. The machine is now reprogrammed with the new water hardness setting.

20. WATER SOFTENER FILTER


Certain models are fitted with a water softener filter (D4). If this is not the case with your model, you are recommended to purchase one from De'Longhi Customer Services.

To use the filter correctly, follow the instructions below.

20.1 Installing the filter

Remove the filter (D7) from the packaging;


- 2. Access the menu as described in section "9.1 Access the settings menu":
- 3. Press "WATER FILTER"; "TURN DATE INDICATOR TO NEXT 2 MONTHS" (fig. 37): turn the date disk to display the next 2 months of use.
- Press (Next)

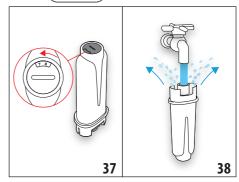

Please note

IThe filter lasts about two months if the appliance is used normally. If the coffee machine is left unused with the filter installed, it will last a maximum of 3 weeks.

- "RUN WATER INTO FILTER HOLE" "UNTIL IT COMES OUT" (fig. 38): To activate the filter, run tap water through the hole in the filter as shown in the figure until water comes out of the openings at the side for more than a minute. Press Next >
- 6. Extract the tank (A17) from the appliance and fill with
- "IMMERSE FILTER TO" "EXPEL AIR BUBBLES" (fig. 39): Insert 7. the filter in the water tank and immerse it completely for about ten seconds, sloping it and pressing it lightly to enable the air bubbles to escape. Press (Next >

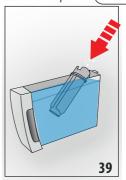

"INSERT FILTER" "IN HOUSING": Insert the filter (D7) in the filter housing (fig. 36) and press as far as it will go. Press Next >

- 9. "INSERT WATER TANK": Close the tank with the lid (A17), then put the tank back in the machine (fig. 5);
- 10. "POSITION 0.5L CONTAINER" "OK TO ENABLE FILTER" (fig. 7): Place the container under the hot water spout (D6) and press Ok ✓. Delivery begins and stops automatically.

The filter is now active and the coffee machine can be used.

20.2 Replacing the filter

Replace the filter (D7) when "REPLACE WATER FILTER" "PRESS OK TO START" appears on the display: to replace immediately, press Ok V and follow the instructions from point 5.

To replace the filter later, press ESC. The symbol appears on the display to remind you that the filter needs replacing. To replace, proceed as follows:

- 1. Extract the tank (A17) and exhausted filter;
- 2. Remove the new filter from the packaging;
- Access the menu as described in section "9.1 Access the settings menu";
- 4. Follow the operations described in the previous section from point 3.

The filter is now active and the coffee machine can be used.

Please note!

After two months (see date indicator) or when the appliance has not been used for 3 weeks, you should replace the filter even if the message has not yet been displayed.

20.3 Removing the filter

If you want to use the appliance without the filter (D7), you must remove it and notify the appliance of its removal. Proceed as follows:

- 1. Extract the tank (A17) and exhausted filter;
- Access the menu as described in section "9.1 Access the settings menu";
- 3. PRESS "WATER FILTER";
- Press the selector corresponding to " REMOVE WATER FILTER":
- 5. "CONFIRM FILTER REMOVAL": press Ok √ (o press ← Esc) to go back to the settings menu);
- "FILTER REMOVED": the change has been saved. Press
 Ok √ to go back to the homepage.

Please note!

After two months (see date indicator) or when the appliance has not been used for 3 weeks, you should replace the filter even if the message has not yet been displayed.

21. DISPLAYED MESSAGES



DISPLAYED MESSAGE	POSSIBLE CAUSE	REMEDY
FILL TANK WITH FRESH WATER	Insufficient water in the tank (A17).	Fill the tank with water and/or insert it correctly, pushing it as far as it will go until it clicks into place.
INSERT WATER TANK	The tank (A17) is not correctly in place.	Insert the tank correctly and press as far as it will go.
EMPTY GROUNDS CONTAINER	The grounds container (A11) is full.	Empty the grounds container and drip tray (A15), clean and put back in the appliance. Important: when removing the drip tray, the grounds container MUST be emptied, even if it contains few grounds. If this is not done, when you make the next coffees, the grounds container may fill up more than expected and clog the machine.
INSERT GROUNDS CONTAINER	After cleaning, the grounds container (A11) has not been replaced.	Remove the drip tray (A15) and insert the grounds container.
ADD GROUND COFFEE MAX. ONE MEASURE SESC	The pre-ground coffee function has been selected without placing any pre-ground coffee in the funnel (A4).	Place pre-ground coffee in the funnel (fig. 12) and repeat delivery
		\rightarrow

DISPLAYED MESSAGE	POSSIBLE CAUSE	REMEDY
ADD GROUND COFFEE MAX. ONE MEASURE Ok V	A LONG coffee with pre-ground coffee has been requested	Place pre-ground coffee in the funnel (A4) (fig. 12) and press the selector corresponding to "OK" to continue and complete delivery.
FILL BEANS CONTAINER	The coffee beans have run out.	Fill the beans container (A4) (fig. 10).
D Esc	The pre-ground coffee funnel (A4) is clogged.	Empty the funnel with the help of the brush (D5) as described in section "17.8 Cleaning the pre-ground coffee funnel".
GROUND TOO FINE. ADJUST GRINDER	The grinding is too fine and the coffee is delivered too slowly or not at all.	Repeat coffee delivery and turn the grinding adjustment dial (A5) (fig. 13) one click clockwise towards "7" while the coffee grinder is in operation. If after making at least 2 coffees delivery is still too slow, repeat the correction procedure, turning the grinding adjustment dial another click until delivery is correct (see section "10.5 Adjusting the coffee grinder"r"). If the problem persists, make sure the water tank (A17) is fully inserted.
(5 Esc	If the water softener filter (D7) is present, an air bubble may have been released inside the circuit, obstructing delivery.	Insert the hot water spout (D6) in the appliance and deliver a little water until the flow becomes regular.
SELECT A MILDER TASTE OR REDUCE COFFEE AMOUNT	Too much coffee has been used.	Select a milder taste by pressing the "AROMA" button (C5) or reduce the quantity of ground coffee (maximum 1 measure).
		\rightarrow

DISPLAYED MESSAGE	POSSIBLE CAUSE	REMEDY
INSERT WATER SPOUT	The hot water spout (D6) is not inserted or is inserted incorrectly	Insert the water spout as far as it will go.
INSERT MILK CONTAINER	The milk container (E) is not inserted correctly.	Insert the milk container, pushing it as far as it will go.
INSERT INFUSER ASSEMBLY PUSH	The infuser (A20) has not been replaced after cleaning.	Insert the infuser as described in section "17.9 Cleaning the infuser".
WATER CIRCUIT EMPTY PRESS OK TO START Ok Ok :	The water circuit is empty	Press the selector corresponding to "OK" to deliver water from the spout (D6) until it flows out normally. If the problem persists, make sure the water tank (A17) is fully inserted.
	,	\rightarrow

DISPLAYED MESSAGE	POSSIBLE CAUSE	REMEDY
PRESS OK TO CLEAN OR TURN DIAL Ok V:	The milk container has been inserted with the froth adjustment dial (E1) in the CLEAN position.	To proceed with the CLEAN function, press the selector corresponding to "OK", or turn the froth adjustment dial to one of the milk positions.
TURN MILK FROTH ADJUSTMENT DIAL TO CLEAN POSITION CLEAN ESC	Milk has been delivered recently and the tubes inside the milk container (E) must be cleaned.	Turn the froth adjustment dial (E1) to CLEAN (fig. 19).
TURN FROTH ADJUSTMENT DIAL	The milk container has been inserted with the froth adjustment dial (E1) in the CLEAN position.	Turn the dial to the required froth position.
DESCALING NEEDED PRESS OK TO START (~45MIN) SESC OK OK	The machine must be descaled.	Press the selector corresponding to "OK" to start descaling or "ESC" to descale later. The descaling procedure described in section "18. Descaling" needs to be performed.
		\rightarrow

DISPLAYED MESSAGE	POSSIBLE CAUSE	REMEDY
REPLACE WATER FILTER PRESS OK TO START SESC OK OK	The water softener filter (D7) is exhausted.	Press the selector corresponding to "OK" to replace or remove the filter, or "ESC" to carry out the procedure later. Follow the instructions in section "20. Water softener filter".
GENERAL ALARM: REFER TO USER MANUAL / APP	The inside of the appliance is very dirty.	Clean the inside of the appliance thoroughly, as described in section "17. Cleaning". If the message is still displayed after cleaning, contact a customer service centre.
2	The tubes inside the milk container (E) must be cleaned.	Turn the froth adjustment dial (E1) to CLEAN (fig. 19).
	Reminds you the filter (D7) must be replaced.	Replace the filter or remove it as described in section "20. Water softener filter".
WIN THE PROPERTY OF THE PROPER	The machine must be descaled.	The descaling procedure described in section "18. Descaling" needs to be performed. The appliance may request descaling cycles at very short intervals. This is normal and due to the appliance's advanced control system.
©	Energy saving is enabled.	To disable the function, proceed as described in section "9.8 Energy saving".
*	The appliance is connected to a device via bluetooth.	
CLEANING UNDERWAY PLEASE WAIT	The appliance has detected impurities in its internal circuits.	Wait for the appliance to be ready for use again and reselect the required beverage. Contact Customer Services if the problem persists.

22. TROUBLESHOOTING

Below is a list of some of the possible malfunctions.

If the problem cannot be resolved as described, contact Customer Services.

PROBLEM	POSSIBLE CAUSE	REMEDY
The coffee is not hot.	The cups were not preheated.	Warm the cups by rinsing them with hot water (Please note: you can use the hot water function).
	The infuser has cooled down because 2/3 minutes have elapsed since the last coffee was made.	Before making the coffee, heat the infuser by rinsing using the rinse function (see section "9.3 Rinse").
	A low coffee temperature is set.	Set a hotter coffee temperature in the menu (see section "9.9 Coffee temperature").
The coffee is weak or not creamy enough.	The coffee is ground too coarsely.	Turn the grinding adjustment dial (A5) one click anticlockwise towards "1" while the coffee grinder is in operation (fig. 13). Continue one click at a time until coffee delivery is satisfactory. The effect is only visible after delivering 2 coffees (see section "10.5 Adjusting the coffee grinder"r").
	The coffee is unsuitable.	Use coffee for espresso machines.
	The coffee is not fresh.	The coffee pack has been opened for too long and has lost its taste.
The coffee is delivered too slowly or a drop at a time.	The coffee is ground too finely.	Turn the grinding adjustment dial (A5) one click clockwise towards "7" while the coffee grinder is in operation (fig. 13). Continue one click at a time until coffee delivery is satisfactory. The effect is only visible after delivering 2 coffees (see section "10.5 Adjusting the coffee grinder"r").
Coffee does not come out of one or both of the spouts.	The coffee spouts (A9) are blocked.	Clean the spouts with a toothpick (fig. 25B).
The appliance will not make coffee	The appliance has detected impurities in its internal circuits. "Cleaning underway" is displayed.	Wait for the appliance to be ready for use again and reselect the required beverage. Contact Customer Services if the problem persists.
The appliance does not come on	The power cord connector (D7) is not inserted correctly.	Insert the connector as far as it will go in the socket at the back of the appliance (fig. 1).
	It is not plugged into the mains socket.	Plug into the mains socket (fig. 1).
	The main switch (A22) is not turned on.	Press the main switch (fig. 2).
The infuser cannot be extracted	The appliance has not been turned off correctly	Turn the appliance off by pressing the button (A15) (see section "8. Turning the appliance off").

PROBLEM	POSSIBLE CAUSE	REMEDY	
At the end of descaling, the appliance requests a third rinse	During the two rinse cycles, the water tank (A17) has not been filled to the MAX level	Follow the instructions displayed by the appliance, but first empty the drip tray (A15) to avoid the water overflowing.	
Milk does not flow from the milk spout (E5)	The milk container (E) lid (E2) is dirty	Clean the milk container lid as described in section "17.10 Cleaning the milk container".	
The milk contains large bubbles and squirts out of the milk spout (E5) or there is little froth	The milk is not cold enough or is not semi-skimmed or skimmed.	Use skimmed or semi-skimmed milk at refrigerator temperature (about 5° C). If the result is not as expected, try a different brand of milk.	
	The froth adjustment dial (E1) is incorrectly adjusted.	Adjust following the instructions in section "12. making milk-based recipes".	
	The milk container lid (E2) or froth adjustment dial (E1) are dirty	Clean the milk container lid and dial as described in section "17.10 Cleaning the milk container".	
	The hot water connection nozzle (A8) is dirty	Clean the connection nozzle as described in section "17.11 Cleaning the hot water nozzle".	
The machine emits noises or small puffs of steam while not in use	The machine is ready for use, or has recently been turned off, and condensate is dripping into the hot vaporiser	This is part of normal operation. To limit the phenomenon, empty the drip tray.	
The app doesn't run	Close the app	Open the app again	
There is little or no froth on the True- Brew Over Ice	Too much, or the wrong quantity of ice has been used	Respect the instructions in section "11. TRUE-BREW OVER ICETM COFFEE".	
	The coffee is unsuitable or has been left open for too long	Use "fresh", ideally "robusta" coffee.	
The cold coffee is hot	Too little and/or the wrong quantity of ice has been used	Respect the instructions in section "11. TRUE- BREW OVER ICETM COFFEE"	





★若有任何需求请与下述地址联系:

☆徳龙电器(上海)有限公司

地址: 上海市中山北路3553号2101-2116室



5713246901_02_1220 update 2020/12/7