

**DeLonghi**

---

咖 啡 机

使  
用  
说  
明  
书


**DeLonghi**

**R3 W/R3 GR**


# 目 录

1.基本安全警告	3	11.制作咖啡	13
2.基本信息	4	11.1 准备制作咖啡	14
2.1 使用说明	4	11.2 直接可选饮品	14
3.使用之前	4	11.3 定制饮品	14
3.1 机器检查	4	11.4 使用咖啡粉制作咖啡	15
3.2 机器安装	4	11.5 多一份浓缩	15
3.3 机器连接	4	11.6 制作咖啡饮品的一般指示	16
3.4 机器设置	5	11.7 制作更热咖啡的小贴士	16
3.5 使用什么水?	5	12.咖啡豆适配技术	16
3.6 与食品接触部分的清洁与维护	5	13.咖啡日程	16
3.7 制作卡布奇诺和牛奶咖啡	5	14.蒸汽功能	16
4.介绍	5	14.1 用牛奶或植物类饮品制作奶泡	16
4.1 括号中的字母	5	14.2 制作热牛奶(无奶泡)	17
4.2 故障处理和检修	5	14.3 每次使用后清洁蒸汽杆	18
4.3 Coffee Link微信小程序	5	14.4 制作热水	18
5.产品描述	6	15.制作“随行杯”饮品	18
5.1 机器(A)描述	6	16.更换咖啡豆仓	19
5.2 控制面板(B)描述	6	17. (my) 定制饮品功能(仅限热饮)	19
5.3 主页(主屏幕)(C)描述	6	18.清洁	20
5.4 配件(D)描述	6	18.1 清洁机器	20
6.首次使用	7	18.2 清洁机器内部回路	20
7.开启机器	9	18.3 清洁咖啡豆仓	20
8.关闭机器	9	18.4 清洁咖啡盛渣盒	21
9.设置菜单	9	18.5 清洁滴水盘和滴水盘网格盖板	21
9.1 冲洗	9	18.6 清洁咖啡机内部	22
9.2 除垢	9	18.7 清洁水箱	22
9.3 软水过滤器	9	18.8 清洁咖啡流出口	22
9.4 连接	10	18.9 清洁咖啡粉进料管	22
9.5 通用	10	18.10 清洁萃取器	22
9.6 自动关机	10	18.11 彻底清洁蒸汽杆	23
9.7 支持	10	19.除垢	24
9.8 研磨并清空	11	20.软水过滤器	25
9.9 咖啡温度	11	20.1 安装软水过滤器	26
9.10 数据统计	11	20.2 更换或移除软水过滤器	26
9.11 语言	11	21.显示信息	27
9.12 日期和时间	11	22.故障处理	31
9.13 研磨设置	12	23.技术参数	33
9.14 水硬度	12	23.1 节能小贴士	33
9.15 清空水回路	12		
9.16 默认值	13		
10.饮品选择	13		


**A**

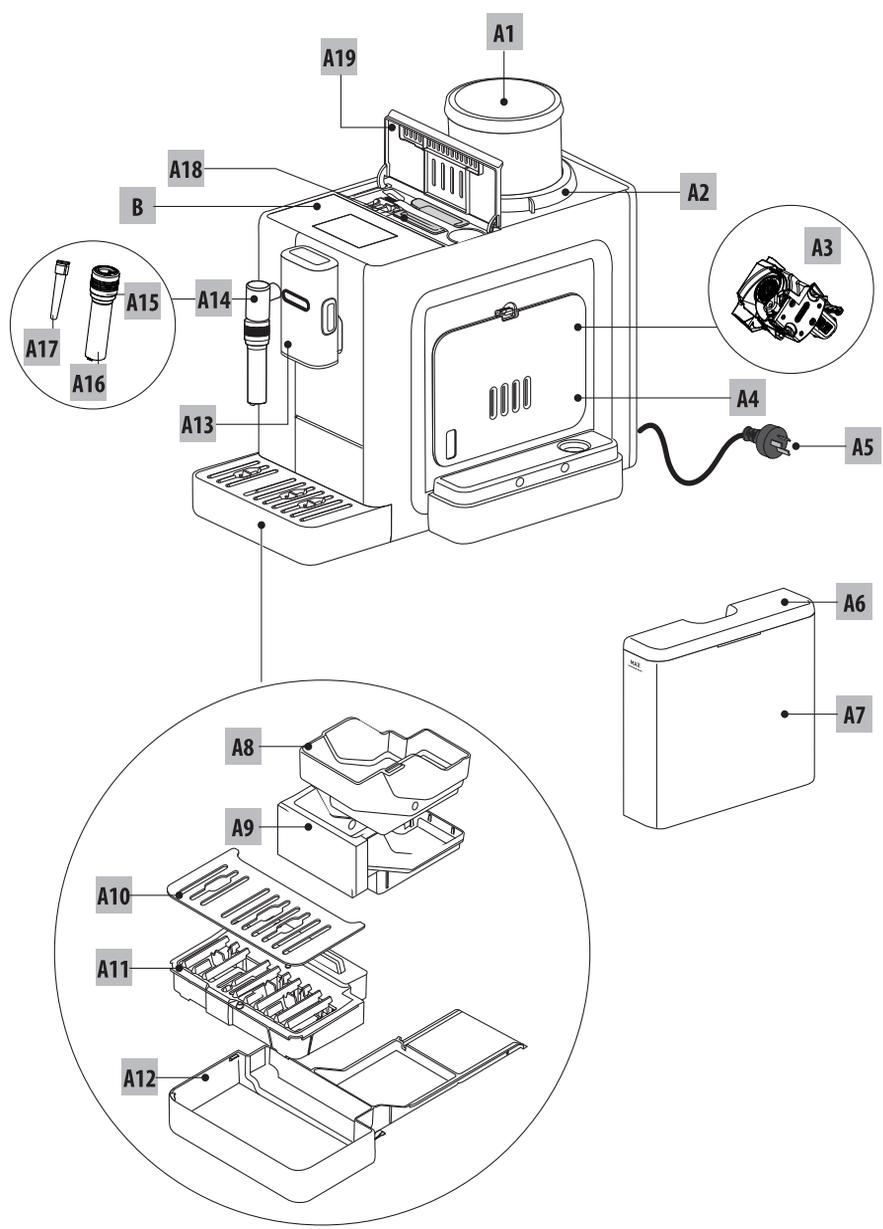

**B C**

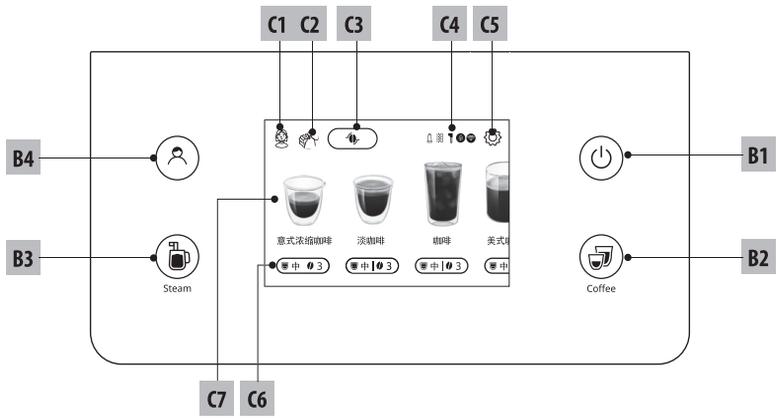

**D\***

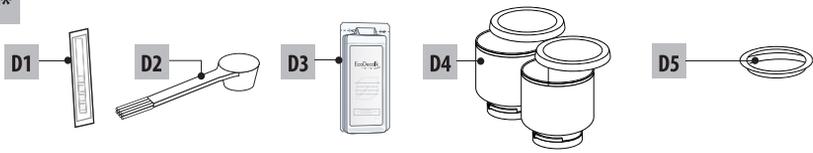

## 1.基本安全警告

---

- 有心理、身体或者感官障碍、或不具备足够的经验或者知识的人员（包括儿童）不允许使用该机器，除非有对他们的安全负责的人密切监督并进行指导。
- 必须监督儿童，确保他们不玩弄该电器。
- 指定用途：本机器的设计和制造的用途是制作咖啡、含牛奶饮品和热水。除此之外的用途都是不正确的。在水箱中仅能使用饮用水。切勿使用配件制作说明书上未标明的饮品。制造商对于未正确使用该电器引起的损害概不负责。
- 机器使用后加热部件的表面会持续发烫，机器外部也会根据使用情况持续发烫几分钟。
- 彻底清洁所有部件，特别注意与牛奶接触的部件。
- 请勿让儿童在无人监管的情况下清洁和维修保养本机。
- 在清洗的过程中，切勿将机器浸入水中。
- 重要提示：为防止损坏机器，请勿使用碱性清洁剂清洁；请使用软布，以及在适用情况下使用中性和清洁剂清洁机器。
- 本电器仅限家庭使用，不能用于以下场所：商场的员工餐厅，办公室或其他工作环境；牧场旅馆；旅馆、汽车旅馆或其他住宅性环境；家庭式旅馆。
- 如果机器插头或电源线损坏，必须且只能由德龙指定的售后服务人员进行更换，以避免发生各种危险。
- 带有可拆卸电源线的机器：避免机器背面的电源线连接器或插座被溅水。
- 重要提示：带有玻璃表面的型号请注意：如果表面破裂，请勿使用。
- 使用过程中，切勿将咖啡机放在橱柜或厨房单元格内。



请勿将机器浸入任何液体中进行清洁。

这是一台电器设备，存在触电风险。因此，您应该遵守以下安全警告：

- 切勿湿手或湿脚接触本机器。
- 切勿湿手触摸插头。
- 确保能随时接近机器使用的插座，必要时能拔下机器的插头。
- 直接拔下电源插头，切勿拉扯电源线，以免损坏电源线。
- 要完全断开机器的电源，请拔下电源线插头。
- 如果机器发生故障，不要试图自己检修。关闭电源，拔下插头，并与售后服务中心联系。
- 在对机器进行清洁之前，请先关闭电源，拔下插头，并等待机器冷却。



### 重要!

各种包装（塑料袋、聚苯乙烯泡沫塑料）必须远离儿童存放。

窒息危险。本产品可能含有较小的零部件。清洗和维护期间可能需要拆卸。

其中一些小零件。请小心装卸，把小零件置于儿童够不到的地方。



### 烫伤危险!

本机器运作时可能会产生热水和蒸汽，在操作过程中（自动冲洗、制作热饮、释放蒸汽、清洁），请避免接触飞溅的热水或者蒸汽，且机器运行时咖啡杯架可能会变得很烫。

## 2. 基本信息

### 2.1 使用说明

使用本机器之前请仔细阅读此说明书。不遵循本机器使用说明可能导致烧伤或者损坏电器。制造商对未正确使用该机器引起的损害概不负责。

### 请注意:

此安全警告适用于所有德龙品牌的咖啡机。

保存本说明书。如果转让该机器给其他人，请确保将说明书同时附送。

## 3. 使用之前

### 3.1 机器检查

打开包装后，确保机器表面完好且没有被损坏，同时所有的配件齐全。如果机器存在明显的损坏，切勿使用该机器。请与德龙授权的售后服务中心联系。

### 3.2 机器安装

安装机器的时候，应该重视以下安全警告：

- 本电器会释放出热量，因此将机器放置于工作台上时，机器表面、侧面及靠墙部分需留出至少3厘米的空间，咖啡机上方需要留出至少15厘米的空间。
- 若有水渗入，会损坏机器。切勿将该机器放置在水龙头或者水槽附近。
- 若机器中的水结冰会损坏机器。切勿将机器安放在一个室温可能低于零度的房间内。
- 电源线切勿放置在尖锐物质的边缘或接触热的物体表面（如：电热板），这样会损坏电源线。

### 3.3 机器连接

请检查并确认所使用的电源电压与该机器铭牌所标示的电源电压是否一致。

本机器必须与具备有效地接地线的电源正确连接，且最小的额定电流只能为10安培。

如果电源插座与机器插头不匹配，需由具有专业资质的技术人员来替换相匹配的插座。

### 3.4 机器设置

在您第一次使用咖啡机时，水回路是空的，机器操作的声音可能较大。水回路满之后声音会降低。

### 3.5 使用什么水？

- 建议使用饮用水。
- 请不要使用气泡水（碳酸水）或蒸馏水。

### 3.6 与食品接触部分的清洁与维护

• 首次使用本机器，或超过3天未使用本机器时，请参照说明书清洁机器以及与水、咖啡和牛奶接触的所有可拆卸配件。可在说明书中查阅哪些配件可用洗碗机清洗。

• 如本机器超过3天未使用，请在制作第一杯饮品前，参照使用说明书更换水箱中的水并冲洗水回路。如果超过3天不使用本机器，建议清空水箱。

• 当机器的显示屏或提示灯亮起时，请严格按照说明书指示，进行清洁或相关维护操作。

### 3.7 制作卡布奇诺和牛奶咖啡

• 本机器已通过测试，可用于含牛奶或以下植物来源的产品：大豆、燕麦和杏仁。不得使用其他类型的奶制品或植物来源的产品。

• 请不要使用生奶。

• 请使用巴氏杀菌、超高温灭菌奶或植物奶，并依照厂商指示的储存方法保存。

• 说明书中描述的清洁方法无法保证完全去除过敏原。

• 如果发现已确认或疑似的过敏或不耐受症状，确保您的机器在以前没有使用过含有能使您产生过敏反应的过敏原或能使您产生不耐受反应的任何以牛奶或植物来源为基础的产品。

## 4. 介绍

### 4.1 括号中的字母

括号中的这些字母与本说明书第1-2页上的图例相对应。

### 4.2 故障处理和检修

机器出现故障时，首先按照“21. 显示信息”和“22. 故障处理”章节中的信息来尝试解决问题。

如果仍不能解决问题或者您需要更详细的信息，请致电保修卡上的电话号码，咨询售后服务中心。如需维修，请与德龙售后服务中心联系。售后服务中心的地址已在咖啡机随附的保修卡上列出。

### 4.3 Coffee Link微信小程序

1. 下载微信。
2. 打开微信。
3. 点击“发现”，使用“扫一扫”功能扫描下方二维码。



4. 也可在微信搜索栏中直接输入“德龙Coffee Link”搜索小程序。

5. 进入小程序后，请遵循小程序指引，添加并绑定设备。

在小程序中，你可以获取丰富的创意咖啡食谱，在指点之间获得咖啡世界的信息、建议和有趣的内容，以及了解机器的相关信息。

您还可以通过小程序远程操作咖啡机的一系列功能。

您也可创建专属饮品配方，并将配方保存在机器中。

### 请注意：

•如需通过小程序进行远程操作，请在咖啡机的设置菜单中启用连接功能（参考“9.4 连接”章节的描述）。

## 5.描述

### 5.1 机器 (A) 描述

- A1. 咖啡豆仓  
(需自行根据开机指引安装D4豆仓)
- A2. 研磨度选择盘
- A3. 萃取器
- A4. 萃取器盖
- A5. 电源线
- A6. 水箱盖
- A7. 水箱
- A8. 咖啡盛渣盒
- A9. 咖啡盛渣盒支架
- A10. 咖啡杯托盘
- A11. 滴水盘网格盖板
- A12. 滴水盘
- A13. 咖啡流出口 (可调节高度)
- A14. 蒸汽杆
- A15. 蒸汽杆档位选择环
- A16. 发泡器
- A17. 蒸汽喷嘴
- A18. 咖啡粉进料管 (可拆卸)
- A19. 配件收纳盒盖

### 5.2 控制面板 (B) 描述

- B1.  开机/待机
- B2.  Coffee咖啡饮品选择菜单  
(亮起：屏幕显示可制作饮品)
- B3.  Steam蒸汽功能  
(亮起：可使用蒸汽/热水功能)
- B4.  用户选择 (用于切换用户选择)

### 5.3 主页 (主屏幕) (C) 描述

- C1. 所选用户图标
- C2. 咖啡日程图标
- C3. 咖啡豆适配技术 (从小程序启用)：按照显示屏上的说明操作
- C4. 指示图标：
  -  等待首次联网
  -  Wi-Fi已连接图标
  -  无网络连接图标
  -  节能模式已启用图标
  -  蒸汽杆冲洗图标
  -  除垢指示图标
  -  软水过滤器更换指示图标
- C5. 设置菜单
- C6. 显示并自定义饮品设置
- C7. 直接可选饮品

### 5.4 配件 (D) 描述 (\*因型号而异)

- D1. 水硬度测试纸
- D2. 咖啡粉量勺/清洁刷
- D3. 除垢液
- D4. 咖啡豆仓(带盖)(本机配备2个)
- D5. 研磨器保护盖

## **i** 请注意:


我们不断改进产品，因此德龙公司保留一切更改产品技术参数和外观特点的权力，且恕不需另行通知。

## 6. 首次使用

### 请注意:

- 研磨器中可能有残留的咖啡粉，这是因为机器在出厂前经过了测试，出于我们对产品的细致检查。
- 首次使用本机器时，所有要与水或牛奶接触的可拆卸配件（发泡器（A16）、蒸汽喷嘴（A17）、水箱（A7）、水箱盖（A6）和咖啡豆仓（A1））都应用热水冲洗。

1. 将电源线（A5）连接到主电源（如图1）。

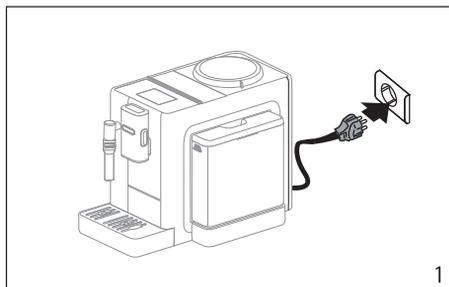

机器将开机，并引导您进行设置：请按照显示屏上的指引进行操作，机器准备就绪即可制作咖啡了！

### 选择语言

2. 按下国旗图标选择所需设置的语言，然后按下“完成”进行下一步。


### 设置时间和日期

3. 设置时区，然后按下“下一步”。
4. 设置当前日期和时间，然后按下“下一步”。

### 水箱注水

5. 拆下水箱（A7）（如图2），在水箱中注入饮

用水至MAX（最高位置）线（如图3），然后按下“下一步”。

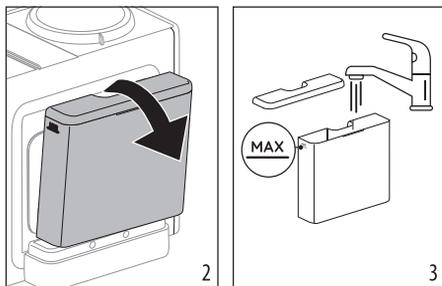


### 设置机器

6. 检查研磨度选择盘（A2）所选研磨度是否为5，如若不是，请将其旋转至“5”并按下“下一步”。

7. 移除研磨器保护盖（D5），按下“下一步”。


### 安装豆仓

8. 取一个豆仓（D4），将其倒置，确保其底部密封完好，逆时针旋转豆仓底部的圆环，直到听到咔嚓声（如图4）。两个箭头对齐时，表示豆仓正确关闭（如图5）。按下“下一步”。

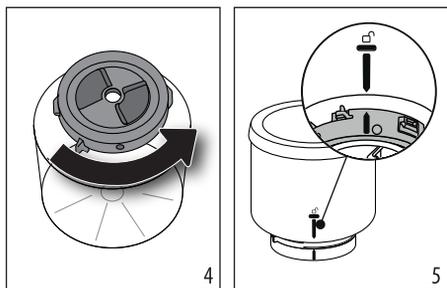


9. 豆仓中装入咖啡豆。按下“下一步”。

10. 安装咖啡豆仓，并顺时针旋转以锁定。为确保正确操作，请将  解锁图标与环上的“—”标记对齐（如图6），插入后将其旋转至  锁定图标位置（如图7）。按下“下一步”。

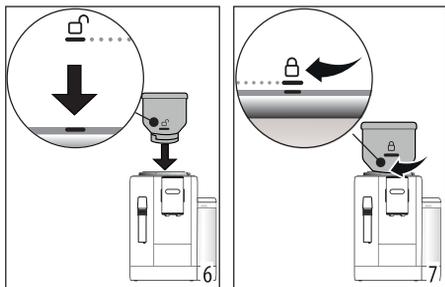

## 机器排水

11. 在咖啡流出口和蒸汽杆的下方放置一个最小容积为200毫升的容器（如图8）。

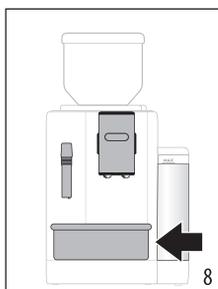

12. 按下“是”开始冲洗。等待直到冲洗自动停止。

## 提示

显示屏上会出现一些提示。请仔细阅读：这将有助于使用本机。按“下一步”继续。


## 测试水硬度

根据水硬度不同，机器使用一段时间后，显示屏上会显示除垢提醒。您还可以根据当地供水的实际水硬度对机器进行设置，从而降低除垢的频率。请按如下步骤操作：

1. 从包装中取出水硬度测试纸（D1）。按下“开始”。
2. 把试纸完全浸入一杯水中，持续片刻。
3. 从水中取出试纸，然后再轻轻地摇晃一下。大约一分钟后，根据水硬度的不同，试纸上会出现1、2、3或4个红色小方块。每个方块对应一个水硬度。按下“下一步”。

## 设置水硬度

4. 如下表所示，按下与先前测得的水硬度相对应的点位：

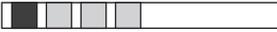水硬度测试纸（D1）	水硬度
绿色  红色 绿色 	1级
红色 绿色 	2级
红色 绿色 	3级
红色 	4级

5. 按下“确认”。新的水硬度设置完成。

此时，显示屏显示“技术上的问题已解决，我们先互相认识一下吧”，按下“开始”继续。

## 请注意：

您可以随时进入设置菜单更改水硬度设置（参见“9.14 水硬度”章节）。

## 用户资料

1. 设置将使用机器的人数（最多可设置4位用户）。按下“下一步”。
2. 如需个性化定制，选中用户资料后做出选择，然后按下“保存”。
3. 按下“下一步”：用户资料已确认。

## 教程

4. 按下“下一步”：机器已准备好播放一段简短的教程。
5. 按“开始”查看主页。
6. 此时，本机器会显示其主要功能。按“下一步”继续。

介绍完毕后，按下“开始”，即可使用本机器。

## 请注意：

- 首次使用本机时，需要制作4-5杯卡布奇诺后，才能制作出口感香醇的咖啡。

•第一次使用本机器时，水回路中无液体，机器在使用中噪音可能比较大。水回路满之后，声音会降低。


•机器在出厂前经过了测试，因此研磨器中留有残留的咖啡粉是正常的。我们确保本机是全新的。

## 7.开启机器

**请注意：**

•每次开启机器时，机器会自动完成一次预热和冲洗。此过程不能中断。此过程完成之前，不得使用本机器。

1. 如需开启机器，请按  图标 (B1) (如图9)：开启机器。

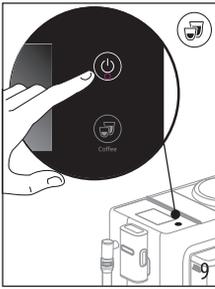

2. 达到所需温度后，机器执行冲洗循环，热水从咖啡流出口 (A13) 流出；机器同时会预热锅炉和机器内部回路。

**请注意：**

为避免非必要的开关启动或关闭，需持续按压  图标 (B1) 以开启或关闭机器。

## 8.关闭机器

咖啡机完成咖啡制作后，关闭前将执行自动冲洗循环。

1. 请按下  图标 (B1) 关闭机器 (如图9)。

2. 机器执行冲洗循环，热水从咖啡流出口 (A13) 流出，然后关闭 (待机)。

**请注意：**

如果您将在很长一段时间内不使用本机器，请关掉电源，然后从主电源插座拔下电源插头。

**重要提示！**

切勿在机器开启状态下拔掉插头。

## 9.设置菜单

### 9.1 冲洗

使用此功能，热水可以从咖啡流出口 (A13) 流出，以清洁和预热机器的内部回路。

在咖啡流出口和蒸汽杆下方放置一个最小容积为200毫升的容器 (如图8)。

如需启用该功能，请按如下步骤操作：

1. 按  (C5) 进入设置菜单；

2. 显示屏显示“冲洗”；

3. 按“是”开始；几秒钟后，热水制作完成，开始冲洗并加热机器的内部回路；

4. 如需停止冲洗，请按“停止”，或等待冲洗自动停止。

**请注意：**

•如果机器超过3天未使用，请清洗水箱，并在水箱中注入新鲜的饮用水。我们强烈建议您在制作饮品前，先冲洗2-3遍。

•冲洗后，咖啡盛渣盒 (A8) 有水是正常现象。

### 9.2 除垢

请参考“19. 除垢”章节的描述进行除垢。

### 9.3 软水过滤器

请参考“20. 软水过滤器”章节的描述安装软水过滤器。

## 9.4 连接

使用此功能启用或禁用连接。请按如下步骤操作：

1. 按  (C5)，进入设置菜单；
2. 滑动页面，直到显示“连接”；
3. 按“是”；
4. 启用Wi-Fi连接和远程控制功能，以用于连接德龙Coffee Link 小程序。当设备连接到机器时，会自动创建PIN码；
5. 按“下一步”查看机器的标识数据；
6. 按“返回”回到上一页；按“<”返回设置菜单；
7. 按“X”返回主页（C）。

在主页上，指示连接状态的标志（C4）与其他标志（如除垢等）交替出现。

主页上的标志	含义
	已启用连接：机器等待首次联网
	机器已连接
	该机器已连接到家庭Wi-Fi，但没有网络，或者无法连接到云
--	连接已禁用。如需启用连接，请进入设置菜单（C5）

本设备包含型号核准代码为：CMIIT ID：2018DP3125 的无线电发射模块。

### 请注意：

- 如果远程连接断开，小程序中的许多功能将不可用（例如：饮品制作）。
- 如果您更改了Wi-Fi网络的名称或密码，或连接到新的Wi-Fi网络，则需要按以下步骤重置连接：

1. 根据本节上述步骤第1-3点的说明操作；
2. 按“重置”；
3. 按“确认”重置网络设置；
4. 再次连接小程序并选择使用新凭据。

## 9.5 通用

1. 按  (C5)，进入设置菜单；
2. 滑动页面，直到显示“通用”；  
此处，您只需简单点击几下，就可以启用或禁用以下功能：

-提示音：启用时，每当执行操作时，咖啡机就会发出提示音。

-节能模式：使用此按钮启用或禁用节能模式。

启用节能模式后，机器将会按照欧洲标准，减少能源的消耗。如果主页显示  图标，则说明节能模式已启用。

3. 按“X”保存新选择并返回主页（C）。

## 9.6 自动关机

可以设置在15分钟、30分钟、1小时或3小时后，自动关闭机器。

如需启动该程序，请按如下步骤操作：

1. 按  (C5)，进入设置菜单；
2. 滑动页面，直到显示“自动关机”；
3. 选择所需的时间间隔（15分钟或30分钟或1小时或3小时）；
4. 按“X”保存新选择并返回主页（C）。


## 9.7 支持

微信扫码二维码，访问使用说明并获取相关支持。按“X”返回主页（C）。

## 9.8 研磨并清空

如需清空咖啡研磨器，请先将剩余咖啡豆研磨完毕：

1. 按  (C5)，进入设置菜单；
2. 滑动页面，直到显示“研磨并清空”；
3. 按“查看更多”；
4. 将豆仓 (A1) 逆时针旋转至  解锁图标位置 (如图10)，并让其保持在当前位置，直到操作完成；
5. 按下“开始”：机器开始研磨研磨器中的剩余咖啡豆；

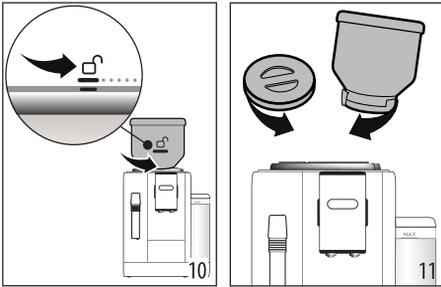

6. 研磨完成后，取下豆仓并安装另一个豆仓（参考“6. 首次使用”章节的描述），或盖上研磨器保护盖 (D5)（如图11）；
7. 机器返回主页 (C)。

## 9.9 咖啡温度

如需改变制作咖啡的温度，请按如下步骤操作：

1. 按  (C5) 进入设置菜单；
2. 滑动页面，直到显示“咖啡温度”；
3. 按“设置”；
4. 从建议的温度中选择所需的温度：低温、中温或高温；
5. 按“<”保存新选择并返回设置菜单；
6. 按“X”返回主页 (C)。

Bean Adapt Technology (咖啡豆适配技术)



我们建议您查看Coffee Link小程序中的咖啡豆适配技术，将咖啡温度调整为所用咖啡豆的适当设置。

## 9.10 数据统计

此功能可以显示机器相关数据。如需显示数据，请按如下步骤操作：

1. 按  (C5)，进入设置菜单；
  2. 滑动页面，直到显示“数据统计”和主要统计数据。如需查看更多信息，请按“查看更多”；
- 黑咖总计
  - 水量总计(升)
  - 除垢总计
  - 牛奶清洁总计
  - 软水过滤器总计
3. 按“<”返回设置菜单；
  4. 按“X”返回主页 (C)。

## 9.11 语言

如需更改主页语言，请按如下步骤操作：

1. 按  (C5)，进入设置菜单；
2. 滑动页面，直到显示“语言”；
3. 按“设置”；
4. 按下国旗图标，选择对应的语言。显示屏的语言将立即更新为所需语言；
5. 按“<”保存新选择并返回设置菜单；
6. 按“X”返回主页 (C)。

## 9.12 日期和时间

如需更改主页的日期和时间，请按如下步骤操作：

1. 按  (C5)，进入设置菜单；
2. 滑动页面，直到显示“日期和时间”；

3. 按“设置”；
4. 选择“设置时区”：滑动选择对应时区。完成后按“确认”；
5. 选择“设置日期和时间”：滑动选择对应日期和时间，或通过连接Wi-Fi启用同步功能；
6. 按“<”返回设置菜单；
7. 按“X”返回主页（C）。

### 9.13 研磨设置

本机器提供调节研磨度的操作教程，指导如何正确调节研磨度，从而获得优质咖啡出杯效果。

1. 按 （C5），进入设置菜单；
2. 滑动页面，直到显示“研磨设置”；
3. 按“查看更多”，查看有关如何调节研磨度的教程。按“下一步”或“返回”阅读相关提示；
4. 在最后一个页面上，按“确认”返回设置菜单；
5. 按“X”返回主页（C）。

#### 请注意：

- 执行上述程序后，我们建议至少制作3杯咖啡，然后再进行调整。如果咖啡制作仍不理想，则重复该步骤。
- 只有在开始制作咖啡且研磨器在运作的时候，才能转动研磨度选择盘（A2）。

Bean Adapt Technology（咖啡豆适配技术）



我们建议您查看Coffee Link小程序中的咖啡豆适配技术，将研磨参数调整为所用咖啡豆的适当设置。

### 9.14 水硬度

如需设置水硬度，请按如下步骤操作：

1. 按照“6. 首次使用”中的描述测试水硬度；


2. 按 （C5）进入设置菜单；
3. 滑动页面，直到显示“水硬度”。然后按“设置”；
4. 选择测试结果对应的级别；
5. 按“<”返回设置菜单；
6. 按“X”返回主页（C）。

### 9.15 清空水回路

如果机器长时间闲置，或在返回至客户服务中心之前，为了避免回路中的水结冰，我们建议清空回路中的水。

请按如下步骤操作：

1. 按 （C5）进入设置菜单；
2. 滑动页面，直到显示“清空水回路”；
3. 按“是”后根据引导操作；
4. 取出并清空咖啡盛渣盒（A8）和滴水盘（A12）（如图12），将其安装回机器，然后按“下一步”；

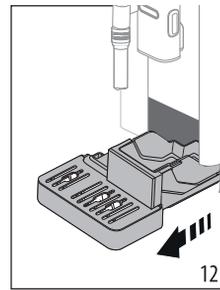

5. 将一个0.2升的容器放置在蒸汽杆下方（如图8）。按下“下一步”；
6. 机器使用从咖啡流出口（A13）流出的热水执行一次冲洗循环；
7. 冲洗结束，取出水箱（A7）（如图2），并将其清空；
8. 如果有软水过滤器，则从水箱中取出软水过滤器并按“下一步”；

9. 将水箱放回机器，按“是”；
10. 确认您已准备就绪，然后按“是”；
11. 等待机器排空回路；（重要：热水从流出口流出！）。当水回路清空时，机器噪音可能会更大。这属于正常现象；
12. 当回路为空时，取出并清空滴水盘，放回机器中，按“下一步”；
13. 按“确认”。机器关机（进入待机状态）；
14. 拔掉本机插头。

下次开机时，请按照“6. 首次使用”章节中的说明进行操作。

### 9.16 默认值

选择该程序，将所有菜单设置和用户自定义设置重置回默认值（除预先设置的语言和数据统计外）。

请按如下步骤操作：

1. 按  (C5) 进入设置菜单；
2. 滑动页面，直到显示“默认值”；
3. 按“查看更多”；
4. 选择所需重置默认值的范围：“机器”或“单个用户”，然后按“下一步”；
5. 然后按“确认”将所选范围重置回默认值；
6. 按“X”返回主页 (C)。

#### 请注意：

当机器（而非个人用户资料）已重置为默认值时，机器会再次弹出使用教程。按下“开始”图标，需根据显示屏指引进行设置或观看操作，该进程无法快进或跳过。

## 10. 饮品选择

当Coffee咖啡饮品选择菜单（B2）亮起时，您可以使用本机制作各式饮品。


	热饮	冷饮
意式浓缩咖啡	✓	✓
2×意式浓缩咖啡	✓	✗
淡咖啡	✓	✗
咖啡	✓	✓
长萃咖啡	✓	✗
美式咖啡	✓	✓
热水	✓	—

请从显示屏中找到您想要制作的饮品。

## 11. 制作咖啡

#### 请注意：

每次制作完饮品后会有蒸汽冒出（如图13）。这属于正常现象。

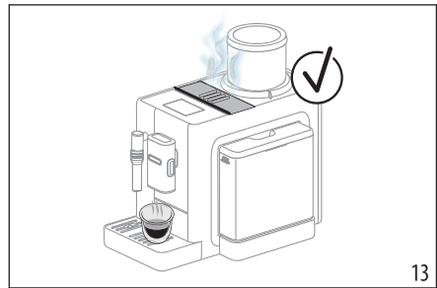


### 11.1 准备制作咖啡

#### 重要提示！

请勿使用咖啡生豆、已焦糖化的或有糖渍的咖啡豆，因为可能会粘住咖啡研磨器，使其无法使用。

1. 在咖啡流出口（A13）下放置1或2个杯子；
2. 调低咖啡流出口使其尽量靠近咖啡杯（如图14），这样制作出的咖啡油脂更丰富。

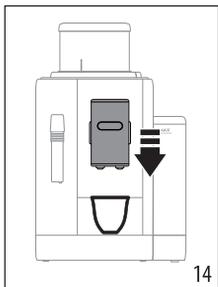

## 11.2 直接可选饮品

1. 在主页 (C) 上选择您要制作的饮品 (C7) (如: 意式浓缩咖啡, 如图15) 对应的图案;



2. **热咖啡:** 机器直接开始制作。

### 冷咖啡:

- 选择“冰”或“超冰”，按“下一步”；
- 根据上一步的选择，在制作前，机器显示屏会提示建议使用的冰块数量。在杯中加入指定数量的冰块（约15克/块）（如图16），然后按“制作”。



- 机器开始制作咖啡。

每个阶段（如研磨咖啡豆，制作咖啡）的描述也会显示在显示屏上。

制作完毕后，机器可以紧接着制作下一杯饮品。

## 11.3 定制饮品

如需定制咖啡的制作参数，请按如下步骤操作：

1. 按下与您要制作的咖啡（例如意式浓缩咖啡，如图17）对应的图案底部的定制设置 (C6)。
- 根据您的口味定制的参数将显示在显示屏上：



杯量	
浓度	

2. **热咖啡:** 设置好参数后，按“制作”。机器开始制作饮品，每个阶段（如研磨咖啡豆，制作咖啡）的描述也会显示在显示屏上；

**冷咖啡:** 设置杯量，然后按“开始”。（注：冷咖啡无法选择浓度）

请按如下步骤操作：

- 选择“冰”或“超冰”，按“下一步”；
- 根据上一步的选择，在制作前，机器显示屏会提示建议使用的冰块数量。在杯中加入指定数量的冰块（如图16），然后按“制作”。

• 机器开始制作饮品，每个阶段（如研磨咖啡豆，制作咖啡）的描述也会显示在显示屏上。

3. 制作结束后，按“保存”保存新设置，或按“取消”，仍保留以前的参数设置。您也可以选择“仅为当前时间段保存设置”。

#### 请注意：

如果您保存新设置，新设置将仅存储在所选用户资料中。

该咖啡机已准备好再次使用。

### 11.4 使用咖啡粉制作咖啡

#### 重要提示！

• 请勿在机器关闭的状态下加入咖啡粉，这会导致咖啡粉散落在机器内部弄脏机器。甚至损坏机器。

• 切勿加入超过1量勺（D2）的咖啡粉，否则会弄脏机器内部或堵塞咖啡粉进料管（A18）。

如果您使用咖啡粉制作咖啡，一次只能制作一杯。

• 制作长萃咖啡：制作进行到一半时，机器将提示“请再次添加咖啡粉，最多一匙份量”，然后按“确认”。


• 使用咖啡粉无法制作出2×意式浓缩咖啡。

1. 按下与您要制作的饮品（例如意式浓缩咖啡，如图17）对应的图案底部的定制设置（C6）。

2. 选择 （咖啡粉）。

3. 选择杯量，然后按“制作”。

4. 打开配件收纳盒盖（A19），确认进料管（A18）无堵塞，然后加入一量勺（D2）咖啡粉（如图18）。按“确认”，开始制作饮品。

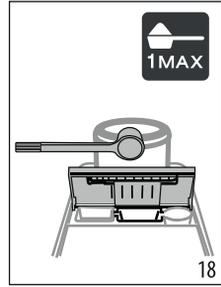

5. 机器开始制作饮品，每个阶段的描述会显示在显示屏上。

制作完毕后，机器可以紧接着制作下一杯饮品。

### 11.5 多一份浓缩

您可以为以下饮品多制作一份意式浓缩咖啡：

	热饮
意式浓缩咖啡	✓
淡咖啡	✓
长萃咖啡	✓
咖啡	✓
美式咖啡	✓

请按如下步骤操作：

1. 按下与您要制作的饮品（例如意式浓缩咖啡，如图17）对应的图案底部的定制设置（C6）。

2. 按“多一份浓缩”。

3. 选择所需杯量和浓度。按“制作”。

4. 根据指引，按“确认”继续操作。

5. 机器开始制作饮品，每个阶段（如研磨咖啡豆，制作咖啡）描述也会显示在显示屏上。

6. 制作结束后，按“保存”保存新设置，或按“取消”保留以前的参数设置。您也可以选择“仅为当前时间段保存设置”。

### 请注意：

如果您保存新设置，新设置将仅存储在所选用户资料中。  
该咖啡机已准备好再次使用。

### 11.6 制作咖啡饮品的一般指示

- 当机器在制作咖啡时，按下“停止”或“取消”可随时中断制作过程。
- 一旦制作结束，要增加咖啡的杯量，只需按“更多”。当达到所需杯量时，按“停止”或“取消”。
- 在使用本机器时，可能会显示各种警示信息（“水箱中加入清水至MAX位置”等）。关于其含义，请参考“21. 显示信息”章节的描述。
- 如果咖啡一滴一滴地流出、味道过淡、油脂不够丰富或温度过低，请参考“9.13 研磨设置”的教程和“22. 故障处理”章节中的信息来尝试解决问题。
- 如果启用了“节能模式”，在制作第一杯咖啡前您可能需要等待片刻。

### 11.7 制作更热咖啡的小贴士

如需制作更热的咖啡，请按如下步骤操作：

- 在制作热饮之前进行一次热冲洗循环（参考“9.1 冲洗”章节的描述）；
- 使用热水功能进行暖杯（参考“14.4 制作热水”章节的描述）；
- 调高咖啡温度（参考“9.9 咖啡温度”章节的描述）。

## 12. 咖啡豆适配技术

仅需几步，即可帮助您优化咖啡制作过程，以及制作出咖啡的口感。

咖啡豆适配技术可根据您所使用的咖啡豆推荐调节机器的参数——从研磨度到制作过程，每

一阶段都会进行参数推荐，以充分释放咖啡豆精华。

微信扫码Coffee Link小程序，了解更多信息。

## 13. 咖啡日程

如果您启用了“咖啡日程”功能，机器将保存您在每天的不同时间段制作咖啡的特定设置。

1. 按下显示屏主页上的咖啡日程图标（C2）；
  2. 激活页面上咖啡日程的开关以启用此功能。
- 使用Coffee Link小程序，即可定制您工作日和休息日的咖啡日程。

## 14. 蒸汽功能

### 14.1 用牛奶或植物类饮品制作奶泡

奶泡的质量取决于：

- 牛奶或植物奶的温度（为了达到优质奶泡效果，请始终使用冰箱冷藏温度（约5℃）的牛奶或植物奶饮品）；
- 牛奶或植物奶的种类；
- 所使用的牛奶或植物奶品牌；
- 成分和营养价值。

牛奶	
全脂奶 (脂肪含量>3.5%)	✓
半脱脂 (脂肪含量1.5%-1.8%)	
脱脂奶 (脂肪含量<0.5%)	
植物奶	
豆奶	✓
杏仁奶	✓
燕麦奶	✓



## 请注意：

为了避免奶泡稀少或奶泡过大的情况，请注意清洁蒸汽杆（A14）。参考“14.3 每次使用后清洗蒸汽杆”章节进行清洁。

1. 准备一个容器，建议带把手以避免高温烫伤（如图19），倒入适量牛奶或植物奶。选择容器时，请注意牛奶的体积会增加到原来的2-3倍；



2. 按下  Steam蒸汽图标（B3）；
3. 将蒸汽杆档位选择环（A15）向下置于“FOAM”（热奶泡）位置（如图20）：按下“确认”；

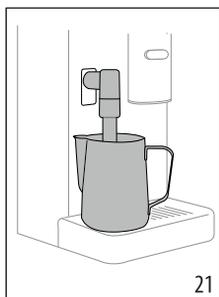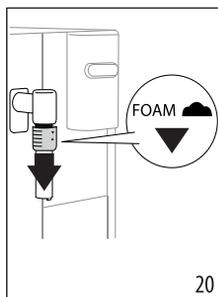

4. 把盛牛奶的容器放在蒸汽杆下并让发泡器（A16）浸没在牛奶或植物类饮品液面下方适当位置（图21）。请勿让选择环也浸在牛奶里；
5. 按下“开始”：几秒后，蒸汽杆开始释放蒸汽，使牛奶变得绵密，同时牛奶的体积增加；

6. 如需更多更为绵密的奶泡，缓慢转动容器，从底部向上移动；


7. 当达到所需奶泡程度时，按下“停止”以结束释放蒸汽。

## 烫伤危险！

**必须先停止释放蒸汽，再拿开牛奶容器，以避免高温牛奶溅出造成烫伤。**

## 14.2 制作热牛奶（无奶泡）

要制作无奶泡的热牛奶，请按照上节内容进行操作，但需将蒸汽杆档位选择环（A15）向上调至“FLAT”（热牛奶）位置（如图22）。

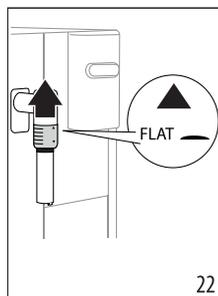

## 14.3 每次使用后清洁蒸汽杆

每次使用蒸汽杆（A14）之后都务必清洁干净，以避免牛奶残渣堆积或堵塞：

1. 制作饮品结束后，机器会建议冲洗蒸汽杆；
2. 若您想继续，在蒸汽杆底下放置一个杯子或容器然后按下“冲洗”。（若想稍后进行此操作，按下“稍后”：蒸汽杆冲洗指示图标（C4）会亮起）；
3. 开始冲洗：几秒钟后，蒸汽会自动停止，表明冲洗已经完成；
4. 按下“X”回到主页。

### 请注意：

您可随时冲洗蒸汽杆，请按照以下步骤操作：

1. 按下  Steam蒸汽图标 (B3) ；
2. 按下显示在蒸汽图片下方的  图标；
3. 在蒸汽杆底下放置一个杯子或容器，然后按下“冲洗”。

### 14.4 制作热水

1. 按下  Steam蒸汽图标 (B3) ；
2. 在蒸汽杆下方放置一个杯子；

### 直接选择：

3. 按下主页 (C) 上与热水对应的图标。此时屏幕显示“在蒸汽杆下方放置一个杯子”，按下“确认”。机器开始制作并自动停止。

### 定制杯量：

4. 按下热水对应的图标下方的定制设置 (C6) ；
5. 选择所需杯量，然后按下“制作”；此时屏幕显示“在蒸汽杆下方放置一个杯子”，按下“确认”。机器开始制作并自动停止。

### 请注意：

- 如需停止制作，按下“停止”或“取消”。
- 制作结束时，如需更多热水，即刻按下“更多”。当达到所需杯量，按下“停止”或“取消”。

## 15.制作“随行杯”饮品

本型号不配备随行杯配件，需自行购买。

随行杯适合想要外带定制饮品的用户。

您可以使用机器制作多种“随行杯”饮品。

	热饮	冷饮
咖啡	✗	✓
美式	✓	✓

请按如下步骤操作：

1. 按下与您要制作的咖啡对应的图案底部的定制设置 (C6) ；
2. 按下  图标：您已进入“随行杯”功能；
3. 按“下一步”，然后按“确认”；
4. 按下  ，可查看与随行杯尺寸相关的信息；
5. 按下  ，可调节饮品杯量：按“保存”；
6. 新的随行杯饮品杯量将被保存，下次将自动设置。按“X”；
7. 按“制作”：机器照常准备饮品。

### 请注意：

- 使用不同于以往的随行杯制作饮品时，我们建议您留在机器附近，检查制作的饮品杯量。
- 如果您保存新设置，新设置将仅存储在所选用户资料中。
- 为了保持热饮的温度，可以使用热水预热随行杯。
- 选择随行杯时，确保杯子高度不要超过14厘米。

### 重要提示

- 饮品宜在2小时内饮用完毕。

## 16. 更换咖啡豆仓



更换豆仓（D4），以享用不同种类的咖啡豆。

请按如下步骤操作：

1. 将豆仓逆时针旋转至  解锁图标位置（如图10），并让其保持在当前位置，直到操作完成；

2. 显示屏显示“切换模式”：选择一个选项并按照以下步骤操作：

**选择饮品（使用剩余咖啡豆制作您喜欢的饮品）：**

3. 选择“选择饮品”：按下“开始”，显示屏会显示您可以制作的饮品（自动选择浓度，不可更改）；

4. 遵循指引制作饮品；

**研磨并清空（执行一次研磨循环，清除剩余咖啡豆）：**

5. 选择“研磨并清空”：此时，屏幕显示“请让豆仓保持在当前位置，直到完成研磨”，按下“开始”：机器会开始研磨研磨器中的剩余咖啡豆；

6. 等到机器自动研磨停止；

**现在可以安装新的豆仓了。**

7. 拆下豆仓；

8. 安装新的咖啡豆仓，并顺时针旋转以锁定。为确保正确操作，请将  解锁图标与环上的“—”标记对齐（如图6），插入后将其旋转至  锁定图标位置（如图7）。

**请注意：**

如果您在不清空研磨器的情况下直接更换豆仓，用于制作咖啡的新豆中将会混有部分上次制作残余的咖啡豆。

**注意：**

• 机器的豆仓外壳上散落咖啡粉是正常现象。

• 如果无法顺利安装新豆仓，请确保机器上的豆仓外壳上没有残留咖啡豆。在此情况下，请使用清洁刷（D2）和一块柔软的湿布清洁机器上的豆仓外壳。如需清除咖啡粉，请使用手持式真空吸尘器。

## 17. 定制饮品功能（仅限热饮）

使用  定制饮品功能，您可按以下方式操作：

1. 请确认希望定制饮品的用户（B4）已启用；
2. 按下您所需定制饮品图标下方的定制设置（C6）（如图17）；
3. 按下  ；
4. 按下“开始”，根据引导程序进行制作。
5. 选择想要的浓度，并按“下一步”；
6. 按下“制作”开始制作饮品；
7. 当杯中的饮品达到所需杯量时，请按下“停止”。
8. 如果您认为杯量恰到好处，请按下“保存”保存当前设置，或按下“取消”保留以往参数；
9. 按“X”返回主页。

**请注意：**

- 如果您保存新设置，新设置将仅存储在所选用户资料中。
- 当您定制单杯饮品时，2×意式浓缩咖啡无法单独定制杯量。
- 按下“取消”可随时退出设置。浓度和杯量值将不会被保存。
- 定制好饮品后，设置页面会出现“重置”和  功能开启选项（“制作”按钮旁边）。按下“重置”重置饮品默认值。按下“my”（我的）切换回默认设置。

饮品杯量表		
饮品	标准杯量	可设定杯量
意式浓缩咖啡	40毫升	20-180毫升
2× 意式浓缩咖啡	40毫升+40毫升	20-180毫升+ 20-180毫升
淡咖啡	120毫升	60-180毫升
咖啡	180毫升	100-270毫升
长萃咖啡	160毫升	115-250毫升
美式咖啡	150毫升	70-480毫升
热水	250毫升	20-420毫升

可机洗 (温度不高于50℃)	仅手洗
	
滴水盘 (A12)	豆仓 (A1)
咖啡盛渣盒 (A8)	咖啡盛渣盒支架 (A9)
咖啡粉进料管 (A18)	咖啡杯托盘 (A10)
滴水盘网格盖板 (A11)	水箱 (A7)
蒸汽杆 (A15、A16、A17)	可拆卸萃取器 (A3)

## 18. 清洁

### 18.1 清洁机器

以下咖啡机部件必须定时清洁：

- 咖啡机内部回路；
- 豆仓 (A1)；
- 咖啡盛渣盒 (A8)；
- 滴水盘 (A12) 和滴水盘网格盖板 (A11)；
- 水箱 (A7) 和水箱盖 (A6)；
- 咖啡流出口 (A13)；
- 咖啡粉进料管 (A18)；
- 萃取器 (A3)，可在打开萃取器盖 (A4) 后取出；
- 蒸汽杆 (A14)。

#### 重要提示！

- 切勿使用化学溶剂、有腐蚀性的清洁剂或酒精清洗咖啡机。德龙全自动咖啡机无需使用任何化学物质进行清洁。
- 切勿使用金属物体除水垢或咖啡沉淀物，以免擦伤金属或塑料表面。

### 18.2 清洁机器内部回路

如果超过3天未使用本机器，在再次使用之前，我们强烈建议您清空水箱并在水箱中注满新鲜饮用水，开机后选择冲洗功能进行2-3次冲洗循环（参见“9.1 冲洗”章节的描述）。

#### 请注意：


冲洗后，咖啡盛渣盒 (A8) 有水是正常现象。

### 18.3 清洁咖啡豆仓

定期清洁豆仓 (A1)。请按如下步骤操作：

1. 将豆仓逆时针旋转至  解锁图标位置（如图10），并让其保持在当前位置，直到操作完成：进入“切换模式”。
2. 选择一个选项并按特定步骤操作。
3. 然后拆下豆仓。
4. 打开豆仓盖。如果豆仓未清空，请将咖啡豆储存在其他容器中。
5. 将一块柔软的湿布放入豆仓，清洁内外部所有可见残留物。
6. 使用清洁刷 (D2) 和一块柔软的湿布清洁机器上的豆仓外壳。如需清除咖啡粉，请使用手持式真空吸尘器。
7. 用一块干净的干布或纸巾擦干豆仓及其盖子，并检查豆仓是否彻底干燥。

8. 在豆仓中装入咖啡豆，盖上盖子。安装咖啡豆仓，并顺时针旋转以锁定。为确保正确操作，请将  解锁图标与环上的“—”标记对齐（如图6），插入后将其旋转至  锁定图标位置（如图7）。

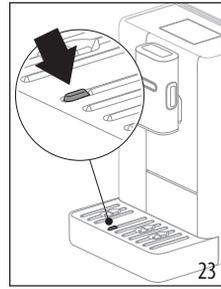

#### 18.4 清洁咖啡盛渣盒

当显示屏显示“清空咖啡盛渣盒”时，必须清空咖啡盛渣盒并进行清洗。在清空咖啡盛渣盒（A8）期间，机器不能制作咖啡。当第一杯咖啡制作完72小时后，清空咖啡盛渣盒指示信号会出现在显示屏上，即使此时咖啡盛渣盒未满。为了正确计算72小时，请勿关闭主电源开关。

##### 重要提示！小心烫伤

在您连续制作了几杯含牛奶的饮品之后，金属的咖啡杯托盘（A10）会变烫。等其冷却后方可触碰，且只能接触前端位置。

清洁咖啡盛渣盒（开机状态下）：

1. 取出滴水盘（A12）和咖啡盛渣盒（A8）（如图14）。
2. 清空滴水盘和咖啡盛渣盒，并将其彻底清洗，以去除残留在底部的咖啡残渣。
3. 将带网格盖板（A11）的滴水盘和咖啡盛渣盒放回机器中。

##### 重要提示！

取出滴水盘后，即使只有一点点咖啡渣也必须清空咖啡盛渣盒。如果未清理，您之后制作咖啡的时候，咖啡残渣可能会漫过盛渣盒，阻塞机器。

#### 18.5 清洁滴水盘和滴水盘网格盖板

##### 重要提示！

滴水盘（A12）配有一个红色的水位指示浮标（红色），显示其中的水量（如图23）。

该水位指示浮标从咖啡杯托盘（A10）中浮出来前，必须清空滴水盘并清洗，否则水会从滴水盘的边缘溢出来，损坏机器和弄脏放置机器的桌面及其四周。如需拆卸滴水盘，请按如下步骤操作：

1. 拆下滴水盘及所有部件；
2. 拆下并清空滴水盘和咖啡盛渣盒（A8）；
3. 拆下咖啡杯托盘（A10）和网格盖板（A11），并清洗所有部件；
4. 将滴水盘与所有部件组装在一起。

##### 重要提示！


取出滴水盘后，即使只有一点点咖啡渣也必须清空咖啡盛渣盒。如果未清理，您之后制作咖啡的时候，咖啡残渣可能会漫过盛渣盒，阻塞机器。

#### 18.6 清洁咖啡机内部

##### 触电危险！

清洁内部零件之前，请关闭机器（参考“8. 关闭机器”章节），并拔下电源插头。切勿将机器浸入水中。

1. 定期检查（大约一月一次）机器的内部部件是否很脏（取出滴水盘（A12）后可接触部分）。
2. 用吸尘器来清除咖啡残留物（如图24）。

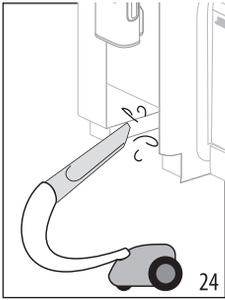

### 18.7 清洗水箱

定期（大约一月一次）清洁水箱（A7），并更换软水过滤器。



1. 取出水箱，取下软水过滤器（如配备）并用流水进行冲洗；
2. 清空水箱，必要时使用热水和干净的无磨损性的布进行清洁。用水彻底冲洗；
3. 将软水过滤器放回机器中，往水箱中注入清水至MAX（最高位置），然后将水箱放回；
4. （仅配备软水过滤器的型号）释放100毫升热水以重启软水过滤器。

#### 请注意：

如果机器超过3天未使用，请按照如上步骤清洗水箱。

### 18.8 清洁咖啡流出口

1. 用海绵或布定期地清洁咖啡流出口（A13）（如图25）；
2. 检查咖啡流出口上面的小洞是否阻塞，如有必要，请用牙签进行清洁（如图26）。

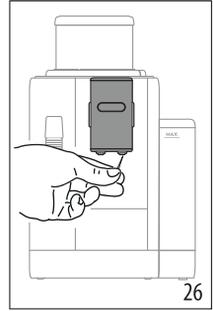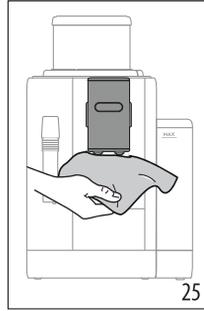

### 18.9 清洁咖啡粉进料管

定期（大约一月一次）用湿布清洁咖啡粉进料管（A18）。请按如下步骤操作：

1. 关闭机器（参考“8. 关闭机器”章节的描述）；
2. 打开配件收纳盒盖（A19）；
3. 取出咖啡勺/清洁刷（D2）；
4. 移除可拆卸进料管；
5. 使用随附清洁刷清洁进料管；
6. 将进料管重新插入其壳体；
7. 盖上盖子。

#### 重要提示！

清洁后，确保进料管中没有任何残留异物。在机器运行过程中，如果进料管中存在异物，可能会损坏本机。



### 18.10 清洁萃取器

至少一个月清洗一次萃取器（A3）。

#### 重要提示！

在机器开启的状态下，切勿取出萃取器。

1. 确保机器已正确关闭（参考“8. 关闭机器”章节的描述）；
2. 拆下水箱（A7）；
3. 打开机器右边的萃取器盖（A4）（如图27）；

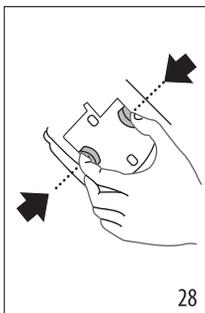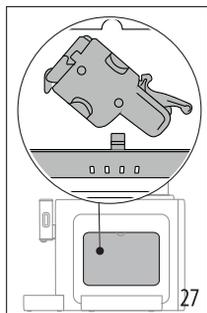

4. 往里按住两个带颜色的按钮，同时将萃取器往外拔（如图28）；
5. 将萃取器放在水中浸泡5分钟，然后用自来水冲洗；

#### 重要提示!


只能用水冲洗。

请勿使用清洁剂和洗碗机清洗。

6. 请勿使用清洁剂清洗萃取器，因为这样会损坏萃取器；
7. 通过萃取器盖可以将看得见的咖啡残渣用清洁刷（D2）进行清洁；
8. 清洁完毕后，将萃取器推入内部支架，然后按住“PUSH（按压）”标志直至其安装回原位；

#### 请注意:

如果萃取器很难安装回原位，则可按压两个操作杆使它适应正确的尺寸（如图29）。


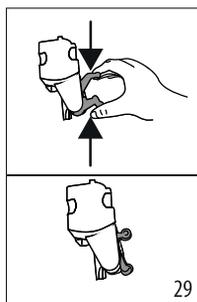


9. 将萃取器安装回原位，请确保两个带颜色的按钮都已弹出；
10. 关闭萃取器盖；
11. 把水箱重新装上。


#### 18.11 彻底清洁蒸汽杆

机器每周都会提醒您彻底清理蒸汽杆（A14），并提供正确的清洁步骤：


1. 等待蒸汽杆完全冷却；
2. 逆时针选择蒸汽杆并向下拉；

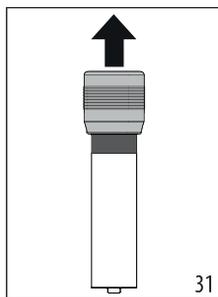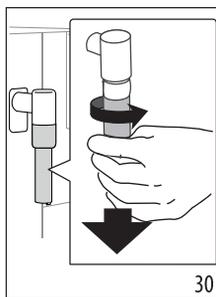

3. 向上取下蒸汽杆档位选择环（A15）（如图31）；
4. 向下移除蒸汽喷嘴（A17）（如图32）；

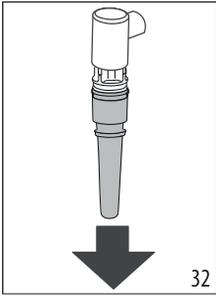

32

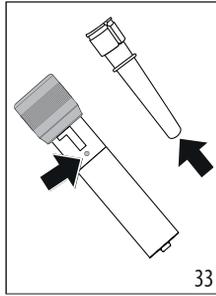

33

5. 按下文指示用洗碗机清洗（推荐）或手洗：

• **洗碗机清洁：**用流动热水（至少40℃）冲洗所有部件，然后将其放置于洗碗机最上层的篮筐中（温度不高于50℃）。

• **手洗：**用热饮用水（至少40℃）彻底冲洗所有部件，以清除所有可见的牛奶残渣；请将水从图33所示的孔注入。然后将所有部件用热水（至少40℃）和洗涤剂浸泡至少30分钟。再用热饮用水彻底冲洗以上所有部件，并用手逐个擦拭清洁。

6. 确保小孔中没有牛奶残留物堵塞，如有必要，请用牙签进行清洁沟槽；

7. 用干净的布擦干所有部件；

8. 重新组装好蒸汽杆。

#### 请注意：

机器每周会提醒您彻底清洁蒸汽杆，并再次提示正确的清洁步骤。

## 19. 除垢

### 重要提示！

- 除垢前，请阅读说明书和除垢液包装上的标签。
- 仅可使用德龙除垢液进行除垢。如使用不合适的除垢液和/或未按正确的除垢步骤进行除垢，引起的机器故障，不属于制造商保修范围。

• 除垢液可能会损伤其脆弱表面。如果除垢液意外溅出，请立即擦干。

除垢	
除垢液	德龙除垢液
容器	建议容量：1.5升
时间	约30分钟


当主页上出现相应信息时，应对机器进行除垢。

如需立即除垢，请按“确认”并按照显示屏上的步骤说明进行操作。

如想稍后进行除垢，请按“取消”。主页（B）上出现  标志（C4），即提示您本咖啡机需进行除垢。（每次开机后都会显示）

进入除垢菜单：

1. 按主页上的设置菜单标志（C5）；
2. 滑动菜单项，直到显示“除垢”；
3. 按“开始”进入除垢程序指引；
4. 按“是”开始除垢；
5. 取出滴水盘（A12）和咖啡盛渣盒（A8）（如图12），并将其清空，然后放回机器中并按下“下一步”；
6. 拆下水箱（A7），取下水箱盖（A6）并拆下软水过滤器（如已装入）；彻底清空水箱；
7. 将除垢剂（每一袋约为100毫升）倒入水箱中，直至箱内标记的  A 位置，然后加水（约1升）至  B 位置（如图34）。将水箱（带盖）放回机器，然后按“开始”；（可按“返回”返回前页屏幕或按“X”退出程序）切记要清空水箱中的除垢剂）；

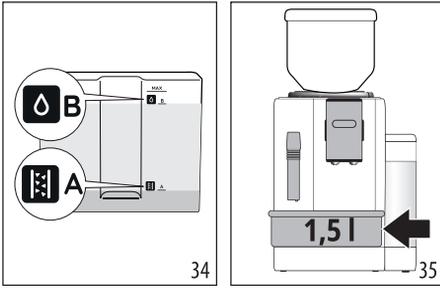

8. 将一个1.5升的容器放置在流出口下方（如图35）。按“完成”：开始除垢；


**重要提示！小心烫伤**

酸性的热水会从喷嘴流出。请小心注意避免接触飞溅的热水。

9. 除垢程序开始进行且含有除垢液的液体从热水或咖啡流出口流出。除垢程序自动进行一系列的冲洗和停顿以确保将机器内部的残垢完全去除；

大约20分钟后：

10. 当显示屏显示“冲洗水箱并加水至MAX位置后，把水箱装回机器”，将其清空，用流水冲洗后注入清水至MAX（最高位置），再安装回机器（如图36）。按下“下一步”；

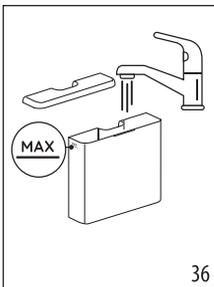

11. 将用来盛接除垢剂的容器清空后放在流出口下方，按“是”开始冲洗；

12. 此时，显示屏显示“正在冲洗，请注意热水从流出口流出”；

13. 当水箱中的水使用完毕后，显示屏显示“请在水箱中注入清水并装回机器”，热水将从蒸汽杆或咖啡流出口流出；

14. 取出水箱，如先前已把软水过滤器取出，则将其放回原处；

15. 将水箱注满，至MAX线，然后将水箱放回机器，按“下一步”继续；

16. 屏幕显示“如图所示，请放置1.5升容器。是否确认继续？”。将用来盛接除垢剂的容器清空后放在喷嘴下方，按“是”再次进行冲洗，或按“返回”回到上一步；

17. 显示屏显示“正在冲洗，请注意热水从流出口流出”，当水箱中的水使用完毕后，显示屏显示“请清空并重新安装好咖啡盛渣盒和滴水盘”，清空装有冲洗后液体的容器，然后取出并清空滴水盘（A12）和咖啡盛渣盒（A8），再放回机器中。按下“下一步”；

18. 除垢完成。按“确认”；

19. 显示屏显示“请在水箱中注入清水并装回机器”，取出水箱，将水箱注满至MAX线，然后放回机器；

20. 机器会快速进行一次预热，然后返回主页。

**请注意：**

- 如果整个除垢过程未正确完成（例如：中途断电），机器将在下次开机时要求完成除垢。
- 除垢后，咖啡盛渣盒（A8）有水是正常现象。
- 如果除垢后水箱中的水没有加到MAX线，在两次冲洗后，机器会提示需要进行第三次冲洗以确保机器内部回路中没有除垢液残留。开始冲洗前，请记得先清空滴水盘。


**20.软水过滤器**

本机配件不含软水过滤器，我们建议您从德乐售后服务中心购买。

如需正确地使用软水过滤器，请按如下步骤操作：

## 21.1 安装软水过滤器


1. 按下设置菜单 (C5) ;
2. 滑动页面, 选择“软水过滤器”;
3. 按“是”进入安装程序指引;
4. 取出软水过滤器, 转动日期指示盘到当前月份的后两个月 (如图37) ;

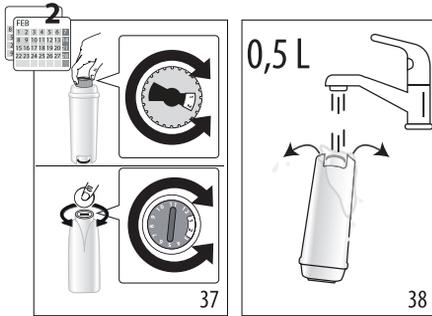

### 请注意:

在机器正常使用的情况下, 软水过滤器可以使用两个月。如果机器在安装软水过滤器的情况下不使用, 那么软水过滤器最多只能使用三周。

5. 按“下一步”继续;
6. 如需启用软水过滤器, 请将饮用水从过滤器中间的小孔注入, 直到水从这个孔的边缘溢出来超过一分钟 (如图38)。按下“下一步”; (可按“返回”返回前页屏幕或按“X”退出操作)
7. 取出水箱 (A7) (如图2), 将其注满水; 将软水过滤器插入水箱, 完全浸没在水中, 按压过滤器中部2-3次, 使里面的空气排出 (如图39)。按下“下一步”;

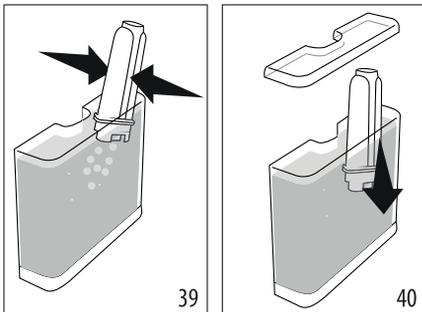

8. 将软水过滤器安装至其底座, 并尽可能向下按紧 (如图40)。盖上水箱盖 (A6), 按“下一步”;

9. 显示屏显示“请安装水箱”, 装回水箱, 按“是”继续; 此时屏幕显示“在流出口下方放置0.5升容器。是否已准备好安装软水过滤器?”, 将一个最小容量为0.5升的空容器放置在热水流出口下方 (如图8), 并按下“是”启动软水过滤器;

10. 机器释放热水, 然后自动停止。此时显示“软水过滤器”已安装, 按“确认”返回主页;

11. 新的软水过滤器已启用, 您可以正常使用咖啡机。

## 21.2 更换或移除软水过滤器

当主页 (C) 上出现更换软水过滤器的消息时, 请更换软水过滤器。如需立即更换软水过滤器, 请按“确认”, 并按照上一节第3点的指示操作。如需稍后更换软水过滤器, 请按“取消”。显示屏显示软水过滤器标志, 即提示您需要更换软水过滤器。

如需更换软水过滤器, 请按如下步骤操作:

1. 按下设置菜单 (C5) ;
2. 滑动页面, 直到显示“软水过滤器”, 按“查看更多”;
3. 屏幕显示“准备好移除或更换软水过滤器了吗?”, 按“是”进入更换程序指引;
4. 显示屏显示“现在可继续拆除”, 取出水箱 (A7) 和已使用过的软水过滤器;
5. 如需取出软水过滤器, 请按“确认” (可按“返回”回到前页屏幕或按“X”退出操作);
6. 如需更换软水过滤器, 请按“是”并按照上一小节第4-11步骤所述进行操作。

**请注意：**  
两个月后（参考日期指示盘），或是连续三周

未使用本机器后，即使显示屏没有提示更换软水过滤器的信息，您也应该更换软水过滤器。

## 21. 显示信息

显示信息	含义	解决方法
请在水箱中注入清水并装回机器	水箱（A7）缺水。	取出水箱，往水箱注入清水至MAX（最高位置）线，然后将水箱放回机器。
请安装水箱	水箱（A7）未安装或安装不正确。	正确安装水箱，应该尽可能地将水箱往里推。
在水箱中注入清水，清空滴水盘和咖啡盛渣盒	水箱中的水量不足，无法制作饮品，即刻会显示清空咖啡盛渣盒的信息。	机器请求同时执行这两项操作，以便减少必要操作，且可连续制作多杯饮品。
请安装萃取器	萃取器（A3）清洗后未安装。	按照“18.10 清洁萃取器”章节的描述安装萃取器。
请清空咖啡盛渣盒	咖啡盛渣盒（A8）已满。	按照“18.4 清洁咖啡盛渣盒”章节的描述清洁咖啡盛渣盒。
请安装咖啡盛渣盒和滴水盘	咖啡盛渣盒（A8）和/或滴水盘（A12）安装不正确或未安装。	安装滴水盘和咖啡盛渣盒，并尽可能将其往里推。
请加入所需量的咖啡粉，最多一匙份量	选择了使用咖啡粉制作咖啡。	确保咖啡粉进料管（A18）没有被堵塞，然后加入一量勺（D2）咖啡粉，按显示屏上的“下一步”，并按照“11.4使用咖啡粉制作咖啡”章节的描述操作。
请在咖啡豆仓中加入咖啡豆，按下“确认”继续制作	咖啡豆已用尽。	装满咖啡豆仓（A1），按“确认”继续制作。
清洁中，请稍候	咖啡机内部回路有杂质。	等待机器重新准备就绪，重新选择所需的饮品。如果问题仍然存在，请联系售后服务中心。

显息	含义	解决方法
新设置未保存	在定制饮品时（参考“17.  定制饮品功能（仅限热饮）”章节的描述），可按“X”中断制作过程或触发警报。	按“X”回到主页（C），查看引起中断的警报。按照显示的警报对应指示操作（参考“21. 显示信息”章节的描述）。
抱歉，我无法制作饮品。 请降低口味浓度再试	咖啡豆研磨得太细，导致咖啡流出速度很慢或根本不出咖啡。	选择更低的口味浓度（参考“11.3 定制饮品”章节的描述）。
	如果安装了软水过滤器，机器的内部回路可能有气泡，阻碍了咖啡制作。	按“确认”，释放一些热水（参考“14.4 制作热水”章节的描述），直到水流正常流出。如果问题仍然存在，请移除软水过滤器（参考“20.2 更换或移除软水过滤器”章节的描述）。
如果咖啡流出速度过慢，意式浓缩咖啡太苦，可通过每次增加1格刻度调节咖啡粉研磨度	咖啡豆研磨得太细，导致咖啡流出速度很慢或根本不出咖啡。	按“确认”并调整咖啡粉研磨器（参考“9.13 研磨设置”章节的描述）。
请选择较低浓度口味或减少咖啡粉量	使用了太多的咖啡粉。	选择较淡的浓度（参考“11.3 定制饮品”章节的描述），或者减少咖啡粉用量（最多使用一量勺的咖啡粉）。按下“确认”返回主页或等待信息消失。
机器需要除垢。 是否确认开始?(约30分钟)	机器必须进行除垢。	如需进行除垢，请按“确认”，按照除垢程序指引操作，否则请按“取消”。在这种情况下，主页（C）上出现  标志（C4），提示您需进行除垢（参考“19. 除垢”章节）。
糟糕，进程已被中断	除垢程序中断或未正确完成。	按“确认”继续（参考“19. 除垢”章节）。
需要更换软水过滤器。 是否确认开始?	软水过滤器到期需更换。	按“确认”更换或取出软水过滤器，或按“取消”稍后执行该步骤。参考“20. 软水过滤器”章节的描述。

显示信息	含义	解决方法
一般警示: 参考使用说明/Coffee Link小程序	机器内部非常脏。	按照“18. 清洁”章节的描述, 彻底清洁机器内部。如果清洁后还显示此内容, 请与德龙售后服务和/或授权服务中心联系。
回路中无水, 按下“确认”开始加水	水回路空。	按“确认”为水回路注水。完毕后自动停止。注水后滴水盘(A12)内有水属正常现象。 如果问题仍然存在, 请确认水箱(A7)已正确安装。
	已安装新的软水过滤器。	确保按照安装新的软水过滤器的指示操作(参考“20.1 安装软水过滤器”和“20.2 更换或移除软水过滤器”章节的描述)。如果问题仍然存在, 请取出软水过滤器。
	节能模式已启用。	如需关闭节能模式, 按照“9.5 通用”章节的描述进行操作。
	机器需要进行除垢。	请参照“19. 除垢”章节的描述, 对机器进行除垢。
	需要更换软水过滤器。	按照“20.2 更换或移除软水过滤器”章节的描述更换或移除过滤器。
	需要清洁蒸汽杆(A14)。	详见“14.3 每次使用后清理蒸汽杆”章节的描述。
	在本机设置菜单(C5)中配置连接。	连接到Coffee Link小程序。
	表明本机已连接。	如需中断连接, 请按照“9.4 连接”章节的描述进行操作。

显息	含义	解决方法
	连接处于活动状态，但无法访问云。	如果刚刚打开，则等待机器完成启动程序。
		如果问题仍然存在，则中断连接，然后按照“9.4 连接”章节的描述再次启用连接。
		确保路由器上的指示灯指示网络处于活动状态。
		如果问题仍然存在，则关闭机器和家用路由器，然后再次打开。
咖啡豆信息卡已变更，至少萃取3杯咖啡后再进行下一次设置	在调整咖啡豆适配功能之前，应让机器至少制作3杯咖啡。	在变更咖啡豆信息卡之前，使用新的咖啡豆至少制作3杯咖啡。

## 22.故障处理

下表汇总了使用中常见的问题。

如按照以下的描述，问题仍不能解决，请联系售后服务中心。

问题	可能的原因	解决方法
机器无法开机	未插入电源插座。	将电源线的插头插入电源插座（如图1），并按下开机/待机图标（B1）。
无法顺利安装豆仓	机器的豆仓安装区域内有残余咖啡豆。	请使用清洁刷（D2）和一块柔软的湿布清洁机器的豆仓安装区域。如需清除咖啡粉，请使用手持式真空吸尘器。
咖啡不热	由于距离上次制作咖啡已超过了2-3分钟，咖啡机内部回路已冷却。	在制作咖啡之前，使用冲洗功能预热内部回路（参考“9.1冲洗”章节的描述）。
	咖啡温度设定过低。	在“设置菜单”中调高咖啡温度（参考“9.9咖啡温度”章节的描述）。
	咖啡杯未预热。	用热水冲洗咖啡杯使其变暖（请注意：您可以使用热水功能）。
	咖啡机需要进行除垢。	按照“19.除垢”章节的描述操作。接下来，检查设置菜单中的水硬度，并确保机器设置与当地供水硬度匹配。
咖啡油脂不够丰富	咖啡豆研磨得过粗。	进入设置菜单（C5），按照说明调节研磨程度。调节的效果要在制作3杯咖啡之后才会体现出来。
	使用不合适的咖啡豆。	使用适合制作意式浓缩咖啡的咖啡豆。
	咖啡豆不新鲜。	咖啡包打开时间太长，咖啡豆已经失去香味。
咖啡流出的速度太慢或一滴一滴流出来	咖啡豆研磨得过细。	进入设置菜单（C5），按照说明调节研磨程度。调节的效果要在制作3杯咖啡之后才会体现出来。
咖啡没有从咖啡流出口的一个口或两个口流出	咖啡流出口（A13）堵塞。	用海绵或牙签清洁咖啡流出口。

问题	可能的原因	解决方法
流出的咖啡味道过淡	咖啡粉进料管 (A18) 堵塞。	按“18.9 清洁咖啡粉进料管”章节的描述, 用清洁刷 (D2) 清洁咖啡粉进料管。
饮品量过少	水箱缺水。	加注水箱至MAX (最高位置) 线。
制作的饮品量过少	咖啡机内部回路有杂质。显示屏显示“清洁中, 请稍候”。	等待机器重新准备就绪, 重新选择所需的饮品。如果问题仍然存在, 请联系售后服务中心。
无法取出萃取器 (A3)	没有正确地关闭机器。	按下  图标 (B1) 关闭机器 (参考“8. 关闭机器”章节的描述)。
除垢结束后, 机器提示需要进行第三次冲洗	在两次除垢过程中, 水箱 (A7) 没有加水至MAX线。	清空滴水盘 (A12) 以免水溢出, 然后按照机器显示的指示操作。
奶泡过大或奶泡量过少	牛奶温度不够冷或不适用于所需制作的饮品。	为了获得优质奶泡效果, 请确保使用正确类型的奶制品来制作热饮或冷饮 (参考“14.1 使用牛奶或植物奶饮品制作奶泡”章节的描述)。使用冰箱冷藏的 (约5°C) 的饮品。
	蒸汽杆 (A14) 过脏。	按照“18.11 彻底清洁蒸汽杆”章节的描述清洁蒸汽杆。
	使用了非推荐的植物奶类型。	为了达到优质奶泡效果, 请使用冰箱冷藏 (约5°C) 的植物奶饮品。
为了达到最佳效果, 请将奶制品放入冰箱中冷藏的 (约5°C)。按照显示屏上的建议调节奶泡量。	机器准备就绪或刚刚关机时, 冷凝液会滴入冷凝室。	这属于正常现象。为了减少这种情况的发生, 请清空滴水盘。
机器从滴水盘 (A12) 喷出蒸汽和/或机器所处表面有水	滴水盘网格盖板 (A11) 清洗后未放回。	将滴水盘网格盖板放回滴水盘。
随行杯饮品制作时溢出随行杯	选择了不合适的杯量。	选择一个较小的杯量或换一个合适的杯子。
外带饮品过多或从随行杯中溢出	选择的数量不合适。	选择的数量较少。
		调整杯量, 以便正确制作下一杯饮品。

问题	可能的原因	解决方法
外带饮品的制作量过少	选择的数量不合适。	选择较多的数量。
		调整杯量，以便正确制作下一杯饮品。

## 23. 技术参数

---

参考机器铭牌。

### 24.1 节能小贴士

- 将自动关机时间设置为15分钟（在设置菜单页面）；
- 启用节能模式（在设置菜单页面）；
- 机器提示时，请务必进行除垢。

# 名称和产品中有害物质的含量

## Name and content of hazardous substances in products

组件 名称 Components Name	有害物质 Hazardous substances					
	铅 Lead (Pb)	汞 Mercury (Hg)	镉 Cadmium (Cd)	六价铬 Hexavalent Chromium (Cr (VI))	多溴联苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
	塑料外壳 和底盘 Plastic enclosure and chassis	○	○	○	○	○
印刷电路板 组装 Printed Circuit Board Assembly	X	○	○	○	○	○
电机、阀门 Motors, valves	X	○	○	○	○	○
电缆和电线 Cable and wiring	○	○	○	○	○	○
金属零件 Metal parts	X	○	X	○	○	○

本表格依据SJ/T 11364 的规定编制。This table is prepared in accordance with the provisions of SJ/T 11364.

○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

○：The content of such hazardous substance in all homogeneous material of such components is below the limit required by B/T 26572.

X：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。主要是由于受技术发展水平限制，暂时无法实现替代或减量化，但这部分零部件本身不直接与食物接触，正常使用条件下不会对使用者造成任何健康影响。我们的产品均通过食品安全监测，可安心使用。

X：The content of such hazardous substance in a certain homogeneous material of such components is beyond the limit required by GB/T 26572, mainly due to the level of technical development situation, temporarily unable to achieve replacement or reduction.

The above cited parts marked with "X" are related to components non in contact with the food.

All parts of the appliance in direct contact with the food are safe under normal conditions of use.

## CONTENTS

<b>1. FUNDAMENTAL SAFETY WARNINGS.....</b>	<b>36</b>
<b>2. GENERAL INFORMATION.....</b>	<b>37</b>
2.1 Instruction for Use.....	37
<b>3. BEFORE USE.....</b>	<b>37</b>
3.1 Checking the appliance .....	37
3.2 Installing the appliance.....	37
3.3 Connecting the appliance.....	38
3.4 Setting up the appliance .....	38
3.5 What water to use? .....	38
3.6 Cleaning and maintenance of materials in contact with food .....	38
3.7 Making cappuccinos and milk-based drinks 38	
<b>4. INTRODUCTION.....</b>	<b>38</b>
4.1 Letters in brackets.....	38
4.2 Troubleshooting and repairs.....	38
4.3 Download the Wechat mini program! .....	38
<b>5. DESCRIPTION.....</b>	<b>39</b>
5.1 Description of the appliance (A) .....	39
5.2 Description of the control panel (B).....	39
5.3 Description of the homepage (main screen) (C) .....	39
5.4 Description of the accessories (D) (*varies according to model) .....	39
<b>6. SETTING UP THE APPLIANCE ☺ .....</b>	<b>39</b>
<b>7. TURNING THE APPLIANCE ON ☺ .....</b>	<b>41</b>
<b>8. TURNING THE APPLIANCE OFF .....</b>	<b>41</b>
<b>9. MENU SETTINGS ☺ .....</b>	<b>41</b>
9.1 Rinsing .....	41
9.2 Descaling .....	41
9.3 Water filter .....	41
9.4 Connectivity.....	41
9.5 General .....	42
9.6 Auto-off .....	42
9.7 Support.....	42
9.8 Grind & Empty.....	42
9.9 Coffee temperature .....	42
9.10 Statistics.....	43
9.11 Languages.....	43
9.12 Day and time.....	43
9.13 Grinder setting .....	43
9.14 Water hardness .....	43
9.15 Drain water .....	43
9.16 Default values .....	44
<b>10. DRINK SELECTION.....</b>	<b>44</b>
<b>11. MAKING COFFEE DRINKS ☺ .....</b>	<b>44</b>
11.1 Prepare the machine to make coffee drinks.44	
11.2 Directly selected drinks .....	44
11.3 Customising the drinks.....	45
11.4 Making coffee using pre-ground coffee.....	45
11.5 Extra shot.....	46
11.6 General indications for making coffee drinks... .....	46
11.7 Tips for a hotter coffee.....	46
<b>12. BEAN ADAPT TECHNOLOGY .....</b>	<b>46</b>
<b>13. COFFEE ROUTINE.....</b>	<b>47</b>
<b>14. STEAM BUTTON ☺ .....</b>	<b>47</b>
14.1 Steam to froth milk or plant-based drinks...47	
14.2 Making hot milk (not frothed).....	47
14.3 Cleaning the steam wand after every use ...48	
14.4 Hot water .....	48
<b>15. MAKING “TO GO” DRINKS ☺ .....</b>	<b>48</b>
15.1 Cleaning the De’Longhi travel mug after use (sold separately) .....	49
<b>16. CHANGING BEAN HOPPER.....</b>	<b>49</b>
<b>17. “MY” FUNCTION (“Hot” drinks only) ☺ .....</b>	<b>49</b>
<b>18. CLEANING ☺ .....</b>	<b>50</b>
18.1 Cleaning the machine .....	50
18.2 Cleaning the internal circuit .....	50
18.3 Cleaning the bean hoppers .....	50
18.4 Cleaning the coffee grounds container.....	50
18.5 Cleaning the drip tray and drip tray grille....	50
18.6 Cleaning the inside of the machine .....	51
18.7 Cleaning the water tank.....	51
18.8 Cleaning the coffee spouts .....	51
18.9 Cleaning the pre-ground coffee funnel .....	51
18.10Cleaning the brewing unit.....	51
18.11Complete cleaning of steam wand .....	52
<b>19. DESCALING ☺ .....</b>	<b>53</b>
<b>20. WATER SOFTENER FILTER .....</b>	<b>54</b>
20.1 Installing the filter .....	54
20.2 Replacing or removing the filter.....	55
<b>21. DISPLAYED MESSAGES.....</b>	<b>55</b>
<b>22. TROUBLESHOOTING .....</b>	<b>58</b>
<b>23. TECHNICAL DATA.....</b>	<b>60</b>
23.1 Tips for Energy Saving .....	60

## 1. FUNDAMENTAL SAFETY WARNINGS

---

- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Designated use: this appliance is designed and made to prepare beverages based on coffee, milk and hot water. Use drinking water only in the tank. Never use the accessories to make beverages other than those described in these instructions. Any other use is considered improper and thus dangerous. The manufacturer is not liable for damage deriving from improper use of the appliance.
- The surface of the heating element remains hot after use and the outside of the appliance may retain the heat for several minutes depending on use.
- Clean all the components thoroughly, taking particular care with parts in contact with the milk.
- Cleaning and user maintenance shall not be made by children without supervision.
- Never clean by immersing the appliance in water.
- **IMPORTANT:** to prevent damage to the appliance, do not clean with alkaline detergents; use a soft cloth and, where applicable, neutral detergent.
- This is an household appliance only. It is not intended to be used in: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- If the plug or power cord is damaged, it must be replaced by customer services only to avoid all risk.
- Appliances with removable cord: avoid splashes of water on the power cord connector or socket at the back of the appliance.
- **IMPORTANT:** Models with glass surfaces: do not use the appliance if the surface is cracked.
- The coffee maker must not be placed inside a cabinet or kitchen unit during use



Never clean the machine by immersing it in any kind of liquid.

### FOR EUROPEAN MARKETS ONLY:

- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made

by children unless they are above 8 years old and supervised. Keep the appliance and power cord away from children under 8 years of age.

- The appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are supervised or have been given instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.
- Always unplug the appliance when left unattended and before assembly, taking apart or cleaning.



Surfaces marked with this symbol become hot during use (the symbol is present in certain models only).

This is an electrical appliance and may cause electric shock.

You should therefore follow these safety warnings:

- Never touch the appliance with damp hands or feet.
- Never touch the plug with damp hands.
- Make sure the socket used is freely accessible at all times, enabling the appliance to be unplugged when necessary.
- Unplug directly from the plug only. Never pull the cord as you could damage it.
- To disconnect the appliance completely you must unplug it from the mains socket.
- If the appliance is faulty, do not attempt to repair. Turn it off, unplug from the mains socket and contact Customer Services.
- Before cleaning the appliance, turn it off, unplug from the mains socket and allow to cool.

### **Important!**

Keep all packaging (plastic bags, polystyrene foam) away from children.

**CHOKING HAZARD.** The appliance might contain small parts. Some of those small parts might be required to get disassembled during cleaning and maintenance operations. Handle with care and keep small parts out of reach of children.

### **Danger of burns!**

This appliance produces hot water and steam may form while it is in operation.

**During operation (automatic rinsing, hot beverage delivery, steam delivery, cleaning), avoid contact with splashes of hot water or steam.**

When the appliance is in operation, the cup shelf could become very hot.

---

## **2. GENERAL INFORMATION**

### **2.1 Instruction for Use**

Read all the Instruction for Use carefully before using the appliance. Failure to follow this Instruction for Use may result in burns or damage to the appliance.

The manufacturer is not liable for damage deriving from failure to respect this Instruction for Use.

#### **Please note:**

**These safety warnings are valid for all De'Longhi coffee machines.**

**Keep this leaflet together with the instructions accompanying the appliance.**

If the appliance is passed to other persons, they must also be provided with this Instruction for Use.

---

## **3. BEFORE USE**

### **3.1 Checking the appliance**

After removing the packaging, make sure the product is complete and undamaged and that all accessories are present. Do not use the appliance if it is visibly damaged. Contact De'Longhi Customer Services.

### **3.2 Installing the appliance**

When you install the appliance, you should respect the following safety warnings:

- Use this appliance on a horizontal and stable surface.
- The appliance gives off heat. After positioning the appliance on the worktop, leave a space of at least 3 cm between the surfaces of the appliance and the side and rear walls and at least 15 cm above the coffee maker.
- Water penetrating the appliance could cause damage. Do not place the appliance near taps or sinks.

- The appliance could be damaged if the water it contains freezes. Do not install the appliance in a room where the temperature could drop below freezing point.
- Arrange the power cord in such a way that it cannot be damaged by sharp edges or contact with hot surfaces (e.g. electric hot plates).
- Before dispensing any kind of drink, make certain that the machine has not been operated previously using types of milk, or types of plant-based beverage, containing allergens to which you may be allergic or substances you may be intolerant to.
- In the event that unused milk or plant-based beverage may be left in the jug, this can be kept in the refrigerator for further use, observing the indications for storage given by the producer of the beverage, and under no circumstances for longer than 2 days. If the milk jug is not returned to the refrigerator, empty the contents and clean the jug as described in the instruction manual.

### 3.3 Connecting the appliance

Check that the mains power supply voltage corresponds to that indicated on the rating plate on the bottom of the appliance.

Connect the appliance to an efficiently earthed and correctly installed socket with a minimum current rating of 10A only.

If the power socket does not match the plug on the appliance, have the socket replaced with a suitable type by a qualified professional.

### 3.4 Setting up the appliance

The first time you use the machine, the water circuit is empty and the appliance could be very noisy. The noise becomes less as the circuit fills.

### 3.5 What water to use?

- Potable fresh water is recommended.
- Do not use sparkling (carbonated) or distilled water

### 3.6 Cleaning and maintenance of materials in contact with food

- When utilized for the first time, or after 3 days without use, clean the appliance and the removable accessories that come into contact with water, coffee and milk, as indicated in the instructions for use. Check in the instructions which accessories are dishwasher safe.
- After 3 days without the machine being used, before making any further drinks, change the water in the tank and rinse out the circuit as described in the instructions. If the machine is not going to be used for a period longer than 3 days, it is advisable to empty the water tank.
- Be certain to take maximum care when carrying out all cleaning and maintenance operations described in the instructions for use and/or prompted by the display or warning lights of the appliance itself.

### 3.7 Making cappuccinos and milk-based drinks

- The machine can be used both with cow's milk and with plant-based beverages.
- Do not use raw milk.
- Use pasteurized or UHT milk, or plant-based beverages kept and stored in accordance with the indications given by the producer.
- The cleaning methods described in the instructions do not guarantee the complete removal of allergens.

## 4. INTRODUCTION

### 4.1 Letters in brackets

The letters in brackets refer to the description of the appliance on pages 2- 3.

### 4.2 Troubleshooting and repairs

In the event of problems, first try and resolve them by reading the information given in sections "21. Displayed messages" and "22. Troubleshooting".

If this does not resolve the problem or further information is required, consult the customer services department at the numbers indicated on the website [www.delonghi.com](http://www.delonghi.com).

If repairs are required, contact De'Longhi customer services only. Addresses can be found on the website [www.delonghi.com](http://www.delonghi.com).

### 4.3 Download the Wechat mini program!

1. Install Wechat app;
2. Open Wechat;
3. Press "Discover";
4. Select "Scan" and read the following QRcode



Alternatively search for "Coffee Link";

5. Install the mini program then follow the instructions to create your account and install it.

In the mini program, you can find creative recipes, information, tips and curious facts about the world of coffee, together with information on your machine at your fingertips.

You can manage a number of functions remotely from the Coffee Link mini program.



This symbol highlights the functions you can control or consult using the mini program

You can also create new drinks and save them in your appliance.

**Please note:**

- To access the functions from the mini program, enable connectivity from the appliance's settings menu (see "9.4 Connectivity").
- Check compatible devices on "compatibledevices.delonghi.com".

## 5. DESCRIPTION

### 5.1 Description of the appliance (A)

- A1. Bean hopper
- A2. Grinding coarseness regulator
- A3. Brewing unit
- A4. Brewing unit door
- A5. Power cord
- A6. Water tank lid
- A7. Water tank
- A8. Coffee grounds container
- A9. Coffee grounds container support
- A10. Cup tray
- A11. Tray grille
- A12. Drip tray
- A13. Coffee spouts (adjustable height)
- A14. Steam wand
- A15. Frother ring
- A16. Frother
- A17. Nozzle
- A18. Removable pre-ground coffee funnel
- A19. Accessories storage lid

### 5.2 Description of the control panel (B)

- B1.  ON/Standby
- B2.  "Coffee" drinks menu
- B3.  "Steam" selection
- B4.  "Profile" selection

### 5.3 Description of the homepage (main screen) (C)

- C1. Selected profile
- C2. Coffee moment icon
- C3. Bean Adapt Technology (enable from App): follow the instructions on the display
- C4. Indicator lights:
  -  Machine waiting for first connection
  -  Wi-Fi active light
  -  No network light
  -  Steam wand rinsing
  -  Energy saving active light
  -  Descaling required light

-  Filter exhausted light
- C5. Settings
  - C6. Drink costumising
  - C7. Drink selection


### 5.4 Description of the accessories (D) (\*varies according to model)

- D1. "Total Hardness Test" indicator paper
- D2. Pre-ground coffee scoop/cleaning brush
- D3. Descaler
- D4. Bean hopper with upper lid (2 in pack)
- D5. Grinder protection lid

## 6. SETTING UP THE APPLIANCE

**Please note:**

- Possible traces of coffee in the grinder are the result of settings tests performed on the appliance before sale, proof of the meticulous care and attention we invest in our products.
  - The first time you use the appliance, all removable accessories (frother (A16), nozzle (A17), water tank (A7) and (A6), and bean hopper (A1)) destined to come into contact with water or milk should be rinsed with hot water.
1. Connect the power cord (A5) to the mains supply (fig. 1).

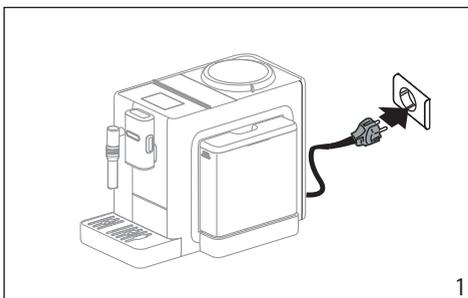

The machine switches on and leads you to set it up: follow the instructions on the display and your machine will be ready for coffee!

#### Select your language:




2. Press the flag corresponding to the desired language, then press "Done" for next step.

#### Set time and day

3. Set time zone, then press "Next".
4. Set current day and time, then press "Next".

#### Fill the water tank

5. Remove the water tank (A7) (fig. 2) and fill to the MAX line with fresh potable water (fig. 3), then press "Next".

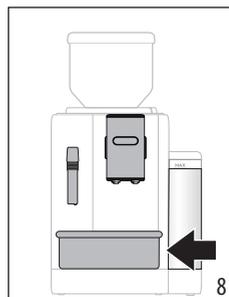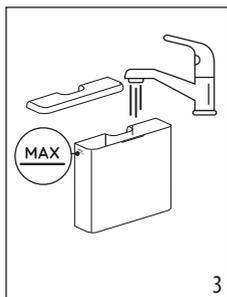
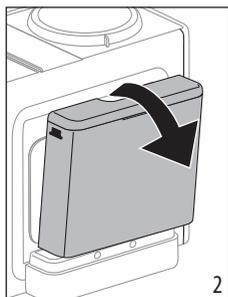


### Set up the machine



6. Check that the grinding coarseness regulator (A2) is on "5", then press "Next".
7. Remove the grinder protection lid (D5). Press "Next".

### Insert the bean hopper

8. Take one bean hopper (D4), turn it upside down and ensure the lower part is closed well rotating it counterclockwise until it clicks (fig. 4). The bean hopper is correctly closed when the two arrows are aligned (fig. 5). Press "Next".

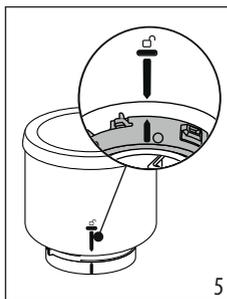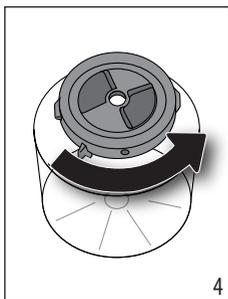

9. Fill the bean hopper with coffee beans. Press "Next".
10. Insert the bean hopper in its housing and rotate it clockwise to lock it. For correct operation, align the "unlock" symbol to the mark on the ring (fig. 6) and, once inserted, rotate it to the "lock" position (fig. 7).

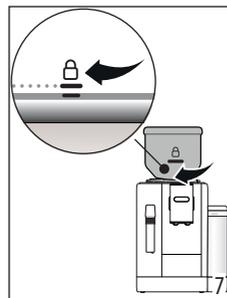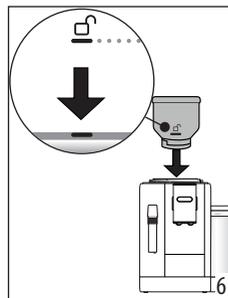

### Prime the machine

11. Place a container with a minimum capacity of 200 ml under the coffee spouts (A13) and steam wand (A14) (fig. 8).

12. Press "Yes" to start rinsing. Wait until delivery automatically stops.

### Tips

A couple of tips appear on the display. Read paying attention: this will help when using the machine. Press "Next" to continue.

### Test water hardness

The descaling alarm is displayed after a period of time established according to water hardness. The machine can also be programmed according to the actual hardness of the local water supply, so that the descaling procedure will be required less frequently. Proceed as follows:

1. Remove the "Total hardness test" indicator paper (D1) from its pack. Press "Next".
2. Immerse the paper completely in a glass of water for about one second.
3. Remove the strip from the water and shake lightly. After about a minute, 1, 2, 3, or 4 red squares appear, depending on the hardness of the water. Each square corresponds to 1 level. Press "Next".

### Set water hardness

4. Press the dot corresponding to the water hardness measured previously as indicated in the following table.

Total Hardness Test (D1)	Water hardness
Green 	Level 1
Red Green 	Level 2
Red Green 	Level 3
Red 	Level 4

5. Press "Ok".

The machine is now reprogrammed with the your water hardness setting.

**Please note:**

You can change the water hardness setting any time using the dedicated function in the menu setting (see “9.14 Water hardness”).

**Profiles**

1. Set how many people will use the machine. Press “Next”.
2. If you want to customise, press each profile, make your choices and press “Save”.
3. Press “Next”: the profiles are confirmed.

**Tutorial**

4. Press “Next”: the machine is ready for a short tutorial.
5. Press “Start” and see the homepage.
6. Now the machine shows its main features. Press “Next” to move on.

Once finished the introduction, press “Start” and enjoy your machine.


**Please note:**

- The first time you use the machine, you need to make 4-5 cups of coffee before the results in the cup will be satisfactory.
- The first time you use the machine, the water circuit is empty and the appliance could be very noisy. The noise becomes less as the circuit fills.
- Coffee has been used to factory test the appliance and it is therefore completely normal for there to be traces of coffee in the grinder. The machine is, however, guaranteed to be new.

## 7. TURNING THE APPLIANCE ON

**Please note:**

- Each time the appliance is turned on, it performs an automatic preheat and rinse cycle which cannot be interrupted. The appliance is not ready for use until the cycle has been completed.
1. To turn the appliance on, press the  button (B1) (fig. 9): the appliance comes on

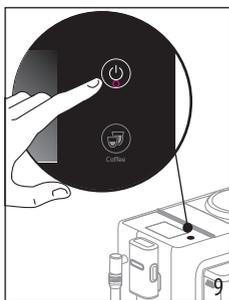

2. When at temperature, the appliance performs a rinse cycle delivering hot water from the coffee spouts (A13); as well as heating the boiler, this also heats the internal circuits by circulating hot water.

## 8. TURNING THE APPLIANCE OFF

Whenever the coffee machine is turned off after being used to make coffee, it performs an automatic rinse cycle.

1. To turn the machine off, press the  button (B1) (fig. 9).
2. If a coffee drink has been delivered, the appliance rinses the coffee spouts (A13) with hot water, then goes off (stand-by).

**Please note:**

If you will not be using the appliance for some time, turn off, then unplug from the mains socket.

**Important!**

Never unplug while the appliance is on.

## 9. MENU SETTINGS

### 9.1 Rinsing

Use this function to deliver hot water from the coffee spouts (A13), to clean and heat the appliance's internal circuit.

Place a container with a minimum capacity of 200 ml under the spouts (fig. 8).

To enable the function, proceed as follows:

1. Enter the setting menu by pressing  (C5);
2. Scroll through the pages until “Rinsing” is displayed;
3. Press “Yes” to start delivery. After a few seconds, hot water is delivered to clean and heat the appliance's internal circuit;
4. To stop rinsing, press “Stop” or wait for rinsing to stop automatically.

**Please note:**

- If the appliance is not used for more than 3 days, you should clean and fill the water tank with fresh potable water. We strongly recommend to perform 2-3 rinses before brewing your drink.
- After rinsing, it is normal for the grounds container (A8) to contain water.

### 9.2 Descaling

For instructions on descaling, see section “19. Descaling”.

### 9.3 Water filter

For instructions on the water filter, see section “20. Water softener filter”.

### 9.4 Connectivity

Use this function to enable or disable connectivity. Proceed as follows:

1. Enter the setting menu by pressing  (C5);

2. Scroll through the pages until "Connectivity" is displayed;
3. Press "Yes".
4. Enable the Wi-Fi connection and remote control (via the De'Longhi Coffee Link mini program). The PIN is automatically created when a device is connecting to the machine.
5. Press "Next" to see the identification data of the machine
6. Press "<" to save the new selection and go back to the settings menu.
7. Press "X" to go back to the homepage (B).

On the homepage, the symbol (C4) indicating the connection status alternates with the other symbols (e.g. descaling, etc.)

Symbol on homepage	Meaning
	Connectivity enabled: the machine is waiting for the first connection
	The appliance is connected
	The appliance is connected to the home Wi-Fi, but there is no network, or the cloud cannot be reached
--	Connection disabled. To enable, enter the settings menu (C5)

**Please note:**

- If the remote connection is off, a number of the functions in the mini-program will not be available (e.g. drink preparation).
- If you change the name or password of the Wi-Fi network, or if you connect to a new Wi-Fi network, you will need to perform the reset procedure as described below:
  1. Proceed as described above from point 1 to point 3;
  2. Press "Reset";
  3. Press "OK" to confirm cancellation of the network settings;
  4. Connect with the mini program again and select the new credentials.

**9.5 General**

1. Enter the setting menu by pressing  (C5);
  2. Scroll through the pages until "General" is displayed;
- Here you can enable or disable the following functions with a simple touch:
- "Beep sound": when enabled, the appliance beeps whenever an operation is performed.
  - "Energy saving": use this function to enable or disable energy saving. When enabled, the function reduces energy consumption in compliance with European regulations.
-  is displayed on the homepage to show it is active.

3. Press "X" to save the new selection and go back to the homepage (C).

**9.6 Auto-off**

Auto-off can be set so that the appliance goes off after 15 or 30 minutes, or 1 or 3 hours of inactivity.

To programme auto-off, proceed as follows:

1. Enter the setting menu by pressing  (C5);
2. Scroll through the pages until "Auto-off" is displayed;
3. Select the desired time interval (15 or 30 minutes, or 1 or 3 hours).
4. Press "X" to save the new selection and go back to the homepage (C).


**9.7 Support**

Scan the QR-Code to access manual and get support. Press "X" to go back to the homepage. (C)

**9.8 Grind & Empty**

To empty the coffee grinder (not the bean hopper), grind the remaining beans away:

1. Enter the setting menu by pressing  (C5);
2. Scroll through the pages until "Grind & Empty" is displayed;
3. Press "Read more";
4. Rotate the bean hopper (A1) to the 'unlock' position (fig. 10) and leave it there until the operation finishes;
5. Press "Start": the machine grinds the remaining beans in the grinder;

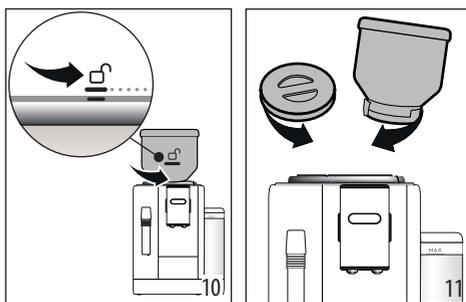

6. Once finished, remove the bean hopper and insert the other one (see "6. Setting up the appliance u") or put the grinder protection lid (D5) (fig. 11);
7. The appliance goes back to the homepage (C).

**9.9 Coffee temperature**

To change the temperature of the water used to make the coffee, proceed as follows:

1. Enter the setting menu by pressing  (C5);
2. Scroll through the pages until "Coffee temperature" is displayed;
3. Press "Set";

4. Select the required temperature from those proposed;
5. Press “<” to save the new selection and go back to the settings menu.
6. Press “X” to go back to the homepage (C).

**Please note:**

Varying the temperature has most effect for long drinks.

**Bean Adapt Technology** 

We suggest you access Bean Adapt Technology in the Coffee Link mini program to adjust this parameter to an appropriate setting for the coffee beans used.

### 9.10 Statistics

This displays statistics relating to the machine. To view the statistics, proceed as follows:

1. Enter the setting menu by pressing  (C5);
2. Scroll through the pages until “Statistics” and the principal statistics are displayed. To view more information, press “Read more”;
3. Press “<” to go back to the settings menu.
4. Press “X” to go back to the homepage (C).

### 9.11 Languages

To change the language on the homepage, proceed as follows:

1. Enter the setting menu by pressing  (C5);
2. Scroll through the pages until “Languages” is displayed;
3. Press “Set”;
4. Press the flag corresponding to the language you want to set. The display is immediately updated with the selected language;
5. Press “<” to save the new selection and go back to the settings menu;
6. Press “X” to go back to the homepage (C).

### 9.12 Day and time

To change the day and time on the homepage, proceed as follows:

1. Enter the setting menu by pressing  (C5);
2. Scroll through the pages until “Day and time” is displayed;
3. Press “Set”;
4. Select “Set the time zone”: scroll to select your time zone. Press “Ok” to confirm (or “<” to cancel and go back to previous step),
5. Select “Set day and time”: scroll to set or enable synchronization via Wi-fi. Press “Ok” to confirm.
6. Press “<” to go back to the settings menu.
7. Press “<” again to go back to the homepage (C).

### 9.13 Grinder setting

The appliance proposes a tutorial on how to adjust grinding correctly for best results:

1. Enter the setting menu by pressing  (C5);

2. Scroll through the pages until “Grinder setting” is displayed;
3. Press “Read more” to consult the tutorial on how to adjust the grinding coarseness. Press “Next” or “Back” to read the tips.
4. At the last slide, press “Ok” to go back to the setting menu.
5. Press “X” to go back to the homepage (C).

**Please note:**

- After carrying out the above procedure, we recommend making at least 3 coffees before adjusting again. If the coffee is still not brewed correctly, repeat the procedure.
- The grinding coarseness regulator (A2) must only be turned when the coffee grinder is in operation during the initial phase of coffee preparation.

**Bean Adapt Technology** 

We suggest you access Bean Adapt Technology in the Coffee Link mini program to adjust this parameter to an appropriate setting for the coffee beans used.

### 9.14 Water hardness

To change the water hardness, proceed as follows:


1. Test the water hardness proceeding as described on “6. Setting up the appliance” “Test water hardness”.
2. Enter the setting menu by pressing  (C5).
3. Scroll through the pages until “Water hardness”. Press “Set”.
4. Select the level corresponding to the test.
5. Press “<” to go back to the settings menu.
6. Press “X” to go back to the homepage (C).

### 9.15 Drain water

To avoid the water in the circuit freezing if the appliance is to be left idle for a long period of time, or before taking it to customer services, we recommend emptying the water circuit.

Proceed as follows:

1. Enter the setting menu by pressing  (C5);
2. Scroll through the pages until “Drain water” is displayed;
3. Press “Yes” to start the guided procedure;
4. Extract, empty and replace the grounds container (A8) and drip tray (A12) (fig. 12), then press “Next”;

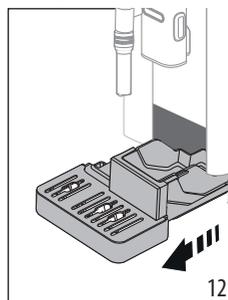

5. Position a 0,2 l container under the spouts (fig. 8). Press "Next";
  6. The appliance performs a rinse cycle with hot water from the coffee spouts (A13);
  7. At the end of rinsing, extract the water tank (A7) (fig. 2) and empty;
  8. If present, remove the water softener filter from the water tank and press "Next";
  9. Put the empty water tank back in the appliance and press "Next";
  10. Confirm you are ready to start and press "Yes".
  11. Wait for the appliance to empty the circuit; (Important: hot water from the spouts!). As the water circuit empties, the appliance could become noisier. This is part of normal operation.
  12. When the circuit is empty, extract and empty the drip tray, put back in the appliance and press "Next";
  13. Press "Ok". The appliance goes off (standby).
  14. Unplug the appliance.
- The next time the appliance is turned on, follow the instructions in section "6. Setting up the appliance".

### 9.16 Default values

This resets all menu settings and user customisation back to the default values (with the exception of the language, which remains as set, and the statistics).

Proceed as follows:

1. Enter the setting menu by pressing  (C5);
2. Scroll through the pages until "Default values" is displayed;
3. Press "Read more";
4. Select whether you want to reset the entire machine or a single profile, then press "Next";
5. Follow the instructions, then confirm the reset by pressing "Ok".
6. Press "X" to go back to the homepage (C).

**Please note:**

When the appliance (not the individual profile) has been reset to the default values, the machine proposes the introductory tutorial again.

## 10. DRINK SELECTION

You can use your machine to make a great variety of drinks.

	Hot	Cold
Espresso	✓	✓
2X Espresso	✓	✗
Espresso Lungo	✓	✗
→		

	Hot	Cold
Coffee	✓	✓
Long	✓	✗
Americano	✓	✓
Hot water	✓	--

From the panel, access the drink you want to make.

## 11. MAKING COFFEE DRINKS

**Please note:**

Steam will come out after each drink (fig. 13). This is part of normal use.




### 11.1 Prepare the machine to make coffee drinks

**Important!**

Do not use green, caramelised or candied coffee beans as they could stick to the coffee grinder and make it unusable.

1. Place 1 or 2 cups under the coffee spouts (A13);
2. Lower the spouts as near as possible to the cup (fig. 14). This makes a creamier coffee.

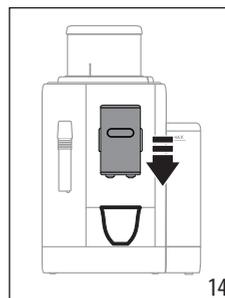

### 11.2 Directly selected drinks

1. Press the image on the homepage (C) corresponding to the coffee you want to make (C7) (e.g. Espresso, fig. 15);



2. **Hot coffee drink:** the appliance starts preparation.

**Cold coffee drinks:**

- Select to make an “Ice” or “Extra Ice” drink: press “Next”;
- Depending on the previous selection, before delivery, the appliance suggests the quantity of ice cubes. Add the quantity of ice cubes indicated in the glass (fig. 16), then press “Brew”.



- The appliance starts preparation.

A description of each individual phase (grinding, brewing coffee) appears on the display.

At the end of preparation, the appliance is ready to make the next drink.

**11.3 Customising the drinks**

To make coffee drinks with customised parameters, proceed as follows:

1. Press the customising settings (C6) at the bottom of the image corresponding to the coffee you want to make (e.g. espresso, fig. 17). The parameters that can be customised according to taste appear on the display:

Size	
Intensity	

2. **Hot coffee drink:** After setting the parameters, press “Brew”. The appliance starts making the drink and a description of each individual phase (grinding, brewing coffee) appears on the display;

**Cold coffee drinks:** Set the size, then press “Start” and proceed as follows:

- Select whether to make an “Ice” or “Extra Ice” drink, then press “Next”;
- Depending on the previous selection, before delivery, the appliance suggests the quantity of ice cubes. Add the quantity of ice cubes indicated in the glass (fig. 16), then press “Brew”.
- The appliance starts making the drink and a description of each individual phase (grinding, brewing coffee) appears on the display.

3. At the end of delivery, press “Save” to save the new settings, or “Cancel” to retain the previous parameters. You can also save for the moment of the Coffee Routine.

**Please note:**

If you save the new settings, they are memorised ONLY in the selected profile.

The appliance is ready to be used again.


**11.4 Making coffee using pre-ground coffee**

**Important!**

- Never add pre-ground coffee when the machine is off or it could spread through the inside of the machine and dirty it. This could damage the machine.
- Never use more than 1 level scoop (D2) as it could soil the inside of the coffee machine or block the funnel (A19).

When using pre-ground coffee, only one cup can be made at a time.

- Making **Long** coffee: halfway through preparation, when requested by the appliance, add one level measure of pre-ground coffee and press “Ok”.
  - You cannot make **2x Espresso** drinks using pre-ground coffee.
1. Press the customising settings (C5) at the bottom of the image corresponding to the drink you want to make (e.g. espresso, fig. 17).
  2. Select “Pre-ground” ;
  3. Choose the size and press “Brew”.
  4. Lift the accessory storage lid (A20), make sure the funnel (A19) is not blocked, then add one level scoop (D2) of pre-ground coffee in the funnel (fig. 18). Press “Ok” to make the drink;

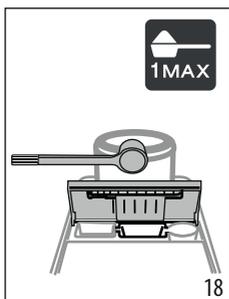

5. The appliance starts making the drink and a description of each individual phase appears on the display.
- At the end of preparation, the appliance is ready to make the next drink.

### 11.5 Extra shot

You can add a boost of extra Espresso to the following drinks:

	Hot
Espresso	✓
Espresso Lungo	✓
Long	✓
Coffee	✓
Americano	✓

Proceed as follows:

1. Press the customising settings (C6) at the bottom of the image corresponding to the drink you want to make (e.g. espresso, fig. 17).
2. Press “Extra Shot”, then “Ok”.
3. Select the desired size and intensity. Press “Brew”.
4. Confirm by pressing “Ok”.

5. The appliance starts making the drink and a description of each individual phase (grinding, brewing + extra grinding and brewing) appears on the display.
6. At the end of delivery, press “Save” to save the new settings, or “Cancel” to retain the previous parameters. You can also save it for the moment in the Coffee Routine.

#### Please note:

If you save the new settings, they are memorised **ONLY** in the selected profile.

The appliance is ready to be used again.

### 11.6 General indications for making coffee drinks

- While the machine is making the coffee, preparation can be interrupted at any moment by pressing “Stop” or “Cancel”.
- As soon as delivery has ended, to increase the quantity of coffee, just press “Extra”. When the required quantity is reached, press “Stop” or “Cancel”.
- Various alarm messages could be displayed while using the appliance (“Please fill the tank with fresh water up to MAX level” etc.). Their meaning is explained in section “21. Displayed messages”.
- If the coffee is delivered a drop at a time, too weak and not creamy enough, or too cold, consult the “9.13 Grinder setting” tutorial included in the setting menu  (C5) and section “22. Troubleshooting”.
- If “Energy Saving” mode is activated, there may be a few seconds delay before the first coffee is delivered.

### 11.7 Tips for a hotter coffee

To make a hotter coffee, proceed as follows:

- perform a hot rinse cycle before making hot drinks (see “9.1 Rinsing” in the menu  (C5));
- warm the cups with hot water using the hot water function (select the relative picture and follow the instructions on the display);
- increase the coffee temperature (“9.9 Coffee temperature” in the menu  (C5)).

## 12. BEAN ADAPT TECHNOLOGY

A coffee expert at your fingertips to help you optimise coffee brewing and the result in your cup in just a few steps.

The smart technology guides you to adjust the machine according to the coffee beans used - from grinding coarseness to brewing, each phase will be regulated to get the best results from the coffee bean.

Download and open the Coffee Link mini program to find out more.

To make espresso coffee, follow the instructions in section “11.2 Directly selected drinks”.

### 13. COFFEE ROUTINE

If you enable the coffee routine, your machine will remember the settings you decide for each moment during the day.

- Press the coffee moment icon (C2) on the homepage;
  - Enable the function activating the switch on the display
- Download and open the Coffee Link mini program to customise your routines of the working and rest days.

**Please note:**

To disable coffee routine, press the coffee moment icon and turn off the function.

### 14. STEAM BUTTON

#### 14.1 Steam to froth milk or plant-based drinks

The quality of the froth will vary depending on:

- the temperature of the milk or plant-based drink (for best results, always use milk or plant-based drinks at refrigerator temperature 5°C);
- type of milk or plant-based drink;
- brand used;
- ingredients and nutritional value.

Cow's milk	
Whole (fat content >3.5%)	✓
Partially skimmed (fat content between 1.5 and 1.8%)	
Skimmed (fat content < 0.5%)	
Plant-based drinks	
Soy	✓
Almond	✓
Oat	✓



**Please note:**

To avoid poor froth or large bubbles, always clean the steam wand (A14) as described in section "14.3 Cleaning the steam wand after every use".

1. Fill a container with milk (preferably one with a handle to avoid scalding) (fig. 19). In choosing the size of the container, bear in mind that the milk doubles or triples in volume;



2. Press "Steam" button (B3).
3. Pull down the steam wand frother ring (A15) to "FOAM" position (fig. 20): press "Ok".

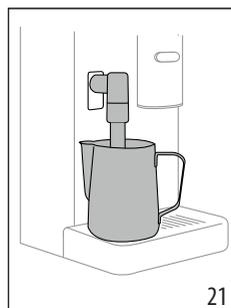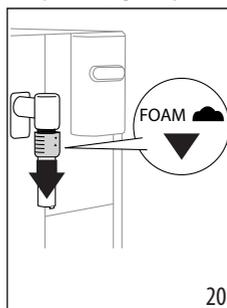

4. Place the container under the steam wand and immerse the frother (A16) in the milk or plant-based beverage (fig. 21). Never immerse the frother ring;
5. Press "Start": after a few seconds, steam is delivered from the steam wand, giving the milk a creamy frothy appearance and making it more voluminous.
6. For a creamier froth, rotate the container with slow movements in an upward direction;
10. When the required froth is obtained, interrupt steam delivery by pressing "Stop".

**Danger of burns!**


Stop steam delivery before removing the container with the frothed milk to avoid burns caused by splashes of boiling milk.

**Please note**

If "Energy saving" is active, you may have to wait a few seconds before steam is delivered.

#### 14.2 Making hot milk (not frothed)

To make hot milk without froth, proceed as described in the above section, but with the steam wand frother ring (A15) positioned upwards in the "FLAT" position (fig. 22).

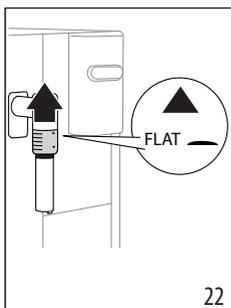

22

### 14.3 Cleaning the steam wand after every use

Clean the steam wand (A14) each time you use it to avoid the build-up of milk residues or blockages.

1. After preparation, the machine suggests to rinse the steam wand.
2. If you want to proceed, place a cup or other recipient under the steam wand and press "Rinse". (If you want to postpone this operation, press "Later": the steam wand rinsing light (C4) comes on).
3. Rinsing starts: after a few seconds, steam delivery automatically stops and the machine confirms rinsing is completed.
4. Press "X" to go back to homepage.

#### **Please note:**

You can make the steam wand rinsing any time, proceeding as follows:

1. Press "Steam" button (B3).
2. Press  at the bottom of the steam's image.
3. Put a cup or other recipient under the steam wand and press "Rinsing" to proceed.

### 14.4 Hot water

1. Press "Steam" button (B3).
2. Put the cup under the steam wand (A14).

#### **Direct selection:**

3. On the homepage (C), press the image corresponding to hot water. Preparation begins and stops automatically.

#### **Customising the quantity:**

3. Press the customising settings (C6) at the bottom of the image corresponding to hot water.
4. Select the size of the drink, then press "Brew".
5. Delivery starts and stops automatically.

#### **Please note:**

- To stop brewing, press "Stop" or "Cancel".
- As soon as delivery has ended, to increase the quantity of water, just press "Extra". When the required quantity is reached, press "Stop" or "Cancel".

## 15. MAKING "TO GO" DRINKS

Use your personal mug and create your drink to go.

Visit [delonghi.com](http://delonghi.com) to find out the recommended mug:

	Travel mug (sold separately) (capacity 236 ml/ 130mm)
	Type: DLSC074
	EAN:8004399024465

You can use your machine to make "To go" drinks.

	Hot	Cold
Coffee	✗	✓
Americano	✓	✓

Proceed as follows:

1. Press the customising settings (C6) at the bottom of the image corresponding to the coffee you want to make.
2. Press : you entered the "to go" function.
3. Press "Next" then "Ok".
4. Pressing  displays informations of the size of the travel mug;
5. Press  to adjust the level of the "to go" size of your drink: press "Save".
6. The new "to go" preference is saved and next time will be automatically set. Press "X".
7. Press "Brew": the machine proceed preparing the drink as usual.

#### **Please note:**

- Each time you use a mug different from the one used previously, we recommend you remain nearby to check the quantity of drink delivered.
- If you save the new settings, they are memorised ONLY in the selected profile.
- To maintain the temperature of hot drinks, preheat the travel mug with hot water.
- When choosing the travel mug to use, make sure it is no taller than 14 cm.

#### **Important**

- Before screwing on the lid, open the closing cap to release the pressure;
- You should use the contents within a maximum of 2 hours. After that time, empty and clean as described in the following section.
- For more information, see the leaflet attached to the travel mug.

## 15.1 Cleaning the De'Longhi travel mug after use

(sold separately)

For hygiene reasons, the travel mug should always be cleaned after use. Do not use abrasive materials that could damage the surface of the container.

Proceed as follows:

1. Unscrew the lid and rinse the container and lid with hot drinking water (40°C).
2. Soak the components in hot water (40°C) with washing up liquid for at least 30 minutes. Do not use scented detergents.
3. Clean the inside of the container and the lid with a clean sponge and washing up liquid, removing any visible dirt.
4. Rinse all components with hot drinking water (40°C).
5. Dry all components with a clean, dry cloth or paper towels, then reassemble.
6. Wash the lid in the dishwasher once a week. The metal container is not dishwasher safe

## 16. CHANGING BEAN HOPPER



Switch the bean hopper (D4) to enjoy a different coffee blend.

Proceed as follows:

1. Rotate the bean hopper in "unlock" position (fig. 10) and leave it in this position until the procedure is finished;
2. The display shows the "Switch mode" procedures: select one option and follow the steps:

**Choose a drink (Use the remaining beans to make a drink of your choice):**

3. Select "Choose a drink": the homepage shows the drinks you can make (the intensity is automatically selected and cannot be changed);
4. Proceed brewing the drink as usual;

**Grind & Empty (Run a grinding cycle to remove the remaining beans):**

3. Select "Grind & Empty": the machine grinds the remaining beans;
4. Press "Start" and wait until the machine automatically stops;

**Now you can insert the new bean hopper**

5. Remove the bean hopper;
6. Insert the new bean hopper in its housing and rotate it clockwise to lock it. For correct operation, align the unlock symbol to the mark on the ring (fig. 6) and, once inserted, rotate it to the lock position (fig. 7).

**Please note:**

If you directly change the bean hopper without emptying the grinder, the coffee brewed will be with a mix between the old and new blends.

**Attention:**

- It is normal to find coffee powder on the bean hopper's housing on the machine.
- If it is difficult to insert the new hopper, make sure there is no coffee beans on the hopper housing on the machine. In this case, clean the hopper's housing on the machine with the cleaning brush (D2) and a soft, damp cloth. To remove the coffee powder, use a hand vacuum cleaner.

## 17. "MY" FUNCTION ("Hot" drinks only)

With the "my function", you can customise the drink as follows:

1. Make sure the profile (B4) whose drink you want to customise is active;
2. Press drink customising (C6) at the bottom of the image corresponding to the drink you want to make (fig. 17);
3. Press ;
4. Press "Start" and follow the guided procedure.

**Please note:**

- If you save the new settings, they are memorised ONLY in the selected profile.
- When you customise a single drink, the respective double version is also customised.
- Press "X" to exit programming at any moment. The values will not be saved.
- When a drink has been customised, "Reset" (on the right side) and "my" (close to "Brew") appear in the settings. Press "Reset" to reset the default values for the drink. Press "my" to switch to default settings.

Drink	Standard quantity	Programmable quantity
Espresso	40 ml	20-180 ml
2X Espresso	40 ml + 40 ml	20-180 ml + 20-180 ml
Espresso Lungo	120 ml	60-180 ml
Coffee	180 ml	100-270 ml
Long	160 ml	115-250 ml
Americano	150 ml	70-480 ml
Hot water	250 ml	20-420 ml

## 18. CLEANING

### 18.1 Cleaning the machine

The following parts of the machine must be cleaned regularly:

- the appliance's internal circuit;
- bean hopper (A1);
- coffee grounds container (A8);
- drip tray (A12) and drip tray grille (A11);
- water tank (A7) and lid (A6);
- coffee spouts (A13);
- pre-ground coffee funnel (A19);
- brewing unit (A3), extractable after opening the brewing unit flapdoor (A4);
- steam wand (A14)

#### **Important!**

- Do not use solvents, abrasive detergents or alcohol to clean the coffee machine. With De'Longhi superautomatic coffee machines, no chemical products are required for cleaning purposes.
- Do not use metal objects to remove encrustations or coffee deposits as they could scratch metal or plastic surfaces.

dishwasher safe 	hand wash only 
drip tray (A12)	bean hopper (A1)
coffee grounds container (A8)	coffee grounds container support (A9)
pre-ground coffee funnel (A19)	cup tray (A10)
tray grille (A11)	water tank (A7)
steam wand (A14)	removable brewing unit (A3)

### 18.2 Cleaning the internal circuit

If the appliance is not used for more than 3 days, before using it again, we strongly recommend empty and fill the water tank with fresh potable water, switch it on and perform 2/3 rinse cycles by selecting the "Rinsing" function ("9.1 Rinsing").

#### **Please note:**

After cleaning, it is normal for the grounds container (A8) to contain water.

### 18.3 Cleaning the bean hoppers

Periodically clean the bean hopper (A1). Proceed as follows:

1. Rotate counterclockwise the bean hopper to the "unlock" position (fig. 10) and leave it in this position until the procedure finishes: you enter the "Switch mode".
2. Select one option and follow the dedicated steps.
3. Then remove the bean hopper.

4. Remove the bean hopper lid. If the bean hopper is not empty, store the coffee beans in a container.
5. Clean all visible residues both internally and externally by passing the hopper with a soft, damp cloth.
6. Clean the hopper's housing on the machine with the cleaning brush (D2) and a soft, damp cloth. To remove the coffee powder, use a hand vacuum cleaner.
7. Dry the bean hopper and its lid with a dry, clean cloth or paper and check the hopper is completely dry.
8. Fill the hopper with coffee beans, close it with its lid. Insert the bean hopper in its housing and rotate it clockwise to lock it. For correct operation, align the "unlock" symbol to the mark on the ring (fig. 6) and, once inserted, rotate it to the "lock" position (fig. 7)

### 18.4 Cleaning the coffee grounds container

When the machine requires it, the grounds container must be emptied and cleaned. The appliance cannot be used to make coffee until you have cleaned the grounds container (A8). Even if not full, the empty grounds container message is displayed 72 hours after the first coffee has been prepared. For the 72 hours to be calculated correctly, the machine must never be disconnected from the mains power supply.

#### **Important! Danger of scalding**

If you make a number of milk-based drinks one after the other, the metal cup tray (A10) becomes hot. Wait for it to cool down before touching it

To clean (with the machine on):

1. Remove the drip tray (A12) and grounds container (A8) (fig. 12).
2. Empty the drip tray and grounds container and clean thoroughly to remove all residues left on the bottom.
3. Put the drip tray complete with grille (A11) and grounds container back in the appliance.


#### **Important!**

When removing the drip tray, the grounds container must be emptied, even if it contains only a few grounds. If this is not done, when you make the next coffees, the grounds container will fill up more than expected and clog the machine.

### 18.5 Cleaning the drip tray and drip tray grille

#### **Important!**

The drip tray (A12) is fitted with a level indicator (red) showing the amount of water it contains (fig. 23).

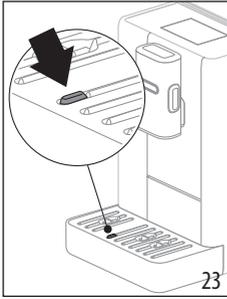

Before the indicator protrudes from the cup tray (A10), the drip tray must be emptied and cleaned, otherwise the water may overflow the edge and damage the appliance, the surface it rests on or the surrounding area. To remove the drip tray, proceed as follows:

1. Remove the drip tray with all the components;
2. Remove coffee grounds container (A8) and its support (A9) and empty the coffee grounds container;
3. Remove the cup tray (A10) and drip tray grille (A11) and wash all components;
4. Put the drip tray complete with all the components back in the machine.

**Important!**


When removing the drip tray, the grounds container must be emptied, even if it contains few grounds. If this is not done, when you make the next coffees, the grounds container will fill up more than expected and clog the machine.

**18.6 Cleaning the inside of the machine**

**Danger of electric shock!**

Before cleaning internal parts, the machine must be turned off (see section “8. Turning the appliance off”) and unplugged from the mains power supply. Never immerse the machine in water.

1. Check regularly (about once a month) that the inside of the appliance (accessible after removing the drip tray (A15)) is not dirty.
2. Remove all residues with a vacuum cleaner (fig. 24).

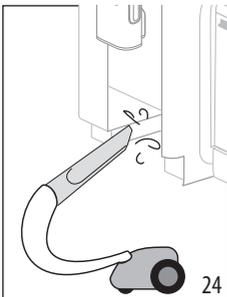

**18.7 Cleaning the water tank**

Clean the water tank (A7) periodically (about once a month) and whenever you replace the water softener filter.


1. Extract the water tank, remove the water softener filter (if present) and rinse with running water;
2. Empty the water tank and clean it using hot water and a clean, non-abrasive cloth if necessary. Rinse thoroughly with water;
3. If previously extracted, put the filter back, fill the tank with fresh water up to the MAX level and put the tank back;
4. (Models with water softener filter only) Deliver 100ml of hot water to reactivate the filter.

**Please note:**

If the appliance is not used for more than 3 days, you should clean the tank as described above.

**18.8 Cleaning the coffee spouts**

1. Clean the coffee spouts (A13) regularly with a sponge or cloth (fig. 25);
2. Check the holes in the coffee spouts are not blocked. If necessary, remove coffee deposits with a toothpick (fig. 26).

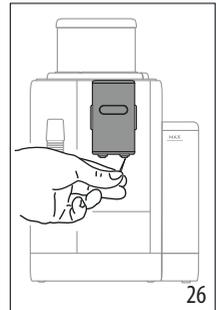

**18.9 Cleaning the pre-ground coffee funnel**

Clean the pre-ground coffee funnel (A19) regularly (about once a month) with a damp cloth. Proceed as follows:

1. Turn the machine off (see chapter “8. Turning the appliance off”);
2. Open the accessories storage lid (A20);
3. Remove the coffee scoop/cleaning brush (D2);
4. Extract the removable funnel.
5. Clean the funnel with the brush provided;
6. Reinsert the funnel in its housing;
7. Close the lid.

**Important!**

After cleaning, make sure there are no accessories left in the funnel. The presence of foreign objects in the funnel while the machine is in operation could damage the appliance.


**18.10 Cleaning the brewing unit**

The brewing unit (A3) must be cleaned at least once a month.

### Important!

The brewing unit cannot be extracted while the machine is on.

1. Make sure the machine is correctly turned off (see section "8. Turning the appliance off");
2. Remove the water tank (A7);
3. Open the brewing unit door (A4) (fig. 27) on the right side of the appliance;

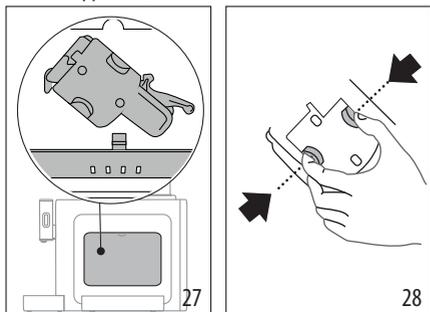

4. Press the two coloured release buttons inwards and at the same time pull the brewing unit outwards (fig. 28);
5. Soak the brewing unit in water for about 5 minutes, then rinse under the tap;


### Important!

RINSE WITH WATER ONLY  
NO DETERGENTS - NO DISHWASHER

6. Do not use detergents when cleaning the brewing unit, as they could damage it.
7. Use a cleaning brush to remove any coffee residues left in the brewing unit housing;
8. After cleaning, replace the brewing unit by sliding it onto the internal support, then push the PUSH symbol fully in until it clicks into place;

### Please note:

If the brewing unit is difficult to insert, before insertion, adapt it to the right size by pressing the two levers (fig. 29).

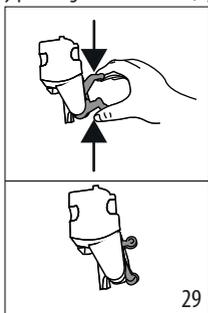

9. Once inserted, make sure the two coloured buttons have snapped out;
10. Close the brewing unit door;


11. Put the water tank back.

### 18.11 Complete cleaning of steam wand


Each week the appliance reminds you to clean the steam wand (A14) thoroughly and proposes the correct cleaning sequence: this cleaning will grant optimal results through the time.

Proceed as follows:

1. Wait until steam wand cools down.
2. Rotate counterclockwise and pull downwards the frother (A16) (fig. 30).

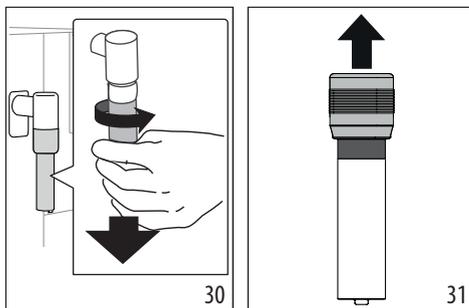

3. Move the frother ring (A15) upwards (fig. 31).
4. Remove the nozzle (A17) downwards (fig. 32).

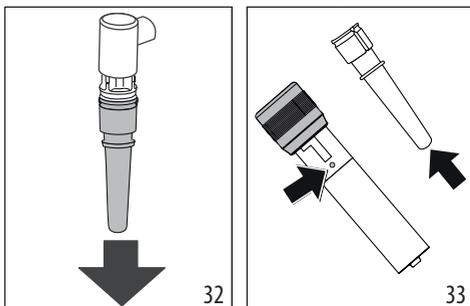

5. Wash in a dishwasher (recommended) or by hand as indicated below:
  - **In a dishwasher:** Rinse all the above components with hot running drinking water (at least 40°C), then place them in the top basket of the dishwasher and run a programme at 50°C, e.g. standard ECO.
  - **By hand:** Thoroughly rinse all the components with hot running drinking water (at least 40°C) to remove all visible milk residues; make sure to run the water through the holes (fig. 33). Then immerse all the components in hot drinking water (at least 40°C) and washing up liquid for at least 30 minutes. Rinse all the above components thoroughly under hot drinking water, rubbing them one at a time with your hands.
6. Make sure there are no milk residues on the holes. If necessary, scrape the groove with a toothpick;
7. Dry all the components with a clean dry cloth;

8. Reassemble the steam wand.

**Please note:**

Each week the appliance reminds you to clean the steam wand thoroughly and proposes the correct cleaning sequence again.

## 19. DESCALING

**Important!**

- Before use, read the instructions and labelling on the descaler pack.
- Use De'Longhi descaler only. Using unsuitable descaler and/or performing descaling incorrectly may result in faults not covered by the manufacturer's guarantee.
- Descaler could damage delicate surfaces. If the product is accidentally spilt, dry immediately.



To descale	
Descaler	De'Longhi descaler
Container	Recommended capacity: 1,5 l
Time	~30min

Descale the appliance when the corresponding message appears on the homepage. To descale immediately, press "Ok" and follow the step by step instructions on the display.

To descale the appliance later, press "Cancel". The  symbol (C4) appears on the homepage to remind you the appliance needs descaling. (The message appears each time you turn the appliance on).

To access the descaling menu:

1. Press the settings menu icon (C5) on the homepage;
2. Scroll through the menu items until "Descaling" is displayed;
3. Press "Start" to enter the guided descaling procedure;
4. Press "Yes" to begin;
5. Remove and empty the drip tray (A12) and coffee grounds container (A8) (fig. 14), then put both back in the appliance and press "Next";
6. Remove the water tank (A7), lift the lid (A6) and (if inserted) remove the filter. Empty the tank completely.
7. Pour the descaler into the tank up to the level A marked inside the tank (equal to one 100ml pack), then add water (one litre) up to level B (fig. 34). Put the water tank (with lid) back in the appliance and press "Start";

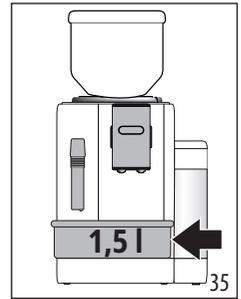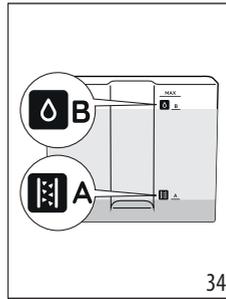

8. Place an empty 1,5 l container under the spouts (fig. 35). Press "Done": desing starts ("Back" to go back to the previous screen or "X" to exit the procedure, remembering to remove the descaling solution from the tank)


**Important! Danger of scalding**

Hot water containing acid flows out of the spouts. Take care to avoid contact with splashes of this solution.

9. The descale programme starts and the descaler liquid comes out of the hot water and coffee spouts. A series of rinses is performed automatically to remove all the scale residues inside the coffee machine;

After about 20 minutes, the descaling action ceases;

10. The appliance is now ready to be rinsed through with clean water. Empty the container used to collect the descaler solution. Remove the water tank, empty, rinse under running water, fill with fresh potable water up to the MAX level and put back in the appliance (fig. 36). Press "Next";

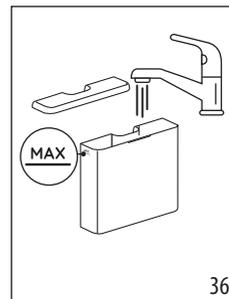

11. Place the container used to collect the descaler solution empty under the spouts and press "Yes" to start first rinsing;
12. Hot water is delivered from both the hot water spout and coffee spouts;
13. When the water in the tank has run out, empty the container used to collect the rinsing water;
14. Extract the water tank and put back the water softener filter if removed previously.

15. Fill the tank with fresh water up to the MAX level, put back in the appliance and press "Next" to continue with the second rinsing.
16. Place the container used to collect the descaler solution empty under the spouts and press "Next" to start another rinsing cycle;
17. When the water in the tank has run out, empty the container used to collect the rinsing water, remove and empty the drip tray (A12) and grounds container (A8), then put back in the appliance. Press "Next".
18. The descaling process is now complete". Press "OK".
19. Extract the water tank, top up to the max level and put it back in the machine
20. The appliance performs a rapid preheat cycle and then goes back to the homepage.


**Please note:**

- If the descaling cycle is not completed correctly (e.g. electrical power failure) the appliance will request to complete it next time you switch it on;
- After descaling, it is normal for the grounds container (A8) to contain water.
- If the water tank has not been filled to the MAX level after descaling, the appliance prompts for a third rinse to ensure that the descaler solution has been completely eliminated from the machine's internal circuits. Before starting rinsing, remember to empty the drip tray.

## 20. WATER SOFTENER FILTER

To ensure the performance of the machine remains constant over time, we recommend using a De'Longhi water softener filter.


For more information, visit the [www.delonghi.com](http://www.delonghi.com) website.

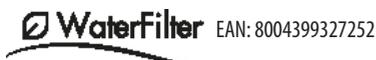

To use the filter correctly, follow the instructions below.

### 20.1 Installing the filter


1. Press the settings menu (C5);
2. Scroll through the pages and select "Water filter";
3. Press "Yes" to enter the guided procedure
4. Remove the filter from the packaging and turn the date indicator to view the next 2 months (fig. 37);

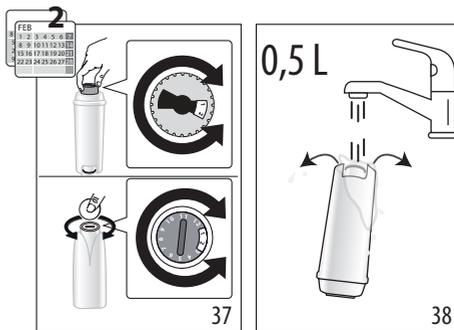

**Please note:**

The filter lasts about two months if the appliance is used normally. If the machine is left unused with the filter installed, it will last a maximum of 3 weeks.

5. Press "Next" to continue ("Back" to go back to the previous screen; "X" to cancel the operation);
6. To activate the filter, run potable water through the hole in the centre of the filter until water comes out of the openings at the side for more than a minute (fig. 38). Press "Next";
7. Extract the water tank (A7) (fig. 2) and fill with potable water; insert the filter in the water tank and immerse the bottom pressing the center of the filter 2 or 3 times to enable the air bubbles to escape (fig. 39). Press "Next";

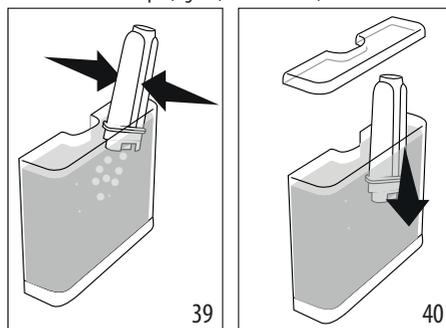

8. Insert the filter in the filter housing (fig. 40) and push it down firmly. Close the tank with its lid (A6) and ; press "Next";
9. Position an empty container with a minimum capacity of 0.5 litres under the hot water spout (fig. 8) and press "Yes" to activate the filter;

10. The appliance delivers hot water, then stops automatically. Press "OK" to go back to the homepage;
11. The filter is now active and you can use the coffee machine.

## 20.2 Replacing or removing the filter

Replace the filter when the replace filter message appears on the homepage (C). To replace the filter immediately, press "OK" and follow the instructions from point 3 of the previous section. To replace the filter later, press "Cancel". The filter symbol appears on the display to remind you the filter needs replacing.

To replace, proceed as follows:

1. Press the settings menu (C5);

2. Scroll through the pages until "Water filter" is displayed, then press "Read More";
3. Press "Yes" to enter the guided procedure;
4. Extract the water tank (A7) and exhausted filter.
5. To remove the filter, press "OK" ("Back" to go back to the previous screen; "X" to cancel the operation);
6. To replace the filter, press "Next" and follow the operations described in the previous section from point (4).

### **Please note:**

After two months (see date indicator) or when the appliance has not been used for 3 weeks, you should replace the filter even if the message has not yet been displayed.

## 21. DISPLAYED MESSAGES

DISPLAYED MESSAGE	MEANING	SOLUTION
Time to fill the water tank with fresh water and then insert it	Insufficient water in the tank (A7).	Take out the tank, fill with potable fresh water to Max level, and reposition in the machine.
Please insert the water tank	The tank (A7) is not correctly in place.	Insert the tank correctly and press as far as it will go.
Fill the tank with fresh water. Please empty drip tray and grounds container	The amount of water in the tank is not enough to make the drink and the message to empty the grounds container will be displayed shortly.	The appliance asks for both operations to be performed so that no further intervention will be necessary and more drinks can be made one after the other without interruption.
Please insert the brewing unit	The brewing unit (A3) has not been replaced after cleaning.	Insert the brewing unit as described in section "18.10 Cleaning the brewing unit"
Please empty grounds container	The grounds container (A8) is full.	Clean as described in section "18.4 Cleaning the coffee grounds container"
Please insert grounds container and drip tray	The grounds container (A8) and/or drip tray (A12) is not correctly in place or is missing.	Insert the drip tray complete with grounds container and press as far as it will go.
Please add your preferred pre-ground coffee. - max: one scoop!	Preparation with pre-ground coffee has been selected.	Make sure the funnel (A19) is not blocked, then add one level scoop (D2) of pre-ground coffee, press "Next" on the display and follow the instructions in section "11.4 Making coffee using pre-ground coffee".
Fill the beans hopper and press "OK" to resume brewing	The coffee beans have run out.	Fill the beans hopper (A1) and press "OK" to resume brewing
Just doing a little cleaning. I'll be back in a few seconds	The appliance has detected impurities in its internal circuits.	Wait for the appliance to be ready again and reselect the required drink. Contact customer services if the problem persists.
		→

DISPLAYED MESSAGE	MEANING	SOLUTION
The new settings have not been saved	While customising the drinks (see section "17. "My" function ("Hot" drinks only) u"), preparation has been deliberately interrupted by pressing "X" or an alarm has been triggered.	Press "X" to go back to the homepage (C) to view the alarm causing the interruption. Follow the instructions corresponding to the alarm displayed (see section "21. Displayed messages")
Sorry, I am unable to complete your drink. Please reduce the intensity and try again	The grinding is too fine and the coffee is delivered too slowly or not at all.	Select a milder "Intensity" (see "11.3 Customising the drinks")
	If the water softener filter is present, an air bubble may have been released inside the circuit, obstructing delivery.	Press "OK" and deliver a little water (see section "14.4 Hot water") until the flow is regular. If the problem continues, remove the filter (see section "20.2 Replacing or removing the filter")
If the delivery is slow and your espresso tastes burned, increase the grinding level by 1 (+1)	The grinding is too fine and the coffee is delivered too slowly or not at all.	Press "OK" and adjust the coffee grinder (see "9.13 Grinder setting").
Sorry, I am unable to complete your drink. Please reduce the intensity and try again	Too much coffee has been used.	Select a milder "Intensity" (see "11.3 Customising the drinks") or reduce the quantity of pre-ground coffee (maximum 1 measure). Press "OK" to go back to the homepage or wait until the message disappears.
Remember to store the milk carafe in the fridge	A milk-based drink has been prepared and the milk carafe is still inserted in the appliance	Remove the carafe and place in the refrigerator.
The machine needs to be descaled. Press OK to start (~30min)	The machine must be descaled.	To proceed with descaling, press "OK" and follow the guided procedure, otherwise press "Cancel". In this case, the  symbol (C4) appears on the homepage (C) to remind you that descaling is needed (see section "19. Descaling").
Oops, the process has been interrupted	Descaling process interrupted or not correctly completed	Press Ok to continue (see chap. "19. Descaling").
It's time to replace your water filter. Ready?	The water softener filter is exhausted.	Press "OK" to replace or remove the filter, or "Cancel" to carry out the procedure later. Follow the instructions in section "20. Water softener filter".
Something's not right: Can you refer to the user manual/ Coffee Link mini program to make things better, please?	The inside of the appliance is very dirty.	Clean the inside of the appliance thoroughly, as described in section "18. Cleaning u". If the message is still displayed after cleaning, contact De'Longhi Customer Services and/or an approved Service Centre
		→

DISPLAYED MESSAGE	MEANING	SOLUTION
Water circuit empty. Press OK to start filling process	The water circuit is empty	Press "OK" to fill the circuit. Delivery stops automatically. It is normal for there to be water in the drip tray (A12) after filling. If the problem persists, make sure the water tank (A7) is fully inserted.
	A new water softener filter has been inserted	Make sure you have followed the instructions for inserting the new filter (sections "20.1 Installing the filter" and "20.2 Replacing or removing the filter"). If the problem continues, remove the filter.
	Energy saving is enabled.	To disable energy saving, proceed as described in section "9.5 General".
	The machine must be descaled.	The descaling procedure described in section "19. Descaling u" needs to be performed.
	The filter must be replaced (D4)	Replace the filter or remove it as described in section "20. Water softener filter".
	Remember to rinse the steam wand (A14)	See section "14.3 Cleaning the steam wand after every use"
	The connection is configured in the appliance settings menu (C5).	Connect to the Coffee link mini program.
	Indicates that the appliance is connected.	To disable the connection, proceed as described in section "9.4 Connectivity".
	Connectivity is active, but the cloud cannot be reached.	If just turned on, wait for the appliance to complete the start up procedure.
		If the problem continues, disable the connection then enable again as described in section "9.4 Connectivity".
		Make sure the lights on the router indicate that the network is active.
		If the problem continues, turn the appliance and home router off then on again.
The coffee beans profile has changed! Remember to brew at least 3 coffees before changing the coffee beans profile	The appliance needs to brew at least 3 coffees before Bean Adapt can be adjusted	Brew at least 3 coffees with the new coffee before changing the Bean Adapt

## 22. TROUBLESHOOTING

Below is a list of some of the possible malfunctions.

If the problem cannot be resolved as described, contact customer services.

PROBLEM	POSSIBLE CAUSE	SOLUTION
The appliance does not come on	It is not plugged into the mains socket.	Plug into the mains socket (fig. 1) and push the ON/Standby button (B1).
It is difficult to insert the bean hopper	There are coffee beans in the hopper's housing on the machine	Clean the hopper's housing on the machine with the cleaning brush (D2) and a soft, damp cloth. To remove the coffee powder, use a hand vacuum cleaner.
The coffee is not hot.	The internal circuits of the appliance have cooled down because 2-3 minutes have elapsed since the last coffee was made.	Before making the coffee, heat the internal circuits by rinsing using the rinse function (in the setting menu).
	Coffee temperature setting too low.	Set a hotter coffee temperature in the settings menu (C5).
	The cups were not preheated.	Warm the cups by rinsing them with hot water (Please note: you can use the hot water function).
	The machine must be descaled	Proceed as described in section "19. Descaling u". Next, check the water hardness in the setting menu and make certain the machine setting matches the local water supply hardness.
The coffee is weak or not creamy enough.	The coffee is ground too coarsely.	Access the settings menu (C5) and follow the instructions to adjust grinding. The effect is only visible after delivering 3 coffees.
	The coffee is unsuitable.	Use coffee for espresso machines.
	Coffee not fresh.	The coffee pack has been opened for too long and has lost its taste.
The coffee is delivered too slowly or a drop at a time.	The coffee is ground too finely.	Access the settings menu (C5) and follow the instructions to adjust grinding. The effect is only visible after delivering 3 coffees.
Coffee does not come out of one or both spouts.	The coffee spouts (A13) are blocked.	Clean the coffee spouts with a sponge or toothpick.
The coffee delivered is watery.	The funnel (A9) is clogged.	Clean the funnel with the help of the brush (D2) as described in section "18.9 Cleaning the pre-ground coffee funnel".
Too little drink is delivered	Insufficient water in tank	Fill the tank to MAX level.
→		

<b>PROBLEM</b>	<b>POSSIBLE CAUSE</b>	<b>SOLUTION</b>
The appliance does not make coffee.	The appliance has detected impurities in its internal circuits. "Just doing a little cleaning..." is displayed.	Wait for the appliance to be ready again and reselect the required drink. Contact customer services if the problem persists.
The brewing unit (A3) cannot be extracted.	The appliance has not been turned off correctly	Turn the appliance off by pressing the  button (B1) (see section "8. Turning the appliance off").
At the end of descaling, the appliance requests a third rinse.	During the two rinse cycles, the water tank (A7) has not been filled to the MAX level	Follow the instructions displayed by the appliance, but first empty the drip tray (A12) to avoid the water overflowing.
The milk contains large bubbles and there is little froth.	The milk is not cold enough or not suitable for the drink requested	For best results, make sure to use the right type of milk to prepare hot or cold drinks (see section "14.1 Steam to froth milk or plant-based drinks"). Use drinks at refrigerator temperature (about 5° C).
	The steam wand (A14) is dirty	Clean thoroughly the steam wand as described in section "18.11 Complete cleaning of steam wand"
	Plant-based drinks have been used.	For best results, use drinks at refrigerator temperature (about 5° C). Adjust the amount of froth as suggested in the display
The machine emits noises or small puffs of steam while not in use	The machine is ready for use, or has recently been turned off, and condensate is dripping into the hot vaporiser	This is part of normal operation. To limit the phenomenon, empty the drip tray.
The appliance emits puffs of steam from the drip tray (A12) and/or there is water on the surface the appliance rests on.	The drip tray grille (A11) has not been put back after cleaning.	Put the drip tray grille back in the drip tray.
The To Go drink is too much or has spilled out of the travel mug	An unsuitable quantity has been selected	Choose a smaller quantity
		Adjust the quantity in the mug so that the next drink is prepared correctly
Too little To Go drink is prepared	An unsuitable quantity has been selected	Choose a larger quantity
		Adjust the quantity in the mug so that the next drink is prepared correctly
The App is not working	App malfunction	Close the App, then run it again
The App indicates a problem, but there is no problem with the appliance	The data between the appliance and App are not synchronised	Disable and re-enable connectivity (in the setting menu)

## 23. TECHNICAL DATA

---

Voltage:	220-240 V~ 50-60 Hz
Power:	1450W
Pressure:	1.9 MPa (19 bars)
Water tank capacity:	1,4 L
Size LxDxH:	250x430x390 mm
Cord length:	1200 mm
Weight:	11 kg
Beans hopper capacity:	250 g
Frequency:	2400/2500 MHz
Maximum transmission power	20 mW

De'Longhi reserves the right to modify the technical specification and styling of its products at any moment, without compromising their functionality and quality.

### 23.1 Tips for Energy Saving

- Set auto-off to 15 minutes (setting menu);
- Enable Energy Saving (setting menu);
- Always carry out the descaling cycle when prompted by the machine.





★若有任何需求请与下述地址联系：

☆德龙电器（上海）有限公司

地址：上海市普陀区凯旋北路1188号38层01-05室

电话：(021) 3135 8858 传真：(021) 3135 8262 邮编：200063

客服热线：400 827 1668 网址：<https://www.delonghi.com/zh-cn>

