


咖啡机

使用说明书


# 目 录

 
1.基本安全警告  2.基本信息 2.1 使用说明2.2 使用什么水2.3 使用什么制作牛奶/植物奶基底饮品	4 4 4 5 5 5 5 5 5 5 5	11.制作咖啡	15 15 16 16 17 17 18 18
4.清洁和保养 4.1 首次使用前须清洗 4.2 长时间不使用 4.3 水箱的清洁与保养 4.4 萃取器的清洁与保养(如可拆卸) 4.5 牛奶容器的清洁与保养(如包含此部件) 4.6 咖啡壶的清洁与保养(如包含此部件) 4.7 随行杯的清洁与保养(如包含此部件) 4.8 除垢液	5 6 6	14.制作含牛奶饮品 14.1 准备牛奶容器(E) 14.2 使用哪种牛奶? 14.3 倒入牛奶并安装牛奶容器 14.4 调节奶泡量 14.5 制作牛奶饮品 14.6 每次使用后清洁牛奶容器 15.制作热水	18 18 19 19 19
5.描述       5.1 机器 (A) 描述         5.2 控制面板 (B) 描述          5.3 主页 (主屏幕) (C) 描述          5.4 配件 (D) 描述          5.5 牛奶容器 (E) 描述 (配备2个)	7 7 7 7	16.制作"随行杯"饮品	21
6.首次使用	8	19.1 清洁机器	22
7.开启机器	10	19.2 清洁机器内部回路 19.3 清洁咖啡豆仓 19.4 清洁咖啡盛渣盒	23
8.关闭机器	10	19.5 清洁滴水盘和滴水盘网格盖板	24
9.菜单设置	11	19.6 清洁咖啡机内部	24
9.1 冲洗		19.8 清洁咖啡流出口	25
9.2 除垢		19.9 清洁咖啡粉进料管	25
9.3 软水过滤器 9.4 连接	11	19.10 清洁萃取器	25
9.4 凭货		19.11 彻底有宿牛奶谷裔(E)	20
9.6 自动关机		20.除垢	26
9.7 支持	12		
9.8 研磨并清空	12	21.软水过滤器	28
9.9 牛奶容器清洁		21.1 安装软水过滤器	28
9.10 咖啡温度 9.11 数据统计	12	21.2 更换或移除软水过滤器	29
9.11 数据纸目	13	22.显示信息	30
9.13 日期和时间			
9.14 研磨设置	13	23.故障处理	34
9.15 水硬度	13		
9.16 清空水回路	14	24.技术参数	36
9.17 默认值	14	24.1 节能小贴士	36
10.饮品选择	14		

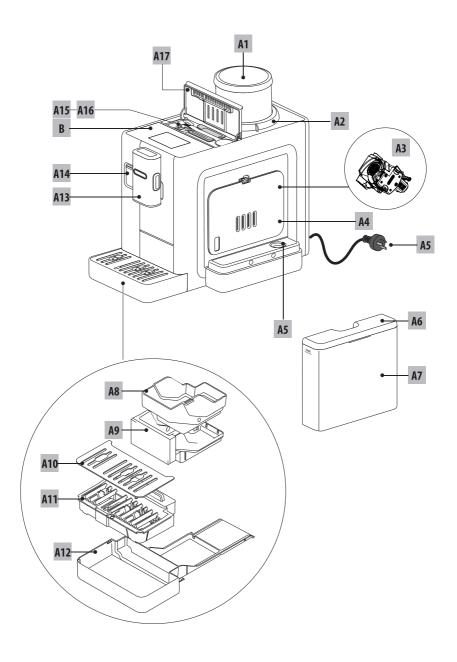

ВС



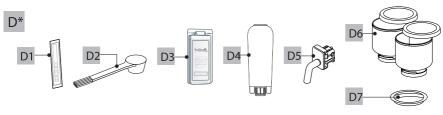

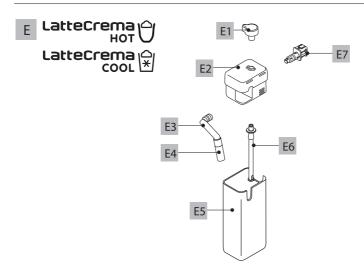

# 1. 基本安全警告

- •有肢体、感官或精神能力缺陷或缺少使用经验 和知识的人(包括儿童)不允许使用、除非有负 责他们安全的人对他们进行与机器使用有关的监 督或指导。
- •请您照看好儿童、确保他们不玩耍本机器。
- •如果电源软线损坏,为了避免危险,必须由制造 商、其服务机构或类似的专业人员更换。
- •指定用途: 本机器的设计和制造的用途是制作 咖啡、含牛奶饮品和热水。在水箱中仅可使用饮 用水。切勿制作机器使用说明书上未提及的饮 品。任何其他用途均被视为不当使用,存在安全 风险。制造商对于未正确使用该电器引起的损害 概不负责。
- 机器使用后加热部件的表面会持续发烫, 机器 外部也会根据使用情况持续发烫几分钟。
- •彻底清洁所有部件,特别注意与牛奶接触的部 件。
- 儿童不得在无人照看下清洁和维护产品。
- •错误使用产品可能引起潜在伤害。
- •本品适用干海拔2000m以下地区使用。
- •重要提示:为防止损坏机器,请勿使用碱 性清洁剂清洁: 请使用软布, 以及在适用情况下 使用中性清洁剂清洁机器。
- •此机器的设计和生产仅限家庭使用。不适用在 以下场所使用:
- 1. 商店,办公室或其他工作环境下的员工厨房。
- 2. 农场住所。
- 3. 在酒店、旅馆和其它住宅类型的环境中,供顾 客使用。

- 4. 仅提供床位和早餐的类似环境。
- •如果机器插头或电源线损坏,必须且只能由德 龙指定的售后服务人员进行更换, 以避免发生各 种危险。
- •带有可拆卸电源线的机器:避免机器背面的电 源线连接器或插座被溅水。
- •重要提示:表面为玻璃材质的机器,如果 表面破裂,请勿使用。

# 警告:如果产品表面有裂纹,请勿 使用。

- •使用过程中,切勿将咖啡机放在橱柜或厨房单 元格内。
- •切勿将机器浸入水中。



请勿将机器浸入任何液体中进行清洁。

这是一台电器设备, 因此可能导致触电。因此您 应该遵守以下安全警告:

- •切勿用湿的手或湿的脚接触该机器。
- •切勿用湿的手接触插头。
- •确保能随时接近机器使用的插座,必要时能拔 下机器的插头。
- •直接拔下电源插头,切勿拉扯电源线,以免损 坏电源线。
- •要完全断开机器的电源, 请拔下电源线插头。
- 如果机器发生故障,不要试图自己检修。关闭 电源, 拔下插头, 并与售后服务中心联系。
- •在对机器讲行外部清洁之前, 请先关闭电源, 拔下电源插头,并等待机器冷却。

**重要提示:** 切换默认的自动关机时间会导致 耗电量增加。



# 重要!

所有包装材料(塑料袋、聚苯乙烯泡沫塑料)必 须远离儿童存放。

窒息危险。本产品可能含有较小的零部件。清洁 和维护期间可能需要拆卸其中的一些小零件。请 小心装卸,把小零件置于儿童够不到的地方。



# 烫伤危险!

本机器运作时可能会产生热水和蒸汽。

在操作过程中(自动冲洗、制作热饮、制作蒸 汽、清洁机器等),请避免接触飞溅的热水或 者蒸汽。

机器运行时咖啡杯架可能会变得很烫。

# 保修

我们为产品提供为期两年的保修,保修期从购买 日开始计算。

在保修期内对于产品因生产过程引起的各种瑕疵,我们会视情况更换零件或整个产品。

申请保修必须将本产品和能够证明购买日期的证据(购货发票)一起交给授权的德龙维修站,本产品附有一张授权维修站名单。

请确认已将购货发票放置在安全的地方。

# 上述保修不包括以下内容:

•由于使用不当而造成的产品损坏,如使用错误的电流、电压,将产品插入不合格的插座,或者 人为损坏等。

- •正常使用引起的产品老化、磨损,但对产品的 使用功能及价值影响不大。
- •按行业惯例定义的易损、易耗件。
- •如果产品经过未经授权的人员修理,或产品使用了非本公司(德龙)的零件,保修期立即终止。
- •非家庭使用(如工业、商业用)引起的损坏
- •在保修期內提供的服务并不影响保修期按时结束,保修期中替换的零件或整机的保修服务于本产品的保修期同时终止。
- 除非确有法律规定,本公司不对其他任何要求 负责。同供货商的销售合同中规定的各项权利不 受此保修的影响。

如果需要保修或维修,请与当地的维修站或就近 的维修站联系。

# 2. 基本信息

#### 2.1 使用说明

使用本机器之前,请仔细阅读此说明书。不遵循 本机器使用说明可能导致烧伤或者损坏电器。

制造商对未正确使用该机器引起的损害概不负责。

# 请注意:

此安全警告适用于所有德龙品牌的咖啡机。 请将此说明与设备随附的产品资料一并保存。 如果转让该机器给其他人,请确保将说明同时附 送。

#### 2.2 使用什么水

- •只能使用饮用水。
- •不要使用气泡水(碳酸水)或蒸馏水。

## 2.3 使用什么制作牛奶/植物奶基底饮品

- •该机器既可用于制作牛奶饮品,也可用于制作植物奶饮品。
- •请不要使用生奶。
- •仅使用巴氏杀菌、超高温灭菌奶或植物奶,并 依照厂商指示的储存方法保存。
- •说明书中描述的清洁方法无法保证完全去除过敏原。
- •如果您有过敏反应或疑似过敏反应和/或不耐受 反应,请确保您的机器没有接触或制作过含有令 您过敏的过敏原或令您不耐受的牛奶或植物奶基 底饮品。

# 3.使用之前

## 3.1 机器检查

打开包装后,确保机器表面完好且没有被损坏,同时所有的配件齐全。如果机器存在明显的损坏,切勿使用该机器。请与德龙授权的售后服务中心联系。

#### 3.2 机器安装

安装机器的时候,应该重视以下安全警告:

- •本电器会释放出热量,因此将机器放置于工作台时,机器表面、侧面及靠墙部分需留出至少3厘米的空间,咖啡机上方需要留出至少15厘米的空间。
- •若有水渗入,会损坏机器。切勿将该机器放置 在水龙头或者水槽附近。
- •若机器中的水结冰会损坏机器。切勿将机器安放在一个室温可能低于零度的房间内。
- 电源线切勿放置在尖锐物质的边缘或接触热的物体表面(如电热板),这样会损坏电源线。

#### 3.3 机器连接

请检查并确认所使用的电源电压与该机器铭牌所标示的电源电压是否一致。本机器必须与具备有效地接地线的电源正确连接,且最小的额定电流只能为10安培。

如果电源插座与机器插头不匹配,需由具有专业 资质的技术人员来替换相匹配的插座。

## 3.4 机器设置

在您第一次使用咖啡机时,水回路是空的,机器操作的声音可能较大。随着水回路充满,噪音会逐渐减小。

# 4. 清洁和保养

- •请按照产品使用说明和/或显示屏或警告灯的提示, 定期细致地清洁本机器及其附件。
- •请勿使用化学溶剂、有腐蚀性的清洁剂或酒精 清洗本机器,以免损坏。
- 切勿使用金属物体除垢或去除咖啡渍,以避免 擦伤机器的金属表面或塑料表面。

# 4.1 首次使用前须清洗

- •首次使用本机器之前,请参照说明书清洁机器 以及与水、咖啡液和牛奶/植物奶饮品接触的所 有可拆卸配件。请参阅产品说明书,查看配件的 清洗程序,并了解哪些配件可用洗碗机清洗。
- •首次使用机器时,需要制作4-5杯饮品后,才能制作出令人满意的效果。

#### 4.2 长时间不使用

- •如果预计将超过3天不使用本机器,请清空水箱 并使用"清空水回路"功能(如配备此功能)。
- •机器停用3天或更久之后重新启动时,请执行操作制作以下饮品(请勿饮用): 热水、蒸汽、热咖啡和冷萃饮品(如配备此功能)。

# 4.3 水箱的清洁与保养

- •定期清洁:请按照产品说明书,每30天清洁一次水箱。
- •制作热饮:水箱中的水至少每3天更换一次。
- •冷萃功能(如配备此功能): 在制作冷萃饮品前,请清空水箱,彻底冲洗并重新注入新鲜饮用水。

# 4.4 萃取器的清洁与保养(如可拆卸)

•请按照产品说明书,每30天清洁一次

# 4.5 牛奶容器的清洁与保养(如包含此部件)

- •按照产品说明书所述的清洗程序拆卸牛奶容器 并清洁所有部件。
- •如果牛奶或植物奶饮品残留在牛奶容器中,在 执行自动"清洁"操作后(如配备此功能),可将 牛奶容器置于冰箱储存以便下次使用。热牛奶容 器在冰箱中的存放时间不得超过2天;冷牛奶容 器在冰箱中的存放时间不得超过1天。超过上述 存放时间后,应排空牛奶容器,拆卸所有部件并 按照说明书的指示清洁所有部件。
- •使用后,如果牛奶容器已空或已放置在冰箱外超过30分钟,应倒掉任何剩余的产品,拆卸所有部件并按照说明书的指示清洁所有部件。

# 4.6 咖啡壶的清洁与保养(如包含此部件):

- •清洗时,请按照产品说明书所述的清洗程序和操作指引。
- •每次使用后,建议您用热水和温和的洗涤液清洗咖啡壶。然后,用温水彻底冲洗,清除所有残留洗涤剂。
- •可以用洗碗机清洗咖啡壶。

# 4.7 随行杯的清洁与保养(如包含此部件)

- 随行杯中盛装的饮品应在2小时内饮用完毕。
- 每次使用后,请清洁随行杯,具体清洁方法请参照产品说明书或机器指示的说明。请勿使用可能划伤容器表面的研磨性清洁剂。

#### 4.8 除垢液

- •使用前,请仔细阅读除垢剂附带的安全警告和 包装上的说明。
- •只能使用德龙除垢液进行除垢。如使用不合适 的除垢液进行除垢引起机器损坏或故障,不属于 制造商保修范围。
- •除垢的频率和方法应遵照产品说明书或用户界 面指示。
- •因未遵循除垢说明所导致的损坏或故障不在制造商保修范围内。
- 除垢液可能会损伤物体表面。如果除垢液意外 溅出,请立即擦干。

# 5.描述

# 5.1 机器(A)描述

A1. 咖啡豆仓

(需自行根据开机指引安装D6豆仓)

- A2. 研磨度选择盘
- A3. 萃取器
- A4. 萃取器盖
- A5. 电源线
- A6. 水箱盖
- A7. 水箱
- A8. 咖啡盛渣盒
- A9. 咖啡盛渣盒支架
- A10. 咖啡杯托盘
- A11. 滴水盘网格盖板
- A12. 滴水盘
- A13. 咖啡流出口(可调节高度)
- A14. 配件连接口(带盖)
- A15. 热水喷嘴收纳盒
- A16. 咖啡粉进料管(可拆卸)
- A17. 配件收纳盒盖

#### 5.2 控制面板(B)描述

- B1. (b) 开机/待机
- B2. ( ) Coffee咖啡饮品选择菜单

(按下亮起: 屏幕显示可制作的黑咖饮品: 再

次按下取消选中)

B3. (元) Milk牛奶饮品选择菜单

(按下亮起:屏幕显示可制作的奶咖饮品;再 次按下取消选中)

# B4. (A) 用户选择 (用于切换用户选择)

# 5.3 主页(主屏幕)(C)描述

- C1. 所选用户图标
- C2. 咖啡日程图标
- C3. 咖啡豆适配技术(从小程序启用):按照显

示屏上的说明操作

- C4. 指示图标:
- 🛜 等待首次联网
- Wi-Fi已连接图标
- 🖎 无网络连接图标
- ⑥ 节能模式已启用图标
- · < ← 牛奶容器清洁指示图标
- 🖁 除垢指示图标
- ↑ 软水过滤器更换指示图标
- C5. 设置菜单
- C6. 显示并自定义饮品设置
- C7. 直接可选饮品

## 5.4 配件(D)描述

- D1. 水硬度测试纸
- D2. 咖啡粉量勺/清洁刷
- D3. 除垢液
- D4. 软水过滤器
- D5. 热水喷嘴
- D6. 咖啡豆仓(带盖)(本机配备2个)
- D7. 研磨器保护盖

#### 5.5 牛奶容器(E)描述(配备两个)

黑色热饮牛奶容器 LatteCrema ()

白色冷饮牛奶容器 LatteCrema cool 的

- E1. 奶泡调节/清洁旋钮
- E2. 牛奶容器盖
- E3. 牛奶流出口(可调节高度)
- E4. 牛奶流出口延长管 (仅限黑色热饮牛奶容器)
- E5. 牛奶容器
- E6. 牛奶吸入管
- E7. 牛奶容器连接器 (可拆卸清洗)


# 请注意:

我们不断改进产品,因此德龙公司保留一切更 改产品技术参数和外观特点的权力,且恕不需 另行通知。

# 6.首次使用

# 请注意:

- •研磨器中可能有残留的咖啡粉,这是因为机器 在出厂前经过了测试,出于我们对产品的细致 检查。
- •首次使用本机器时,所有要与水或牛奶接触的可拆卸配件(牛奶容器(E)、水箱(A7)和(A6)、热水喷嘴(D5)和咖啡豆仓(A1)都应用热水冲洗。我们建议用洗碗机清洁牛奶容器(温度不高于50℃)。
- 1. 将电源线(A5)连接到主电源(如图1)。

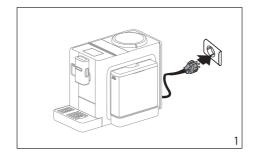

机器将开机,并引导您进行设置:请按照显示 屏上的指引进行操作,机器准备就绪即可制作 咖啡了!

# 选择语言

2. 按下国旗图标选择所需设置的语言,然后按 下"完成"进行下一步。

## 设置时间和日期

- 3. 设置时区, 然后按下"下一步"。
- 4. 设置当前日期和时间, 然后按下"下一步"。

# 往水箱注水


5. 拆下水箱(A7)(如图2),在水箱中注入饮用水至MAX(最高位置)线(如图3),然后按下"下一步"。

 




#### 设置机器

6. 打开配件收纳盒盖(A17)并取出热水喷嘴(D5)(如图4)。

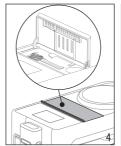




- 7. 推下配件连接口盖,插入热水喷嘴(如图5)。 按下"下一步"。
- 8. 检查研磨度选择盘(A2) 所选研磨度是否为5, 如若不是,请将其旋转至"5"并按下"下一步"。
- 9. 移除研磨器保护盖(D7)。按下"下一步"。


## 安装豆仓

 10.取一个豆仓(D6),将其倒置,确保其底部密封完好,逆时针旋转豆仓底部的圆环,直到听到咔嗒声(如图6)。两个箭头对齐时,表示豆仓正确关闭(如图7)。按下"下一步"。






- 11. 豆仓中装入咖啡豆。按下"下一步"。
- 12. 安装咖啡豆仓, 并顺时针旋转以锁定。为确保正确操作,请将 ♀️解锁图标与环上的"—"标记对齐(如图8),插入后将其旋转至 ♣️锁定图标位置(如图9)。按下"下一步"。

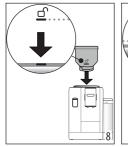



#### 机器排水

13. 在咖啡和热水流出口的下方放置一个最小容积为200毫升的容器(如图10)。

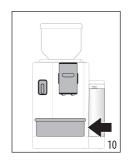

14. 按下"是"开始冲洗。等待直到冲洗自动停止。

# 提示

显示屏上会出现一些提示。请仔细阅读:这将 有助于使用本机。按下"下一步"继续。

# 测试水硬度

根据水硬度不同,机器使用一段时间后,显示 屏上会显示除垢提醒。您还可以根据当地供水 的实际水硬度对机器进行设置,从而降低除垢 的频率。请按如下步骤操作:

- 1. 从包装中取出水硬度测试纸(D1)。按下"开始"。
- 2. 把试纸完全浸入一杯水中, 持续片刻。
- 3. 从水中取出试纸,然后再轻轻地摇晃一下。 大约一分钟后,根据水硬度的不同,试纸上会 出现1、2、3或4个红色小方块。每个方块对应 一个水硬度。按下"下一步"。

#### 设置水硬度

4. 如下表所示,按下与先前测得的水硬度相对应的点位:

水硬度测试纸(D1)	水硬度
绿色 (エ色 緑色	1级
红色 绿色	2级
红色绿色	3级
红色	4级

5. 按下"确认"。新的水硬度设置完成。

此时,显示屏显示"技术上的问题已解决,让 我们先互相认识一下吧",按下"开始"继续。 此时,新的水硬度设置完成。

# 请注意:

您可以随时使进入设置菜单更改水硬度设置(参见"9.15 水硬度"章节)。

# 用户资料

- 1. 设置将使用机器的人数(最多可设置4位用户)。按下"下一步"。
- 2. 如需个性化定制,选中用户资料后做出选择, 然后按下"保存"。
- 3. 按下"下一步": 用户资料已确认。

#### 教程

- 4. 按下"下一步": 机器已准备好播放一段简短的教程。
- 5. 按"开始"查看主页。
- 6. 此时,本机器会显示其主要功能。按"下一 步"继续。

介绍完毕后,按下"开始",即可使用本机器。

# 请注意:

- •首次使用本机时,需要制作4-5杯卡布奇诺后, 才能制作出口感香醇的咖啡。
- •第一次使用本机器时,水回路中无液体,机器 在使用中噪音可能比较大。水回路满之后,声 音会降低。

•机器在出厂前经过了测试,因此研磨器中留有 残留的咖啡粉是正常的。我们确保本机是全 新的。

# 7.开启机器

#### 请注意:

- •每次开启机器时,机器会自动完成一次预热和冲洗。此过程不能中断。此过程完成之前,不得使用本机器。
- 1. 如需开启机器, 请按(①)图标(B1)(如图11): 开启机器。



2. 达到所需温度后,机器执行冲洗循环,热水 从咖啡流出口(A13)流出;机器同时会预热锅 炉和机器内部回路。

#### 请注意:

为避免非必要的开关启动或关闭,需持续按压 ① 图标(B1)以开启或关闭机器。

# 8.关闭机器

咖啡机完成咖啡制作后,关闭前将执行自动冲 洗循环。

1. 请按下(少)图标(B1)关闭机器(如图11)。 2. 机器执行冲洗循环,热水从咖啡流出口(A13)流出,然后关闭(待机)。

#### 请注意:

如果您将在很长一段时间内不使用本机器,请 关掉电源,然后从主电源插座拔下电源插头。

# 重要提示!

切勿在机器开启状态下拔掉插头。

# 9.菜单设置

## 9.1 冲洗

使用此功能,热水可以从咖啡流出口(A13)流出,以清洁和预热机器的内部回路。

在咖啡流出口和热水流出口的下方放置一个最小容积为200毫升的容器(如图10)。

如需启用该功能,请按如下步骤操作:

- 1. 按 (C5) 进入设置菜单;
- 2. 显示屏显示"冲洗";
- 3. 按"是"开始;几秒钟后,热水制作完成, 开始冲洗并加热机器的内部回路;
- 4. 如需停止冲洗,请按"停止",或等待冲洗 自动停止。

## 请注意:

- •如果机器超过3天未使用,请清洗水箱,并在水箱中注入新鲜的饮用水。我们强烈建议您在制作饮品前,先冲洗2-3遍。
- •冲洗后,咖啡盛渣盒(A8)有水是正常现象。

# 9.2 除垢

请参考"20.除垢"章节的描述进行除垢。

#### 9.3 软水过滤器

请参考"21.软水过滤器"章节的描述安装软水过滤器。

#### 9.4 连接

使用此功能启用或禁用连接。请按如下步骤操 作:

- 1. 按 (C5), 进入设置菜单;
- 2. 滑动页面,直到显示"连接";
- 3. 按"是";
- 4. 启用Wi-Fi连接和远程控制功能,以用于连接 德龙Coffee Link 小程序。当设备连接到机器

- 时, 会自动创建PIN码:
- 5. 按"下一步"查看机器的标识数据:
- 6. 按"返回"回到上一页;按"<"返回设置菜 鱼.
- 7. 按"X" 返回主页 (C)

在主页上,指示连接状态的标志(C4)与其他 标志(如除垢等)交替出现。

主页上的标志	含义
<b></b>	已启用连接: 机器等待首次联网
<b>ି</b>	机器已连接
⊗	该机器己连接到家庭 Wi-Fi,但没有网络, 或者无法连接到云
	连接已禁用。如需启 用连接,请进入设置 菜单(C5)

本设备包含型号核准代码为: CMIIT ID: 2018DP3125 的无线电发射模块。

## 请注意:

- •如果远程连接断开,小程序中的许多功能将不可用(例如:饮品制作)。
- •如果您更改了Wi-Fi网络的名称或密码,或连接 到新的Wi-Fi网络,则需要按以下步骤重置连接:
- 1. 根据本节上述步骤第1-3点的说明操作:
- 2. 按"重置";
- 3. "确认"重置网络设置:
- 4. 再次连接小程序并选择使用新凭据。

# 9.5 通用

- 1. 按 **(○)** (C5), 进入设置菜单;
- 2. 滑动页面,直到显示"通用";

此处,您只需简单点击几下,就可以启用或禁 用以下功能:

- "提示音": 启用时,每当执行操作时,咖啡 机就会发出提示音。
- -节能模式:使用此按键启用或禁用节能模式。 启用节能模式后,机器将会按照欧洲标准,减少能源的消耗。如果主页显示 ② 图标,则说明 节能模式已启用。
- 3. 按"X"保存新选择并返回主页(C)。

## 9.6 自动关机

可以设置在15分钟、30分钟、1小时或3小时后, 自动关闭机器。

如需启动该程序,请按如下步骤操作:

- 1. 按 (C5), 进入设置菜单;
- 2. 滑动页面,直到显示"自动关机";
- 3. 选择所需的时间间隔(15分钟或30分钟或1小时或3小时):
- 4. 按"X"保存新选择并返回主页(C)。

#### 9.7 支持

微信扫描二维码,访问使用说明并获取相关支持。按"X"返回主页(C)。

#### 9.8 研磨并清空

如需清空咖啡研磨器,请先将剩余咖啡豆研磨 完毕:

- 1. 按 (O) (C5), 进入设置菜单;
- 2. 滑动页面,直到显示"研磨并清空";
- 3. 按"杳看更多":
- 4. 将豆仓(A1)逆时针旋转至 <u>□</u> 解锁图标位置 (如图12),并让其保持在当前位置,直到操 作完成:
- 5. 按下"开始": 机器开始研磨研磨器中的剩余咖啡豆:





- 6. 研磨完成后,取下豆仓并安装另一个豆仓 (参考"6. 首次使用"章节的描述),或盖上 研磨器保护盖(D7)(如图13);
- 7. 机器返回主页(C)。

## 9.9 牛奶容器清洁

机器将提示深度清洁牛奶容器的教程,以确保 其在一段时间内的正常运作。

- 1. 按 (O) (C5) 进入设置菜单;
- 2. 滑动页面, 直到显示"牛奶容器清洁";
- 3. 按下"杳看更多":
- 4. 按"下一步"或"返回"阅读相关提示;
- 5. 在最后一个页面上,按"完成"返回设置菜单;
- 6. 按"X"返回主页(C)。

# 请注意:

请参考"19.11彻底清洁牛奶容器(E)"章节进行操作。

### 9.10 咖啡温度

如需改变制作咖啡的温度, 请按如下步骤操作:

- 1. 按 (O) (C5) 进入设置菜单;
- 2. 滑动页面,直到显示"咖啡温度";
- 3. 按"设置";
- 4. 从建议的温度中选择所需的温度: 低温、中温或高温:

- 5. 按 "<"保存新选择并返回设置菜单:
- 6. 按"X"返回主页(C)。

# Bean Adapt Technology (咖啡豆适配技术)



我们建议您查看Coffee Link小程序中的咖啡豆 适配技术,将咖啡温度调整为所用咖啡豆的适当 设置。

#### 9 11 数据统计

此功能可以显示机器相关数据。如需显示数据, 请按如下步骤操作:

- 1. 按 **(O)** (C5), 进入设置菜单;
- 2. 滑动页面,直到显示"数据统计"和主要统计数据。如需查看更多信息,请按"查看更多":

黑咖总计

奶咖总计

水量总计(升)

除垢总计

牛奶清洁总计

软水过滤器总计

- 3. 按"<"返回设置菜单;
- 4. 按"X"返回主页(C)。

#### 9.12 语言

如需更改主页语言,请按如下步骤操作:

- 1. 按 (O) (C5), 进入设置菜单;
- 2. 滑动页面,直到显示"语言";
- 3. 按"设置":
- 4. 按下国旗图标,选择对应的语言。显示屏的语言将立即更新为所需语言:
- 5. 按"<"保存新选择并返回设置菜单;
- 6. 按"X"返回主页(C)。

#### 9.13 日期和时间

如需更改主页的日期和时间,请按如下步骤操作:

- 1. 按 **(O)** (C5), 进入设置菜单;
- 2. 滑动页面, 直到显示"日期和时间":
- 3. 按"设置":
- 4. 选择"设置时区":滑动选择对应时区。完成后按"确认":
- 5. 选择"设置日期和时间":滑动选择对应日期和时间,或通过连接Wi-Fi启用同步功能;
- 6. 按"<"返回设置菜单;
- 7. 按"X"返回主页(C)。

#### 9.14 研磨设置

本机器提供调节研磨度的操作教程,指导如何 正确调节研磨度,从而获得优质咖啡出杯效果。

- 1. 按 (C5), 进入设置菜单;
- 2. 滑动页面, 直到显示"研磨设置":
- 3. 按"查看更多",查看有关如何调节研磨度的教程。按"下一步"或"返回"阅读相关提示:
- 4. 在最后一个页面上,按"确认"返回设置菜单:
- 5. 按"X"返回主页(C)。

#### 请注意:

- •执行上述程序后,我们建议至少制作3杯咖啡,然后再进行调整。如果咖啡制作仍不理想,则 重复该步骤。
- •只有在开始制作咖啡且研磨器在运作的时候, 才能转动研磨度选择盘(A2)。

# Bean Adapt Technology (咖啡豆适配技术)



我们建议您查看Coffee Link小程序中的咖啡豆 适配技术,将研磨参数调整为所用咖啡豆的适 当设置。

#### 9.15 水硬度

如需设置水硬度,请按如下步骤操作:

- 1. 按照"6. 首次使用"中的描述测试水硬度:
- 2. 按 (C5) 进入设置菜单;
- 3. 滑动页面,直到显示"水硬度"。然后按"设置"。
- 4. 选择测试结果对应的级别。
- 5. 按"<"返回设置菜单。
- 6. 按"X"返回主页(C)。

#### 9.16 清空水回路

如果机器长时间闲置,或在送回至客户服务中 心之前,为了避免回路中的水结冰,我们建议 清空回路中的水。

请按如下步骤操作:

- 1. 按 **(O)** (C5) 进入设置菜单;
- 2. 滑动页面, 直到显示"清空水回路":
- 3. 按"是"后根据引导操作;
- 4. 取出并清空咖啡盛渣盒(A8)和滴水盘(A12) (如图14),将其安装回机器,然后按"下一步":



- 5. 将热水喷嘴 (D5) 插入连接器 (A14) (如图5); 6. 将一个0. 2升的容器放置在喷嘴下方 (如图10)。 按下"下一步";
- 7. 机器使用从咖啡流出口(A13)流出的热水执行一次冲洗循环;
- 8. 冲洗结束,取出水箱(A7)(如图2),并将 其清空;

- 9. 如果有软水过滤器(D4),则从水箱中取出 软水过滤器并按"下一步";
- 10. 将空水箱放回机器, 按"是":
- 11. 确认您已准备就绪, 然后按"是":
- 12. 等待机器排空回路; (重要: 热水从流出口流出!)。当水回路清空时, 机器噪音可能会更大。这属于正常现象:
- 13. 当回路为空时,取出并清空滴水盘,放回机器中,按"下一步":
- 14. 按"确认"。机器关机(进入待机状态); 15. 拔掉本机插头。

下次开机时,请按照"6.首次使用"章节中的 说明进行操作。

# 9.17 默认值

选择该程序,将所有菜单设置和用户自定义设置重置回默认值(除预先设置的语言和数据统计外)。

请按如下步骤操作:

- 1. 按 (O) (C5) 进入设置菜单;
- 2. 滑动页面, 直到显示"默认值":
- 3. 按"查看更多":
- 4. 选择所需重置默认值的范围: "机器"或 "单个用户", 然后按"下一步":
- 5. 然后按"确认"将所选范围重置回默认值;
- 6. 按"X"返回主页(C)。

# 请注意:

当机器(而非个人用户资料)己重置为默认值时,机器会再次弹出出使用教程。按下"开始"图标,需根据显示屏指引进行设置或观看操作,该进程无法快进或跳过。

# 10.饮品选择

您可以使用本机制作各式饮品。

	热饮	冷饮
意式浓缩咖啡	✓	✓
2X意式浓缩咖啡	<b>✓</b>	×
淡咖啡	<b>✓</b>	×
咖啡	✓	✓
长萃咖啡	<b>✓</b>	×
美式咖啡	<b>√</b>	✓
卡布奇诺	<b>√</b>	<b>√</b>
拿铁玛奇朵	<b>√</b>	✓
咖啡拿铁	<b>✓</b>	✓
混合卡布奇诺	<b>✓</b>	✓
浓缩玛奇朵	<b>√</b>	×
澳白	<b>√</b>	✓
可塔朵	<b>✓</b>	×
牛奶	<b>✓</b>	<b>√</b>
热水	/	×

从显示屏中找到您想要制作的饮品。

# 11.制作咖啡

# 请注意:

每次制作完饮品后会有蒸汽冒出(如图15)。这 属于正常现象。




#### 11.1 准备制作咖啡

# 重要提示!

请勿使用咖啡生豆、已焦糖化的或有糖渍的咖啡豆,因为可能会粘住咖啡研磨器,使其无法使用。

- 1. 在咖啡流出口(A13)下放置1或2个杯子;
- 2. 调低咖啡流出口使其尽量靠近咖啡杯(如图
- 16),这样制作出的咖啡油脂更丰富。

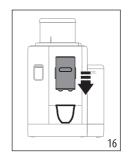

# 11.2 直接可选饮品

1. 在主页(C)上选择您要制作的饮品(C7)(如: 意式浓缩咖啡,如图17)对应的图案;



2. 热咖啡: 机器直接开始制作。

# 冷咖啡:

•选择"冰"或"超冰", 按"下一步";

•根据上一步的选择,在制作前,机器显示屏会提示建议使用的冰块数量。在杯中加入指定数量的冰块(约15克/块)(如图18),然后按"制作"。



•机器开始制作咖啡。

 
每个阶段(如研磨咖啡豆,制作咖啡)的描述 也会显示在显示屏上。

制作完毕后, 机器可以紧接着制作下一杯饮品。

#### 11.3 定制饮品

如需定制咖啡的制作参数,请按如下步骤操作: 1.按下与您要制作的咖啡(例如意式浓缩咖啡, 如图19)对应的图案底部的定制设置(C6)。 根据您的口味定制的参数将显示在显示屏上:





2. **热咖啡**: 设置好参数后,按"制作"。机器开始制作饮品,每个阶段(如研磨咖啡豆,制作咖啡)的描述也会显示在显示屏上:

冷咖啡:设置杯量,然后按"开始"。

(注:冷咖啡无法选择口味)

请按如下步骤操作:

- •选择"冰"或"超冰",按"下一步";
- •根据上一步的选择,在制作前,机器显示屏会提示建议使用的冰块数量。在杯中加入指定数量的冰块(约15克/块)(如图18),然后按"制作"。
- •机器开始制作饮品,每个阶段(如研磨咖啡豆,制作咖啡)的描述也会显示在显示屏上。
- 3. 制作结束后,按"保存"保存新设置,或按 "取消",仍保留以前的参数设置。您也可以 选择"仅为当前时间段保存设置"。

## 请注意:

如果您保存新设置,新设置将仅存储在所选用户资料中。

该咖啡机已准备好再次使用。

#### 11.4 使用咖啡粉制作咖啡

#### 重要提示!

- 请勿在机器关闭的状态下加入咖啡粉,这会导致咖啡粉散落在机器内部弄脏机器。甚至损坏机器。
- •切勿加入超过1量勺(D2)的咖啡粉,否则会 弄脏机器内部或堵塞咖啡粉进料管(A16)。 如果您使用咖啡粉制作咖啡,一次只能制作一杯。
- •制作长萃咖啡:制作进行到一半时,机器将提示"请再次添加咖啡粉,最多一匙份量",然后按"确认"。

- •使用咖啡粉无法制作出2×意式浓缩咖啡。
- 1. 按下与您要制作的饮品(例如意式浓缩咖啡,如图19)对应的图案底部的定制设置(C6)。
- 2. 选择 (咖啡粉)。
- 3. 选择杯量, 然后按"制作"。
- 4. 提起配件收纳盒盖(A17),确认进料管(A16)无堵塞,然后加入一量勺(D2)咖啡粉(如图20)。按"确认",开始制作饮品。



5. 机器开始制作饮品,每个阶段的描述会显示在显示屏上。

制作完毕后, 机器可以紧接着制作下一杯饮品。

# 11.5 多一份浓缩

您可以为以下饮品多制作一份意式浓缩咖啡:

	热饮
意式浓缩咖啡	✓
淡咖啡	✓
浓缩玛奇朵	✓
长萃咖啡	✓
咖啡	✓
美式咖啡	✓
卡布奇诺	✓
拿铁玛奇朵	<b>√</b>

咖啡拿铁	<b>√</b>
混合卡布奇诺	✓
可塔朵	✓
澳白	✓

请按如下步骤操作:

- 1. 按下与您要制作的饮品(例如意式浓缩咖啡,如图19)对应的图案底部的定制设置(C6)。
- 2. 按"多一份浓缩"。
- 3. 选择所需杯量和浓度。按"制作"。
- 4. 根据指引,按"确认"继续操作。
- 5. 机器开始制作饮品,每个阶段(如研磨咖啡豆,制作咖啡)的描述也会显示在显示屏上。
- 6. 制作结束后,按"保存"保存新设置,或按 "取消"保留以前的参数设置。您也可以选择 "仅为当前时间段保存设置"。

# 请注意:

如果您保存新设置,新设置将仅存储在所选用 户资料中。

该咖啡机已准备好再次使用。

# 11.6 制作咖啡饮品的一般指示

- 当机器在制作咖啡时,按下"停止"或"取消"可随时中断制作过程。
- •一旦制作结束,要增加咖啡的杯量,只需按"更多"。当达到所需杯量时,按"停止"或"取消"。
- •在使用本机器时,可能会显示各种警示信息( "水箱中加入清水至MAX位置"等)。关于其含 义,请参考"22.显示信息"章节的描述。

- •如果咖啡一滴一滴地流出、味道过淡、油脂不够丰富或温度过低,请参考 "9.14 研磨设置"的教程和"23.故障处理"章节中的信息来尝试解决问题。
- •如果启用了"节能模式",在制作第一杯咖啡 前您可能需要等待片刻。

# 11.7 制作更热咖啡的小贴士

如需制作更热的咖啡,请按如下步骤操作:

- •在制作热饮之前进行一次热冲洗循环(参考"9.1冲洗"章节的描述);
- •使用热水功能进行暖杯(参考"15.制作热水"章节的描述);
- •调高咖啡温度("9.10 咖啡温度"章节的描述)。

# 12.咖啡豆适配技术

仅需几步,即可帮助您优化咖啡制作过程,以 及制作出咖啡的口感。

咖啡豆适配技术可根据您所使用的咖啡豆推荐 调节机器的参数——从研磨度到制作过程,每 一阶段都会进行参数推荐,以充分释放咖啡豆 精华。

微信扫描Coffee Link小程序,了解更多信息。

# 13.咖啡日程

如果您启用了"咖啡日程"功能,机器将保存 您在每天的不同时间段制作咖啡的特定设置。

- 1. 按下显示屏主页上的咖啡日程图标(C2):
- 2. 激活页面上咖啡日程的开关以启用此功能。 使用Coffee Link小程序,即可定制您工作日和 休息日的咖啡日程。

# 14.制作含牛奶饮品

14.1 准备牛奶容器(E)

#### 请注意:

为避免奶泡稀少或奶泡过大,请始终按照 "14.6 每次使用后清洁牛奶容器"和"19.11 彻底清洁牛奶容器(E)"章节中的说明清洁牛奶容器。

# 14.2 使用哪种牛奶?

 
奶泡的质量取决于:

- •牛奶或植物奶的温度(为了达到优质奶泡效果,请始终使用冰箱冷藏温度(约5℃)的牛奶或植物奶饮品):
- •牛奶或植物奶的种类;
- 所使用的牛奶或植物奶品牌;
- •成分和营养价值。

	热饮	冷饮
	牛奶	
全脂奶		建议旋转奶
(脂肪含量>3.5%)		泡调节旋钮
半脱脂		至最小量奶
(脂肪含量在1.5% 至1.8%之间)	V	泡位置制作
脱脂奶		
(脂肪含量<0.5%)		V
<b>1</b>	直物奶	
豆奶	1	/
杏仁奶	/	<b>/</b>
燕麦奶	<b>√</b>	<b>√</b>

# 14.3 倒入牛奶并安装牛奶容器


- 1. 打开牛奶容器盖(E2),在牛奶容器(E5) 中倒入足量的牛奶,但不要超过牛奶容器上标 注的MAX(最高位置)线(如图21);
- 2. 确保牛奶吸入管(E6)已正确地插入到牛奶容器盖的底部(如图22);





- 3. 将牛奶容器盖装回牛奶容器;
- 4. 向下滑动配件连接口盖,将牛奶容器安装到连接口(A14)上,并尽量往里推(如图23)。 机器发出提示音(如果提示音功能已启用);



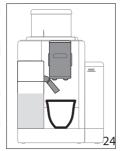

5. 在咖啡流出口(A13)和牛奶流出口(E3)的下方放置一个足够大的杯子(如图24)。调节牛奶流出口延长管可以拉长牛奶流出口的长度(仅限黑色热饮牛奶容器)。

# 请注意:

如果启用了节能模式,在制作饮品前您可能需 要等待片刻。

#### 14.4 调节奶泡量

旋转奶泡调节旋钮(E1)可以调节牛奶饮品中的奶泡量。

奶泡调节	建议制作	<b>F的饮品</b>
旋钮的位置	LatteCrema HoT	LatteCrema &
<b>一</b> · 最小量奶泡	・咖啡拿铁	•拿铁咖啡
中等量奶泡	<ul><li>・拿铁玛奇朵</li><li>・澳白</li><li>・可塔朵</li></ul>	・拿铁玛奇朵 ・澳白
最大量奶泡	・卡布奇诺 ・混合卡布奇诺 ・浓缩玛奇朵 ・热牛奶(有奶泡)	・卡布奇诺 ・混合卡布奇诺 ・冷牛奶(有奶泡)

#### 14.5 制作牛奶饮品

 
在主页(C)上,按下与您要制作的饮品对应的图案(C7)。

如需制作咖啡饮品,您可以通过点击主页图案 底部的饮品定制符号(C6)来定制饮品。

# 14.6 每次使用后清洁牛奶容器

每次制作牛奶饮品时,本机器都会要求您执行 清洁功能来清洁牛奶容器盖(E2)。请按如下 步骤进行清洗:

- 1. 将牛奶容器安装在机器中(无需清空牛奶容器):
- 2. 在牛奶流出口(E3)的下方放置一个杯子或 其他容器(如图25):





- 3. 将奶泡调节旋钮(E1) 旋转至 Clean (清洁) 位置(如图26)。热水和蒸汽会从牛奶流出口中流出。清洁完成后,机器会自动停止:
- 4. 将奶泡调节旋钮旋转回任一奶泡量位置。

# 如果您想连续制作多杯饮品:

•如果需要继续制作下一杯饮品,当机器出现 清洁提示时,请按下"取消"。制作完最后一 杯饮品后,再清洁牛奶容器。

# 制作完成后,牛奶容器已清空,或者已经没有足够的牛奶来制作其他饮品:

•使用 Clean (清洁) 功能清洁之后,取下牛奶容器,并按照"19.11彻底清洁牛奶容器(E)"章节的描述清洁所有部件。

# 制作完成后,牛奶容器中剩余的牛奶足以制作其他饮品:

•使用 Clean (清洁) 功能清洁之后,取下牛奶容器,并立即放入冰箱。黑色热饮牛奶容器中的牛奶在冰箱中的储存时间不得超过2天,白色冷饮牛奶容器中的牛奶储存时间不得超过1天;否则应将牛奶倒掉,并按照"19.11彻底清洁牛奶容器(E)"章节的描述清洁所有部件。

# 重要提示:

如果牛奶容器在冰箱外的放置时间超过30分钟, 请先倒掉剩余牛奶,并按照"19.11 彻底清洁牛 奶容器(E)"章节的描述拆下并清洁所有部件。

# 制作牛奶饮品后的一般注意事项:

- •如果您没有清洁牛奶容器,主页会显示 **②** 标志 提示您需要清洁牛奶容器。
- •在某些情况下,在清洁牛奶容器之前,机器需要预热。

为确保完全清洁,请等待清洁功能结束。此功能会自动停止。清洁过程中不得中断。

# 15.制作热水

- 1. 正确安装热水喷嘴(D5)(如图5);
- 2. 在热水喷嘴下方放置一个水杯:
- 3. 在主页(C)上:
- •直接按下热水对应的图案(C7): 开始制作。
- •按下图案底部的定制符号(C6)选择杯量,然 后按"制作"。开始制作。
- 4. 机器开始制作热水并会自动停止。

# 请注意:

- •如需手动停止制作,请按下"停止"或"取消"。
- •制作结束时,如需更多热水,即刻按下"更多"。 当达到所需杯量,按下"停止"或"取消"。

# 16.制作"随行杯"饮品

本型号不配备随行杯配件,需自行购买。 随行杯适合想要外带定制饮品的用户。 您可以使用机器制作多种"随行杯"饮品。

	热饮	冷饮
咖啡	×	<b>✓</b>
美式咖啡	<b>√</b>	<b>√</b>
卡布奇诺	<b>✓</b>	<b>√</b>
拿铁玛奇朵	<b>√</b>	<b>√</b>
拿铁咖啡	<b>√</b>	<b>√</b>
混合卡布奇诺	<b>√</b>	<b>√</b>
澳白	<b>✓</b>	<b>√</b>
牛奶	<b>✓</b>	<b>√</b>

请按如下步骤操作:

- 1. 按下与您要制作的咖啡对应的图案底部的定制设置(C6);
- 2. 按下 图标: 您已进入"随行杯"功能;
- 3. 按"下一步", 然后按"确认":
- 4. 按下 (日), 可查看与随行杯尺寸相关的信息;
- 5. 按下 (1), 可调节饮品杯量: 按"保存";
- 6. 新的随行杯饮品杯量将被保存,下次将自动设置。按"X"。
- 7. 按"制作": 机器照常准备饮品。

# 请注意:

- •使用不同于以往的随行杯制作饮品时,我们建 议您留在机器附近,检查制作的饮品杯量。
- •如果您保存新设置,新设置将仅存储在所选用户资料中。
- •为了保持热饮的温度,可以使用热水预热随行杯。
- •选择随行杯时,确保杯子高度不要超过14厘米。

## 重要提示

•饮品官在2小时内饮用完毕。

# 17.更换咖啡豆仓



更换豆仓(D6),以享用不同种类的咖啡豆。 请按如下步骤操作:

- 1. 将豆仓逆时针旋转至 <u>□</u> 解锁图标位置(如图8),并让其保持在当前位置,直到操作完成:
- 2. 显示屏显示"切换模式":选择一个选项并按照以下步骤操作:

# 选择饮品(使用剩余咖啡豆制作您喜欢的饮品):

- 3. 选择"选择饮品":按下"开始",显示屏 会显示您可以制作的饮品(自动选择浓度,不 可更改).
- 4. 遵循指引制作饮品:

# 研磨并清空(执行一次研磨循环,清除剩余咖啡豆):

- 5. 选择"研磨并清空":此时,屏幕显示"请让豆仓保持在当前位置,直到完成研磨",按下"开始":机器会开始研磨研磨器中的剩余咖啡豆:
- 6. 等到机器自动研磨停止;

# 现在可以安装新的豆仓了

- 7. 拆下豆仓:
- 8. 安裝新的咖啡豆仓,并顺时针旋转以锁定。
  为确保正确操作,请将 ☐ 解锁图标与环上的
  "一"标记对齐(如图8),插入后将其旋转至
  △ 锁定图标位置(如图9)。

#### 请注意:

如果您在不清空研磨器的情况下直接更换豆仓, 用于制作咖啡的新豆中将会混有部分上次制作残 余的咖啡豆。

# 注意:

- •机器的豆仓外壳上散落咖啡粉是正常现象。
- •如果无法顺利安装新豆仓,请确保机器上的豆 仓外壳上没有残留咖啡豆。在此情况下, 请使 用清洁刷(D2)和一块柔软的湿布清洁机器上 的豆仓外壳。如需清除咖啡粉, 请使用手持式 真空吸尘器。

# 18. (〒) 定制饮品功能(仅限热饮)

使用 (my) 定制饮品功能,您可按以下方式操作:

- 1. 请确认希望定制饮品的用户(B4)已启用:
- 2. 按下您所需定制饮品图标下方的定制设置(C6) **19.清洁** (如图17):
- 3. 按下 (my);
- 4. 按下"开始",根据引导程序进行制作。
- 5. 选择想要的浓度,并按"下一步":
- 6. 按下"制作"开始制作饮品;
- 7. 当杯中的饮品达到所需杯量时,请按下"停 止"。
- 8. 如果您认为杯量恰到好处,请按下"保存" 保存当前设置,或按下"取消"保留以往参数;
- 9. 按"X"返回主页。

# 请注意:

- •如果您保存新设置,新设置将仅存储在所选用 户资料中。
- 当您定制单杯饮品时, 也会定制相应的双杯杯 量。2×意式浓缩咖啡无法单独定制杯量。
- •按下"取消"可随时退出设置。口味和杯量值 将不会被保存。

•定制好饮品后,设置页面会出现"重置"和(my) 功能开启选项("制作"按钮旁边)。按下" 重置"重置饮品默认值。按下"mv"(我的)切 换回默认设置。

饮品杯量表		
饮品	标准杯量	可设定杯量
意式浓缩咖啡	40毫升	20-180毫升
2×	40毫升+40毫升	20-180毫升+
意式浓缩咖啡		20-180毫升
淡咖啡	120毫升	60-180毫升
咖啡	180毫升	100-270毫升
长萃咖啡	160毫升	115-250毫升
美式咖啡	150毫升	70-480毫升
热水	250毫升	20-420毫升

#### 19.1 清洁机器

以下咖啡机部件必须定时清洁:

- -咖啡机内部回路:
- -豆仓(A1):
- -咖啡盛渣盒(A8):
- -滴水盘(A12)和滴水盘网格盖板(A11):
- -水箱 (A7):
- -咖啡流出口(A13):
- -咖啡粉讲料管(A16):
- -萃取器(A3),可在打开萃取器盖(A4)后取出;
- -黑色热饮牛奶容器和白色冷饮牛奶容器(E)。

## 重要提示!

- •切勿使用化学溶剂、有腐蚀性的清洁剂或酒精 清洗咖啡机。德龙全自动咖啡机无需使用任何 化学物质进行清洁。
- •切勿使用金属物体除水垢或咖啡沉淀物,以免 擦伤金属或塑料表面。

可机洗 (温度不高于50℃)	仅手洗
滴水盘 (A12)	咖啡豆仓 (A1)
咖啡盛渣盒 (A8)	咖啡盛渣盒支架 (A9)
滴水盘 (A12)	咖啡杯托盘 (A10)
滴水盘网格盖板(A11)	水箱 (A7)
热饮和冷饮牛奶容器(E)	可拆卸萃取器(A3)
专用牛奶容器 (E)	咖啡粉进料管 (A16)

#### 19.2 清洁机器内部回路

如果超过3天未使用本机器,在再次使用之前,我们强烈建议您清空水箱并在水箱中注满新鲜饮用水,开机后选择冲洗功能进行2-3次冲洗循环(参见"9.1 冲洗"章节的描述)。

#### 请注意:

冲洗后,咖啡盛渣盒(A8)有水是正常现象。

# 19.3 清洁咖啡豆仓

定期清洁豆仓(A1)。请按如下步骤操作:

- 1. 将豆仓逆时针旋转至 ☐ 解锁图标位置(如图8),并让其保持在当前位置,直到操作完成:进入"切换模式"。
- 2. 选择一个选项并按特定步骤操作。
- 3. 然后拆下豆仓。
- 4. 打开豆仓盖。如果豆仓未清空,请将咖啡豆储存在其他容器中。

- 5. 将一块柔软的湿布放入豆仓,清洁内外部所 有可见残留物。
- 6. 使用清洁刷(D2)和一块柔软的湿布清洁机器上的豆仓外壳。如需清除咖啡粉,请使用手持式真空吸尘器。
- 7. 用一块干净的干布或纸巾擦干豆仓及其盖子, 并检查豆仓是否彻底干燥。
- 8. 在豆仓中装入咖啡豆,盖上盖子。安装咖啡豆仓,并顺时针旋转以锁定。为确保正确操作,请将 ① 解锁图标与环上的"一"标记对齐(如图8),插入后将其旋转至 ② 锁定图标位置(如图9)。

# 19.4 清洁咖啡盛渣盒

当显示屏显示"清空咖啡盛渣盒"时,必须清空咖啡盛渣盒并进行清洗。在清空咖啡盛渣盒 (A8)期间,机器不能制作咖啡。当第一杯咖啡制作完72小时后,清空咖啡盛渣盒指示信号会出现在显示屏上,即使此时咖啡盛渣盒未满。为了正确计算72小时,请勿关闭主电源开关。

### 重要提示! 小心烫伤

在您连续制作了几杯含牛奶的饮品之后,金属的咖啡杯托盘(A10)会变烫。等其冷却后方可触碰,且只能接触前端位置。

清洁咖啡盛渣盒(开机状态下):

- 1. 取出滴水盘(A12)和咖啡盛渣盒(A8)(如图14)。
- 2. 清空滴水盘和咖啡盛渣盒,并将其彻底清洗,以去除残留在底部的咖啡残渣。
- 3. 将带网格盖板(A11)的滴水盘和咖啡盛渣盒 放回机器中。

## 重要提示!

取出滴水盘后,即使只有一点点咖啡渣也必须清空咖啡盛渣盒。如果未清理,您之后制作咖啡的时候,咖啡残渣可能会漫过盛渣盒,阻塞机器。

# 19.5 清洁滴水盘和滴水盘网格盖板

## 重要提示!

滴水盘(A12)配有一个红色的水位指示浮标(红色),显示其中的水量(如图27)。



该水位指示浮标从咖啡杯托盘(A10)中浮出来前,必须清空滴水盘并清洗,否则水会从滴水盘的边缘溢出来,损坏机器和弄脏放置机器的桌面及其四周。如需拆卸滴水盘,请按如下步骤操作:

- 1. 拆下滴水盘及所有部件:
- 2. 拆下并清空滴水盘和咖啡盛渣盒(A8):
- 3. 拆下咖啡杯托盘(A10)和网格盖板(A11), 并清洗所有部件:
- 4. 将滴水盘与所有部件组装在一起。

### 重要提示!


取出滴水盘后,即使只有一点点咖啡渣也必须清空咖啡盛渣盒。如果未清理,您之后制作咖啡的时候,咖啡残渣可能会漫过盛渣盒,阻塞机器。

#### 19.6 清洁咖啡机内部

### 触电危险!

清洁内部零件之前,请关闭机器(参考"8.关闭机器"章节),并拔下电源插头。切勿将机器浸入水中。

- 1. 定期检查(大约一月一次)机器的内部部件 是否很脏(取出滴水盘(A12)后可接触部分)。
- 2. 用吸尘器来清除咖啡残留物(如图28)。

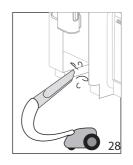

## 19.7 清洗水箱

定期(大约一月一次)清洁水箱(A7),并更 换软水过滤器。


- 1. 取出水箱,取下软水过滤器(如配备)并用流水进行冲洗:
- 2. 清空水箱,必要时使用热水和干净的无磨损性的布进行清洁。用水彻底冲洗;
- 3. 将软水过滤器放回机器中,往水箱中注入清水至MAX(最高位置)线,然后将水箱放回;
- 4. (仅配备软水过滤器的型号)释放100毫升热水以重启软水过滤器。

#### 请注意:

如果机器超过3天未使用,请按照如上步骤清洗 水箱。

#### 19.8 清洁咖啡流出口

- 1. 用海绵或布定期地清洁咖啡流出口(A13)(如图29):
- 2. 检查咖啡流出口上面的小洞是否阻塞,如有必要,请用牙签进行清洁(如图30)。

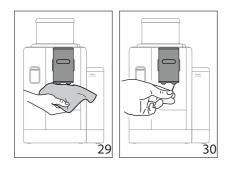

#### 19.9 清洁咖啡粉讲料管

定期(大约一月一次)用湿布清洁咖啡粉进料管(A16)。请按如下步骤操作:

- 1. 关闭机器(参考"8. 关闭机器"章节的描述);
- 2. 打开配件收纳盒盖(A17):
- 3. 取出咖啡勺/清洁刷(D2);
- 4. 移除可拆卸讲料管:
- 5. 使用随附清洁刷清洁讲料管:
- 6. 将讲料管重新插入其壳体:
- 7. 盖上盖子。

#### 重要提示!

清洁后,确保进料管中没有任何残留异物。在机 器运行过程中,如果进料管中存在异物,可能会 损坏本机。

#### 19.10 清洁萃取器

 
至少一个月清洗一次萃取器(A3)。

#### 重要提示!

在机器开启的状态下, 切勿取出萃取器。

1. 确保机器已正确关闭(参考"8. 关闭机器"章节的描述):

- 2. 拆下水箱(A7):
- 3. 打开机器右边的萃取器盖(A4)(如图31):





- 4. 往里按住两个带颜色的按钮,同时将萃取器往 外拔(如图32);
- 5. 将萃取器放在水中浸泡5分钟,然后用自来水冲洗:

# 重要提示!

 
只能用水冲洗。

请勿使用清洁剂和洗碗机清洗。

- 6. 请勿使用清洁剂清洗萃取器,因为这样会损坏 萃取器:
- 7. 通过萃取器门可以将看得见的咖啡残渣用清洁 刷(D2)进行清洁:
- 8. 清洁完毕后,将萃取器推入内部支架,然后按 住"PUSH"(按压)标志直至其安装回原位:

# 请注意:

如果萃取器很难安装回原位,则可按压两个操作 杆使它适应正确的尺寸(如图33)。




- 9. 一旦将萃取器安装回原位,请确保两个带颜色的按钮都已弹出:
- 10. 关闭萃取器盖:
- 11. 把水箱重新装上。


# 19.11 彻底清洁牛奶容器(E)

  本机器每周都会提醒您彻底清洁牛奶容器,并 会为您推荐正确的清洁步骤;定期清洁牛奶容 器有助于制作出优质饮品。

请按如下步骤操作:


1. 取下牛奶容器盖(E2);





 - 2. 取下牛奶流出口(E3)、牛奶流出口延长管(E4)(仅限黑色热饮牛奶容器)和牛奶吸入管(E6)(如图34);
- 3. 顺时针方向旋转奶泡调节旋钮(E1)至 "Insert"(插入)位置(如图35)并将其拉出;
- 4. 逆时针旋转并拆下牛奶容器连接器(E7)(如图36);





- 5. 使用洗碗机清洗(推荐)或手洗,如下所示:
- •洗碗机清洁:用流动热水(至少40℃)冲洗所有部件和牛奶容器,然后将其放置于洗碗机最上层的篮筐中(温度不高于50℃)。
- •手洗:用流动热水(至少40℃)彻底冲洗所有部件和牛奶容器,以去除所有可见的牛奶残留物;确保水流流过瓶盖上的小孔(如图37)。将所有部件浸入热水(至少40℃)和洗涤液中浸泡至少30分钟。用热饮用水彻底冲洗上述所有部件,并用手逐个擦拭清洁。
- 6. 请确保旋钮下方的小洞和沟槽中没有牛奶残留(如图38)。如有必要,请用牙签清洁沟槽;



- 7. 确认牛奶吸入管和牛奶流出口没有被牛奶残留物堵塞:
- 8. 使用干净的干布擦干所有部件:
- 9. 重新组装所有盖子部件;
- 10. 将牛奶容器盖装回牛奶容器。

# 请注意:

每周,机器会提醒您彻底清洁牛奶容器,并再次提示正确的清洁步骤。

# 20.除垢

### 重要提示!

- •除垢前,请阅读说明书和除垢液包装上的标签。
- •仅可使用德龙除垢液进行除垢。如使用不合适的 除垢液和/或未按正确的除垢步骤进行除垢,引起

的机器故障,不属于制造商保修范围。

•除垢液可能会损伤其脆弱表面。如果除垢液意 外溅出,请立即擦干。


除垢	
除垢液	德龙除垢液
容器	建议容量: 1.5升
时间	约30分钟

 
当主页上出现相应信息时,应对机器进行除垢。 如需立即除垢,请按"确认"并按照显示屏上 的步骤说明进行操作。

如想稍后进行除垢,请按"取消"。主页(B)上出现目标志(C4),即提示您本咖啡机需进行除垢。(每次开机后都会显示)

进入除垢菜单:

- 1. 按主页上的设置菜单标志(C5);
- 2. 滑动菜单项,直到显示"除垢";
- 3. 按"开始"进入除垢程序指南;
- 4. 按"是"开始除垢:
- 5. 安装热水喷嘴(D5)(如图5)(存放于机器 顶部的配件箱中);
- 6. 取出滴水盘(A12)和咖啡盛渣盒(A8)(如图14),并将其清空,然后放回机器中并按下"下一步":
- 7. 拆下水箱(A7),取下水箱盖(A6)并拆下软水过滤器(D4)(如已装入);彻底清空水箱;
- 8. 将除垢剂(每一袋约为100毫升)倒入水箱中,直至箱内标记的 【 A 位置,然后加水(约1升)至  **O** B 位置(如图39)。将水箱(带盖)放回机器,然后按"开始";(可按"返回"返回前页屏幕或按"X"退出程序)切记要清空水箱中的除垢剂);

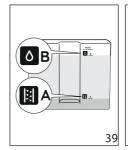



9. 将一个1. 5升的容器放置在喷嘴下方(如图 40)。按"完成": 开始除垢;

# 重要提示! 小心烫伤

酸性的热水会从喷嘴流出。请小心注意避免接触飞溅的热水。

10. 除垢程序开始进行且含有除垢液的液体从热水喷嘴或咖啡流出口流出。除垢程序自动进行一系列的冲洗和停顿以确保将机器内部的残垢完全去除;

大约20分钟后:

11. 当显示屏显示"冲洗水箱并加水至MAX位置后,把水箱装回机器",将盛接除垢剂的容器清空。取出水箱,将其清空,用流水冲洗后注入清水至MAX(最高位置)线,再安装回机器(如图41)。按下"下一步";



- 12. 将用来盛接除垢剂的容器清空后放在喷嘴下 方,按"是"开始冲洗;
- 13. 此时,显示屏显示"正在冲洗,请注意热水 从流出口流出": 热水将从热水喷嘴或咖啡流 出口流出;
- 14. 当水箱中的水使用完毕后,显示屏显示"请 在水箱中注入清水并装回机器";
- 15. 取出水箱,如先前已取出,则将软水过滤器放回原处;
- 16. 将水箱注满,至<u>MAX</u>线,然后将水箱放回机器,按"下一步"继续;
- 17. 屏幕显示"如图所示,请放置1.5升容器。 是否确认继续?"。将用来盛接除垢剂的容器 清空后放在喷嘴下方,按"是"再次进行冲洗, 或按"返回"回到上一步;
- 18. 显示屏显示"正在冲洗,请注意热水从流出口流出",当水箱中的水使用完毕后,显示屏显示"请清空并重新安装好咖啡盛渣盒和滴水盘",清空装有冲洗后液体的容器,然后取出并清空滴水盘(A12)和咖啡盛渣盒(A10),再放回机器中。按下"下一步";
- 19. 除垢完成。按"确认";
- 20. 显示屏显示"请在水箱中注入清水并装回机器",取出水箱,将水箱注满至MAX线,然后放回机器:
- 21. 机器会快速进行一次预热, 然后返回主页。

# 请注意:

- •如果整个除垢过程未正确完成(例如:中途断电),机器将在下次开机时要求完成除垢。
- •除垢后,咖啡盛渣盒(A8)有水是正常现象。
- •如果除垢后水箱中的水没有加到MAX线,在两次冲洗后,机器会提示需要进行第三次冲洗以确保机器内部回路中没有除垢液残留。开始冲洗前,请记得先清空滴水盘。


# 21.软水过滤器

某些特定的型号配有软水过滤器(D4)。如果您所购买的咖啡机没有配备软水过滤器,我们建议您从德龙售后服务中心购买。

如需正确地使用软水过滤器,请按如下步骤操作:

# 21.1 安装软水过滤器

- 1. 按下设置菜单(C5);
- 2. 滑动页面,选择"软水过滤器";
- 3. 按"是"进入安装程序指引;
- 4. 取出软水过滤器,转动日期指示盘到当前月份的后两个月(如图42);

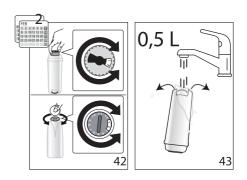

#### 请注意:

 
在机器正常使用的情况下,软水过滤器可以使 用两个月。如果机器在安装软水过滤器的情况 下不使用,那么软水过滤器最多只能使用三周。

6. 如需启用软水过滤器,请将饮用水从过滤器中间的小孔注入,直到水从这个小孔的边缘溢出来超过一分钟(如图43)。按下"下一步";(可按"返回"返回前页屏幕或按"X"退出操作)7. 取出水箱(A7)(如图2),将其注满水;将软水过滤器插入水箱,完全浸没在水中,按压过滤器中部2~3次,使里面的空气排出(如图44)。

按下"下一步":

5. 按"下一步"继续;





- 8. 将软水过滤器安装至其底座,并尽可能向下按紧(如图45)。盖上水箱盖(A6),按"下一步":
- 9. 显示屏显示"请安装水箱",装回水箱,并装上热水喷嘴(D5),按"是"继续; 10. 此时屏幕显示"在流出口下方放置0.5升容器。是否已准备好安装软水过滤器?",将一个最小容量为0.5升的空容器放置在热水喷嘴下方(如图10),并按下"是"启动软水过滤器:
- 11. 机器释放热水,然后自动停止。此时显示"软水过滤器"已安装,按"确认"返回主页; 12. 新的软水过滤器已启用,您可以正常使用咖啡机。

#### 21.2 更换或移除软水过滤器

当主页(C)上出现更换软水过滤器的消息时,请更换软水过滤器。如需立即更换软水过滤器。 请按"确认",并按照上一节第3点的指示操作。 如需稍后更换软水过滤器,请按"取消"。显 示屏显示软水过滤器标志,即提示您需要更换 软水过滤器。

如需更换软水过滤器,请按如下步骤操作:

1. 按下设置菜单(C5):

- 2. 滑动页面,直到显示"软水过滤器",按"查看更多":
- 3. 屏幕显示"准备好移除或更换软水过滤器了吗?",按"是"进入更换程序指引;
- 4. 显示屏显示"现在可继续拆除",取出水箱(A7)和已使用过的软水过滤器:
- 5. 如需取出软水过滤器,请按"确认"(可按 "返回"返回前页屏幕或按"X"退出操作);
- 6. 如需更换软水过滤器,请按"是"并按照上一 小节第4-11步骤所述进行操作。

# 请注意:

两个月后(参考日期指示盘),或是连续三周 未使用本机器后,即使显示屏没有提示更换软 水过滤器的信息,您也应该更换软水过滤器。

# 22. 显示信息

显示信息	含义	解决方法	
请在水箱中注入清水并 装回机器	水箱 (A7) 缺水。	取出水箱,往水箱注入清水至MAX(最高位置)线,然后将水箱放回机器。	
请安装水箱	水箱(A7)未安装或安装 不正确。	正确安装水箱,应该尽可能地将水箱往 里推。	
在水箱中注入清水,清 空滴水盘和咖啡盛渣盒	水箱中的水量不足,无法制作饮品,即刻会显示清空咖啡盛渣盒的信息。	机器请求同时执行这两项操作,以便减 少必要操作,且可连续制作多杯饮品。	
请安装萃取器	萃取器(A3)清洗后未安装。	按照"19.10清洁萃取器"章节的描述 安装萃取器。	
请清空咖啡盛渣盒	咖啡盛渣盒(A8)已满。	按照"19.4 清洁咖啡盛渣盒"章节的 描述清洁咖啡盛渣盒。	
请安装咖啡盛渣盒和滴水盘	咖啡盛渣盒(A8)和/或滴水盘(A12)安装不正确或未安装。	安装滴水盘和咖啡盛渣盒,并尽可能将 其往里推。	
请加入所需量的咖啡粉, 最多一匙份量	选择了使用咖啡粉制作咖啡。	确保咖啡粉进料管(A16)没有被堵塞, 然后加入一量勺(D2)咖啡粉,按显示 屏上的"下一步",并按照"11.4使用 咖啡粉制作咖啡"章节的描述操作。	
请在咖啡豆仓中加入咖啡豆,按下"确认"继续制作	咖啡豆已用尽。	装满咖啡豆仓(A1),按"确认"继续制作。	
安装热水喷嘴	热水喷嘴 (D5) 安装不正确或未安装。	插入喷嘴,并尽可能将其往里推(如图5)。机器发出提示音(在提示音功能启动的情况下)。	
请安装热饮牛奶容器 (黑色)/请安装冷饮牛 奶容器(白色)	牛奶容器安装不正确或未 安装。	安装牛奶容器,并尽可能将其往里推。 机器发出提示音(如果提示音功能已启 用)。	
清洁中, 请稍候	咖啡机内部回路有杂质。	等待机器重新准备就绪,重新选择所需的饮品。如果问题仍然存在,请联系售后服务中心。	

显示信息	含义	解决方法
新设置未保存	在定制饮品时(参考"18. my) 定制饮品功能(仅限热饮)"章节的描述),可按"X"中断制作过程或触发警报。	按 "X"回到主页(C),查看引起中断的警报。按照显示的警报对应指示操作(参考"22.显示信息"章节的描述)
抱歉,我无法制作饮品。 请降低口味浓度再试	咖啡豆研磨得太细,导致 咖啡流出速度很慢或根本 不出咖啡。	选择更低的口味浓度(参考"11.3 定制饮品"章节的描述)
	如果安装了软水过滤器,机器的内部回路可能有气泡,阻碍了咖啡制作。	按"确认",释放一些热水(参考"15.制作热水"章节的描述),直到水流匀速流出。如果问题仍然存在,请移除软水过滤器(参考"21.2 更换或移除软水过滤器"章节的描述)
如果咖啡流出速度过慢, 意式浓缩咖啡太苦,可 通过每次增加1格刻度 调节咖啡粉研磨度	咖啡豆研磨得太细,导致 咖啡流出速度很慢或根本 不出咖啡。	按"确认"并调整咖啡粉研磨器(参考"9.14 研磨设置"章节的描述)。
请选择较低浓度口味或减 少咖啡粉量	使用了太多的咖啡粉。	选择较淡的浓度(参考"11.3 定制饮品"章节的描述),或者减少咖啡粉用量(最多使用一量勺的咖啡粉)。按下"确认"返回主页或等待信息消失。
牛奶容器中如有未用完 的牛奶,可放入冰箱储存	牛奶饮品已准备就绪,并 且牛奶容器仍在机器中。	取出牛奶容器,放入冰箱。
机器需要除垢。 是否确认开始?(约30分 钟)	机器必须进行除垢。	如需进行除垢,请按"确认",按照除
糟糕, 进程已被中断	除垢程序中断或未正确完 成。	按"确认"继续(参考"20. 除垢"章 节)
需要更换软水过滤器。 是否确认开始?	软水过滤器到期需更换。	按"确认"更换或取出软水过滤器,或按"取消"稍后执行该步骤。参考"21. 软水过滤器"章节的描述。

显息	含义	解决方法
一般警示: 参考使用说明/Coffee Link小程序?	机器内部非常脏。	按照"19.清洁"章节的描述,彻底清洁机器内部。如果清洗后还显示此内容,请与德龙售后服务和/或授权服务中心联系。
回路中无水,按下"确认"开始加水	水回路空。	按"确认"为水回路注水。完毕后自动停止。注水后滴水盘(A12)内有水属正常现象。 如果问题仍然存在,请确认水箱(A7) 已正确安装。
	已安装新的软水过滤器。	确保按照安装新的软水过滤器的指示操作(参考"21.1安装软水过滤器"和"21.2更换或移除软水过滤器"章节的描述)。如果问题仍然存在,请取出软水过滤器。
•	节能模式己启用。	如需关闭节能模式,按照"9.5 通用" 章节的描述进行操作。
**************************************	机器需要进行除垢。	请参照"20.除垢"章节的描述,对机器进行除垢。
Δ	需要更换软水过滤器。	按照 "21.2更换或移除软水过滤器"章节的描述更换或移除过滤器。
3	需要清洁牛奶容器(E)。	将奶泡调节旋钮(E1)旋转至 Clean(清洁)位置。
<b></b>	在本机设置菜单(C5)中配置连接。	连接到Coffee Link小程序。
<b>a</b>	表明本机已连接。	如需中断连接,请按照"9.4 连接"章 节的描述进行操作。

显息	含义	解决方法
<b>©</b>	连接处于活动状态,但无法访问云。	如果刚刚打开,则等待机器完成启动程 序。
		如果问题仍然存在,则中断连接,然后按照"9.4 连接"章节的描述再次启用连接。
		确保路由器上的指示灯指示网络处于活动状态。
		如果问题仍然存在,则关闭机器和家用 路由器,然后再次打开。
咖啡豆信息卡已变更, 至少萃取3杯咖啡后再 进行下一次设置	在调整咖啡豆适配功能之 前,应让机器至少制作3杯 咖啡。	在变更咖啡豆信息卡之前,使用新的咖啡豆至少制作3杯咖啡。

# 23.故障处理

下表中汇总了使用中常见的间题。

如按照以下的描述,问题仍不能解决,请联系售后服务中心。

问题	可能的原因	解决方法
机器无法开机	未插入电源插座。	将电源线的插头插入电源插座 (如图1),并按下开机/待机图 标(B1)。
无法顺利安装豆仓	机器的豆仓安装区域内有残余 咖啡豆。	请使用清洁刷(D2)和一块柔软的湿布清洁机器的豆仓安装区域。如需清除咖啡粉,请使用手持式真空吸尘器。
咖啡不热	由于距离上次制作咖啡己超过了2-3分钟,咖啡机内部回路已冷却。	在制作咖啡之前,使用冲洗功能预 热内部回路(参考"9.1冲洗"章 节的描述)。
	咖啡温度设定过低。	在设置菜单(C5)中调高咖啡温度。(参考"9.10咖啡温度"章节的描述)
	咖啡杯未预热。	用热水冲洗咖啡杯使其变暖(请注意:您可以使用热水功能)。
	咖啡机需要进行除垢。	按照"20.除垢"章节的描述操作。其次,检查设置菜单中的水硬度,并确保机器设置与当地供水硬度匹配。
咖啡油脂不够丰富	咖啡豆研磨得过粗。	进入设置菜单(C5),按照说明调节研磨程度。调节的效果要在制作3杯咖啡之后才会体现出来。
	使用不合适的咖啡豆。	使用适合制作意式浓缩咖啡的咖啡豆。
	咖啡豆不新鲜。	咖啡包打开时间太长,咖啡豆己 经失去香味。
咖啡流出的速度太慢或一滴 一滴流出来	咖啡豆研磨得过细。	进入设置菜单(C5),按照说明调节研磨程度。在制作3杯咖啡之后便能看见效果。
咖啡没有从咖啡流出口的一 个口或两个口流出	咖啡流出口(A13)堵塞。	用海绵或牙签清洁咖啡流出口。

问题	可能的原因	解决方法
流出的咖啡味道过淡	豆仓 (A1) 堵塞。	按"19.9 清洁咖啡粉进料管"章节的描述,用清洁刷(D2)清洁咖啡粉进料管。
制作的饮品量过少	水箱缺水。	加注水箱至MAX(最高位置)线。
咖啡机无法制作咖啡	咖啡机内部回路有杂质。显示"清洁中,请稍候"。	等待机器重新准备就绪,重新选择 所需的饮品。如果问题仍然存在, 请联系售后服务中心。
无法取出萃取器 (A3)	没有正确地关闭机器。	按下①图标(B1)关闭机器(参考"8.关闭机器"章节的描述)。
除垢结束后,机器提示需要 进行第三次冲洗	在两次除垢过程中,水箱(A7)没有加水至 <u>MAX</u> 线。	清空滴水盘(A12)以免水溢出, 然后按照机器显示的指示操作。
牛奶不从牛奶流出口(E3)流出	牛奶容器盖(E2)过脏。	按照"19.11彻底清洁牛奶容器 (E)"章节的描述清洁牛奶容 器盖。
	牛奶容器盖(E2)未正确组装。	按照"14.1准备牛奶容器(E)" 一节中的说明正确组装所有部件, 并将奶泡旋钮转到最大奶泡位置。
奶泡过大,从牛奶流出口(E3) 喷溅出,或者奶泡很少	牛奶温度不够冷或不适用于 所需制作的饮品。	为了获得优质奶泡效果,请确保使用正确类型的牛奶来制作热饮或冷饮(参考"14.2 使用哪种牛奶?"章节的描述)。使用冰箱冷藏的(约5℃)的饮品。
	牛奶容器盖(E2)过脏。	按照"14.6 每次使用后清洁牛奶容器"章节的描述清洁牛奶容器。
	奶泡调节旋钮(E1)下的沟槽 内有水。	取出旋钮并彻底干燥。
	使用了非推荐的植物奶类型。	为了达到优质奶泡效果,请使用冰箱冷藏(约5℃)的植物奶饮品。 按照显示屏上的建议调节奶泡量。
机器不使用时会发出噪音或 冒出少量蒸汽	机器准备就绪或刚刚关机时, 冷凝液会滴入冷凝室。	这属于正常现象。为了减少这种 情况的发生,请清空滴水盘。
机器从滴水盘(A12)喷出蒸 汽和/或机器所处表面有水	滴水盘网格盖板 (A11) 清洗 后未放回。	将滴水盘网格盖板放回滴水盘。

问题	可能的原因	解决方法
外带饮品过多或从随行杯中 溢出	选择的杯量不合适。	选择的杯量较少。
1111 LL1		调整杯量,以便正确制作下一杯饮品。
外带饮品的制作量过少	选择的杯量不合适。	选择较多的杯量。
		调整杯量,以便正确制作下一杯 饮品。

# 24. 技术参数

参考机器铭牌。

# 24.1 节能小贴士

- •为减少能量损耗,在制作完成一种或多种饮品 后,可取出牛奶容器或配件。
- •将自动关机时间设置为15分钟(在设置菜单页面);
- •启用节能模式(在设置菜单页面);
- •机器提示时,请务必进行除垢。

# 名称和产品中有害物质的含量

# Name and content of hazardous substances in products

组件	有害物质					
名称	Hazardous substances					
Components	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
Name	Lead	Mercury	Cadmium	Hexavalent	Polybrominated	Polybrominated
	(Pb)	(Hg)	(Cd)	Chromium	biphenyls	diphenyl ethers
				(Cr (VI))	(PBB)	(PBDE)
塑料外壳	0	0	0	0	0	0
和底盘						
Plastic enclosure						
and chassis						
印刷电路板	Х	0	0	0	0	0
组装						
Printed Circuit Board						
Assembly						
电机、阀门	X	0	0	0	0	0
Motors, valves						
电缆和电线	0	0	0	0	0	0
Cable and wiring						
金属零件	X	0	Х	0	0	0
Metal parts						

本表格依据SJ/T 1364 的规定编制。This table is prepared in accordance with the provisions of SJ/T 11364.

- 〇:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。
- The content of such hazardous substance in all homogeneous material of such components is below the limit required by B/T 26572.
- x:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。主要是由于受技术发展水平限制,暂时无法实现替代或减量化,但这部分零部件本身不直接与食物接触,正常使用条件下不会对使用者造成任何健康影响。我们的产品均通过食品安全监测,可安心使用。
- X: The content of such hazardous substance in a certain homogeneous material of such components is beyond the limit required by GB/T 26572, mainly due to the level of technical development situation, temporarily unable t achieve replacement or reduction.

The above cited parts marked with "X" are related to components non in contact with the food.

All parts of the appliance in direct contact with the food are safe under normal conditions of use.

CON	ITEN	TS		9.14 Grinder setting48
1.	FUN	IDAMENTAL SAFETY WARNINGS41		9.15 Water hardness48
2.	GEN	ERAL INFORMATION42		9.16 Drain water48
_,	2.1	Instructions for use42		9.17 Default values49
	2.2	What water to use42	10.	DRINK SELECTION49
	2.3	What milk/plant-based beverage to use42	11.	MAKING COFFEE DRINKS49
3.		ORE USE42		11.1 Prepare the machine to make coffee drinks.49
٠.	3.1	Checking the appliance42		11.2 Directly selected drinks49
	3.2	Installing the appliance42		11.3 Customising the drinks50
	3.3	Connecting the appliance42		11.4 Making coffee using pre-ground coffee50
	3.4	Setting up the appliance42		11.5 Extra shot51
4.		ANING AND MAINTENANCE42		11.6 General indications for making coffee drinks51
т.	4.1	Cleaning before first use42		11.7 Tips for a hotter coffee51
	4.2	Prolonged non-use of the appliance42	12.	BEAN ADAPT TECHNOLOGY52
	4.3	Cleaning and maintenance of the water tank	13.	COFFEE ROUTINE52
	т.Э	42		MAKING MILK DRINKS52
	4.4	Cleaning and maintenance of the brewing	14.	14.1 Preparing the milk carafes (E)52
		unit (if removable in the model)43		14.1 Preparing the fillik carales (E)
	4.5	Cleaning and maintenance of the milk carafe		14.3 Filling and attaching the milk carafe52
		(if included in the model)43		14.4 Adjusting the froth53
	4.6	Cleaning and maintenance of the coffee pot		14.5 Making milk drinks53
		(if included in the model):43		14.6 Cleaning the milk carafe after every use53
	4.7	Cleaning and maintenance of the travel mug	15	PREPARING HOT WATER
		(if included in the model)43		
	4.8	Descaler43	16.	MAKING "TO GO" DRINKS54
5.	DES	CRIPTION43		16.1 Cleaning the De'Longhi travel mug after use
	5.1	Description of the appliance (A)43		(sold separately)54
	5.2	Description of the control panel (B)43		CHANGING BEAN HOPPER54
	5.3	Description of the homepage (main screen)		"MY" FUNCTION ("Hot" drinks only) 55
	F 4	(C)	19.	CLEANING55
	5.4	Description of the accessories (D) (*varies according to model)44		19.1 Cleaning the machine55
	5.5			19.2 Cleaning the internal circuit56
,				19.3 Cleaning the bean hoppers56
6.		TING UP THE APPLIANCE44		19.4 Cleaning the coffee grounds container56
7.		NING THE APPLIANCE ON ふ45		19.5 Cleaning the drip tray and drip tray grille56
8.	TUR	NING THE APPLIANCE OFF46		19.6 Cleaning the inside of the machine57
9.	MEN	NU SETTINGS ふ46		19.7 Cleaning the water tank
	9.1	Rinsing46		19.8 Cleaning the coffee spouts
	9.2	Descaling46		19.9 Cleaning the pre-ground coffee funnel57
	9.3	Water filter46		19.10Cleaning the brewing unit
	9.4	Connectivity46		19.11Complete cleaning of the milk carafes (E)58
	9.5	General47		DESCALING59
	9.6	Auto-off47	21.	WATER SOFTENER FILTER60
	9.7	Support47		21.1 Installing the filter60
	9.8	Grind & Empty47		21.2 Replacing or removing the filter60
	9.9	Milk carafe cleaning47	22.	DISPLAYED MESSAGES61
		Coffee temperature47	23.	TROUBLESHOOTING64
		Statistics47		TECHNICAL DATA66
		Languages48	<u>~</u> T•	24.1 Tips for Energy Saving66
	9.13	Day and time48		2 The for Energy saving00

#### 1. FUNDAMENTAL SAFETY WARNINGS

- Designated use: this appliance is designed and made to prepare drinks based on coffee, milk, plant-based beverages and hot water. Use drinking water only in the tank. Never use the accessories to make drinks other than those described in these instructions. Any other use is considered improper and thus dangerous. The manufacturer is not liable for damage deriving from improper use of the appliance.
- This is an household appliance only. It is not intended to be used in: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- CAUTION: Install or place the appliance on a worktop higher than 850mm from the floor.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be done by children without supervision.
- The surface of the heating element remains hot after use and the outside of the appliance may retain the heat for several minutes depending on use.
- CAUTION: Do not use the appliance if the enclosure, glass surfaces (if any) and containers are damaged or have visible cracks.
- If the plug or power cord is damaged, it must be replaced by customer services only to avoid all risk.
- Appliances with removable cord: avoid splashes of water on the power cord connector or socket at the back of the appliance.
- The coffee maker must not be placed inside a cabinet or kitchen unit during use

Never clean the machine by immersing it in any kind of liquid.

- Thoroughly clean all components, paying special attention to parts that come into contact with milk or plant-based beverages.
- CAUTION: to prevent damage to the appliance, do not clean with aggressive detergents; use a soft cloth and, where applicable, neutral detergent.

#### FOR EUROPEAN MARKETS ONLY:

 This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user main-

- tenance shall not be done by children unless they are above 8 years old and supervised. Keep the appliance and power cord away from children under 8 years of age.
- The appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are supervised or have been given instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children must not play with the appliance.
- This appliance shall not be used by children. Keep the appliance and its cable out of the reach of children.
- Always disconnect the appliance from the power supply when left unattended and before assembling, disassembling, or cleaning it.
- Models with the Coffee Pot function: wait 5 minutes between brewing cycles.



Surfaces marked with this symbol become hot during use (applicable to certain models only).

# This is an electrical appliance and may cause electric shock.

You should therefore follow these safety warnings:

- Never touch the appliance with damp hands or feet.
- Never touch the plug with damp hands.
- Make sure the socket used is freely accessible at all times, enabling the appliance to be unplugged when necessary.
- Unplug directly from the plug only. Never pull the cord as you could damage it.
- To disconnect the appliance completely you must unplug it from the mains socket.
- If the appliance is faulty, do not attempt to repair. Turn it
  off, unplug from the mains socket and contact Customer
  Services.
- Before cleaning the appliance, turn it off, unplug from the mains socket and allow to cool.
- IMPORTANT: Changing the original auto-shutdown settings leads to an increase in electricity consumption.

#### Important!

Keep all packaging (plastic bags, polystyrene foam) away from children.

CHOKING HAZARD: the appliance might contain small parts. Some of these parts might need to be disassembled during cleaning and maintenance operations. Handle with care and keep small parts out of reach of children.

# Danger of burns!

This appliance produces hot water and steam may form while it is in operation.

During operation (automatic rinsing, dispensing hot beverages, steam delivery, or cleaning processes), be careful to avoid contact with hot water splashes or steam.

When the appliance is in operation, the cup shelf could become very hot.

#### 2. GENERAL INFORMATION

#### 2.1 Instructions for use

Read all the instructions for use carefully before using the appliance. Failure to follow these instructions may result in burns or damage to the appliance.

The manufacturer is not liable for damage deriving from failure to respect these instructions for use.

#### Please note:

These safety warnings are valid for all De'Longhi coffee machines.

# Keep this leaflet carefully together with the instructions for use provided with the appliance.

If the appliance is passed to other persons, they must also be provided with these instructions for use.

#### 2.2 What water to use

- Use only potable fresh water.
- Do not use sparkling (carbonated) or distilled water.

### 2.3 What milk/plant-based beverage to use

- The machine can be used both with both cow's milk and plant-based beverages.
- Do not use raw milk.
- Use only pasteurized or UHT milk or plant-based beverages stored according to the manufacturer's instructions.
- The cleaning methods described in the instructions do not guarantee the complete removal of allergens.
- In case of allergies or suspected allergies and/or intolerances, make sure that your machine has not already been used with types of milk or plant-based beverages that contain allergens you are allergic to or substances to which you are intolerant.

#### BEFORE USE

# 3.1 Checking the appliance

After removing the packaging, make sure the product is complete and undamaged and that all accessories are present. Do not use the appliance if it is visibly damaged. Contact De'Longhi Customer Services.

# 3.2 Installing the appliance

When you install the appliance, you should respect the following safety warnings:

- The appliance gives off heat. After positioning the appliance on the worktop, leave a space of at least 3 cm between the surfaces of the appliance and the side and rear walls and at least 15 cm above the coffee maker.
- Water penetrating the appliance could cause damage. Do not place the appliance near taps or sinks.
- The appliance could be damaged if the water it contains freezes. Do not install the appliance in a room where the temperature could drop below freezing point.

 Arrange the power cord in such a way that it cannot be damaged by sharp edges or contact with hot surfaces (e.g. electric hot plates).

#### 3.3 Connecting the appliance

Check that the mains power supply voltage corresponds to that indicated on the rating plate on the bottom of the appliance. Connect the appliance to an efficiently earthed and correctly installed socket with a minimum current rating of 10 A only. If the power socket does not match the plug on the appliance, have the socket replaced with a suitable type by a qualified professional.

#### 3.4 Setting up the appliance

The first time the machine is used, the water circuit will be empty and operation could be very noisy. The noise becomes less as the circuit fills.

#### 4. CLEANING AND MAINTENANCE

- Carefully perform the regular cleaning of the machine and its accessories as indicated in the instructions for use provided and/or prompted by the display or warning lights of the appliance itself
- Do not use solvents, abrasive or alkaline cleaners, or alcohol to clean the appliance, as they could damage it: use a soft cloth and, where applicable, neutral detergent.
- Do not use metal objects to remove encrustations or coffee deposits as they could scratch metal or plastic surfaces.

### 4.1 Cleaning before first use

- When using for the first time, clean the appliance and the removable accessories that come into contact with water, coffee and milk/plant-based beverages, as indicated in the instructions for use provided. Check in the instructions provided the washing procedure for the accessories, including which of them are dishwasher safe.
- When using the machine for the first time, 4-5 preparations will need to be made before it gives satisfactory results

#### 4.2 Prolonged non-use of the appliance

- If the machine is not going to be used for a period longer than 3 days, empty the water tank and use the "circuit draining" function (if available on the model)
- When switching the machine on after 3 or more days without use, dispense, without consuming, the following beverages: hot water, steam, hot coffee, and a cold extraction beverage (if included in the model).

# 4.3 Cleaning and maintenance of the water tank.

- Regular cleaning: Clean the water tank every 30 days following the instructions provided.
- Beverages served hot: The water in the tank should be changed at least every 3 days.

 Cold extraction technology (if included in the model): Before making cold extraction drinks, empty out the water tank, rinse thoroughly and refill with fresh potable water.

# 4.4 Cleaning and maintenance of the brewing unit (if removable in the model)

 This should be cleaned every 30 days following the instructions provided.

# 4.5 Cleaning and maintenance of the milk carafe (if included in the model)

- Disassemble the milk carafe and clean all components, following the washing procedure shown in the instructions provided.
- If milk or plant-based beverages remain in the milk carafe, after performing the automatic "Clean" operation (if available), the milk carafe can be stored in the refrigerator for later use. Do not exceed 2 days of storage in the refrigerator for hot milk carafes and 1 day for cold milk carafes. After this period, empty the milk carafe, disassemble, and clean all components as described in the instructions provided.
- After use, if the milk carafe is empty or has been left out of the refrigerator for more than 30 minutes, empty any remaining product, disassemble, and clean all the components as described in the instructions provided.

# 4.6 Cleaning and maintenance of the coffee pot (if included in the model):

- Refer to the instructions for the washing procedure, following the guidelines outlined in the instructions provided.
- After each use, cleaning the coffee carafe with hot water and mild washing up liquid is recommended. Then rinse thoroughly with warm water to remove any detergent residue.
- The coffee carafe can be washed in the dishwasher.

# 4.7 Cleaning and maintenance of the travel mug (if included in the model)

- The beverage prepared in the travel mug should be consumed within 2 hours.
- Clean the travel mug after each use, referring to the leaflet included or the instructions provided with the machine. Do not use abrasive materials that could damage the surface of the container.

#### 4.8 Descaler

- Before use, carefully read the safety warnings provided with the descaler and the instructions on the packaging
- Use only descaler supplied by De'Longhi. The use of unsuitable descalers may result in defects not covered by the manufacturer's warranty.
- Perform descaling according to the frequency and methods outlined in the instructions provided, or indicated by the user interface

- Failure to follow the descaling instructions may result in defects not covered by the manufacturer's warranty.
- The descaler could damage delicate surfaces. If the product is accidentally spilt, dry immediately.

#### 5. DESCRIPTION

#### 5.1 Description of the appliance (A)

- A1. Bean hopper
- A2. Grinding coarseness regulator
- A3. Brewing unit
- A4. Brewing unit door
- A5. Power cord
- A6. Water tank lid
- A7. Water tank
- A8. Coffee grounds container
- A9. Coffee grounds container support
- A10. Cup tray
- A11. Tray grille
- A12. Drip tray
- A13. Coffee spouts (adjustable height)
- A14. Accessories connector with lid
- A15. Hot water spout housing
- A16. Removable pre-ground coffee funnel
- A17. Accessories storage lid

# 5.2 Description of the control panel (B)

- B1. (U) ON/Standby
- B2. (a) "Coffee" drinks menu
- B3. (a) "Milk" drinks menu
- B4. (A) "Profile" selection

# 5.3 Description of the homepage (main screen) (C)

- C1. Selected profile
- C2. Coffee moment icon
- C3. Bean Adapt Technology (enable from App): follow the instructions on the display
- C4. Indicator lights:
  - @Machine waiting for first connection

  - No network light
  - © Energy saving active light
  - Milk carafe cleaning required light
  - 📓 Descaling required light
  - <u>n</u> Filter exhausted light
- C5. Settings
- C6. Drink costumising
- C7. Drink selection

# **5.4 Description of the accessories (D)** (\*varies according to model)

- D1. "Total Hardness Test" indicator paper
- D2. Pre-ground coffee scoop/cleaning brush
- D3. Descaler
- D4. Water softener filter
- D5. Hot water spout
- D6. Bean hopper with upper lid (2 in pack)
- D7. Grinder protection lid

### 5.5 Description of milk carafe (E) (2 in pack)


# LatteCrema 🖰 & LatteCrema 🚖

- E1. Froth adjustment/Clean dial
- E2. Milk carafe lid
- E3. Milk spout (adjustable height)
- E4. Milk spout extension("Lattecrema Hot" only)
- F5. Milk container
- E6. Milk intake tube
- E7. Milk carafe connector (removable for cleaning)

#### 6. SETTING UP THE APPLIANCE.

#### Please note:

- Possible traces of coffee in the grinder are the result of settings tests performed on the appliance before sale, proof of the meticulous care and attention we invest in our products.
- The first time you use the appliance, all removable accessories (milk carafes (E), water tank (A7) and (A6), hot water spout (D5) and bean hopper (A1)) destined to come into contact with water or milk should be rinsed with hot water.
   We recommend washing the milk carafes in a dishwasher.
- 1. Connect the power cord (A5) to the mains supply (fig. 1).

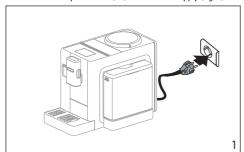

The machine switches on and leads you to set it up: follow the instructions on the display and your machine will be ready for coffee! **Select your language:** 

Press the flag corresponding to the desired language, then press "Done" for next step.

#### Set time and day

- 3. Set time zone, then press "Next".
- 4. Set current day and time, then press "Next".

#### Fill the water tank

5. Remove the water tank (A7) (fig. 2) and fill to the MAX line with fresh potable water (fig. 3), then press "Next".

 




#### Set up the machine

6. Open the accessories storage lid (A17) and take out the hot water spout (D5) (fig. 4).






- Slide down the accessory connector lid and insert the hot water spout (fig. 5). Press "Next"
- Check that the grinding coarseness regulator (A2) is on "5", then press "Next".
- 9. Remove the grinder protection lid (D7). Press "Next".

### Insert the bean hopper

 
 Take one bean hopper (D6), turn it upside down and ensure the lower part is closed well rotating it until it clicks (fig. 6).
 The bean hopper is correctly closed when the two arrows are aligned (fig. 7). Press "Next".





44

- 11. Fill the bean hopper with coffee beans. Press "Next".
- Insert the bean hopper in its housing and rotate it clockwise to lock it. For correct operation, align the "unlock" symbol to the mark on the ring (fig. 8) and, once inserted, rotate it to the "lock" position (fig. 9).

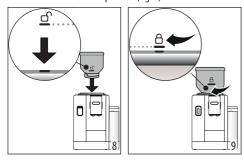

#### Prime the machine

13. Place a container with a minimum capacity of 200 ml under the coffee spouts (A13) and hot water spout (fig. 10).



Press "Yes" to start rinsing. Wait until delivery automatically stops.

#### **Tips**

A couple of tips appear on the display. Read paying attention: this will help when using the machine. Press "Next" to continue.

#### **Test water hardness**

The descaling alarm is displayed after a period of time established according to water hardness. The machine can also be programmed according to the actual hardness of the local water supply, so that the descaling procedure will be required less frequently. Proceed as follows:

- Remove the "Total hardness test" indicator paper (D1) from its pack. Press "Next".
- Immerse the paper completely in a glass of water for about one second.
- Remove the strip from the water and shake lightly. After about a minute, 1, 2, 3, or 4 red squares appear, depending on the hardness of the water. Each square corresponds to 1 level. Press "Next"

#### Set water hardness

Press the dot corresponding to the water hardness measured previously as indicated in the following table.

ured previously as mareaced in the following table:			
Total Hardness Test (D1)	Water hardness		
Green  Red Green	Level 1		
Red Green	Level 2		
Red Green	Level 3		
Red	Level 4		

5. Press "Ok".

The machine is now reprogrammed with the your water hardness setting.

#### Please note:

You can change the water hardness setting any time using the dedicated function in the menù setting (see "9.15 Water hardness").

#### **Profiles**

- 1. Set how many people will use the machine. Press "Next".
- If you want to customise, press each profile, make your choises and press "Save".
- 3. Press "Next": the profiles are confirmed.

#### **Tutorial**

- 4. Press "Next": the machine is ready for a short tutorial.
- 5. Press "Start" and see the homepage.
- 6. Now the machine shows its main features. Press "Next" to move on

Once finished the introduction, press "Start" and enjoy your machine.

#### Please note:

- The first time you use the machine, you need to make 4-5 cappuccinos before the results in the cup will be satisfactory.
- The first time you use the machine, the water circuit is empty and the appliance could be very noisy. The noise becomes less as the circuit fills.

#### 7. TURNING THE APPLIANCE ON . . .

#### Please note:

Each time the appliance is turned on, it performs an automatic preheat and rinse cycle which cannot be interrupted.
 The appliance is not ready for use until the cycle has been completed.

1. To turn the appliance on, press the button (B1) (fig. 11): the appliance comes on



When at temperature, the appliance performs a rinse cycle delivering hot water from the coffee spouts (A13); as well as heating the boiler, this also heats the internal circuits by circulating hot water.

#### 8. TURNING THE APPLIANCE OFF

Whenever the coffee machine is turned off after being used to make coffee, it performs an automatic rinse cycle.

- 1. To turn the machine off, press the 🔱 button (B1) (fig. 11).
- If a coffee drink has been delivered, the appliance rinses the coffee spouts (A13) with hot water, then goes off (stand-by).

#### Please note:

If you will not be using the appliance for some time, turn off, then unplug from the mains socket.

#### Important!

Never unplug while the appliance is on.

#### 9. MENU SETTINGS .

#### 9.1 Rinsing

Use this function to deliver hot water from the coffee spouts (A13), to clean and heat the appliance's internal circuit.

Place a container with a minimum capacity of 200 ml under the spouts (fig. 10).

To enable the function, proceed as follows:

- 1. Enter the setting menù by pressing {O} (C5);
- 2. Scroll through the pages until "Rinsing" is displayed;
- Press "Yes" to start delivery. After a few seconds, hot water is delivered to clean and heat the appliance's internal circuit.
- To stop rinsing, press "Stop" or wait for rinsing to stop automatically.

#### Please note:

 If the appliance is not used for more than 3 days, you should clean and fill the water tank with fresh potable

- water. We strongly recommend to perform 2-3 rinses before brewing your drink.
- After rinsing, it is normal for the grounds container (A8) to contain water.

### 9.2 Descaling

For instructions on descaling, see section "19. Descaling".

#### 9.3 Water filter

For instructions on the filter (D4), see section "21. Water softener filter".

# 9.4 Connectivity

Use this function to enable or disable connectivity. Proceed as follows:

- 1. Enter the setting menù by pressing (C5);
- 2. Scroll through the pages until "Connectivity" is displayed;
- Press "Yes".
- Enable the Wi-Fi connection and remote control (via the De'Longhi Coffee Link mini program). The PIN is automatically created when a device is connecting to the machine.
- 5. Press "Next" to see the identification data of the machine
- Press "<" to save the new selection and go back to the settings menu.
- 7. Press "X" to go back to the homepage (B).

On the homepage, the symbol (C4) indicating the connection status alternates with the other symbols (e.g. descaling, etc.)

Symbol on homepage	Meaning
ি	Connectivity enabled: the machine is waiting for the first connection
6	The appliance is connected
⊗	The appliance is connected to the home Wi-Fi, but there is no network, or the cloud cannot be reached
	Connection disabled. To enable, enter the settings menu (C5)

#### Please note:

- If the remote connection is off, a number of the functions in the mini-program will not be available (e.g. drink preparation).
- If you change the name or password of the Wi-Fi network, or if you connect to a new Wi-Fi network, you will need to perform the reset procedure as described below:
- 1. Proceed as described above from point 1 to point 3;
- Press "Reset";

- 3. Press "OK" to confirm cancellation of the network settings;
- Connect with the mini program again and select the new credentials.

#### 9.5 General

- Enter the setting menù by pressing (C5);
- Scroll through the pages until "General" is displayed;
   Here you can enable or disable the following functions with a simple touch:
- "Beep sound": when enabled, the appliance beeps whenever an operation is performed.
- "Energy saving": use this function to enable or disable energy saving. When enabled, the function reduces energy consumption in compliance with European regulations.
   is displayed on the homepage to show it is active.
- 3. Press "X" to save the new selection and go back to the homepage (C).

#### 9.6 Auto-off

Auto-off can be set so that the appliance goes off after 15 or 30 minutes, or 1 or 3 hours of inactivity.

To programme auto-off, proceed as follows:

- 1. Enter the setting menù by pressing {O} (C5);
- 2. Scroll through the pages until "Auto-off" is displayed;
- Select the desired time interval (15 or 30 minutes, or 1 or 3 hours).
- Press "X" to save the new selection and go back to the homepage (C).

# 9.7 Support

Scan the QR-Code to acced manual and get supporto. Press "X" to go back to the homepage. (C)

# 9.8 Grind & Empty

To empty the coffee grinder, grind the remaining beans away:

- Enter the setting menù by pressing (C5);
- 2. Scroll through the pages until "Grind & Empty" is displayed;
- Press "Read more";
- Rotate the bean hopper (A1) to the 'unlock' position (fig. 12) and leave it there until the operation finishes;
- 5. Press "Start": the machine grinds the remaining beans in the grinder;





- Once finished, remove the bean hopper and insert the other one (see "6. Setting up the appliance") or put the grinder protection lid (D7) (fig. 13);
- 7. The appliance goes back to the homepage (C).

### 9.9 Milk carafe cleaning

The appliance proposes a tutorial on a deep cleaning of the carafe to ensure its proper functioning over the time.

- Enter the setting menù by pressing (C5);
- Scroll through the pages until "Milk carafe cleaning" is displayed;
- 3. Press "Next" or "Back" to read the tips.
- 4. At the last slide, press "Ok" to go back to the setting menu.
- 5. Press "X" to go back to the homepage (C).

#### Please note:

Refer to "19.11 Complete cleaning of the milk carafes (E)".

### 9.10 Coffee temperature

To change the temperature of the water used to make the coffee, proceed as follows:

- 1. Enter the setting menù by pressing (C5);
- Scroll through the pages until "Coffee temperature" is displayed;
- Press "Set";
- 4. Select the required temperature from those proposed;
- Press "<" to save the new selection and go back to the settings menu.
- 6. Press "X" to go back to the homepage (C).

#### Please note:

Varying the temperature has most effect for long drinks.

# Bean Adapt Technology -(1)-:

We suggest you access Bean Adapt Technology in the Coffee Link mini program to adjust this parameter to an appropriate setting for the coffee beans used.

#### 9.11 Statistics

This displays statistics relating to the machine. To view the statistics, proceed as follows:

1. Enter the setting menù by pressing (C5);

- Scroll through the pages until "Statistics" and the principal statistics are displayed. To view more information, press "Read more";
- 3. Press "<" to go back to the settings menu.
- 4. Press "X" to go back to the homepage (C).

#### 9.12 Languages

To change the language on the homepage, proceed as follows:

- 1. Enter the setting menù by pressing (C5);
- 2. Scroll through the pages until "Languages" is displayed;
- Press "Set":
- Press the flag corresponding to the language you want to set. The display is immediately updated with the selected language;
- Press "<" to save the new selection and go back to the settings menu;
- 6. Press "X" to go back to the homepage (C).

### 9.13 Day and time

To change the day and time on the homepage, proceed as follows:

- 1. Enter the setting menù by pressing (C5);
- 2. Scroll through the pages until "Day and time" is displayed;
- Press "Set";
- Select "Set the time zone": scroll to select your time zone. Press "Ok",
- Select "Set day and time": scroll to set or enable synchronization via Wi-fi;
- 6. Press "<" to go back to the settings menu.
- 7. Press "X" to go back to the homepage (C).

#### 9.14 Grinder setting

The appliance proposes a tutorial on how to adjust grinding correctly for best results:

- Enter the setting menù by pressing (C5);
- Scroll through the pages until "Grinder setting" is displayed;
- Press "Read more" to consult the tutorial on how to adjust the grinding coarseness. Press "Next" or "Back" to read the tips.
- 4. At the last slide, press "Ok" to go back to the setting menu.
- 5. Press "X" to go back to the homepage (C).

#### Please note:

- After carrying out the above procedure, we recommend making at least 3 coffees before adjusting again. If the coffee is still not brewed correctly, repeat the procedure.
- The grinding coarseness regulator (A2) must only be turned when the coffee grinder is in operation during the initial phase of coffee preparation.

# Bean Adapt Technology -

We suggest you access Bean Adapt Technology in the Coffee Link mini program to adjust this parameter to an appropriate setting for the coffee beans used.

#### 9.15 Water hardness

To change the water hardness, proceed as follows:

- 1. Test the water hardness proceeding as describer on ""6. Setting up the appliance" "Test water hardness".
- 2. Enter the setting menù by pressing  $\{\widetilde{O}\}$  (C5).
- 3. Scroll through the pages until "Water hardness". Press "Set".
- 4. Select the level corresponding to the test.
- 5. Press "<" to go back to the settings menu.
- 6. Press "X" to go back to the homepage (C).

#### 9.16 Drain water

To avoid the water in the circuit freezing if the appliance is to be left idle for a long period of time, or before taking it to customer services, we recommend emptying the water circuit.

Proceed as follows:

- 1. Enter the setting menù by pressing {O} (C5);
- 2. Scroll through the pages until "Drain water" is displayed;
- 3. Press "Yes" to start the guided procedure;
- Extract, empty and replace the grounds container (A8) and drip tray (A12) (fig. 14), then press "Next";



- 5. Insert the spout (D5) on the connector (A14) (fig. 5);
- Position a 0,2 I container under the spouts (fig. 10). Press "Next";
- The appliance performs a rinse cycle with hot water from the coffee spouts (A13);
- At the end of rinsing, extract the water tank (A7) (fig. 2) and empty;
- 9. If present, remove the water softener filter (D4) from the water tank and press "Next";
- Put the empty water tank back in the appliance and press "Next".
- 11. Confirm you are ready to start and press "Yes".
- Wait for the appliance to empty the circuit; (Important: hot water from the spouts!). As the water circuit empties,

the appliance could become noisier. This is part of normal operation.

- 13. When the circuit is empty, extract and empty the drip tray, put back in the appliance and press "Next";
- 14. Press "Ok". The appliance goes off (standby).
- 15. Unplug the appliance.

The next time the appliance is turned on, follow the instructions in section "6. Setting up the appliance".

#### 9.17 Default values

This resets all menu settings and user customisation back to the default values (with the exception of the language, which remains as set, and the statistics).

Proceed as follows:

- Enter the setting menù by pressing (C5);
- 2. Scroll through the pages until "Default values" is displayed;
- 3. Press "Read more":
- 4. Select whether you want to reset the entire machine or a single profile, then press "Next";
- Follow the instructions, then confirm the reset by pressing "Ok".
- 6. Press "X" to go back to the homepage (C).

#### Please note:

When the appliance (not the individual profile) has been reset to the default values, the machine proposes the introductory tutorial again.

#### 10. DRINK SELECTION

You can use your machine to make a great variety of drinks.

	Hot	Cold
Espresso	/	<b>✓</b>
2X Espresso	<b>✓</b>	×
Espresso Lungo	<b>✓</b>	×
Coffee	<b>✓</b>	<b>√</b>
Long	<b>✓</b>	×
Americano	/	<b>√</b>
Cappuccino	<b>✓</b>	<b>√</b>
Latte Macchiato	<b>✓</b>	<b>✓</b>
Caffelatte	<b>✓</b>	<b>√</b>
Cappuccino Mix	<b>✓</b>	<b>✓</b>
Espresso Macchiato	<b>✓</b>	×
		$\rightarrow$

	Hot	Cold
Flat White	<b>✓</b>	<b>✓</b>
Cortado	<b>✓</b>	×
Milk	<b>✓</b>	<b>✓</b>
Hot water	<b>√</b>	×

From the panel, access the type of drink you want to make (Coffee or Milk) and fit the necessary accessories.

#### 11. MAKING COFFEE DRINKS 3

#### Please note:


Steam will come out after each drink (fig. 15). This is part of normal use.



# 11.1 Prepare the machine to make coffee drinks *Important!*

Do not use green, caramelised or candied coffee beans as they could stick to the coffee grinder and make it unusable.

- 1. Place 1 or 2 cups under the coffee spouts (A13);
- Lower the spouts as near as possible to the cup (fig. 16).
   This makes a creamier coffee.

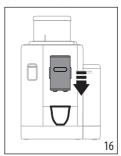

# 11.2 Directly selected drinks

1. Press the image on the homepage (C) corresponding to the coffee you want to make (C7) (e.g. eEpresso, fig. 17);



- Hot coffee drink: the appliance starts preparation.Cold coffee drinks:
  - Select to make an "Ice" or "Extra Ice" drink: press "Next";
  - Depending on the previous selection, before delivery, the appliance suggests the quantity of ice cubes. Add the quantity of ice cubes indicated to the glass (fig. 18), then press "Brew".



· The appliance starts preparation.

A description of each individual phase (grinding, brewing coffee) appears on the display.

 
At the end of preparation, the appliance is ready to make the next drink.

### 11.3 Customising the drinks

To make coffee drinks with customised parameters, proceed as follows:

 Press the customising settings (C6) at the bottom of the image corresponding to the coffee you want to make (e.g. espresso, fig. 19). The parameters that can be customised according to taste appear on the display:



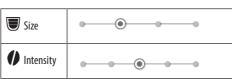

 Hot coffee drink: After setting the parameters, press "Brew". The appliance starts making the drink and a description of each individual phase (grinding, brewing coffee) appears on the display;

**Cold coffee drinks:** Set the size, then press "Start" and proceed as follows:

- Select whether to make an "Ice" or "Extra Ice" drink, then press "Next";
- Depending on the previous selection, before delivery, the appliance suggests the quantity of ice cubes. Add the quantity of ice cubes indicated to the glass (fig. 16), then press "Brew".
- The appliance starts making the drink and a description of each individual phase (grinding, brewing coffee) appears on the display.
- At the end of delivery, press "Save" to save the new settings, or "Cancel" to retain the previous parameters. You can also save for the moment of the Coffee Routine.

#### Please note:

If you save the new settings, they are memorised ONLY in the selected profile.

The appliance is ready to be used again.

# 11.4 Making coffee using pre-ground coffee *Important!*

- Never add pre-ground coffee when the machine is off or it could spread through the inside of the machine and dirty it. This could damage the machine.
- Never use more than 1 level scoop (D2) as it could soil the inside of the coffee machine or block the funnel (A16).

When using pre-ground coffee, only one cup can be made at a time.

- Making Long coffee: halfway through preparation, when requested by the appliance, add one level measure of preground coffee and press "Ok".
- You cannot make 2x Espresso drinks using pre-ground coffee.
- Press the customising settings (C6) at the bottom of the image corresponding to the drink you want to make (e.g. espresso, fig. 19).
- 3. Choose the size and press "Brew".
- Lift the pre-ground coffee funnel lid (A17), make sure the funnel (A16) is not blocked, then add one level scoop (D2) of pre-ground coffee (fig. 20). Press "Ok" to make the drink;



The appliance starts making the drink and a description of each individual phase appears on the display.

At the end of preparation, the appliance is ready to make the next drink.

#### 11.5 Extra shot

You can add a boost of extra Espresso to ythe following drinks:.

	Hot
Espresso	<b>✓</b>
Espresso Lungo	<b>✓</b>
Espresso Macchiato	<b>✓</b>
Long	/
Coffee	<b>✓</b>
Americano	<b>✓</b>
Cappuccino	<b>✓</b>
Latte Macchiato	<b>✓</b>
Caffelatte	<b>✓</b>
Cappuccino Mix	/
	$\rightarrow$

	Hot
Cortado	<b>✓</b>
Flat White	<b>✓</b>

#### Proceed as follows:

- Press the customising settings (C6) at the bottom of the image corresponding to the drink you want to make (e.g. espresso, fig. 19).
- 2. Press "Extra Shot", then "Ok".
- Select the desired size and intensity. Press "Brew".
- 4. Confirm by pressing "Ok".
- The appliance starts making the drink and a description of each individual phase (grinding, brewing + extra grinding and brewing) appears on the display.
- At the end of delivery, press "Save" to save the new settings, or "Cancel" to retain the previous parameters. You can also save it for the moment in the Coffee Routine.

#### Please note:

If you save the new settings, they are memorised ONLY in the selected profile.

The appliance is ready to be used again.

### 11.6 General indications for making coffee drinks

- While the machine is making the coffee, preparation can be interrupted at any moment by pressing "Stop" or "Cancel".
- As soon as delivery has ended, to increase the quantity of coffee, just press "Extra". When the required quantity is reached, press "Stop" or "Cancel".
- Various alarm messages could be displayed while using the appliance ("Please fill the tank with fresh water up to MAX level" etc.). Their meaning is explained in section "22. Displayed messages".
- If the coffee is delivered a drop at a time, too weak and not creamy enough, or too cold, consult the"9.14 Grinder setting" tutorial included in the setting menu ((C5)) and section "23. Troubleshooting".
- If "Energy Saving" mode is activated, there may be a few seconds delay before the first coffee is delivered.

### 11.7 Tips for a hotter coffee

To make a hotter coffee, proceed as follows:

- perform a hot rinse cycle before making hot drinks (see "9.1 Rinsing"in the menu ((C5));
- warm the cups with hot water using the hot water function (select the relative picture and follow the instructions on the display);
- increase the coffee temperature ("9.10 Coffee temperature" in the menu (C).

#### 12. BEAN ADAPT TECHNOLOGY

A coffee expert at your fingertips to help you optimise coffee brewing and the result in your cup in just a few steps.

The smart technology guides you to adjust the machine according to the coffee beans used - from grinding coarseness to brewing, each phase will be regulated to get the best results from the coffee bean.

Download and open the Coffee Link mini program to find out more.

To make espresso coffee, follow the instructions in section "11.2 Directly selected drinks".

#### 13. COFFEE ROUTINE

If you enable the coffee routine, your machine will remember the settings you decide for each moment during the day.

- Press the coffee moment icon (C2) on the homepage;
- Enable the function activating the switch on the display Download and open the Coffee Link mini program to customise your routines of the working and rest days.

#### Please note:

To disable coffee routine, press the coffee moment icon and turn off the function.

#### 14. MAKING MILK DRINKS 3

# 14.1 Preparing the milk carafes (E)

 
#### Please note:

To avoid milk with poor froth or large bubbles, always clean the milk carafes as described in sections "14.6 Cleaning the milk carafe after every use" and "19.11 Complete cleaning of the milk carafes (E)".

#### 14.2 Which milk to use?

The quality of the froth will vary depending on:


- the temperature of the milk or plant-based drink (for best results, always use milk or plant-based drinks at refrigerator temperature (5°C));
- · type of milk or plant-based drink;
- · brand used:
- · ingredients and nutritional value.

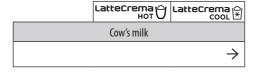

	LatteCrema (	LatteCrema 🖨
Whole (fat content >3.5%)		×
Partially skimmed (fat content between 1.5 and 1.8%)	<b>√</b>	×
Skimmed (fat content < 0.5%)		<b>✓</b>
Soy	<b>✓</b>	<b>✓</b>
Almond	<b>✓</b>	<b>✓</b>
Oat	<b>√</b>	<b>√</b>


# 14.3 Filling and attaching the milk carafe

 - Lift the lid (E2) and fill the milk container (E5) with a sufficient quantity of milk, not exceeding the MAX level marked on the carafe (fig. 21);
- 2. Make sure the milk intake tube (E6) is correctly inserted on the bottom of the milk carafe lid (fig. 22);

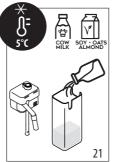



- Put the lid back on the milk container;
- Slide down the lid and attach the carafe to the connector (A14), pushing as far as it will go (fig. 23). The machine emits a beep (if the function is enabled);

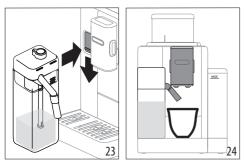

 Place a sufficiently large cup under the coffee spouts (A13) and milk spout (E3) (fig. 24). The milk spout of the "Hot" lattecrema can be lengthened by adjusting the extension (E4):

#### Please note:

If "Energy Saving" mode is enabled, you may have to wait a few seconds before the appliance makes the drink.

#### 14.4 Adjusting the froth

Turn the froth adjustment dial (E1) to adjust the froth delivered while making milk drinks.

Dial position	Recommended for		
	LatteCrema Hot	LatteCrema &	
Light froth	• Caffelatte	• Caffelatte	
Creamy froth	Latte Macchiato     Flat White     Cortado	Latte Macchiato     Flat White	
Dense froth	Cappuccino Cappuccino Mix Espresso Macchiato Hot milk (frothed)	Cappuccino Cappuccino Mix Cold milk (frothed)	

# 14.5 Making milk drinks


On the homepage (C), press the image corresponding to the drink you want to make (C7).

As for coffee drinks, you can make a customised drink by pressing the drink customising symbol (C6) at the bottom of the image on the homepage.

# 14.6 Cleaning the milk carafe after every use

Each time you deliver a milk drink, the appliance asks you to perform the CLEAN function to clean the milk carafe lid (E2). To start cleaning, proceed as follows:

 Leave the milk carafe in the machine (you do not need to empty it);  Place a cup or other recipient under the milk spout (E3) (fig. 25);

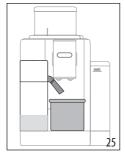



- Turn the froth adjustment/clean dial (E1) to "Clean" (fig. 26). Hot water and steam are delivered from the milk spout. Cleaning stops automatically;
- 4. Turn the dial back to one of the froth selections:

#### If you want to make a number of drinks in succession:

 To proceed with making the next drinks, when the "Clean" message is displayed, press "Cancel". Clean the milk carafe after making the last drink.

# At the end of preparation, the milk carafe is empty, or there is not enough milk for other drinks

 After cleaning using the "Clean" function, extract the milk carafe and clean all the components as described in section "19.11 Complete cleaning of the milk carafes (E)"

### At the end of preparation, there is enough milk left in the carafe for other drinks

After cleaning using the "Clean" function, extract the milk carafe and place it immediately in the refrigerator. The "HOT" carafe can be kept in the refrigerator for no more than 2 days while the "COOL" carafe for no more than 1 day; then all the components should be cleaned as described in section "19.11 Complete cleaning of the milk carafes (E)".

#### Important:

If the milk carafe has been left out of the refrigerator for more than **30 minutes**, disassemble and clean all the components as described in section "19.11 Complete cleaning of the milk carafes (E)".

#### General notes after making milk drinks:

- If you do not clean the milk carafe, the symbol appears on the homepage to remind you that it needs cleaning.
- In certain cases, the appliance will need to warm up before the carafe can be cleaned.
- To ensure correct cleaning, wait for the Clean function to end. The function stops automatically. It must not be interrupted while underway.

#### 15. PREPARING HOT WATER.

- 1. Insert the hot water spout (D5) in the machine (fig. 5);
- 2. Place a cup under the hot water spout;
- 3. On the homepage (C):
- directly press the image corresponding to hot water (C7): delivery starts.
- choose the quantity by pressing the customising symbol (C6) at the base of the image, then press "Brew". Delivery starts.
- 4. Preparation begins and stops automatically.

#### Please note:

- To stop brewing, press "Stop" or "Cancel".
- As soon as delivery has ended, to increase the quantity of water, just press "Extra". When the required quantity is reached, press "Stop" or "Cancel".

#### 16. MAKING "TO GO" DRINKS . തി

Use your personal mug and create your drink to go.
Visit delonghi.com to find out the recommended mug:



Travel mug (sold separately) (capacity 236 ml/ 130mm)

Type: DLSC074

EAN:8004399024465

You can use your machine to make a great variety of "To go" drinks.

	Hot	Cold
Coffee	×	<b>✓</b>
Americano	<b>✓</b>	<b>✓</b>
Cappuccino	<b>✓</b>	<b>✓</b>
Latte Macchiato	<b>✓</b>	<b>✓</b>
Caffelatte	<b>✓</b>	<b>✓</b>
Cappuccino Mix	<b>✓</b>	<b>✓</b>
Flat White	<b>✓</b>	<b>✓</b>
Milk	<b>✓</b>	✓

### Proceed as follows:

- Press the customising settings (C6) at the bottom of the image corresponding to the coffee you want to make.
- 2. Press : you entered the "to go" function.
- 3. Press "Next" then "Ok".
- Pressing ( displays information on the quantities corresponding to the size of the travel mug;

- 5. Press (1) to select the size of your drink: press "Save".
- The new "to go" size is saved and next time will be automatically set. Press "X".
- Press "Brew": the machine proceed preparing the drink as usual.

#### Please note:

- Each time you use a mug different from the one used previously, we recommend you remain nearby to check the quantity of drink delivered.
- If you save the new settings, they are memorised ONLY in the selected profile.
- To maintain the temperature of hot drinks, preheat the travel mug with hot water.
- When choosing the travel mug to use, make sure it is no taller than 14 cm.

#### **Important**

- Before screwing on the lid, open the closing cap to release the pressure;
- At the end of preparation of milk drinks, clean the milk carafe (E) as iillustrated on paragraph "14.6 Cleaning the milk carafe after every use".
- You should use the contents within a maximum of 2 hours.
   After that time, empty and clean as described in the following section.
- For more information, see the leaflet attached to the travel muq.

# **16.1 Cleaning the De'Longhi travel mug after use** (sold separately)

For hygiene reasons, the travel mug should always be cleaned after use. Do not use abrasive materials that could damage the surface of the container.

#### Proceed as follows:

- 1. Unscrew the lid and rinse the container and lid with hot drinking water  $(40^{\circ}\text{C})$ .
- Soak the components in hot water (40°C) with washing up liquid for at least 30 minutes. Do not use scented detergents.
- Clean the inside of the container and the lid with a clean sponge and washing up liquid, removing any visible dirt.
- 4. Rinse all components with hot drinking water (40°C).
- Dry all components with a clean, dry cloth or paper towels, then reassemble.
- Wash the lid in the dishwasher once a week. The metal container is not dishwasher safe

#### 17. CHANGING BEAN HOPPER



Switch the bean hopper (D6) to enjoy a different coffee blend.

Proceed as follows:

- Rotate the bean hopper in "unlock" position (fig. 12) and leave it in this position until the procedure is finished;
- The display shows the "Switch mode" procedures: select one option and follow the steps:

# Choose a drink (Use the remaining beans to make a drink of your choice):

- Select "Choose a drink": the homepage shows the drinks you can make (the intensity is automatically selected and cannot be changed);
- 4. Proceed brewing the drink as usual;

# Grind & Empty (Run a grinding cycle to remove the remaining beans):

- Select "Grind & Empty": the machine grinds the remaining beans:
- Press "Start" and wait until the machine automatically stops;

#### Now you can insert the new bean hopper

- 5. Remove the bean hopper;
- Insert the new bean hopper in its housing and rotate it clockwise to lock it. For correct operation, align the unlock symbol to the mark on the ring (fig. 8) and, once inserted, rotate it to the lock position (fig. 9).

#### Please note:

If you directly change the bean hopper without emptying the grinder, the coffee brewed will be with a mix between the old and new blends.

#### Attention:

- It is normal to find coffee powder on the bean hopper's housing on the machine.
- If it is difficut to insert the new hopper, make sure there is no coffee beans on the hopper housing on the machine. In this case, clean the hopper's housing on the machine with the cleaning brush (D2) and a soft, damp cloth. To remove the coffee powder, use a hand vacuum cleaner.

# 18. "MY" FUNCTION ("Hot" drinks only) കി

With the "my function", you can customise the drink as follows:

- Make sure the profile (B4) whose drink you want to customise is active:
- Press drink customising (C6) at the bottom of the image corresponding to the drink you want to make (fig. 17);
- 3. Press (my);
- 4. Press "Start" and follow the guided procedure.

#### Please note:

- If you save the new settings, they are memorised ONLY in the selected profile.
- When you customise a single drink, the respective double version is also customised.

- Press "X" to exit programming at any moment. The values will not be saved.
- When a drink has been customised, "Reset" (on the right side) and "my" (close to "Brew") appear in the settings.
   Press "Reset" to reset the default values for the drink. Press "my" to switch to default settings.

Drink quantity table			
Drink	Standard quantity	Programmable quantity	
Espresso	40 ml	20-180 ml	
2X Espresso	40 ml + 40 ml	20-180 ml + 20-180 ml	
Espresso Lungo	120 ml	60-180 ml	
Coffee	180 ml	100-270 ml	
Long	160 ml	115-250 ml	
Americano	150 ml	70-480 ml	
Hot water	250 ml	20-420 ml	

#### 19. CLEANING SO

### 19.1 Cleaning the machine

The following parts of the machine must be cleaned regularly:

- the appliance's internal circuit;
- bean hopper (A1):
- coffee grounds container (A8);
- drip tray (A12) and drip tray grille (A11);
- water tank (A7);
- coffee spouts(A13);
- pre-ground coffee funnel (A16);
- brewing unit (A3), extractable after opening the brewing unit flapdoor (A4);
- milk carafes (E) (Hot and Cool).

#### Important!

- Do not use solvents, abrasive detergents or alcohol to clean the coffee machine. With De'Longhi superautomatic coffee machines, no chemical products are required for cleaning purposes.
- Do not use metal objects to remove encrustations or coffee deposits as they could scratch metal or plastic surfaces.

dishwasher safe	hand wash only
drip tray (A12)	bean hopper (A1)
coffee grounds container (A8)	coffee grounds container support (A9)
drip tray (A12)	cup tray (A10)

dishwasher safe	hand wash only
tray grille (A11)	water tank (A7)
"Hot" and "Cool" milk carafe (E)	removable brewing unit (A3)
	pre-ground coffee funnel (A16)

# 19.2 Cleaning the internal circuit

If the appliance is not used for more than 3 days, before using it again, we strongly recommend empty and fill the water tank with fresh potable water, switch it on and perform 2/3 rinse cycles by selecting the "Rinsing" function ("9.1 Rinsing").

#### Please note:

After cleaning, it is normal for the grounds container (A8) to contain water.

### 19.3 Cleaning the bean hoppers

Periodically clean the bean hopper (A1). Proceed as follows:

- Rotate counterclockwise the bean hopper to the "unlock" position (fig. 12) and leave it in this position until the procedure finishes: you enter the "Switch mode".
- 2. Select one option and follow the dedicated steps.
- 3. Then remove the bean hopper.
- 4. Remove the bean hopper lid. If the bean hopper is not empty, store the coffee beans in a container.
- Clean all visible residues both internally and externally by passing the hopper with a soft, damp cloth.
- Clean the hopper's housing on the machine with the cleaning brush (D2) and a soft, damp cloth. To remove the coffee powder, use a hand vacuum cleaner.
- Dry the bean hopper and its lid with a dry, clean cloth or paper and check the hopper is completely dry.
- 8. Fill the hopper with coffee beans, close it with its lid. Insert the bean hopper in its housing and rotate it clockwise to lock it. For correct operation, align the "unlock" symbol to the mark on the ring (fig. 8) and, once inserted, rotate it to the "lock" position (fig. 9)

# 19.4 Cleaning the coffee grounds container

When the machine requires it, the grounds container must be emptied and cleaned. The appliance cannot be used to make coffee until you have cleaned the grounds container (A8). Even if not full, the empty grounds container message is displayed 72 hours after the first coffee has been prepared. For the 72 hours to be calculated correctly, the machine must never be disconnected from the mains power supply.

#### Important! Danger of scalding

If you make a number of milk-based drinks one after the other, the metal cup tray (A10) becomes hot. Wait for it to cool down before touching it

To clean (with the machine on):

- 1. Remove the drip tray (A12) and grounds container (A8) (fig. 14).
- Empty the drip tray and grounds container and clean thoroughly to remove all residues left on the bottom.
- 3. Put the drip tray complete with grille (A11) and grounds container back in the appliance.

#### Important!

When removing the drip tray, the grounds container must be emptied, even if it contains only a few grounds. If this is not done, when you make the next coffees, the grounds container will fill up more than expected and cloq the machine.

# 19.5 Cleaning the drip tray and drip tray grille *Important!*

The drip tray (A12) is fitted with a level indicator (red) showing the amount of water it contains (fig. 27).



Before the indicator protrudes from the cup tray (A10), the drip tray must be emptied and cleaned, otherwise the water may overflow the edge and damage the appliance, the surface it rests on or the surrounding area. To remove the drip tray, proceed as follows:

- 1. Remove the drip tray with all the components;
- Remove and empty the drip tray and coffee grounds container (A8);
- Remove the cup tray (A10) and drip tray grille (A11) andwash all components;
- 4. Put the drip tray complete with all the components.


#### Important!

When removing the drip tray, the grounds container must be emptied, even if it contains few grounds. If this is not done, when you make the next coffees, the grounds container will fill up more than expected and clog the machine.

# 19.6 Cleaning the inside of the machine Danger of electric shock!

Before cleaning internal parts, the machine must be turned off (see section "7. Turning the appliance on") and unplugged from the mains power supply. Never immerse the machine in water.

- Check regularly (about once a month) that the inside of the appliance (accessible after removing the drip tray (A15)) is not dirty.
- 2. Remove all residues with a vacuum cleaner (fig. 28).

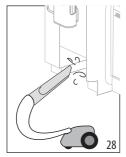

### 19.7 Cleaning the water tank

Clean the water tank (A7) periodically (about once a month) and whenever you replace the water softener filter (D4).


- Extract the water tank, remove the water softener filter (if present) and rinse with running water;
- Empty the water tank and clean it using hot water and a clean, non-abrasive cloth if necessary. Rinse thoroughly with water:
- 3. Put the filter back in the appliance, fill the tank with fresh water up to the MAX level and put the tank back;
- (models with water softener filter only) Deliver 100ml of hot water to reactivate the filter.

#### Please note:

If the appliance is not used for more than 3 days, you should clean the tank as described above.

### 19.8 Cleaning the coffee spouts

- Clean the coffee spouts (A13) regularly with a sponge or cloth (fig. 29):
- Check the holes in the coffee spouts are not blocked. If necessary, remove coffee deposits with a toothpick (fig. 30).

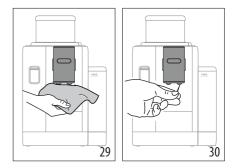

# 19.9 Cleaning the pre-ground coffee funnel

Clean the pre-ground coffee funnel (A16) regularly (about once a month) with a damp cloth. Proceed as follows:

- Turn the machine off (see chapter "8. Turning the appliance off";
- Open the accessories storage lid (A17);
- 3. Remove the coffee scoop/cleaning bruh (D2);
- 4. Extract the removable funnel.
- 5. Clean the funnel with the brush provided;
- 6. Reinsert the funnel in its housing;
- 7. Close the lid.

#### Important!

After cleaning, make sure there are no accessories left in the funnel. The presence of foreign objects in the funnel while the machine is in operation could damage the appliance.


#### 19.10 Cleaning the brewing unit

The brewing unit (A3) must be cleaned at least once a month.

#### Important!

The brewing unit cannot be extracted while the machine is on.

- Make sure the machine is correctly turned off (see section "8. Turning the appliance off");
- 2. Remove the water tank (A7);
- 3. Open the brewing unit door (A4) (fig. 31) on the right side of the appliance;

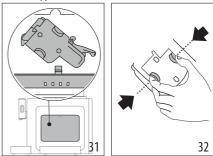

4. Press the two coloured release buttons inwards and at the same time pull the brewing unit outwards (fig. 32);

5. Soak the brewing unit in water for about 5 minutes, then rinse under the tap;

#### Important!

 
RINSF WITH WATER ONLY

NO DETERGENTS - NO DISHWASHER

- Do not use detergents when cleaning the brewing unit, as they could damage it.
- Use the cleaning brush (D2) to remove any coffee residues left in the brewing unit housing, visible through the brewing unit flap;
- After cleaning, replace the brewing unit by sliding it onto the internal support, then push the PUSH symbol fully in until it clicks into place;

#### Please note:

If the brewing unit is difficult to insert, before insertion, adapt it to the right size by pressing the two levers (fig. 33).

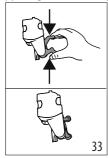


- Once inserted, make sure the two coloured buttons have snapped out;
- 10. Close the brewing unit door;
- 11. Put the water tank back.

# 19.11 Complete cleaning of the milk carafes (E)

 Each week the appliance reminds you to clean the milk carafes thoroughly and proposes the correct cleaning sequence: this cleaning will grant optimal results through the time.

Proceed as follows:

Extract the milk carafe lid (E2));

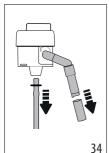




2. Extract the milk spout (E3), milk spout extension (E4) ("Hot" carafe only) and milk intake tube (E6) (fig. 34);

 - Turn the froth adjustment dial (E1) clockwise over the "Insert" position (fig. 35) and pull to extract;
- Turn counterclockwise and remove the milk carafe connector (E7) (fig. 36).



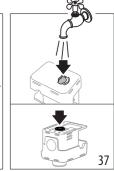

- Wash in a dishwasher (recommended) or by hand as indicated below:
- In a dishwasher: Rinse all the above components and the milk carafe with hot running drinking water (at least 40°C), then place them in the top basket of the dishwasher and run a programme at 50°C, e.g. standard ECO.
- By hand: Thoroughly rinse all the components and the
  milk carafe with hot running drinking water (at least 40°C)
  to remove all visible milk residues; make sure to run the
  water through the holes in the lid (fig. 37). Then immerse
  all the components in hot drinking water (at least 40°C) and
  washing up liquid for at least 30 minutes. Rinse all the above
  components thoroughly under hot drinking water, rubbing
  them one at a time with your hands.
- Make sure there are no milk residues on the hollow and groove under the dial (fig. 38). If necessary, scrape the groove with a toothpick;



- Check that the intake tube and spout are not clogged with milk residues:
- 8. Dry all the components with a clean dry cloth;
- 9. Reassemble all the lid components:
- 10. Attach the lid back on the milk carafe.

#### Please note:

Each week the appliance reminds you to clean the milk carafe thoroughly and proposes the correct cleaning sequence again.

### 20. DESCALING.

#### Important!

- Before use, read the instructions and labelling on the descaler pack.
- Use De'Longhi descaler only. Using unsuitable descaler and/or performing descaling incorrectly may result in faults not covered by the manufacturer's quarantee.
- Descaler could damage delicate surfaces. If the product is accidentally spilt, dry immediately.


To descale	
Descaler	De'Longhi descaler
Container	Recommended capacity: 1,5 l
Time	~30min

 
Descale the appliance when the corresponding message appears on the homepage. To descale immediately, press "Ok" and follow the step by step instructions on the display.

To descale the appliance later, press "Cancel". The (C4) appears on the homepage to remind you the appliance needs descaling. (The message appears each time you turn the appliance on).

To access the descaling menu:

- 1. Press the settings menu icon (C5) on the homepage;
- Scroll through the menu items until "Descaling" is displayed;
- 3. Press "Start" to enter the guided descaling procedure;
- 4. Press "Yes" to begin;
- Insert the water spout (D5) (fig. 5) (it is stored in the accessories compartament on top of the machine);
- Remove and empty the drip tray (A12) and coffee grounds container (A8) (fig. 14), then put both back in the appliance and press "Next";
- Remove the water tank (A7), lift the lid (A6) and (if inserted) remove the filter (D4). Empty the tank completely.
- Pour the descaler into the tank up to the level A marked inside the tank (equal to one 100ml pack), then add water (one litre) up to level B (fig. 39). Put the water tank (with lid) back in the appliance and press "Start";

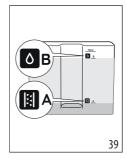

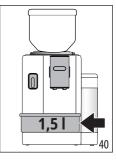

Place an empty 1,5 I container under the spouts (fig. 40).
 Press "Done": desing starts ("Back" to go back to the previous screen or "X" to exit the procedure, remembering to remove the descaling solution from the tank)

# Important! Danger of scalding

Hot water containing acid flows out of the spouts. Take care to avoid contact with splashes of this solution.

10. The descale programme starts and the descaler liquid comes out of the hot water and coffee spouts. A series of rinses is performed automatically to remove all the scale residues inside the coffee machine:

After about 20 minutes, the descaling action ceases:

11. The appliance is now ready to be rinsed through with clean water. Empty the container used to collect the descaler solution. Remove the water tank, empty, rinse under running water, fill with fresh potable water up to the MAX level and put back in the appliance (fig. 41). Press "Next";



- 12. Place the container used to collect the descaler solution empty under the spouts and press "Yes" to start rinsing;
- 13. Hot water is delivered from both the hot water spout and coffee spouts;
- 14. When the water in the tank has run out, empty the container used to collect the rinsing water;
- 15. Extract the water tank and put back the water softener filter if removed previously.

- Fill the tank with fresh water up to the MAX level, put back in the appliance and press "Next" to continue.
- Place the container used to collect the descaler solution empty under the spouts and press "Next" to start another rinsing cycle;
- 18. When the water in the tank has run out, empty the container used to collect the rinsing water, remove and empty the drip tray (A15) and grounds container (A10), then put back in the appliance. Press "Next".
- 19. The descaling process is now complete". Press "OK".
- 20. Extract the water tank, top up to the max level and put it back in the machine
- 21. The appliance performs a rapid preheat cycle and then goes back to the homepage.

#### Please note:

- If the descaling cycle is not completed correctly (e.g. electrical power failure) the appliance will request to complete it next time you switch it on;
- After descaling, it is normal for the grounds container (A8) to contain water.
- If the water tank has not been filled to the MAX level after descaling, the appliance prompts for a third rinse to ensure that the descaler solution has been completely eliminated from the machine's internal circuits. Before starting rinsing, remember to empty the drip tray.


#### 21. WATER SOFTENER FILTER

Certain models are fitted with a water softener filter (D4). If this is not the case with your model, you are recommended to purchase one from De'Longhi Customer Services.

To use the filter correctly, follow the instructions below.

# 21.1 Installing the filter

- 1. Press the settings menu (C5);
- 2. Scroll through the pages and select "Water filter";
- 3. Press "Yes" to enter the guided procedure
- 4. Remove the filter from the packaging and turn the date indicator to view the next 2 months (fig. 42);

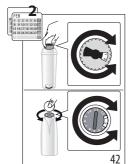




#### Please note:

The filter lasts about two months if the appliance is used normally. If the machine is left unused with the filter installed, it will last a maximum of 3 weeks.

 - Press "Next" to continue ("Back" to go back to the previous screen; "X" to cancel the operation);
- To activate the filter, run potable water through the hole in the centre of the filter until water comes out of the openings at the side for more than a minute (fig. 43). Press "Next";
- Extract the water tank (A7) (fig. 2) and fill with potable water; insert the filter in the water tank and immerse the bottom pressing the center of the filtre 2 or 3 times to enable the air bubbles to escape (fig. 44). Press "Next";



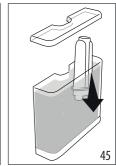

- 8. Insert the filter in the filter housing (fig. 45) and push it down firmly. Close the tank with its lid (A6) and; press "Next";
- 9. Insert the hot water spout (D5). Press "Next";
- Position an empty container with a minimum capacity of 0.5 litres under the hot water spout (fig. 6) and press "Yes" to activate the filter;
- 11. The appliance delivers hot water, then stops automatically. Press "OK" to go back to the homepage;
- 12. The filter is now active and you can use the coffee machine.

# 21.2 Replacing or removing the filter

Replace the filter (D4) when the replace filter message appears on the homepage (C). To replace the filter immediately, press "OK" and follow the instructions from point 3 of the previous section. To replace the filter later, press "Cancel". The filter symbol appears on the display to remind you the filter needs replacing.

To replace, proceed as follows:

- 1. Press the settings menu (C5);
- Scroll through the pages until "Water filter" is displayed, then press "Read More";
- Press "Yes" to enter the guided procedure;
- Extract the water tank (A7) and exhausted filter.
- 5. To remove the filter, press "OK" ("Back" to go back to the previous screen; "X" to cancel the operation);
- 6. To replace the filter, press "Next" and follow the operations described in the previous section from point (4).

# Please note:

After two months (see date indicator) or when the appliance has not been used for 3 weeks, you should replace the filter even if the message has not yet been displayed.

# 22. DISPLAYED MESSAGES

DISPLAYED MESSAGE	MEANING	SOLUTION	
Time to fill the water tank with fresh water and then insert it	Insufficient water in the tank (A7).	Take out the tank, fill with potable fresh water to Max level, and reposition in the machine.	
Please insert the water tank	The tank (A7) is not correctly in place.	Insert the tank correctly and press as far as it will go.	
Fill the tank with fresh water. Please empty drip tray and grounds container	The amount of water in the tank is not enough to make the drink and the message to empty the grounds container will be displayed shortly.	The appliance asks for both operations to be performed so that no further intervention will be necessary and more drinks can be made one after the other without interruption.	
Please insert the brewing unit	The brewing unit (A3) has not been replaced after cleaning.	Insert the brewing unit as described in section "19.10 Cleaning the brewing unit"	
Please empty grounds container	The grounds container (A8) is full.	Clean as described in section "19.4 Cleaning the coffee grounds container"	
Please insert grounds container and drip tray	The grounds container (A8) and/or drip tray (A12) is not correctly in place or is missing.	Insert the drip tray complete with ground container and press as far as it will go.	
Please add your preferred pre- ground coffee max: one scoop!	Preparation with pre-ground coffee has been selected.	Make sure the funnel (A16) is not blocked, then add one level scoop (D2) of pre-ground coffee, press "Next" on the display and follow the instructions in section "11.4 Making coffee using pre-ground coffee".	
Fill the beans hopper and press "OK" to resume brewing	The coffee beans have run out.	Fill the beans hopper (A1) and press "OK" to resume brewing	
Please insert the water spout	The spout (D5) is not correctly in place or is missing.	Insert the spout and push as far as it will gr (fig. 5). The appliance emits a beep (if the beep function is enabled).	
Please insert the Hot/Cool milk carafe	The milk carafe is not inserted correctly or is missing.	Insert the milk carafe and push as far as it will go. The machine emits a beep (if the beep function is enabled).	
Just doing a little cleaning. I'll be back in a few seconds	The appliance has detected impurities in its internal circuits.	Wait for the appliance to be ready again and reselect the required drink. Contact customer services if the problem persists.	

DISPLAYED MESSAGE	MEANING	SOLUTION
The new settings have not been saved	While customising the drinks (see section "18. "My" function ("Hot" drinks only)"), preparation has been deliberately interrupted by pressing "X" or an alarm has been triggered.	Press "X" to go back to the homepage (C) to view the alarm causing the interruption. Follow the instructions corresponding to the alarm displayed (see section "22. Displayed messages")
Sorry, I am unable to complete your drink. Please reduce the	The grinding is too fine and the coffee is delivered too slowly or not at all.	Select a milder "Intensity" (see "11.3 Customising the drinks")
intensity and try again	If the water softener filter (D4) is present, an air bubble may have been released inside the circuit, obstructing delivery.	Press "OK" and deliver a little water (see section "15. Preparing hot water") until the flow is regular. If the problem continues, remove the filter (see section "21.2 Replacing or removing the filter")
If the delivery is slow and your espresso tastes burned, increase the grinding level by 1 (+1)	The grinding is too fine and the coffee is delivered too slowly or not at all.	Press "OK" and adjust the coffee grinder (see "9.4 Adjust grinder").
Sorry, I am unable to complete your drink. Please reduce the intensity and try again	Too much coffee has been used.	Select a milder "Intensity" (see "11.3 Customising the drinks") or reduce the quantity of pre-ground coffee (maximum 1 measure). Press "OK to go back to the homepage or wait until the message disappears.
Remember to store the milk carafe in the fridge	A milk-based drink has been prepared and the milk carafe is still inserted in the appliance	Remove the carafe and place in the refrigerator.
The machine needs to be descaled. Press OK to start (~30min)	The machine must be descaled.	To proceed with descaling, press "OK" and follow the guided procedure, otherwise press "Cancel". In this case, the appears on the homepage (C) to remind you that descaling is needed (see section "19. Descaling").
Oops, the process has been interrupted	Descaling process interrupted or not correctly completed	Press Ok to continue (see chap. "20. Descaling").
It's time to replace your water filter. Ready?	The water softener filter (D4) is exhausted.	Press "OK" to replace or remove the filter, or "Cancel" to carry out the procedure later. Follow the instructions in section "21. Water softener filter".
Something's not right: Can you refer to the user manual/ Coffee Link mini program to make things better, please?	The inside of the appliance is very dirty.	Clean the inside of the appliance thoroughly, as described in section "19. Cleaning". If the message is still displayed after cleaning, contact De'Longhi Customer Services and/or an approved Service Centre
		$\rightarrow$

DISPLAYED MESSAGE	MEANING	SOLUTION
Water circuit empty. Press OK to start filling process	The water circuit is empty	Press "OK" to fill the circuit. Delivery stops automatically. It is normal for there to be water in the drip tray (A12) after filling.  If the problem persists, make sure the water tank (A7) is fully inserted.
	A new water softener filter has been inserted (D4)	Make sure you have followed the instructions for inserting the new filter (sections "21.1 Installing the filter" and "21.2 Replacing or removing the filter"). If the problem continues, remove the filter.
	Energy saving is enabled.	To disable energy saving, proceed as described in section "9.5 General".
***************************************	The machine must be descaled.	The descaling procedure described in section "19. Descaling" needs to be performed.
Ī	The filter must be replaced (D4)	Replace the filter or remove it as described in section "21. Water softener filter".
3	Remember to clean the milk carafe (E.	Turn the froth adjustment dial (E1) to CLEAN.
ি	The connection is configured in the appliance settings menu (C5).	Connect to the Coffee link mini program.
<b>?</b>	Indicates that the appliance is connected.	To disable the connection, proceed as described in section "9.4 Connectivity".
	Connectivity is active, but the cloud cannot be reached.	If just turned on, wait for the appliance to complete the start up procedure.
፟		If the problem continues, disable the connection then enable again as described in section "9.4 Connectivity".
		Make sure the lights on the router indicate that the network is active.
		If the problem continues, turn the appliance and home router off then on again.
The coffee beans profile has changed! Remember to brew at least 3 coffees before changing the coffee beans profile	The appliance needs to brew at least 3 coffees before Bean Adapt can be adjusted	Brew at least 3 coffees with the new coffee before changing the Bean Adapt

# 23. TROUBLESHOOTING

Below is a list of some of the possible malfunctions.

If the problem cannot be resolved as described, contact customer services.

PROBLEM	POSSIBLE CAUSE	SOLUTION	
The appliance does not come on	It is not plugged into the mains socket.	Plug into the mains socket (fig. 1) and push the ON/Standby button (B1).	
It is difficut to insert the bean hopper	There are coffee beans in the hopper's housing on the machine	Clean the hopper's housing on the ma- chine with the cleaning brush (D2) and a soft, damp cloth. To remove the coffee powder, use a hand vacuum cleaner.	
The coffee is not hot.	The internal circuits of the appliance have cooled down because 2-3 minutes have elapsed since the last coffee was made.	Before making the coffee, heat the internal circuits by rinsing using the rinse function (in the setting menu).	
	Coffee temperature setting too low.	Set a hotter coffee temperature in the settings menu (C5).	
	The cups were not preheated.	Warm the cups by rinsing them with hot water (Please note: you can use the hot water function).	
	The machine must be descaled	Proceed as described in section "19. Descaling u". Next, check the water hardness in the setting menu and make certain the machine setting matches the local water supply hardness.	
The coffee is weak or not creamy enough.	The coffee is ground too coarsely.	Access the settings menu (C5) and follow the instructions to adjust grinding. The effect is only visible after delivering 3 coffees.	
	The coffee is unsuitable.	Use coffee for espresso machines.	
	Coffee not fresh.	The coffee pack has been opened for too long and has lost its taste.	
The coffee is delivered too slowly or a drop at a time.	The coffee is ground too finely.	Access the settings menu (C5) and follow the instructions to adjust grinding. The effect is only visible after delivering 3 coffees.	
Coffee does not come out of one or both spouts.	The coffee spouts (A13) are blocked.	Clean the coffee spouts with a sponge or toothpick.	
The coffee delivered is watery.	The funnel (A16) is clogged.	Clean the funnel with the help of the brush (D2) as described in section "19.9 Cleaning the pre-ground coffee funnel".	
Too little drink is delivered	Insufficient water in tank	Fill the tank to MAX level.	
		$\rightarrow$	

PROBLEM	POSSIBLE CAUSE	SOLUTION	
The appliance does not make coffee.	The appliance has detected impurities in its internal circuits. "Just doing a little cleaning" is displayed.	Wait for the appliance to be ready again and reselect the required drink. Contact customer services if the problem persists.	
The brewing unit (A3) cannot be extracted.	The appliance has not been turned off correctly	Turn the appliance off by pressing the button (B1) (see section "8. Turning the appliance off").	
At the end of descaling, the appliance requests a third rinse.	During the two rinse cycles, the water tank (A13) has not been filled to the MAX level	Follow the instructions displayed by the appliance, but first empty the drip tray (A12) to avoid the water overflowing.	
Milk does not flow from the milk spout (E3).	The milk carafe lid (E1) or is dirty	Clean the milk carafe lid as described in section "19.11 Complete cleaning of the milk carafes (E)".	
	The lid (E1) is not assembled correctly.	Assemble all the components correctly as described in sections "14.1 Preparing the milk carafes (E)" and turn the milk froth knob to the maximum froth position.	
The milk contains large bubbles and squirts out of the milk spout (E3) there is little froth.	The milk is not cold enough or not suitable for the drink requested	For best results, make sure to use the right type of milk to prepare hot or cold drinks (see section "14.2 Which milk to use?"). Use drinks at refrigerator temperature (about 5° C).	
	The milk carafe lid (E1) is dirty	Clean the milk carafe as described in section "14.6 Cleaning the milk carafe after every use"	
	There is water in the groove under the froth adjustment dial (E1)	Extract the dial and dry thoroughly.	
	Plant-based drinks have been used.	For best results, use drinks at refrigerator temperature (about 5° C). Adjust the amount of froth as suggested in the display	
The machine emits noises or small puffs of steam while not in use	The machine is ready for use, or has recently been turned off, and condensate is dripping into the hot vaporiser	This is part of normal operation. To limit the phenomenon, empty the drip tray.	
The appliance emits puffs of steam from the drip tray (A12) and/or there is water on the surface the appliance rests on.	The drip tray grille (A11) has not been put back after cleaning.	Put the drip tray grille back in the drip tray.	
The To Go drink is too much or has spilled	An unsuitable quantity has been selected	Choose a smaller quantity	
out of the travel mug		Adjust the quantity in the mug so that the next drink is prepared correctly	
		$\rightarrow$	

PROBLEM	POSSIBLE CAUSE	SOLUTION	
Too little To Go drink is prepared	An unsuitable quantity has been selected	Choose a larger quantity	
		Adjust the quantity in the mug so that the next drink is prepared correctly	
The App is not working	App malfunction	Close the App, then run it again	
The App indicates a problem, but there is no problem with the appliance	The data between the appliance and App are not synchronised	Disable and re-enable connectivity (in the setting menu)	

# 24. TECHNICAL DATA

De'Longhi reserves the right to modify the technical specification and styling of its products at any moment, without compromising their functionality and quality.

# 24.1 Tips for Energy Saving

- To reduce energy consumption, after delivering one or more drinks, remove the milk carafes or accessories.
- Set auto-off to 15 minutes (setting menu);
- Enable Energy Saving (setting menu);
- Always carry out the descaling cycle when prompted by the machine.





# ★若有任何需求请与下述地址联系:

☆徳龙电器(上海)有限公司

地址: 上海市普陀区凯旋北路1188号38层01-05室

客服热线: 400 827 1668 网址: https://www.delonghi.com/zh-cn



57132C9602\_00\_0525