


FAN HEATER

INSTRUCTION MANUAL

ТЕРМОВЕНТИЛЯТОР


ИНСТРУКЦИИ ПО ЭКСПЛУАТАЦИИ

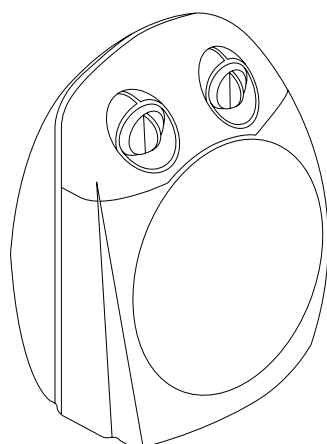

INSERIRE
MARCHIO
GHOST E
CE

FAN HEATER

INSTRUCTION MANUAL

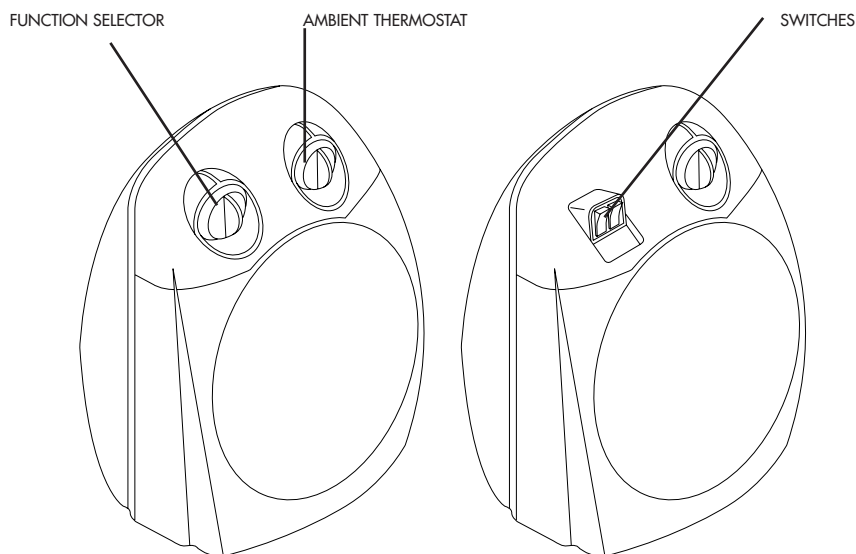

ELECTRICAL CONNECTION (U.K. ONLY)

A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below.

WARNING: Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard.

With alternative plugs not incorporating a fuse, the circuit

must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.

B) If your appliance is not fitted with a plug, please follow the instructions provided below:

IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Blue:	Neutral
Brown:	Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

GB

Voltage/ Wattage

See rating label

ELECTRICAL CONNECTION

- Before plugging in the heater, **check** that the voltage of your domestic supply corresponds to the voltage (V) indicated on the appliance.
- Check that the electrical socket has a rating of 10/16 Amps.
- THIS APPLIANCE COMPLIES WITH EEC DIRECTIVE 89/336, RELATING TO ELECTRO-MAGNETIC COMPATIBILITY.

INSTALLATION

The appliance requires no installation; it should be used solely as a portable appliance.

FUNCTIONING AND USE**Models with function selector and ambient thermostat (where included)**

- Turn the thermostat knob (right) in a clockwise direction until it reaches the maximum setting.
- **Summer service (ventilation only):** turn the knob to setting **✱**.
- **Heating at reduced power:** turn the knob (left) to setting **1**.
- **Heating at full power:** turn the knob (left) to setting **2**.
- **Switching off:** turn the knob (left) to setting **0**.

Models with switch and ambient thermostat (where included)

- Turn the thermostat knob (right) in a clockwise direction until it reaches the maximum setting.
- **Heating at reduced power:** press a single switch (the red area is visible on the switch)
- **Heating at full power:** press both the switches (the red area is visible on the switch)
- **Summer service (ventilation only):** Turn the thermostat knob (right) in an anti-clockwise direction until it reaches the minimum setting, pressing both switches (the red area is visible on the switch)
- **Switching off:** turn off the switches and turn the thermostat knob (right) in an anti-clockwise direction until it reaches the minimum setting.

It is always advisable to disconnect the plug when the appliance is not in use.

Models with thermostat only

The appliance is switched on by turning the knob in a clockwise direction until it reaches the maximum setting; to switch the appliance off turn the knob to the minimum setting and remove the plug from the electrical socket.

REGULATING THE THERMOSTAT

When the room has reached the required temperature turn the right thermostat knob (where included) in an anti-clockwise direction up to the point where the appliance switches off and not beyond. The temperature fixed in this way will be automatically regulated and kept at a constant level by the thermostat.

ANTIFREEZE SERVICE

Turn the left knob to setting 2, or use the switches so that the red area appears, then turn the right thermostat knob to setting **✱**. When it is set in this way the appliance keeps the room at a temperature of approx. 5° C with minimal energy expenditure.

CLEANING AND MAINTENANCE

Before cleaning always remove the plug from the electrical socket.

Clean the air inlet/outlet grilles frequently.

Never use abrasive powders or solvents.

WARNINGS

- Do not use the appliance in the vicinity of showers, bath tubs, wash basins, swimming pools, etc.
- Always use the heater in an upright position.
- Do not use the heater to dry your laundry. Never obstruct the intake and outlet grilles (danger of overheating).
- The heater must be positioned at least 50 cm from furniture or other objects.
- When the appliance is used in portable version, do not place it up against walls, furniture, curtains, etc.
- The appliance must be installed so that the switches and other controls can not be reached by persons using the bath tub or the shower.
- This appliance comes with a Y-type connection. Replacement of the feed cable must be entrusted only a technician authorised by the manufacturer, because such work requires special tools.
- The appliance must not be positioned directly underneath a fixed power point.
- Do not cover the appliance while it is functioning in order to avoid overheating with the attendant risk of fire.
- Do not use the appliance in rooms less than 4 m² in area.

The heater is fitted with a **safety device** which will switch off the heater in case of **accidental overheating** (eg. obstruction of air intake and outlet grilles, motor turning slowly or not at all). To reset, disconnect the plug from the power for a few minutes, remove the cause of overheating then plug the appliance in again.