



# FAN HEATER

## INSTRUCTION MANUAL

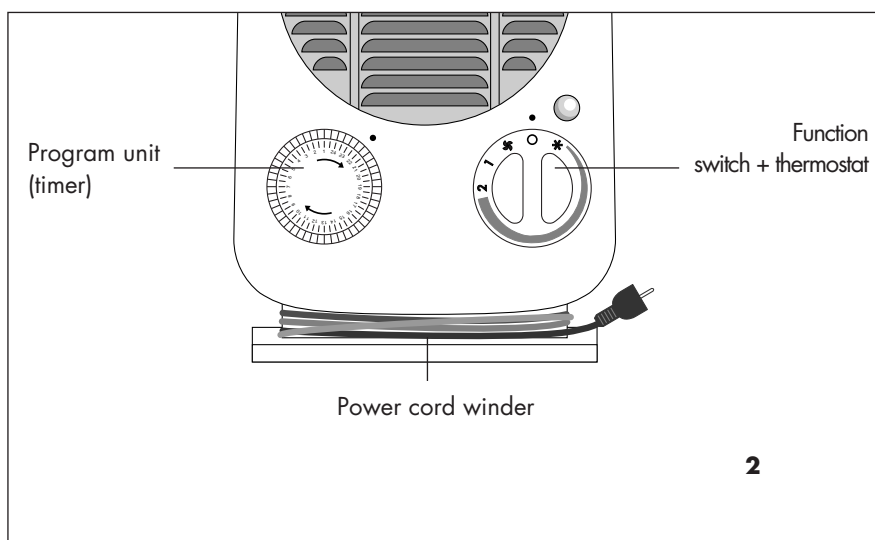

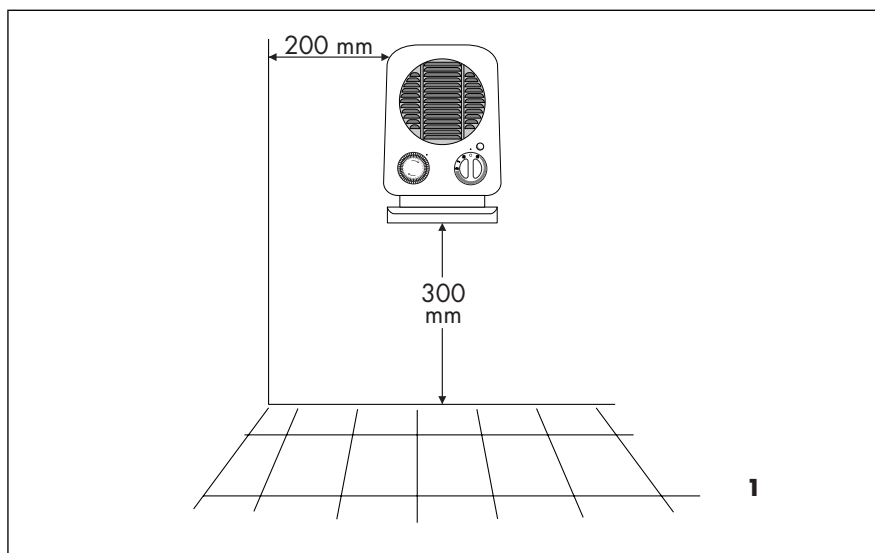

### ELECTRICAL CONNECTION (U.K. ONLY)

A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below.

**WARNING:** Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard.

With alternative plugs not incorporating a fuse, the circuit must be re-fitted when changing the

fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.

B) If your appliance is not fitted with a plug, please follow the instructions provided below:

#### IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Blue: Neutral  
Brown: Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured

markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

**GB**

Voltage/ Wattage

See rating label

**ELECTRICAL CONNECTION**

- Before plugging in the heater, **check** that the voltage of your domestic supply corresponds to the voltage (V) indicated on the appliance.
- THIS APPLIANCE COMPLIES WITH EEC DIRECTIVE 89/336, RELATING TO ELECTRO-MAGNETIC COMPATIBILITY.

**INSTALLATION**

The appliance is available in a portable and a fixed version.

In order to attach the appliance to the wall, use two dowels and two screws which are to be inserted in the holes provided on the rear of the appliance. Lock the appliance then onto the wall by means of a screw positioned at the bottom of the appliance. When positioning the appliance, pay attention to the minimum distances indicated in fig. 1.

**Bathrooms**

Any electrical appliances installed in a bathroom should be fitted by a competent electrician in accordance with the current I.E.E. regulations. Portable heaters are NOT suitable for use in a bathroom.

**OPERATION****MODELS WITHOUT TIMER**

- **Summer use** (ventilation only): turn the knob clockwise to the **✖** position.
- **Heating at low power**: turn the knob to the **1** position. The pilot lamp switches on.
- **Heating at maximum power**: turn the knob to the **2** position. The pilot lamp switches on.
- **Setting the thermostat**: when the room temperature has reached the desired level, slowly turn the thermostat dial counter-clockwise until the pilot light goes out (or until you hear a 'click' on models without pilot light) but no further. The thermostat will now automatically maintain the temperature at the desired level.
- **Switching the heater off**: turn the knob to the **"●"** position.

To switch off completely the appliance, remove the plug from the socket.

**MODELS WITH 24 HOUR PROGRAM UNIT (TIMER)**

In order to program the heating function, proceed in the following manner:

- Look at your watch. If it, for example, indicates that the time is 6 PM (18 hours), then turn the numbered disk of the program unit clockwise until the number 18 lines up with the reference marker **●** on the face of the timer.
- Set the time periods in which the appliance is to function, pulling out the pins of the timer. At this point you will see the sectors which correspond to the functioning times.
- Once the appliance is set in this manner, it will function automatically every day during the programmed periods. Important: In order to maintain the programming, it is necessary to keep the electric plug inserted in the electric socket.
- In order to change the programming, put the pins back into their original positions and set the functioning periods from scratch.
- Each pin corresponds to a 30 minute period.
- **Bypassing the program**: In order that the appliance functions outside of the programmed periods, pull out all of the timer's pins.
- **Anti-freezing feature**: With the knob of the thermostat in position **\***, the appliance maintains the room at a temperature of about 5°C, thus preventing freezing with a minimal expenditure of energy. With the models equipped with a timer, the pins must be pulled out.

**MAINTENANCE**

- ALWAYS pull the plug out of the power point before cleaning the heater.
- **Periodically clean the air intake and outlet grilles during the period in which the heater is in use with a vacuum cleaner.**
- Do not use abrasive cleaning products or solvents.

**WARNINGS**

- Do not use the appliance in bathrooms and in the vicinity of swimming pools, etc.
- Always use the heater in an upright position.
- Do not use the heater to dry your laundry. Never obstruct the intake and outlet grilles (danger of overheating).
- The heater must be positioned at least 50 cm from furniture or other objects.
- When the appliance is used in portable version, do not place it up against walls, furniture, curtains, etc.
- This appliance comes with a Y-type connection. Replacement of the feed cable must be entrusted only a technician authorised by the manufacturer, because such work requires special tools.
- The appliance must not be positioned directly underneath a fixed power point.
- Do not cover the appliance while it is functioning in order to avoid overheating with the attendant risk of fire.

The heater is fitted with a **safety device** which will switch off the heater in case of **accidental overheating** (eg. obstruction of air intake and outlet grilles, motor turning slowly or not at all). To reset, disconnect the plug from the power for a few minutes, remove the cause of overheating then plug the appliance in again.

5714002100/10.98