
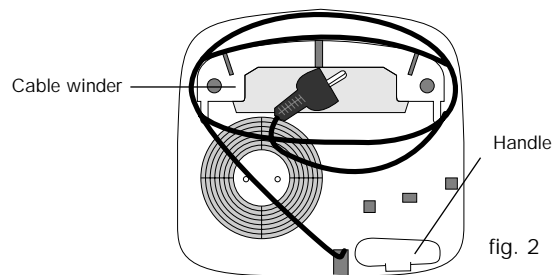


---

# ***FAN HEATER***

Instruction manual


---

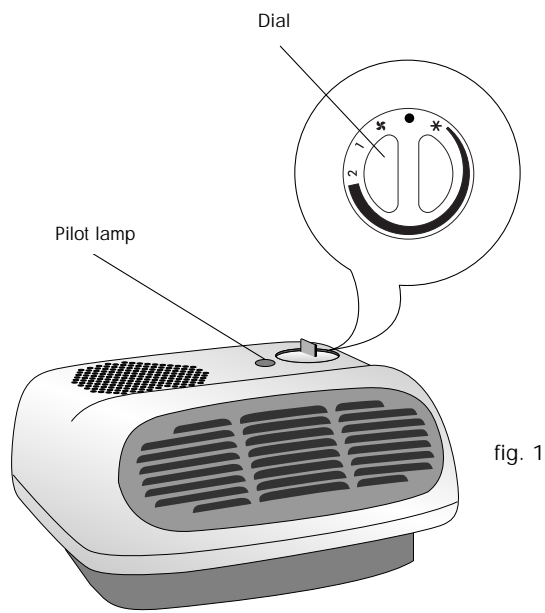


## ELECTRICAL CONNECTION

- Before plugging in the heater, **check** that the voltage of your domestic supply corresponds to the voltage (V) indicated on the appliance.
- Check that the electrical socket has a rating of 10/16 Amps.
- THIS APPLIANCE COMPLIES WITH EEC DIRECTIVE 89/336, RELATING TO ELECTRO-MAGNETIC COMPATIBILITY.

## OPERATION.

- **Summer use** (ventilation only): turn the knob clockwise to the  position.
- **Heating at low power:** turn the knob to the “1” position. The pilot lamp switches on.
- **Heating at maximum power:** turn the knob to the “2” position. The pilot lamp switches on.
- **Setting the thermostat:** when the room temperature has reached the desired level, slowly turn the thermostat dial counter-clockwise until the pilot light goes out (or until you hear a ‘click’ on models without pilot light) but no further. The thermostat will now automatically maintain the temperature at the desired level.
- **Switching the heater off:** turn the knob fully counter-clockwise to the “O” position.

To switch off completely the appliance, remove the plug from the socket.

- **Antifreeze function** (thermostat models only): turn the knob to the  position. The appliance will maintain a minimum room temperature of approximately 5°C thus preventing freezing with the minimum energy consumption.

## MAINTENANCE

- Always pull the plug out of the power point before cleaning the heater.
- **Periodically clean the air intake and outlet grilles during the period in which the heater is in use with a vacuum cleaner.**
- Do not use abrasive cleaning products or solvents.

## CAUTION

- Do not install the heater in humid environments or near showers, bathtubs, sinks, swimming pools etc.
- Do not use the heater to dry your laundry. Never obstruct the intake and outlet grilles (danger of overheating).
- The heater must be positioned at least 50 cm from furniture or other objects.
- Appliance fitted with Y type connection. Replacement of power cord must be made by a qualified person.
- The appliance must not be positioned directly underneath a fixed power point.
- Do not use the appliance in rooms less than 4 m<sup>2</sup> in area.

**Important:** never cover the appliance when it is in operation as this could cause a fire risk.

The heater is fitted with a **safety device** which will switch off the heater in case of **accidental overheating** (eg. obstruction of air intake and outlet grilles, motor turning slowly or not at all). Take the heater to an authorised service agent who will reset the device.

### ELECTRICAL CONNECTION (U.K. ONLY)

A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below.

**WARNING:** Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard.

With alternative plugs not incorporating a fuse, the circuit must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.

B) If your appliance is not fitted with a plug, please follow the instructions provided below:

### IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Blue:	Neutral
Brown:	Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

5714003400/04.00