 




*We were thinking of you  
when we thought of it*

## **FAN HEATER**

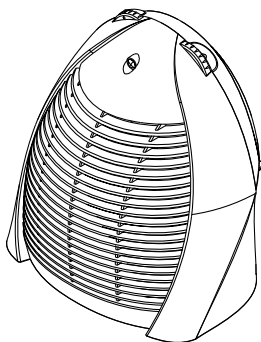

## **INSTRUCTIONS FOR USE**

**Proudly distributed by  
De'Longhi**

25 CARBINE ROAD  
MT WELLINGTON  
PO BOX 58056  
GREENMOUNT  
Auckland, New Zealand  
Customer Service Ph: (09) 915 7273  
Fax: (09) 915 7280  
e-mail: delonghi@delonghi.com.nz

 
 
**Australia**  
P.O.Box 597  
**Riverwood** NSW 2210  
Customer Service Ph: 1800 126659  
Fax: 1800 706932  
e-mail: delonghi@delonghi.com.au

---

**1** FUNCTION SELECTOR

**3** SWITCH

**2** AMBIENT THERMOSTAT

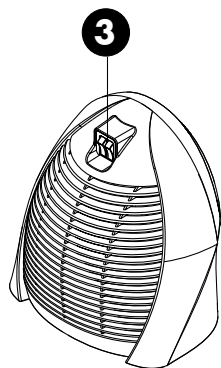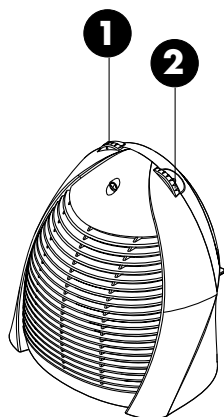

*Thank you for choosing this De'Longhi fan heater. To get the very best out of your new fan heater it is advisable to read these instructions before using it. This will ensure that you gain optimum results and use the appliance safely.*

## ELECTRICAL CONNECTION

- Before plugging into the mains, make sure the voltage of your mains supply corresponds to the value in Volts indicated on the appliance.
- Make sure the mains socket is rated at 10/16 Amps.
- THIS APPLIANCE COMPLIES WITH DIRECTIVE 89/336/EEC AND D.M. 476/92 ON ELECTROMAGNETIC COMPATIBILITY.

## INSTALLATION

The appliance is designed for portable use only.

## OPERATION AND USE

### Models with function selector and thermostat

- **Summer mode (ventilation only):** turn the thermostat clockwise as far as it will go to the ☼/6 position.
- **Low power operation:** turn the function selector to position 1 (the pilot light switch on).
- **High power operation:** turn the function selector to position 2.
- **Switching off:** turn the function selector to the "●" position and the thermostat knob to the ☼ position, then unplug from the mains.

### Setting the thermostat:

When the room has reached the desired temperature, turn the right-hand thermostat knob ② (if fitted) slowly anti-clockwise until the appliance goes off and no further. The thermostat will then keep room temperature at the selected level automatically.

### FROST PREVENTION CYCLE

Turn the left-hand knob ① to position 2, then turn the right-hand thermostat knob ② to the position \*. The appliance is set to maintain a temperature of about 5°C in the room with minimum energy consumption.

### Models with switch

- **Heating at low power:** press the “-” switch (the red zone is visible on the switch).
- **Heating at high power:** press both switches (the red zone is visible on the switches).
- **Turning the appliance off:** turn off both switches.

You should always unplug the appliance from the mains when not in use.

### MAINTENANCE

- Always remove the plug out of its socket before cleaning the heater.
- **Periodically clean the air intake and outlet grilles.**
- Do not use abrasive cleaning products or solvents.

### WARNINGS

- Do not use the heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Always use the heater in an upright position.
- Do not use the heater to dry your laundry. Never obstruct the intake and outlet grilles (danger of overheating).
- Do not position the heater in close proximity to curtains or other combustible materials.
- The heater must be positioned at least 50 cm from furniture or other objects.
- The use of extension leads is not recommended, however if it is necessary then follow carefully the extension lead's instructions, and most importantly ensure that the extension lead is correctly rated in accordance with the heater being used and NEVER overloaded.
- When the appliance is used in portable version, do not place it up against walls, furniture, curtains, etc.
- The appliance must be installed so that the switches and other controls can not be reached by persons using the bath tub or the shower.
- This appliance comes with a Y-type connection. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- The appliance must not be located directly below a socket-outlet.
- The appliance is not intended for use by young children or the infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not cover the appliance while it is functioning in order to avoid overheating with the attendant risk of fire.
- Do not use the appliance in rooms less than 4 m<sup>2</sup> in area.

The heater is fitted with a **safety device** which will switch off the heater in case of **accidental overheating** (eg. obstruction of air intake and outlet grilles, motor turning slowly or not at all). To reset, disconnect the plug from the power for a few minutes, remove the cause of overheating then plug the appliance in again.



**Important:** never for any reason cover the appliance during operation as this could lead to dangerous overheating.

