

**Microwave oven MW865***Living innovation*

De'Longhi quick guide

This quick start guide is a reminder of how easy your De'Longhi microwave oven is to use.


However before first use please check how to unpack and set up your oven, check it is working properly and how to set the clock.

(Pages 4-6 in the instruction manual)



Also, if you have not used a microwave before, you should familiarise yourself with all safety instructions and general guidance in section 2 (Pages 8-13) before beginning to cook.

Any further information about basic operation can be found in section 3 (Pages 15-16).

**Microwave Only**

- Prepare food and place on turntable: close oven door.
- Choose microwave function by repeatedly pressing function button until the symbol  is the only one displayed
- Use time adjust knob to select time of cooking
- Press power level button repeatedly until desired power level is indicated.
- Press start
- The microwave oven will beep three times and "END" will display when cooking time is completed.

**Microwave with Grill**

- Prepare food and place on the lower rack: close oven door.
- Choose microwave plus grill function by repeatedly pressing the function button until the two symbols   are displayed together.
- Use time adjust knob to select time of cooking
- Press power level button repeatedly until desired power level is indicated.
- Press start
- The microwave oven will beep three times and "END" will display when cooking time is completed.



**Microwave oven MW865***Living innovation*

De'Longhi quick guide

**Grill Only**

- Prepare food and place on the high rack: close oven door.
- Choose grill function by repeatedly pressing function button until the symbol is the only one displayed
- Use time adjust knob to select time of cooking
- Press start
- The oven will beep three times and "END" will display when cooking time is completed.

**Defrost**

- As for grill only but prepare food and place it on the turntable then select defrost function by repeatedly pressing the function button until the symbol is the only one displayed.

**Fan Oven Only**

- Prepare food and place on the lower rack: close oven door.
- Choose fan oven function by repeatedly pressing function button until the symbol is the only one displayed
- Use time adjust knob to select time of cooking
- Press temperature button repeatedly until the desired temperature is indicated
- Press start (it will take a few minutes for the oven to reach the correct temperature)
- The oven will beep three times and "END" will display when cooking time is completed.

**Microwave plus Fan Oven**

- Prepare food and place on the lower rack: close oven door.
- Choose microwave plus fan oven function by repeatedly pressing function button until the two symbols are displayed together.
- Use time adjust knob to select time of cooking
- Press power level button repeatedly until desired power level is indicated.
- Press temperature button repeatedly until the desired temperature is indicated
- Press start (it will take a few minutes for the oven to reach the correct temperature)
- The oven will beep three times and "END" will display when cooking time completed.

