

Microwave oven MW705*Living innovation*

De'Longhi quick guide

This quick start guide is a reminder of how easy your De'Longhi microwave oven is to use.


However before first use please check how to unpack and set up your oven, check it is working properly and how to set the clock.

(Pages 6,7,11 in the instruction manual)



Also, if you have not used a microwave before, you should familiarise yourself with all safety instructions and general guidance, (Pages 8-18) before beginning to cook.

Any further information about basic operation can be found in section 2 (Pages 12-13).

Microwave Only

- Prepare food and place on turntable: close oven door.
- Choose microwave function by repeatedly pressing function button until the symbol  is the only one displayed
- Use time adjust knob to select time of cooking
- Press power level button repeatedly until desired power level is indicated.
- Press start
- The microwave oven will beep three times and "END" will display when cooking time is completed.

**Microwave with Grill**

- Prepare food and place on the lower rack: close oven door.
- Choose microwave plus grill function by repeatedly pressing the function button until the two symbols   are displayed together.
- Use time adjust knob to select time of cooking
- Press power level button repeatedly until desired power level is indicated.
- Press start
- The microwave oven will beep three times and "END" will display when cooking time is completed.




Microwave oven MW705



Living innovation


De'Longhi quick guide

Grill Only

- Prepare food and place on the high rack: close oven door.
- Choose grill function by repeatedly pressing function button until the symbol  is the only one displayed
- Use time adjust knob to select time of cooking
- Press start
- The oven will beep three times and "END" will display when cooking time is completed.



Defrost

- As for grill only but prepare food and place it on the turntable then select defrost function by repeatedly pressing the function button until the symbol  is the only one displayed.
- Press start (it will take a few minutes for the oven to reach the correct temperature).

