 

XLR32LMD

CORDLESS STICK CLEANER

 
無線直立吸塵機

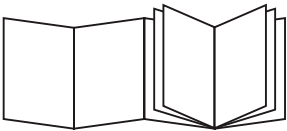



DeLonghi



A

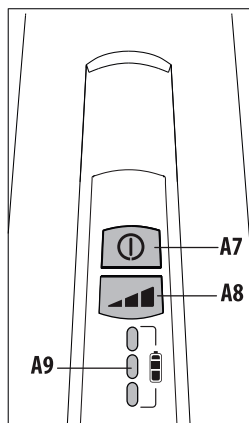


A1

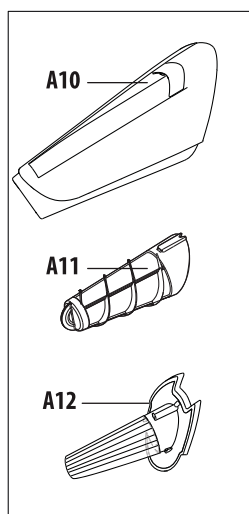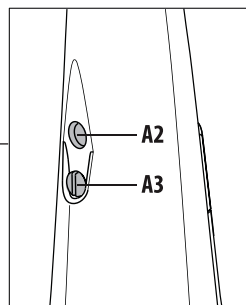  


A4

A5


 
A13





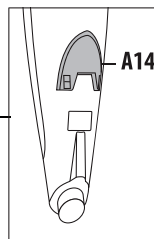


B






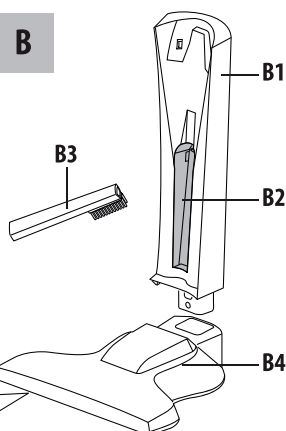 








C

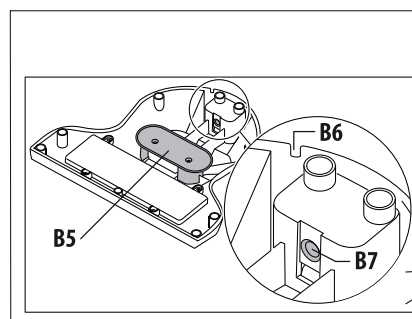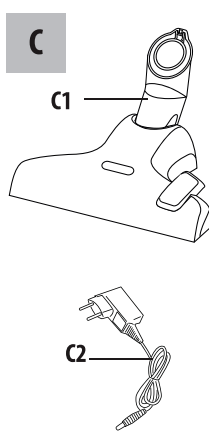  

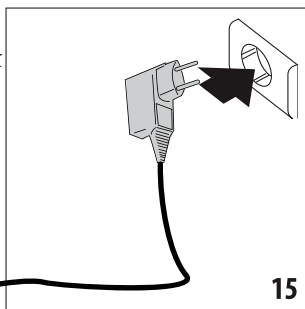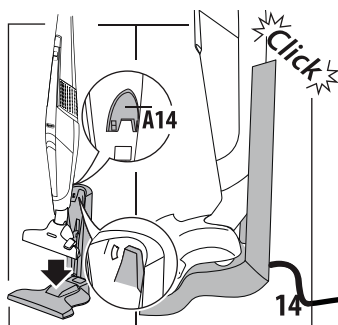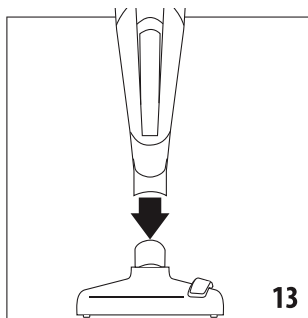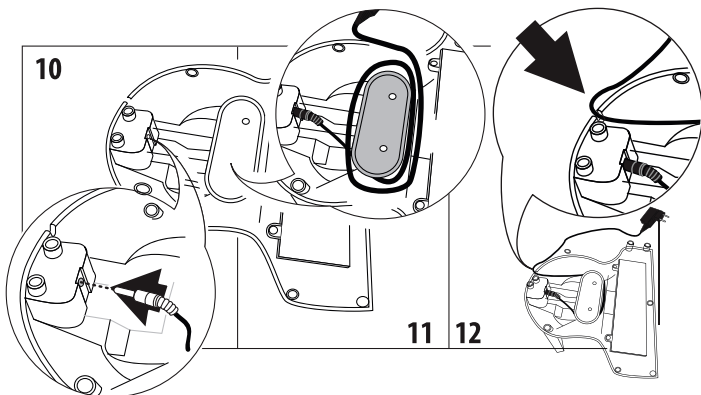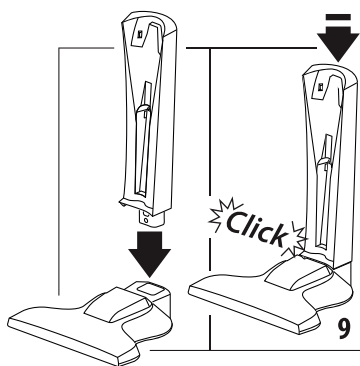     


Charging without station
無底座充電

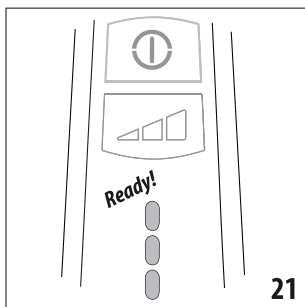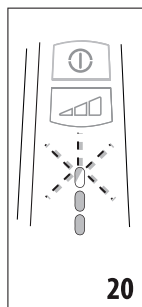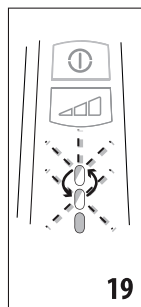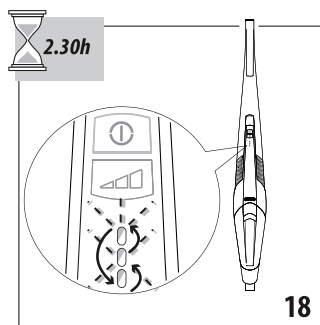    
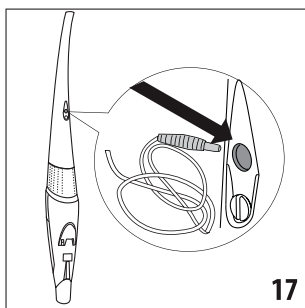 
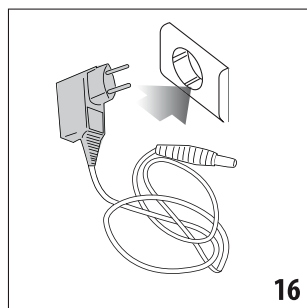 


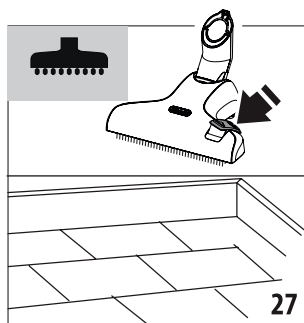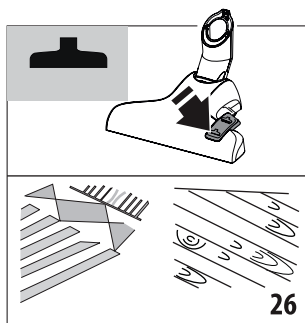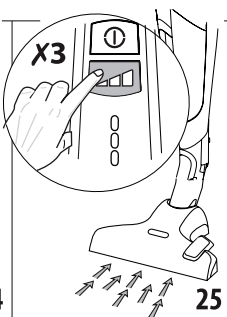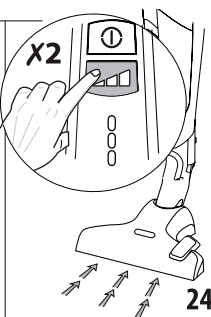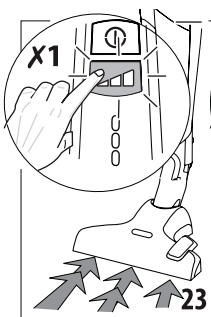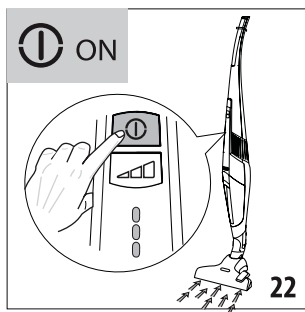      

Operating time - 操作時間

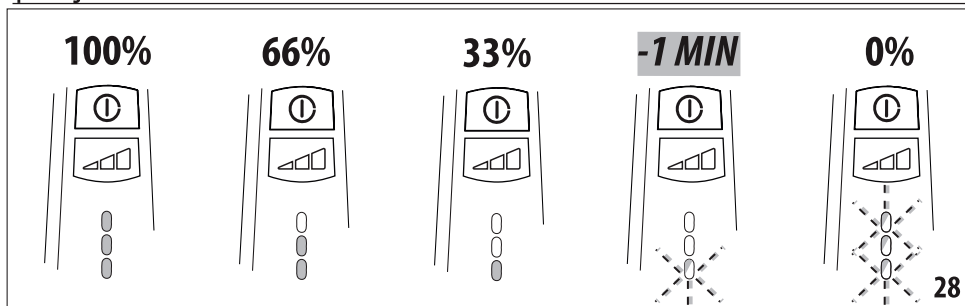 

Emptying - 清空

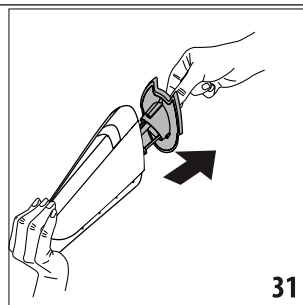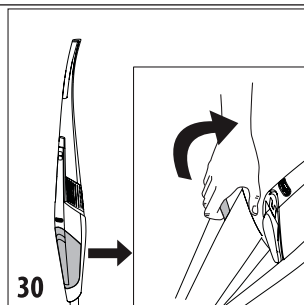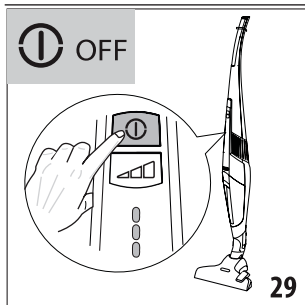   



 
 
 
 
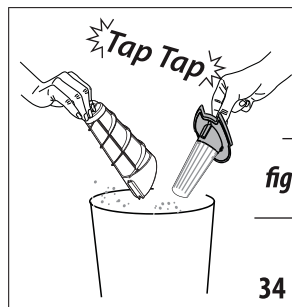 




fig. 5-8

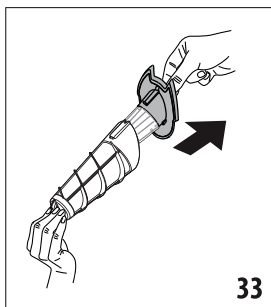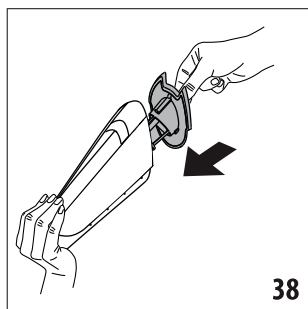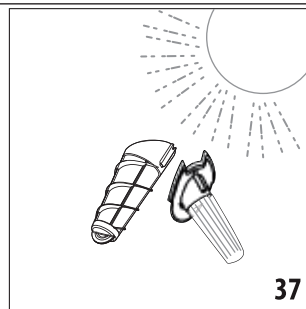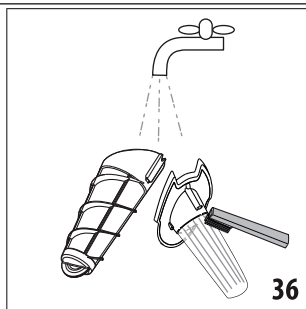 

Cleaning - 清潔

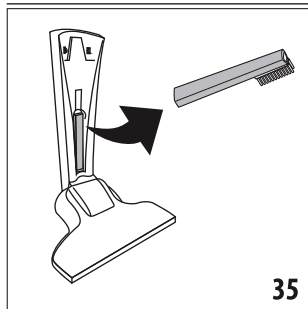 

Removing the battery - 移除電池

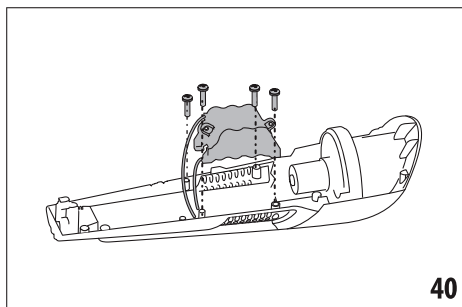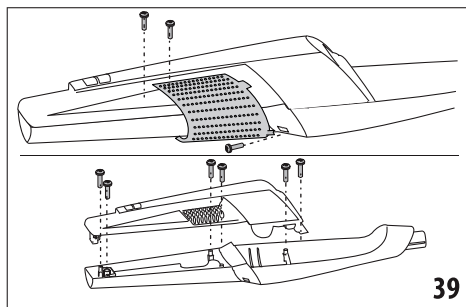  

FUNDAMENTAL SAFETY WARNINGS

- Read the instructions carefully. The appliance should be used for domestic cleaning only following these instructions and only with the tools supplied. The manufacturer declines all liability for damage deriving from improper use of the appliance, for example to vacuum up rubble, ash, etc.



Important!

- The unit should only be operated at very low safety voltage corresponding to the marking on the device.
- Before starting the appliance, make sure the filters are in position.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Check the filters regularly and if necessary brush or replace them.
- Keep the suction outlet away from eyes, ears, nose etc when the appliance is in operation.
- Never vacuum up matches, or cigarette ends when still lit.
- Never immerse the appliance or battery charger in water or other liquid. Do not splash water on the appliance or battery charger.
- This is a household appliance only. It is not intended to be used in: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- Do not store the appliance outdoors or in wet places.
- Do not place the appliance close to heat sources (ovens, heaters).
- Do not use the appliance if the battery charger, its power cable or the appliance itself is damaged.
- The manufacturer reserves the right to modify appliances and tools without warning. Original spare parts and tools

should always be used to maintain the efficiency of your appliance and avoid invalidating the guarantee.



Please note:

To avoid damage to the motor, never operate the appliance without filters.

DESCRIPTION

A. Description of the appliance

- A1** Handgrip/handle
- A2** Battery charger connector on cleaner
- A3** Lock screw
- A4** Handle guides
- A5** Air outlet grille
- A6** Control panel
- A7** ON/OFF button
- A8** Power regulator button (normal, high, energy saving)
- A9** Battery charge/operating time LEDs
- A10** Dust container
- A11** Pre-filter
- A12** Fine filter
- A13** Suction port
- A14** Attachment to cleaner stand

B. Charging point

- B1** Cleaner charge stand
- B2** Filter cleaning brush housing
- B3** Filter cleaning brush
- B4** Cleaner stand base
- B5** Cable tidy to adjust power cable length
- B6** Power cable exit hole
- B7** Battery charger connector on stand

C. Accessories

- C1** Two position carpet/floor brush
- C2** Battery charger

CHARGING THE BATTERIES

IMPORTANT: Use the original battery charger supplied with the appliance only. Do not charge the appliance in temperatures of less than 0°C or more than 40°.



Please note:

Before using the appliance for the first time, the battery must be charged for two and a half hours.

This model has a quick charge function allowing it to operate for five minutes with 30 minutes charging.

While being charged, the appliance cannot be used. At the end of the charging cycle, all three LEDs are lit. When the battery is completely flat, the three LEDs flash and the appliance does not start up. It is good practice to charge the appliance after each cleaning session to ensure it is always ready for use with the

battery fully charged. The appliance can be left constantly in charge in complete safety. In the event of long absences (holidays...) it is best to unplug it. After each complete charge, the appliance can operate for the following times:

Power 1 (normal)	Power 2 (high)	Power 3 (Energy saving mode)
25 min	15 min	50 min

REPLACING THE BATTERIES

When the batteries are exhausted, have them replaced by your local customer services. Do not use other types of batteries.

REMOVING THE BATTERIES

To remove the batteries, contact your local customer services or proceed as follows:

- Make sure the batteries are completely flat before removing.
- Remove the handle (A1) by unscrewing the lock screw (A3).
- Remove the dust container (A10).
- Remove the grille and casing (see fig. 39).
- Unscrew the fixing screws (see fig. 40) and disconnect the battery.



Important!

Make sure the appliance is not connected to the battery charger before removing the batteries.

DISPOSING OF THE APPLIANCE

 In compliance with European directive 2002/96/EC, the appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

If you dispose of the appliance, you must remove the battery. Never dispose of the battery with household waste. Take it to a special collection point for recycling.

基本安全注意事項

- 小心閱讀使用說明。本機僅為家用電器，應按照使用說明及使用所提供的配件操作。對於本機使用不當造成的損害，如吸入粗石、灰燼等，製造商將概不負責。



重要！

- 本機只可作低電壓操作，電壓需符合印於本機上的指示。
- 使用本機之前，確保濾器在恰當位置。
- 本機適用於8歲或以上兒童，具有身體、感官、精神缺陷或者缺乏相關經驗和知識的人士，在監護人的安全監督或指導下，並知悉涉及危險下可使用本機。兒童不可把玩本機，不應由沒有監督的兒童清潔及維修。
- 經常檢查濾網，在有需要時擦拭或更換它們。
- 當本機運作時，保持吸氣口離開眼、耳、鼻等。
- 切勿吸入火柴、或正燃燒的煙頭。
- 切勿把本機或充電器浸於水或其他液體之中。
- 切勿向本機或充電器潑水。
- 本機僅為家用電器。
不得在以下場所使用：商店、辦公室內及其它工作環境中；農舍；酒店、旅館及其它居住環境；如民宿。
- 不可將本機放置於室外或潮濕地方。
- 不可將本機貼近熱源放置（焗爐、暖爐）。
- 如充電器，電線或機身出現損壞，請不要使用本機。
- 製造商保留在不作通知下更改本機及工具的權利。應使用原有附件及工具來保持本機效能，以免失去保養服務。



請注意：

為避免破壞馬達，切勿在沒有過濾網的情況下運行本機。

使用說明

A. 本機使用說明

- A1 手把/手柄
- A2 連接吸塵機電池充電器
- A3 螺絲釘鎖
- A4 手柄指示
- A5 排氣護柵
- A6 控制面板
 - A7 開/關按鈕
 - A8 功率調節器按鈕（正常、高、節能模式）
- A9 充電/操作時間 LED
- A10 塵盒
- A11 前置濾器
- A12 微細濾器
- A13 吸入口
- A13 吸塵機接口

B. 充電點

- B1 吸塵機直立充電座
- B2 過濾器清潔刷外罩
- B3 過濾器清潔刷
- B4 吸塵器底盤
- B5 收納整齊電線，調較電線長度
- B6 電線出孔
- B7 連接充電器到吸塵機直立裝置

C. 配件

- C1 地毯/地板兩用塵刷
- C2 充電器

充電池

重要：只可使用隨附的原裝充電器。不可在低於 0 °C 或高於 40 °C 的溫度下充電。



請注意：

首次使用本機前，電池必須充電兩個半小時。
此型號支援快速充電功能，可充電30分鐘後運作5分鐘。

正在充電時，不可使用本機。

即將完成充電時，三個LED燈皆會亮著。當電池電源耗盡，三個LED燈皆會閃爍，而本機不會啟動。

每次使用完本機後，習慣性地充電，可確保每次使用時電池充滿。本機可安全地不斷充電。若長時間不用（如假期……）宜拔除充電器。完成每次完整充電後，本機可維持以下時間操作：

功率 1 (正常)	功率 2 (高)	功率 3 (節能模式)
25分鐘	15分鐘	50分鐘

歸還電池

當電池耗盡後，可到地方服務中心配置新的電池。切勿使用其他類型的電池。

移除電池

聯絡你的地方服務中心移除電池，或按以下情況進行：

- 移除前確保電池完全用完。
- 鬆開螺絲釘（A3）以移除手柄（A1）。
- 移除塵盒（A10）。
- 移除護柵及罩（看圖39）。
- 鬆開固定螺絲釘（看圖40）和斷開電池連接。



重要！

移除電池前，確保本機沒有與充電器連接。

處置本機



依照歐盟指令2002/96/EC，不得與普通家居垃圾一同處置本機，而是應當送到授權的垃圾分類和回收中心進行處置。

當你處置本機時，必須拔除電池。

切勿與家庭廢棄物一同處置電池。把電池送到特定收集站回收。