


RADIANT HEATER SAFETY INSTRUCTION

(Keep in a safe place)

**SPARE COPIES OF THIS LEAFLET CAN BE
OBTAINED FROM YOUR DEALER**




HEATER SAFETY INSTRUCTIONS. (KEEP IN A SAFE PLACE).
SPARE COPIES OF THIS LEALET CAN BE OBTAINED FROM YOUR DEALER

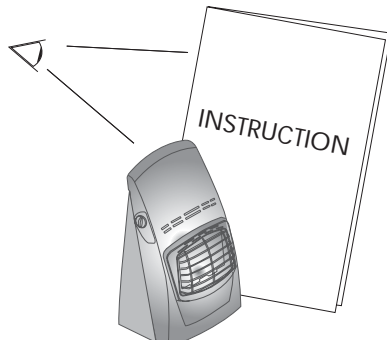


1

ALWAYS use Heater in accordance with instructions supplied with each Heater. Keep instructions in a safe place.

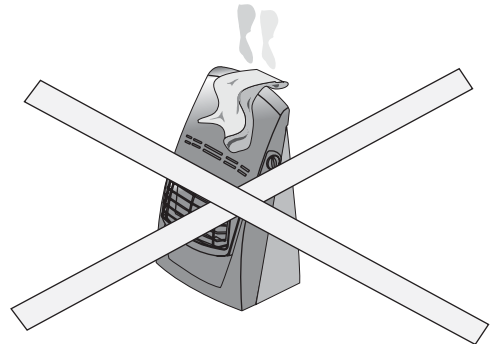


2

DO NOT place clothes or other materials on the Heater, as apart from the danger of fire their presence could affect the efficient working of the appliance.

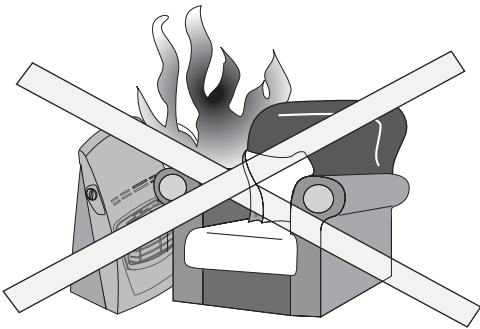


3

DO NOT position Heater close to chairs and fabrics

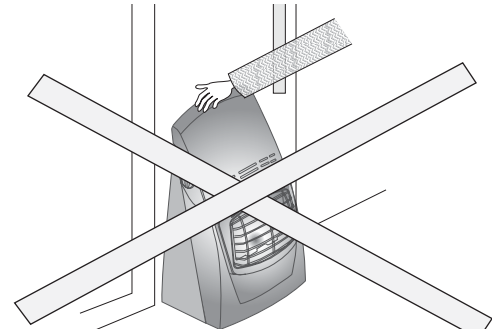

4


DO NOT move Heater from room to room when it is lit.

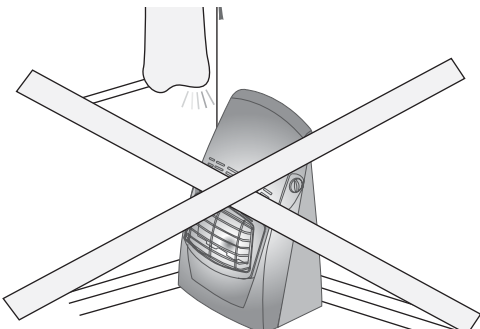

5

DO NOT position Heater alongside a wall or near curtains, etc. ALWAYS face Heater towards centre of room.

Special care should be taken if the Heater is on a surface where it can move or twist on its wheels or castors if knocked by a child or dog, etc.

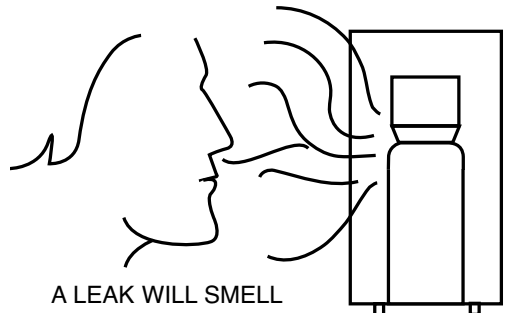

6

A LEAK WILL SMELL

IF a leak is suspected, turn the gas off at cylinder. DO NOT disconnect the regulator. Extinguish all naked lights. Check all connections. Slowly turn the gas on a brush the connectors with soapy water or liquid detergent - a gas leak will form bubbles. If a leak is found turn the gas off and inform your Dealer. DO NOT use the heater again until it has been inspected by your Dealer. If the cylinder valve appears to be leaking when turned off, refit the Black Branch Cap or Orange valve Cap.

- This appliance MUST NOT be used in basement, high rise flats, bathrooms or bedrooms and in rooms having volume less than 15 m³ (30m³ in living rooms) for three burner models; 18m³ (36m³ in living rooms) for two burner models.
- Be sure installation is complying to local standard.
- Do not install the appliance in a room which might contain gas, oil or sulphur, or near sources of heat.
- Do not use at high altitudes.
- The heater you have purchased is fitted with safety devices which come on in the event of malfunctioning while the appliance is in use. If the pilot (placed opposite the burner) accidentally goes out, or if the room is not sufficiently ventilated, the safety device will block the gas flow, causing the heater to go off.

VENTILATION


USE ONLY IN WELL VENTILATED ROOM.

DO NOT CHANGE CYLINDERS IN THE PRESENCE OF NAKED LIGHTS.


NEVER USE A MATCH OR NAKED FLAME TO SEARCH FOR LEAKS.

ASSEMBLY


- 1) Remove the polystyrene fixing the heater base plate and the heater front panel.
Remove the heater base plate from the polystyrene.
Place the heater base plate on the floor or on a flat surface.
Remove the two screws from the holes "A".

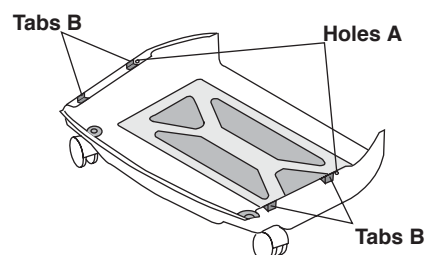

- 2) Position the heater's front panel assembly over the base plate, and align the four tabs "B" on the base with the four slots "C" in the bottom of the front panel assembly. With the four tabs correctly engaged, push the front panel assembly forwards as far as the tabs will slide in their slots to align the screw holes "A" in the base plate with the screw holes "D" in the bottom of the front panel assembly.

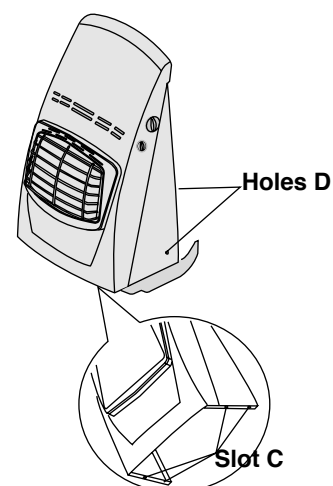


- 3) Fit the front panel assembly to the base plate by fixing the two screws (removed previously) through the aligned screw holes (holes D and A).
Place the gas cylinder in the gas cylinder compartment and connect the regulator to the cylinder as shown on page 4.

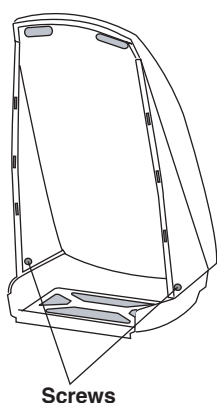

- 4) Finally, fit the flexible rear panel. First, engage the two clips located on the top cover, in order to bend the panel and fix it into shape. Then insert the six tabs in the six slots at the rear of the heater body.

Attention: to unhook press on the relevant clips.

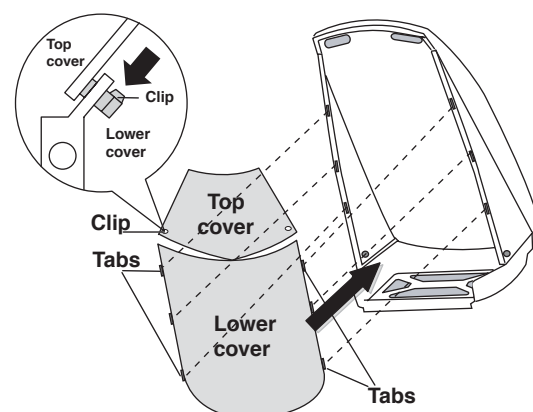

GENERAL SAFETY INSTRUCTIONS

Type	Category	Max.output		Med.output		Low output		Gas Pressure	Gas combustion air quantity
	See Rating label	Kw	g/h	Kw	g/h	Kw	g/h	28-30 mbar	8.4 m³/h
		4.2	305	2.85	207	1.50	109		
this appliance is designed to operate with butane, at nominal pressure: 28÷30 mbar									

CYLINDER VALVE

If heater does not completely extinguish, including pilot, when gas is turned off, do not remove regulator. Return valve to open position and leave heater alight, which is perfectly safe, until attended to by the gas supplier.

REGULATORS, HOSES AND CLIPS

Check that tubing is completely over the nozzles at each end of the tubing and that is held firmly in place by tube clips. Examine flexible tubing regularly and get your Dealer to fit new tubing 400 mm long if perished, worn or damaged. L.P.G. USE THE RUBBER TUBE FOLLOWING THE CURRENT RULES.

Avoid bending or constricting the rubber tube when the pressure regulator is connected to the gas cylinder.

A REGULATOR FOLLOWING THE CURRENT RULES for butane must be connected to the appliance with the above tubing, using suitable tube clips.

VENTILATION


USE ONLY IN A WELL VENTILATED ROOM

Adequate ventilation must be provided in rooms in which the heater is used. This ensures removal of the products combustion and allows the entry of replacement air.

Adequate ventilatio should considerably reduce the possibility of condensation occurring.

The following table shows the smallest size of room suitable for each heat setting and the ventilation which must be provided.

The heater may be used for short periods in smaller rooms.

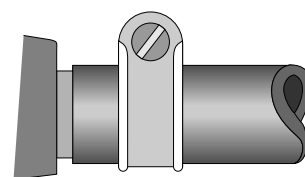

Heating Setting	Room Size	Room Aperture
MIN	15 m³	105 cm²
MAX	42 m³	
MED	28.5 m³	

MAINTENANCE

Ensure that the heater is kept free of dust. When the heater should be covered and stored in a dust-free place. Stains on the exterior should be removed with soapy solution when the heater is cold. Dry with a polishing cloth. DO NOT use abrasive cleaners which will damage the paint finishes.

Refer any mayor maintenance to your Local Authirised Dealer Major servicing should be carried out annually. If in doubt refer to your authorised dealer.

SAFETY GUARD

The guard on this appliance conforms to the requirements of B.S. 1449: 1971 and satisfies the heater appliance (fireguards) regulations. The guard is to prevent risk of fire or injury from burns and no part of it should be permanently removed. **It does not give full protection for young children or the infirm.**

Positioning the heater:

- DO NOT place clothes or other materials on the heater.
- DO NOT position heater close to chairs or fabrics
- DO NOT MOVE the heater across the room when lit.
- DO NOT POSITION the heater alongside a wall or near curtains etc.
- ALWAYS face the heater towards the centre of the room.

OPERATING INSTRUCTIONS

The gas tap is turned on and off at the cylinder. The heat input and spark of ignition are controlled by the knob situated on the top. Before connecting a gas container and operating this appliance, please read the heater safety instructions and the operating instructions given below - spare copies may be obtained from your authorised dealer.


The gas is turned on and off at the cylinder.


The heat input and spark for ignition are controlled by the knob situated at the top left hand side of the heater.

LIGHTING THE HEATER:


1) Turn on the gas cylinder by either:


Turn lever to the "ON" position ("Red" facing upwards).

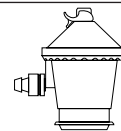


2) FROM WHITE MARKING, fully depress the control knob, and turn to  position (small flame). If pilot does not ignite return to starting position and repeat). Continue to fully depress the knob for a further 10 seconds to allow the thermocouple probe to heat up, then turn the knob to the required heat setting.


CONTROL OF THE HEAT INPUT:

For low input - leave control knob in position  (small flame)

For full input - slightly depress knob and rotate to position  (big flame)

For medium input - slightly depress knob and rotate to position  (medium flame)

Turn the lever to the "OFF" position ("Red" facing downwards).

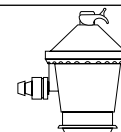

TURNING-OFF THE HEATER

The heater will only be totally "OFF" when the supply of gas from the cylinder has been turned "OFF" after use the appliance must be turned "OFF" at the valve.

DO NOT ATTEMPT to relight until FIVE minutes have elapsed.

WARNING

It is dangerous to switch to the disconnect position and unhook the cylinder valve from the cylinder connection when the heater is alight.