

Electric deep fryer



Living innovation

Operating instructions

1. Before use, wash the bowl, the lid (remove filters) and the basket with hot water, and dry thoroughly.
2. Do not switch the fryer on before adding the oil or fat.

Pour 1.3 litres of oil into the container (or 1.2 kg of fat). The level of oil must always be between the maximum and minimum limits indicated on the bowl.

3. Close the lid.
4. Set the thermostat knob to the temperature required, the indicator light will switch on.
5. When the temperature has been reached the indicator light will switch off. Lift the lid. Place the food to be fried in the basket and slowly lower the basket into the oil.
6. When the set cooking time has elapsed, lift the lid and remove the basket, check that the food has been cooked to the desired colour.
7. If the food is completely cooked, switch the appliance off by setting the thermostat knob to "OFF".