 
 
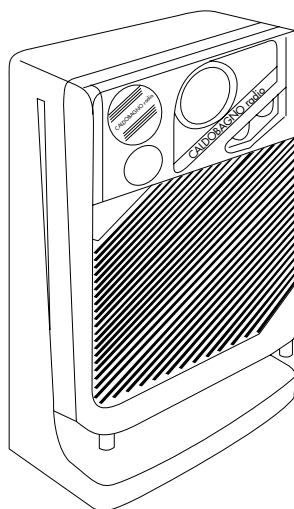 
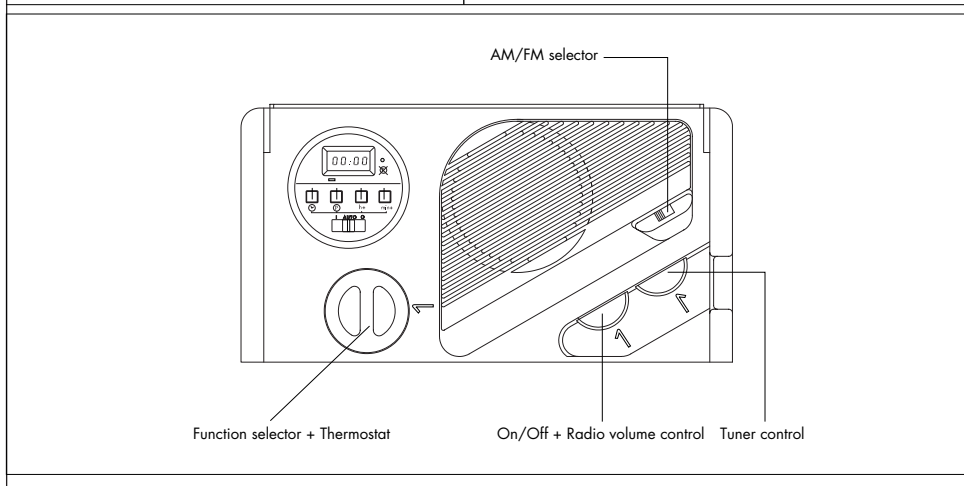 
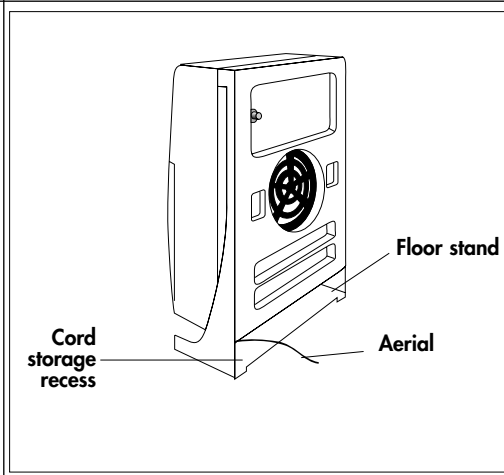 
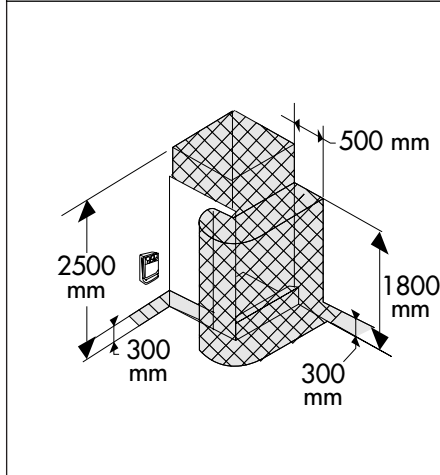 


RADIO HEATER

INSTRUCTION MANUAL

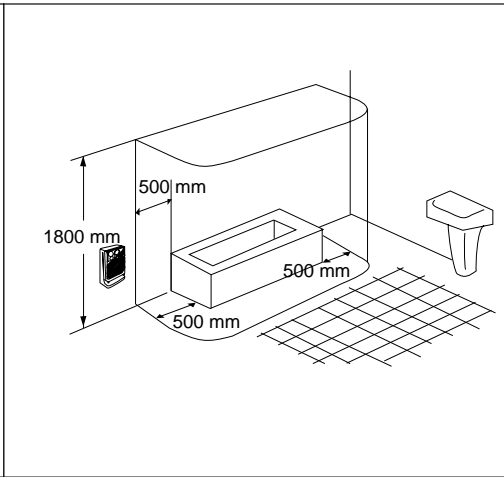

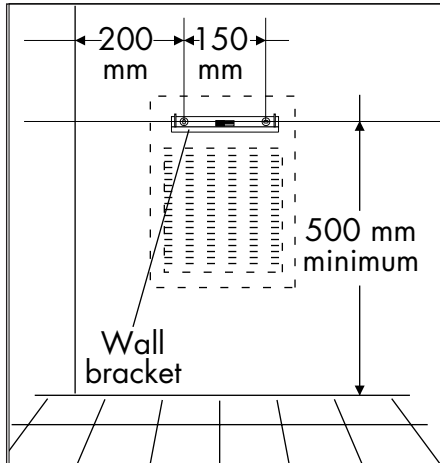

ELECTRICAL CONNECTION

- Before plugging in the heater, check that the voltage of your domestic supply corresponds to the voltage (V) indicated on the appliance.
- Check that the electrical socket has a rating of 10 Amps.
- THIS APPLIANCE CONFORMS TO DIRECTIVE 89/336 GOVERNING RADIO INTERFERENCE.

 
INSTALLATION

This fan heater may be free standing or may be hung on the wall mounting bracket supplied.

If you wish to wall-mount the heater, proceed as follows:

- Remove appliance from stand, by first turning black locking screw on top of stand 1/4 turn, then attach the hook bracket to the wall while at the same time carefully respecting the minimum measurements given in Figure 1.
- Hook the fan heater to the bracket by inclining it slightly. Use a screwdriver to attach the heater firmly, and turn clockwise the screws located in the upper portion of the hook bracket itself.
- Should appliance be installed in a bathroom it must be mounted on the wall outside the "safety area", as shown in Figure 2 and 3.
- Only use this heater in bathrooms if it is wall mounted.

FUNCTION SELECTOR + THERMOSTAT

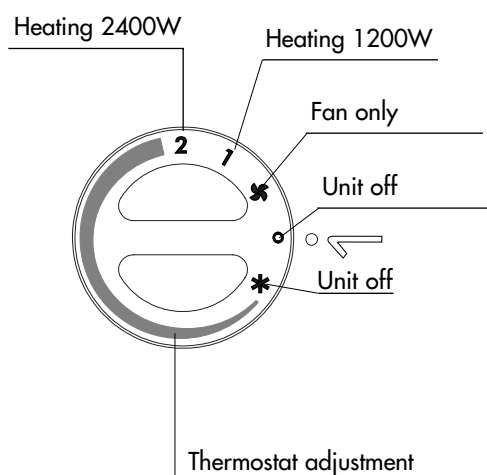

OPERATION AND USE

Heating and setting the thermostat

- 1200W heating: turn the control to position 1.
- 2400W heating: turn the control to position 2.

When the room has reached the temperature desired, set the thermostat by slowly turning the thermostat control counter-clockwise until you hear the click which switches off the heater.

The room temperature will be automatically maintained at a constant level by the thermostat.

Antifreeze function

- Turn the thermostat control to the antifreeze position *.

The heater will automatically come on whenever the temperature in the room falls close to five degrees. The room will thus remain at a temperature of a few degrees above zero to prevent frost-damage to your plumbing.

Summer use (ventilation only)

- Turn the control clockwise to the ☼ position (fan only).

Turning off

To turn off the appliance, turn the function selector control to the "O" position.

OPERATING THE RADIO

- Use the AM/FM selector to choose the frequency you require.
- Turn the ON/OFF control and the volume adjuster. The radio will turn on.

Once you have chosen the frequency band and adjusted the volume, use the tuner to get the station you require.

To improve reception, use the aerial provided.

The radio will work even in conjunction with any of the fan heater operations described above.

MAINTENANCE

- Always pull the plug out of the power point before cleaning the heater.
- **Periodically clean the air intake and outlet grills.**
- Do not use abrasive cleaning products or solvents.

WARNING

- **Important:** ensure that the cord is completely unwound from cord storage before use.
- The unit must not be positioned immediately below the fixed power socket.
- Never use the fan heater for drying laundry.
- A safety device switches the fan heater off if it accidentally overheats (e.g. air intake or outlet grills obstructed). Contact your nearest Service agent who will reset the device.
- Never direct the fan heater's air flow towards furniture, curtains, spray-cans and inflammable material.
- This appliance comes with a Y-type connection. The electrical feed cord must be replaced only by a qualified person.
- Never cover the appliance while it is operating, to avoid any risk of fire.
- Do not use the appliance in rooms less than 4m² in area.
- If using this heater in a bathroom it can only be wall mounted.