

The appliance is fitted with 2 circular ventilation grilles which can be turned in any direction to direct the flow of air as desired.

MAIN FAN HEATER ELEMENTS (Fig. 1)

- | | |
|-------------------------------------|---|
| A Control panel flap | G Grille rotation grips |
| B Wall-mounting bracket | H Adjustable ventilation grilles |
| C Control panel | I Cable winder |
| D Function selector | L Base |
| E Thermostat | |
| F Thermostat indicator light | |

INSTALLATION

The fan heater can easily be positioned on any supporting surface or installed on the wall-mounting bracket supplied.

Proceed as follows to wall-mount the heater:

- Fit the wall-mounting bracket, respecting the minimum distances shown in Fig. 2. The room heater must be outside the protective area (Fig. 4-5) when installed in a bathroom or shower room and under all circumstances away from taps, basins and showers, etc.
- Remove the screw in the bottom of the base and unclip the base, pulling it out from the rear.
- Clip the fan heater onto the bracket, slanting it slightly (Fig. 3) and then fix it in place using a screwdriver, turning the screw in the top part of the mounting bracket clockwise.

ELECTRIC CONNECTION

- Before plugging in the heater, check that the voltage of your domestic supply corresponds to the voltage (V) indicated on the appliance.
- THIS APPLIANCE COMPLIES WITH EEC DIRECTIVE 89/336, RELATING TO ELECTRO-MAGNETIC COMPATIBILITY.

FAN HEATER CONTROLS

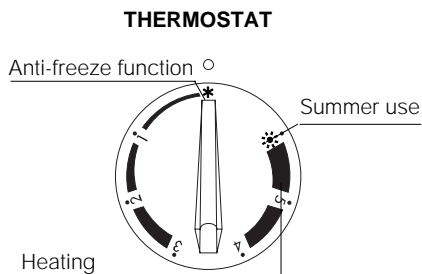
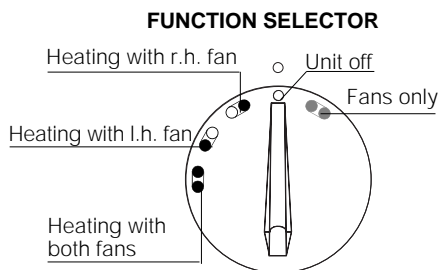


fig. 6

OPERATION AND USE


Heating and setting the thermostat

- Turn the function selector knob to one of the 3 different heating positions available (Fig. 6). The pilot lamp switches on.
- Turn the thermostat knob clockwise to its maximum position.

When the room has reached the temperature desired, set the thermostat by slowly turning the thermostat knob counter-clockwise until you hear the click which switches off the heater and then stop turning the knob immediately.


The temperature set in this way will be automatically maintained at a constant level by the thermostat.

Anti-freeze function

- Turn the function selector knob to one of the 3 different heating positions available (Fig. 6).
- Turn the thermostat knob to the anti-freeze position  (Fig. 6).

When the fan heater has been set in this way it will automatically come on whenever the temperature in the room falls close to zero degrees and the room will thus remain at a temperature of a few degrees above zero.

Summer use

- Turn the function selector knob to the "fans only" position (Fig. 6).
- Turn the thermostat knob to the "summer use" position  (Fig. 6).

The fans only will be switched on when the fan heater has been set in this way.

Switching off the heater

Turn the function selector knob back to its "O" position (Fig. 6) to switch off the fan heater.

MAINTENANCE

- Always remove the plug from the power point before cleaning the heater.
- Periodically clean the air intake and outlet grilles with a vacuum cleaner.
- Do not use abrasive cleaning products or solvents.

CAUTION

- **Important** Ensure that the cord is completely unwound from cord storage before use.
- Do not install the heater near showers, bathtubs, sinks, swimming pools or other wet areas.
- Do not use the heater to dry your laundry. Never obstruct the intake and outlet grills (danger of overheating).
- The heater must be positioned at least 50 cm from furniture or other objects.
- If you need to replace the power supply cable, only ever use HO5W-F type cable with a cross-section area of 2x1 mm².
- The appliance must not be positioned directly underneath a fixed power point.
- Do not use the appliance in rooms less than 4 m² in area.

Important: never cover the appliance when it is operation as this could cause a fire risk. The heater is fitted with a **safety device** which will switch off the heater in case of **accidental overheating** (e.g. obstruction of air intake and outlets grills, motor turning slowly or not at all). Take the heater to an authorised service agent who will reset the device.