



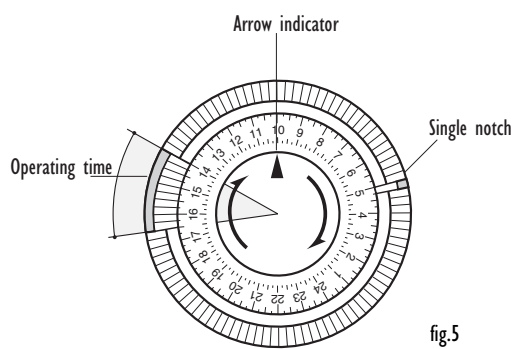

Living innovation

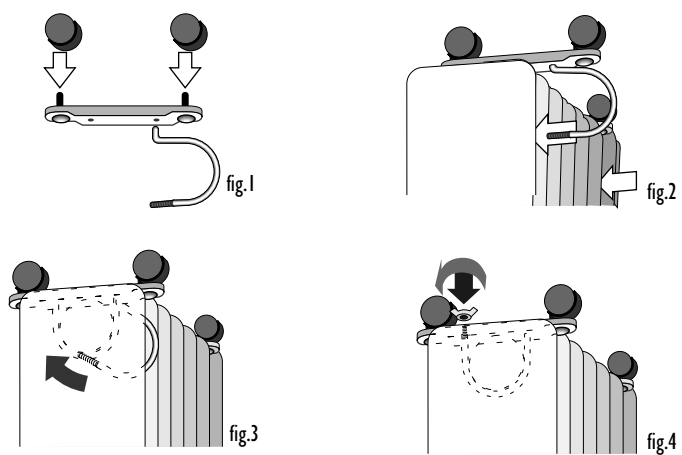

Thank you for choosing this De'Longhi heater. To get the very best out of your new heater it is advisable to read these instructions before using it. This will ensure that you gain optimum results and use the appliance safely.

General instructions

1. Remove the heater from the packaging.
2. Turn the heater upside down and rest on the polystyrene.
3. Check that neither the heater nor the power cable has been damaged in any way during transportation.
4. Do not operate the heater if damaged.

Fitting the brackets and castors

Remove the brackets and the castors from the polystyrene packing. Fit the castors to the spindles on the brackets, pushing firmly until they click into place (fig.1)

Pull each castor to check it is fitted correctly.

IMPORTANT: In order to keep the heater fully stable, fit one bracket between the 2 fins closest to the front control panel and fit the other between the two fins furthest from the control panel as described below:

Fit the brackets between the fins on the underneath of the radiator using the U-shaped bars and wing nuts provided as shown in figs. 1, 2, 3 and 4.

Electrical connection

- Before plugging the appliance into the mains, check that your supply voltage is the same as that shown on the rating plate of the appliance.
- If using more than one appliance at a time, it is important to ensure that the ring main is adequate to cope with the power requirements.
- It is important to ensure that the socket is adequately earthed.
- This appliance complies with EEC directive 89/336 regarding electromagnetic compatibility.

Using for the first time

On using the appliance for the first time we advise that you turn it on to the maximum power setting for up to 8 hours. This is to eliminate the heater's "new odour". During this time ensure that the room is well ventilated.

Operation and use

Turning the appliance on

Insert the plug into the mains socket and switch on.

Turn the thermostat dial clockwise to its highest setting (so the number 6 is visible).

The heater has 3 heat settings:

Minimum power: Press the bottom of the left switch (the red light on the switch will come on)

Medium power: Press the bottom of the right switch (the red light on the switch will come on)

Maximum power: Press the bottom of both switches (the red lights on both switches will come on)

To turn the heater off, press the top of both switches so the red lights are off and unplug at the mains.

We suggest that on days when temperatures are not particularly cold, select minimum output to optimise savings on energy consumption.

Adjusting the thermostat

When the room has reached the desired temperature, turn the thermostat dial slowly in an anti-clockwise direction until you hear a click and the red lights go off. The thermostat will now keep the temperature in the room constant, turning the heater on and off as appropriate.

Frost protection function

Turn the thermostat dial fully anti-clockwise so the * is showing. Press one or both switches on. When set in this way, the appliance will switch on automatically only if the room temperature falls below 5°C, to prevent freezing at minimum energy consumption.

Models with a 24 hour timer(fig. 5)

To set the timer:

- Check the time by your watch. If, for example it is 10 o'clock, turn the number disc of the timer in a clockwise direction until the number 10 on the disc lines up with the arrow head marker ▲.
- The heater is usually supplied with all the red "teeth" on the timer pushed into the centre for continuous operation. Each "tooth" represents 15 minutes. Using your thumbnail push the teeth to the outer rim of the timer to indicate when you require the heater to be off.
- Ensure the heater is on the mains and set to the heat setting and temperature level on the thermostat as desired.
- The heater will now function automatically everyday, switching on and off according to your selection (Important-the heater must always be plugged in and a heat setting selected).

- If you wish to operate the heater without using the timer simply push all the teeth into the centre (as when the heater was first supplied).
- To completely turn off the heater, turn off all the switches and remove the plug from the mains socket.

Turbo heating (some models only)

Some models are fitted with a hot air fan to heat the room up more quickly.

To turn this function on, push the button on the fan so it clicks in.

To turn it off push the button so it clicks out.

PLEASE NOTE: The total (maximum) heat output of the heater with turbo fan is 1.5kW. The following heating combinations are available:

750W fan or 800W radiator or 700W radiator

750W fan + 700W radiator

700W + 800W = 1500W radiator

In other words, the hot air fan can be used independently or in conjunction with the minimum heat setting only.

Cleaning and maintenance

The heater should not require any maintenance. However before attempting to clean the heater, unplug from the mains and wait for it to cool (this should take around 30 minutes). It is sufficient to remove external dust with a soft, dry cloth. Never use abrasive powders or solvents. If necessary, remove concentrated areas of dirt with a vacuum cleaner.

Warnings

- Do not use the heater in a bathroom or in the vicinity of bathtubs, wash basins, showers or swimming pools.
- Never use the heater to dry laundry.
- Never rest the power cable on the heater's elements while it is hot.
- Only use the heater in an upright position.
- The heater must be positioned at least 50cm from furniture or other objects.
- If the power cable is damaged, it must be replaced by the manufacturer or an authorised technical service centre.
- It is normal for the heater to make 'crackling' noises during its first use (or if it has not been used for a long time).
- The body of the heater is filled with an exact quantity of oil. If repairs are necessary which call for the opening of the heater, they must be done only by the manufacturer or an authorised service centre.
- In the unlikely event of oil leakage, contact the manufacturer or an authorised service centre.
- Do not use this appliance in rooms which have a floor area smaller than 4m² as this may lead to overheating.
- The heater must never be placed immediately under a fixed mains socket.
- When scrapping the appliance, respect legislation on the disposal of oil.
- **IMPORTANT:** Never for any reason cover the appliance during operation as this could lead to dangerous overheating.
- A safety device intervenes and turns the appliance off in the event of overheating. To reactivate the heater, remove the plug from the mains, allow the appliance to cool (for about 30 minutes), remove the cause of the overheating and then plug the appliance back into the mains and turn it back on.
- The use of an extension lead is not recommended, as overheating of the extension lead may occur during the operation of the heater.
- In order to avoid any danger caused by an accidental resetting of the safety system, this appliance must not be powered through an external timer.
- As with any electrical appliance, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating your appliance, particularly in the vicinity of young children.

5785003800/04.03