

KENWOOD

English

2 - 13

TYPE MWZ30

instructions

Cod. 6275104800 Rev. 0 - 13/03/2024



Kenwood Ltd

New Lane
Havant
Hampshire
PO9 2NH
kenwoodworld.com



© Copyright 2024. Kenwood Limited. All rights reserved



-

- Children under age 8 should not be allowed to handle appliance and its power cord which must be kept out of their reach.
- Never place the appliance body, plug or power cord in water or other liquids; always wipe clean with a damp cloth.
- Always unplug the power cord from the electricity mains before fitting or removing single attachments or before cleaning the appliance.
- Always make sure that your hands are thoroughly dry before using or adjusting the switches on the appliance, or before touching the power plug or power connections.
- To unplug the appliance, grip the plug and remove it directly from the power socket. Never pull the power cord to unplug the appliance.
- Do not use the appliance if the power cord or plug are damaged or if the appliance itself is faulty; all repairs, including substitution of power cord, must be carried out exclusively by an assistance centre or by authorized technicians in order to avoid all risks.
- In case of using extension leads, these must be suitable for the appliance power to avoid danger to the operator and for the safety of the environment in which the appliance is being used. Extension leads, if not suitable, can cause operating anomalies.
- Never allow the cord to dangle in places where it may be grabbed by a child.
- Do not threaten the safety of the appliance by using parts that are not original or which have not been approved by the manufacturer.

- This appliance is designed for HOME USE ONLY and may not be used for commercial or industrial purposes.
- Any changes to this product that have not been expressly authorised by the manufacturer may lead to the user's guarantee being rendered null and void.
- In the event that you decide to dispose of the appliance, we advise you to make it inoperative by cutting off the power cord. We also recommend that any parts that could be dangerous be rendered harmless, especially for children, who may play with the appliance or its parts.
- Packaging must never be left within the reach of children since it is potentially dangerous.
- This appliance complies with Directives 2014/35/EU and EMC 2014/30/EU, as well as to regulation (EC) No. 1935/2004 of 27/10/2004 on materials in contact with food.
- For safety reasons, always connect the appliance to an earthed socket according to the current electric regulations. **AVOID ANY NON-COMPLIANT ELECTRIC INSTALLATION.**
- Wash all attachments thoroughly before use.
- According to the placement of the kitchen, place the oven on a work surface or a kitchen cabinet that can bear a temperature of at least 90°C.
- Do not move appliance while operating.
- Whilst operating, the metallic parts and the glass are hot: use the appliance touching the metallic handle only.

- Do not warm frying oil or grease up, as the temperature of oil cannot be controlled.
- After use, clean the appliance inside with a damp cloth first, and then with a dry cloth to remove any residues of food and fat. The fat residues may overheat and generate smoke or catch on fire.
- If the materials in the oven cavity generate smoke or catch on fire, keep the door closed, switch the oven off and unplug it.
- Always shell and peel eggs, boiled eggs, potatoes, sausages, chestnuts, etc. before cooking.
- Always use containers suitable for microwave cooking (e.g. heat-resistant ceramic, glass or plastic containers). Never use metallic containers for microwave cooking as sparks may occur.
- Whilst heating liquids up, always use a container with a wide opening and wait at least 20 seconds before removing them from the oven to prevent sudden, explosive boiling. Never use the oven for boiling liquids.
- **WARNING:** do not heat up liquids and food in sealed containers to prevent them from exploding.
- After cooking, the container may be very hot. Always use appropriate gloves or mittens to remove food from the oven and direct the steam away from face and hands to prevent the risk of burn.
- Allow the rotating base to cool down before cleaning it.
- Do not put frozen food or cold kitchenware on the hot rotating base.
- Make sure the kitchenware do not press



against the inner walls of the oven whilst cooking.

- Do not use the appliance when the container with the ingredients is not placed on the assembly seat.
- To prevent the oven from damaging, do not use it without liquids or food inside.
- Clean the oven on a regular basis and remove any food residue. The failure to comply with the appliance cleaning and maintenance precautions may damage the surface and jeopardize the status of the appliance itself, as well as causing danger situations.
- To ensure an adequate ventilation, leave a space of min. 10 cm between the wall and the rear side of the oven, 5 cm from the sides and 20 cm from the top.
- Do not place rags or dishes underneath the appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- **WARNING:** if the door seals are damaged, the oven must not be operated until it has been repaired by a trained person.
- **WARNING:** it is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
- Only use utensils that are suitable for use in microwave ovens.
- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.

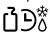 
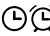 

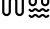 






- When heating food in plastic or paper containers keep an eye on the oven due to the possibility of ignition.
- Microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- Contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- The appliance shall not be cleaned with a steam cleaner.

appliance description (fig 1)

- A Rotating ring
- B Glass base
- C Door handle
- D Grill rack

- Q  "Microwave power" button (Microwave cooking power)
- R  "Time Cook" button (microwave cooking time setting)

control panel description (fig 2)

- E Display
- F  "Weight / Time Defrost" button
- G  "Clock / Timer" button
- H  "Dinner Plate" button
- I  "Grill / Combo" button
- L Numerical panel (from 0 to 9)
- M "0 / Memory" button (function storage)
- N "Start / +30 sec." button
- O "Stop/Cancel" button (function stop)
- P Pre-set cooking function button:
 -  Popcorn
 -  Potatoes
 -  Frozen pizza
 -  Frozen vegetables
 -  Beverages
 -  Meat

The microwaves are electromagnetic radiations that are also present in nature in the form of light waves (e.g. sunlight) and that, inside the oven, go through food from any directions and warm up the molecules of water, fat, and sugar. The heat is produced very quickly only in food, while the container warms up only indirectly for heat transfer from hot food. This prevents the food from adhering to the container, therefore it is possible to use very little fat or to avoid its use during the cooking process. The microwave cooking is deemed to be very healthy and dietetic since it is low fat. Furthermore, in comparison with the traditional systems, as cooking is at a lower temperature, the food dehydrates less, does not lose its nutrients and preserves its flavour more.

how to operate

CLOCK SETTING

After connecting the oven to the power, "0:00" shows on the display. The buzzer sounds.

- Press the "Clock / Timer" button (G) once, the display (E) will show "00:00".
- Set the current time by means of the numerical panel (L), (e.g., to set h. 12:10, press in sequence 1, 2, 1, 0).
- Press the "Clock / Timer" button (G) to confirm setting, the sign ":" will blink and the display (E) will show the time set.

WARNING:

The clock is a 12-hour display. If the clock is not set, it will not work when powered.

WARNING:

If the "Stop / Cancel" button (O) is pressed or no operation is carried out for 1 minute during the clock setting process, the appliance will go back to the previous settings automatically.

WARNING:

To reset the clock, please repeat step 1 to step 3.

SETTING THE KITCHEN TIMER

- Press the "Clock / Timer" button (G) twice, the display (E) will show "00:00" (the digit of the first hour will blink).
- Using the numerical panel (L), enter the time of the timer (the max. cooking time is 99 minutes and 99 seconds).
- Press the "Start / +30 sec." button (N) to confirm setting. The timer starts counting down.
- The kitchen time is differ from 12-hour system, Kitchen Timer is a timer.
- Any other program can't be set during kitchen timer.

"MICROWAVE" COOKING

- Press the "Time Cook" button (R) once; the display (E) will show "00:00".
- Using the numerical panel (L), enter the cooking time (the max. cooking time is 99 minutes and 99 seconds).
- Press the "Microwave power" button (Q) - microwave cooking power - once, the display (E) will show the max power "PL10". Using the numerical control (L), select the required power that will be shown on the display (E):

Power	Display
0%	PL0
10%	PL1
20%	PL2
30%	PL3
40%	PL4
50%	PL5
60%	PL6
70%	PL7
80%	PL8
90%	PL9
100%	PL10

- Press the "Start / +30 sec." button (N) to confirm power and start cooking.
- In the process of setting, if "Stop/ Cancel" button (O) is pressed or if there is no operation within 1 minute, the setting is invalid.
- The power level can be changed during operation. Press "Microwave power" button (Q) and then the current power will flash for 3 seconds. Press number keys to change the power.
The oven will work with the selected power.

“GRILL” COOKING

- Position the grill (E) into the oven on the glass base (B).
- Press the “Grill / Combo” button (I) once and the display (E) will show “GrL”.
- Using the numerical panel (L), enter the cooking time (the max. cooking time is 99 minutes and 99 seconds. Ex.: to set 12 minutes and 50 seconds, press in sequence 1, 2, 5, 0).
- Press the “Start / +30 sec.” button (N) to confirm cooking time and start cooking.

DEFROSTING BY WEIGHT

- Press the “Weight / Time Defrost” button (F) once; the display (E) will show “dEF1”.
- Set the weight of food to be defrosted (from 100 to 2000 g) by means of the numerical panel (L). If the weight ranges between the above values, the appliance will not work.
- Press the “Start / +30 sec.” button (N) to start defrosting.
- The buzzer will sound to remind you to turn the food over. If no operation, the oven will continue working.

DEFROSTING BY TIME

- Press the “Weight / Time Defrost” button (F) twice; the display (E) will show “dEF2”.
- Set the defrosting time (00:01 - 99:99) by means of the numerical panel (L).
- The default microwave power is level 3. To change the power level, before starting the program, press the “Microwave power” button (Q) once, the display (E) will show “PL3”, then use the numerical panel (L) to select the required power level.
- Press the “Start / +30 sec.” button (N) to start defrosting. The remaining defrosting time will be shown.

COMBINATION COOKING

- Position the grill (E) into the oven on the glass base (B).
- Press the “Grill / Combo” button (I) twice or three times and set the “C-1” function on the display (E) or “C-2”.
- Using the numerical panel (L), enter the cooking time (the max. cooking time is 99 minutes and 99 seconds. Ex.: to set 12 minutes and 50 seconds, press in sequence 1, 2, 5, 0).
- Press the “Start / +30 sec.” button (N) to confirm cooking time and start cooking.

Display	Microwave cooking time	Grill cooking time
C-1 (Combination 1)	16 sec	13 sec
C-2 (Combination 2)	10 sec	19 sec

- To stop cooking, open the door or press the “Stop / Cancel” button (O); the program set will be paused and the remaining time will stop on the display.

SPEEDY COOKING

- In standby mode, pressing number keys 1 to 6 let you quickly select a cooking time from 1 to 6 minutes with PL10. The maximum time value is “99:99”.
- Without any setting, the quick cooking can be started at 100% of power with a 30-second cooking time by pressing the “Start / +30 sec.” button (N). Every pressure on the same button increases the cooking time by 30 seconds; the max. cooking time is 99 minutes and 99 seconds.

Note: In cooking state, each one more press on “Start / +30 sec.” button (N) can increase the cooking time. (except the defrost by weight and auto menu function).

COOKING WITH PRE-SET MENUS (AUTO MENU)

Menu	Weight	Display	Power
A-1 Popcorn	50 g	50	PL10
	100 g	100	
A-2 Potato	1 (about 230 g)	1	
	2 (about 460 g)	2	
	3 (about 690 g)	3	
A-3 Pizza	100 g	100	
	200 g	200	
	400 g	400	
A-4 Vegetable	200 g	200	
	300 g	300	
	400 g	400	
A-5 Beverage	1 cup (120ml)	1	
	2 cup (240ml)	2	
	3 cup (360ml)	3	
A-6 Meat	250 g	250	
	350 g	350	
	450 g	450	
A-7 My Plate	250 ml	250	
	350 ml	350	
	500 ml	500	

MULTI-STAGE COOKING

Note: Two cooking stages can be set in multi-stage cooking.

If you set defrost function, it will work automatically in the first stage.

Auto menu cannot be set as one of the multi-stage.

Example: Defrost food for 5 minutes and then cook with 80% microwave power for 7 minutes.

- Press "Weight / Time Defrost" button (F) twice and then the screen will display "dEF2".
- Press "5", "0", "0" to set the desired defrost time of 5 minutes.
- Press the "Time Cook" button (R) once, and then press the buttons "7", "0", "0" in sequence on the numerical panel (L) once to set cooking time;
- Press the "Microwave power" button (Q) once, and then "PL10" will display.
- Press "8" to set the power level of PL8.
- Press the "Start / +30 sec." button (N) to start cooking.

MEMORY FUNCTION

- You can save the settings for a dish in the memory and call it up again. Press the "0-Memory" button (M) to select the storage procedure 1-3. The display (E) will show 1, 2, 3.
- If the procedure has been set, press the "Start / +30 sec." button (N) to use it. Otherwise, continue setting the procedure.
- After having completed the setting, press the "Start / +30 sec." button (N) once to save the procedure.

Example: Set memory 2 (cook food with 80% microwave power for 3 minutes)

- 1) press the "0-Memory" button (M) twice until the display will show "2".
- 2) Press the "Time Cook" button (R) once, and then press the buttons "3", "2", "0" in sequence on the numerical panel (L).
- 3) Press the "Microwave power" button (Q) once and the display will show "PL10". Then press the button "8" on the numerical panel (L);

the display will show "PL8".

- 4) Press the "Start / +30 sec." button (N) to save setting. The buzzer will ring once. By pressing the "Start / +30 sec." button (N) again, the procedure will be saved as memory "2".

Note:

the power is not cut off, the procedure will be saved all the time.

Auto menu can not be set in memory function.

SAFETY FUNCTION FOR CHILDREN

- To stop the appliance, keep pressed the "Stop/Cancel" button (O) for 3 seconds; the appliance will emit a long sound indicating the start of the safety state for children.
- To unlock the appliance, keep pressed the "Stop/Cancel" button (I) for 3 seconds; the appliance will emit a long sound.

MUTE MODE

To activate the mute mode:

- In standby mode, press and hold "8" for 3 seconds. The buzzer will sound. When you press the key, it does not make a sound.

To deactivate the mute mode:

- In mute mode, press and hold "8" for 3 seconds. The buzzer will sound.

INFORMATION SHOWN WHILE COOKING

- If the clock has been set, the current time will display for three seconds by pressing the "Clock / Kitchen Timer" button (G) in the cooking state.
- In the microwave cooking state, press the "Microwave power" button (Q) to inquire the power level. It will display for three seconds.

cleaning and maintenance

ATTENTION:

NEVER IMMERSE THE APPLIANCE BODY, THE PLUG AND THE POWER CORD IN WATER OR OTHER LIQUIDS, USE A DAMP CLOTH FOR CLEANING.

EVEN WHEN NOT IN USE, UNPLUG THE APPLIANCE BEFORE MOUNTING OR REMOVING THE SINGLE PARTS OR BEFORE CLEANING.

- The oven cavity must always to be clean. When there are food/liquid residues inside the oven, clean the sides with a damp cloth. If the oven is very dirty, a mild detergent may be used. Avoid sprayers or too aggressive detergents as they may leave stains or strips or opacify the door surface.
- The outside surface are to be cleaned with a damp cloth only. To prevent the operating parts inside the oven from damaging, there must be no water traces in the ventilation openings.
- Often clean the door and the window on both sides, the sealed locks and the parts nearby, using a damp cloth, to remove squirts or residues. Do not use an abrasive detergent in any case.
- The control panel must always be dry. Clean it with a soft, damp cloth. When carrying out this procedure, leave the door open to prevent the oven from starting accidentally.
- Wipe steam from the inner/outside part of the door by means of a soft cloth. This may occur when working in high-humidity conditions and, therefore, it is normal.
- Sometimes, it is necessary to remove the glass base to clean it. Clean the base with soapy, warm water or a dish detergent.
- The rotating ring and the bottom of the oven must be kept cleaned to avoid too much noise, therefore clean them with water and mild detergent or a dish detergent. After having removed the ring for clean-

ing, re-position it properly.

- Remove the smell from the oven cavity by mixing a cup of water and the lemon juice and peel in a deep microwave container, put it into the oven and let the latter work for 5 minutes. Clean thoroughly and wipe with a soft cloth.
- For replacing the oven light, contact the dealer.
- Clean the oven on a regular basis and remove any food residue. Otherwise, the surfaces may deteriorate, thus reducing the appliance life or causing a risk condition.

service and customer care

- If you experience any problems with the operation of your appliance, before requesting assistance visit www.kenwoodworld.com.
- Please note that your product is covered by a warranty, which complies with all legal provisions concerning any existing warranty and consumer rights in the country where the product was purchased.
- If your Kenwood product malfunctions or you find any defects, please send it or bring it to an authorised KENWOOD Service Centre. To find up to date details of your nearest authorised KENWOOD Service centre visit www.kenwoodworld.com or the website specific to your Country.
- Made in China.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

