

## MWP20.000WH

instructions

cod. 6275105800 rev. 0 - 06/08/24



### Kenwood Ltd

New Lane  
Havant  
Hampshire  
PO9 2NH  
[kenwoodworld.com](http://kenwoodworld.com)



© Copyright 2020.Kenwood Limited. All rights reserved



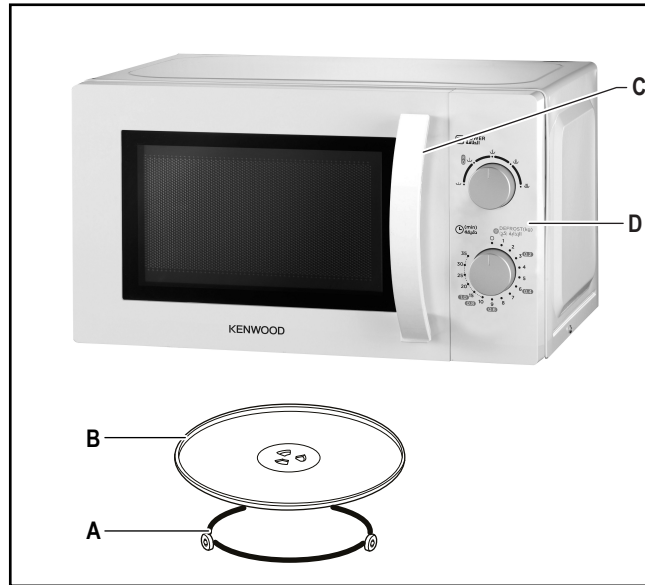


Fig. 1

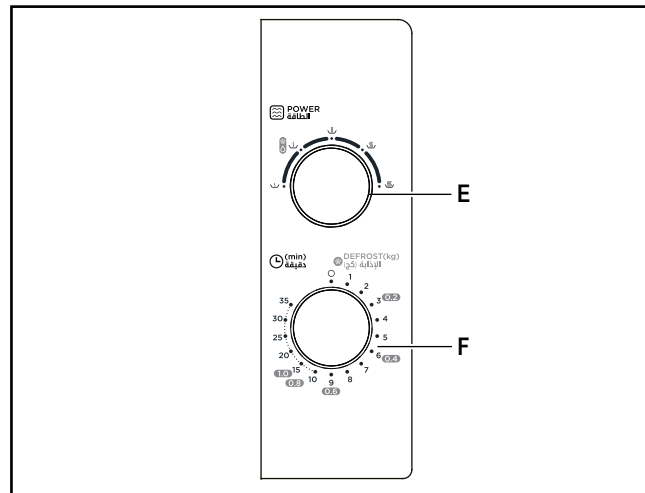


Fig. 2

## safety

- Read these instructions carefully and retain for future reference.
- Remove all packaging and any labels.
- If the cord is damaged it must, for safety reasons, be replaced by KENWOOD or an authorised KENWOOD repairer.
- Make sure that the voltage on the appliance rating plate corresponds to that of the mains electricity.
- Never leave the appliance unattended when connected to the power supply; unplug it after every use.
- Never place the appliance on or close to sources of heat.
- Always place the appliance on a flat, level surface during use.
- Never leave the appliance exposed to the elements (rain, sun, etc....).
- Make sure that the power cord does not come into contact with hot surfaces.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Do not allow children to play with the appliance. Cleaning and user maintenance must not be carried out by children unless they are older than 8 and supervised.

- Children under age 8 should not be allowed to handle appliance and its power cord which must be kept out of their reach.
- Never place the appliance body, plug or power cord in water or other liquids; always wipe clean with a damp cloth.
- Always unplug the power cord from the electricity mains before fitting or removing single attachments or before cleaning the appliance.
- Always make sure that your hands are thoroughly dry before using or adjusting the switches on the appliance, or before touching the power plug or power connections.
- To unplug the appliance, grip the plug and remove it directly from the power socket. Never pull the power cord to unplug the appliance.
- Do not use the appliance if the power cord or plug are damaged or if the appliance itself is faulty; all repairs, including substitution of power cord, must be carried out exclusively by an assistance centre or by authorized technicians in order to avoid all risks.
- In case of using extension leads, these must be suitable for the appliance power to avoid danger to the operator and for the safety of the environment in which the appliance is being used. Extension leads, if not suitable, can cause operating anomalies.
- Never allow the cord to dangle in places where it may be grabbed by a child.
- Do not threaten the safety of the appliance by using parts that are not original or which have not been approved by the manufacturer.
- This appliance is designed for HOME USE ONLY and may not be used for commercial or industrial purposes.

- Any changes to this product that have not been expressly authorised by the manufacturer may lead to the user's guarantee being rendered null and void.
- In the event that you decide to dispose of the appliance, we advise you to make it inoperative by cutting off the power cord. We also recommend that any parts that could be dangerous be rendered harmless, especially for children, who may play with the appliance or its parts.
- Packaging must never be left within the reach of children since it is potentially dangerous.
- For safety reasons, always connect the appliance to an earthed socket according to the current electric regulations. **AVOID ANY NON-COMPLIANT ELECTRIC INSTALLATION.**
- Wash all attachments thoroughly before use.
- According to the placement of the kitchen, place the oven on a work surface or a kitchen cabinet that can bear a temperature of at least 90°C.
- Do not move appliance while operating.
- Whilst operating, the metallic parts and the glass are hot: use the appliance touching the metallic handle only.
- Do not warm frying oil or grease up, as the temperature of oil cannot be controlled.
- After use, clean the appliance inside with a damp cloth first, and then with a dry cloth to remove any residues of food and fat. The fat residues may overheat and generate smoke or catch on fire.

- If the materials in the oven cavity generate smoke or catch on fire, keep the door closed, switch the oven off and unplug it.
- Always shell and peel eggs, boiled eggs, potatoes, sausages, chestnuts, etc. before cooking.
- Always use containers suitable for microwave cooking (e.g. heat-resistant ceramic, glass or plastic containers). Never use metallic containers for microwave cooking as sparks may occur.
- Whilst heating liquids up, always use a container with a wide opening and wait at least 20 seconds before removing them from the oven to prevent sudden, explosive boiling. Never use the oven for boiling liquids.
- **WARNING:** do not heat up liquids and food in sealed containers to prevent them from exploding.
- After cooking, the container may be very hot. Always use appropriate gloves or mittens to remove food from the oven and direct the steam away from face and hands to prevent the risk of burn.
- Allow the rotating base to cool down before cleaning it.
- Do not put frozen food or cold kitchenware on the hot rotating base.
- Make sure the kitchenware do not press against the inner walls of the oven whilst cooking.
- Do not use the appliance when the container with the ingredients is not placed on the assembly seat.
- To prevent the oven from damaging, do not use it without liquids or food inside.

- Clean the oven on a regular basis and remove any food residue. The failure to comply with the appliance cleaning and maintenance precautions may damage the surface and jeopardize the status of the appliance itself, as well as causing danger situations.
- **WARNING:** If the door seals are damaged, the oven must not be operated until it has been repaired by a trained person.
- **WARNING:** It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
- To ensure an adequate ventilation, leave a space of min. 10 cm between the wall and the rear side of the oven, 5 cm from the sides and 20 cm from the top.
- Do not place rags or dishes underneath the appliance.

## key

- A Rotating ring
- B Glass base
- C Door handle
- D Control panel
- E Setting dial for cooking power/heating
- F Setting dial for cooking time/defrosting weight

The microwaves are electromagnetic radiations that are also present in nature in the form of light waves (e.g. sunlight) and that, inside the oven, go through food from any directions and warm up the molecules of water, fat, and sugar. The heat is produced only in food very quickly, while the container warms up only indirectly for heat transfer from hot food. This prevents the food from adhering to the container, therefore it is possible to use very little fat or to avoid its

use during the cooking process. The microwave cooking is deemed to be very healthy and dietetic since it is low fat. Furthermore, in comparison with the traditional systems, as cooking is at a lower temperature, the food dehydrates less, does not lose its nutrients and preserves its flavour more.

## how to operate


### Starting microwave cooking

- Set the cooking power by rotating the apposite setting dial (E).
- Set the cooking time by rotating the timer dial (F) up to the required time.
- At this stage, the microwave oven will start operating automatically.
- When the cooking time set has elapsed, the appliance will stop.
- The operation can be stopped by rotating the timer dial (F) to position "0".

**warning:**

When the appliance is not in use, always set the cooking time to "0".

**Defrosting**

- Rotate the power setting dial (E) to position "  ".
- Set the weight of the food to defrost by rotating the apposite dial (F) up to the required weight.
- At this stage, the microwave oven will start operating automatically.
- When the cooking time set has elapsed, the appliance will stop.
- THE operation can be stopped by rotating the timer dial (F) to position "0".
- THE power level can be increased for defrosting if it is not sufficient; this could depend on the thickness and the type of the food to defrost.

**warning:**

When removing food from the oven, make sure the time/weight setting dial is on the position "0".

Otherwise, by operating the appliance without food, overheating and damage to the appliance might occur.

## cleaning and maintenance

**attention:**

Never immerse the appliance body, the plug and the power cord in water or other liquids, use a damp cloth for cleaning.

**attention:**






Even when not in use, unplug the appliance before mounting or removing the single parts or before cleaning.

- The oven cavity must always be clean. When there are food/liquid residues inside the oven, clean the sides with a damp cloth. If the oven is very dirty, a mild detergent may be used. Avoid sprayers or too aggressive detergents as they may leave stains or strips or opacify the door surface.
- The outside surface are to be

cleaned with a damp cloth only. To prevent the operating parts inside the oven from damaging, there must be no water traces in the ventilation openings.

- Often clean the door and the window on both sides, the sealed locks and the parts nearby, using a damp cloth, to remove squirts or residues. Do not use an abrasive detergent in any case.
- The control panel must always be dry. Clean it with a soft, damp cloth. When carrying out this procedure, leave the door open to prevent the oven from starting accidentally.
- Wipe steam from the inner/outside part of the door by means of a soft cloth. This may occur when working in high-humidity conditions and, therefore, it is normal.
- Sometimes, it is necessary to remove the glass base to clean it. Clean the base with soapy, warm water or a dish detergent.
- The rotating ring and the bottom of the oven must be kept cleaned to avoid too much noise, therefore clean them with water and mild detergent or a dish detergent. After having removed the ring for cleaning, re-position it properly.
- Remove the smell from the oven cavity by mixing a cup of water and the lemon juice and peel in a deep microwave container, put it into the oven and let the latter work for 5 minutes. Clean thoroughly and wipe with a soft cloth.
- For replacing the oven light, contact the dealer.
- Clean the oven on a regular basis and remove any food residue. Otherwise, the surfaces may deteriorate, thus reducing the appliance life or causing a risk condition.

# cooking type/ defrosting

Function	Power	Usage
	17%	Soften the ice cream
	33%	Vegetable soup, soften the butter or defrost
	55%	Stew, fish
	77%	Rice, fish, chicken, minced meat
	100%	Heat up milk, water, vegetables, beverages

## service and customer care

- If you experience any problems with the operation of your appliance, before requesting assistance visit [www.kenwoodworld.com](http://www.kenwoodworld.com).
- Please note that your product is covered by a warranty, which complies with all legal provisions concerning any existing warranty and consumer rights in the country where the product was purchased.
- If your Kenwood product malfunctions or you find any defects, please send it or bring it to an authorised KENWOOD Service Centre. To find up to date details of your nearest authorised KENWOOD Service centre visit [www.kenwoodworld.com](http://www.kenwoodworld.com) or the website specific to your Country.
- Made in China.



### IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.