


Type WAP10

instructions

Cod. 6375101900 Rev. 0 - 15/07/2024

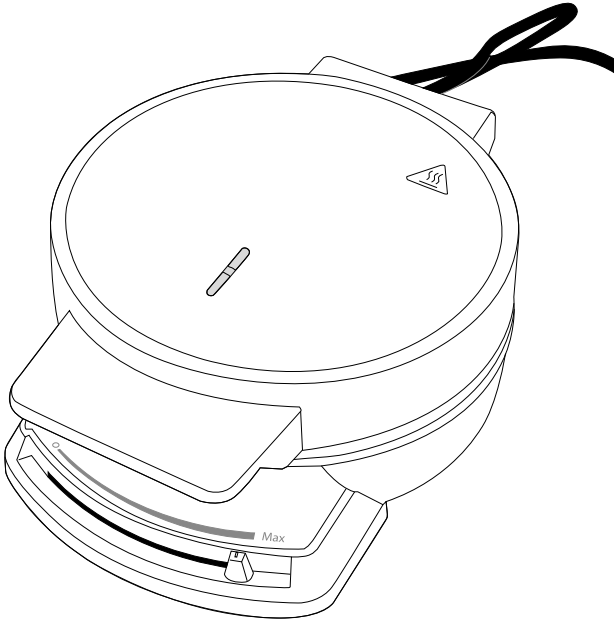

Kenwood Ltd


New Lane
Havant
Hampshire
PO9 2NH
kenwoodworld.com



English

safety

- Read these instructions carefully and retain for future reference.
- Remove all packaging and any labels.
- Make sure that the voltage on the appliance rating plate corresponds to that of the mains electricity.
- Never leave the appliance unattended when connected to the power supply; unplug it after every use.
- Never place the appliance on or close to sources of heat.
- Always place the appliance on a flat, level surface during use.
- Never leave the appliance exposed to the elements (rain, sun, etc....).
- Make sure that the power cord does not come into contact with hot surfaces.
- This appliance is not intended for use by person(including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- Never place the appliance body, plug or power cord in water or other liquids; always wipe clean with a damp cloth.

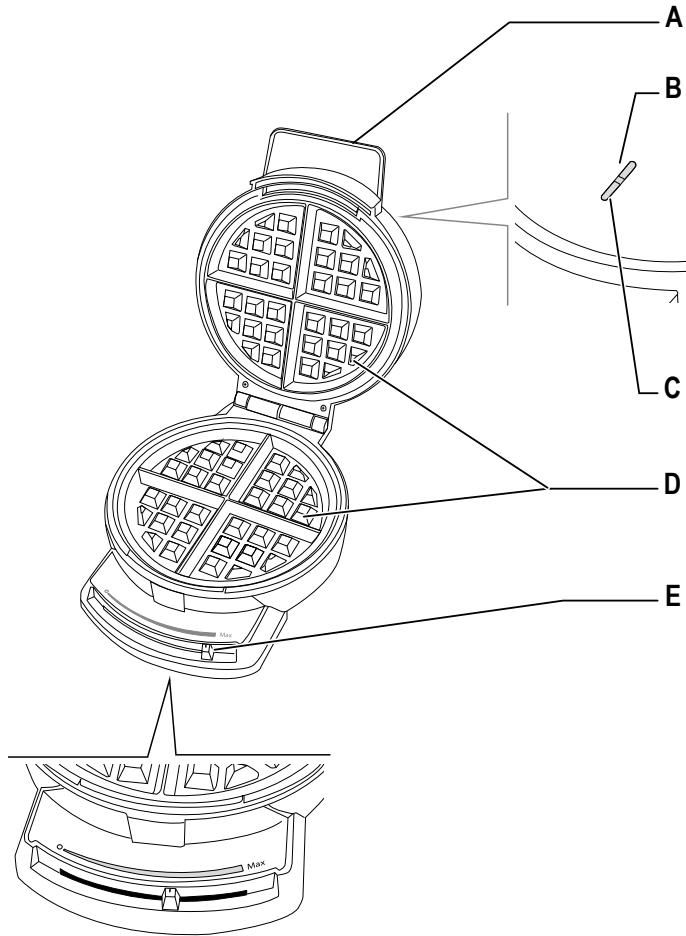

- Always unplug the power cord from the electricity mains before fitting or removing single attachments or before cleaning the appliance.
- Always make sure that your hands are thoroughly dry before using or adjusting the switches on the appliance, or before touching the power plug or power connections.
- To unplug the appliance, grip the plug and remove it directly from the power socket. Never pull the power cord to unplug the appliance.
- Do not use the appliance if the power cord or plug are damaged or if the appliance itself is faulty; all repairs, including substitution of power cord, must be carried out exclusively by an assistance centre or by authorized technicians in order to avoid all risks.
- In case of using extension leads, these must be suitable for the appliance power to avoid danger to the operator and for the safety of the environment in which the appliance is being used. Extension leads, if not suitable, can cause operating anomalies.
- Never allow the cord to dangle in places where it may be grabbed by a child.
- Do not threaten the safety of the appliance by using parts that are not original or which have not been approved by the manufacturer.
- Any changes to this product that have not been expressly authorised by the manufacturer may lead to the user's guarantee being rendered null and void.
- In the event that you decide to dispose of the appliance, we advise you to make it inoperative by cutting off the power cord.

We also recommend that any parts that could be dangerous be rendered harmless, especially for children, who may play with the appliance or its parts.

- Packaging must never be left within the reach of children since it is potentially dangerous.
- During use, the appliance must be handled with care and without touching its hot surfaces.
- **WARNING: Hot surface.**
- Handle the appliance with care, above all when opening or closing the plates; there is a risk of accidental harm to hands or damage to other objects.
- Use the appliance well away from flammable liquids; do not use up against walls or close to parts in plastic that do not resist heat.
- Only clean the appliance by wiping with a damp cloth, after first unplugging it from the mains power and waiting for it to cool completely.
- After use, wait for the appliance to cool completely before storing it.
- External timers or separate remote controls to operate the appliance are not permitted.
- This appliance is for HOME USE ONLY and must be used for commercial or industrial purposes.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen area in shops offices and other working environments;
 - farm houses;
 - by clients in hotels motels and other residential type environments;
 - bed and breakfast type environments.

Before using for the first time

- Clean the baking plates with a damp cloth or sponge.
- Slightly grease the baking plates with a little butter or cooking oil.

first time use

- The appliance may give off a small amount of smoke the first time it is used; this is not a defect and the smoke will cease within a few minutes.
- When using for the first time, grease the appliance hotplate with oil or butter. This operation will not need to be repeated in the future.

key

- A Appliance body
- B Ready light
- C On light
- D Non-stick waffle plates
- E Temperature adjustment lever

instructions for use

- Plug the appliance into the mains power socket.
- The light (C) will switch on to show that the appliance is connected to the mains and the light (B) will switch on to show that the appliance is heating up.
- When the appliance has reached the correct temperature (after about 3 minutes) and it is ready to use, the light (B) will switch off.

Note: The light (B) will switch on again if the cooking temperature should fall below this level.

- Open the appliance completely and, with a ladle, pour the batter mix (prepared previously) into the bottom hot plate. When pouring in the mix, make sure that all of the compartments are full but not so much so that they could overflow while cooking.
- Close the top plate over the bottom one.
- Set the desired temperature using

the lever (E).

- Open the waffle maker after 5-8 minutes and check whether the waffle is sufficiently 'brown'. The cooking time required to obtain crisp brown waffle depends on the type of food, fillings and your personal taste.
- Use a non-metallic utensil (e.g. wooden spatula) to remove the toasted waffle maker. Do not use sharp or abrasive kitchen utensils.
- Unplug the sandwich maker from the wall socket after use.

WARNING:

Never touch the hot plates: risk of burns.

Only cook mixes with the plates closed.

Never use sharp objects (e.g., knife) as this could damage the plates.

cleaning and maintenance

WARNING:

Only clean the appliance by wiping with a damp cloth, after first unplugging it from the mains power and waiting for it to cool completely.

- First remove excess oil from the plates with a piece of kitchen paper before you clean them.
- Use a wooden or plastic spatula to remove stick food residues (for example solidified cheese) from the cooking plates.
Do not use metal, sharp or abrasive utensils.
- Clean the cooking plates with a moist soft cloth or sponge.
- Plates must only be wiped clean with a damp cloth.

service and customer care

- If the cord is damaged it must, for safety reasons, be replaced by KENWOOD or an authorized KENWOOD repairer.
- If you experience any problems with the operation of your appliance, before requesting assistance refer to the “troubleshooting guide” section in the manual or visit www.kenwoodworld.com.
- Please note that your product is covered by a warranty, which complies with all legal provisions concerning any existing warranty and consumer rights in the country where the product was purchased.
- If your Kenwood product malfunctions or you find any defects, please send it or bring it to an authorised KENWOOD Service Centre. To find up to date details of your nearest authorized KENWOOD Service centre visit www.kenwoodworld.com or the website specific to your Country.
- Made in China.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.