 
 
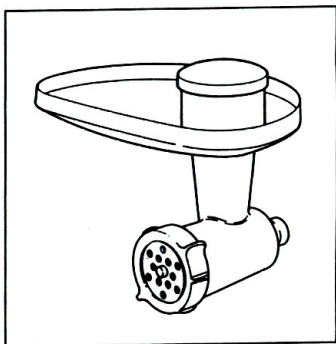 


KENWOOD

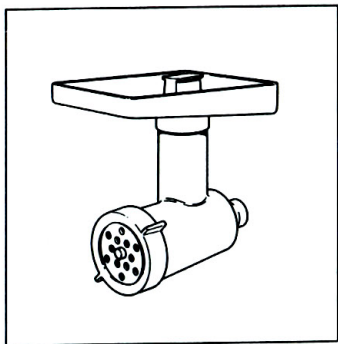

A920/A940

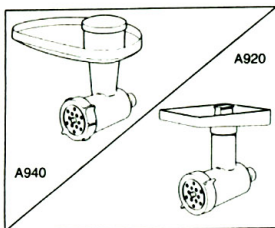

Use in Slow Speed Outlet at speed 4 to maximum

- | | |
|----------------------------------|--------------------------|
| 1 Large Ring Nut | 6 Pusher |
| 2 Mincing Screens | 7 Hopper |
| 3 4-Bladed Cutting Knife | 8 Meat Dish/Cover |
| 4 Scroll with Drive Shaft | (A940 only) |
| 5 Body | 9 Cleaning Brush |

The components of the A920 and A940 are not interchangeable.

Before use, wash the parts to remove any trace of packing grease.

To assemble the mincer, place the scroll into the mincer body and fit the four bladed cutting knife over the square end of the drive shaft ensuring that it is correctly located. Failure to correctly position the blade over the end of the drive shaft may cause permanent damage to your mincer attachment. (The four bladed cutting knife will fit either way round on the A920, but on the A940 ensure that the flat cutting surface fits against the mincing screen). Select the desired screen and place against the cutting blade making sure that the notch in the screen fits over the protrusion in the mincer body. Loosely secure the ring nut.

To fit the Mincer, remove the Slow Speed Outlet Cover by pulling the locking catch to the side. Slide the Mincer into the outlet, turning it slightly so that the shaft engages in the socket with the pin located in the slot. Release the catch to lock.

Screw the ring nut up tightly.

Place the hopper on top of the feed tube in a convenient position. The meat dish/cover if supplied, can be placed beneath the Mincer outlet to collect the food.



Cut meat into strips approx. 1" or 2.5cm square


Switch on to speed 4 to maximum and using the pusher, feed the food through, a piece at a time.

After use the mincer should be dismantled, washed in hot soapy water, then thoroughly dried. Assemble the mincer again ready for use. Do not immerse in any solution of soda.

If the Mincer is stored on the appliance, then the meat dish/cover if supplied with the A940 can be placed over the hopper to act as a dust cover.

The pusher supplied with the A940 Mincer has a removable cap suitable for storing the sausage and kebba maker attachments if purchased separately.

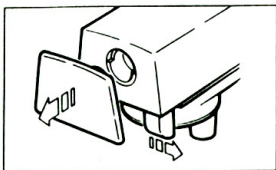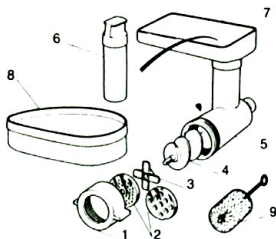

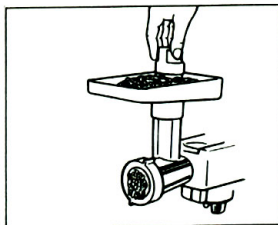

Screens

Use the fine screen for mincing cooked meat for hash, sausage loaf, spreads; mincing raw fish; chopping nuts (small); grinding wafers for decoration, macaroons. Use the coarse screen for mincing raw meat or fish; chopping vegetables; chopping nuts (large); grating hard cheese; chopping peel or dried fruit for puddings or marmalade; chopping cooked fish; chopping onion.

An extra fine screen, if not included in this pack, may be purchased separately from a Kenwood stockist or directly from the Kenwood spares office on 01705 476000. This screen is suitable for mincing both raw and cooked fish or meat.

Note

All frozen food must be thoroughly thawed before mincing.

A940 MINCER ACCESSORIES

**IF YOU WISH TO ORDER ADDITIONAL
ACCESSORIES FOR YOUR MINCER, PLEASE
QUOTE THE FOLLOWING REFERENCE NUMBERS: —**

| | |
|--------------------------------------|---------------|
| YOUR MINCER IS AN A940 MINCER | |
| SAUSAGE ADAPTOR | — A942 |
| KEBBE MAKER | — A943 |
| COOKIE MAKER | — A925 |

**PLEASE NOTE THAT THE FINE GRATER
ACCESSORY IS NOT AVAILABLE FOR THE
A940 MINCER**

