



Spend a little Live a lot



Spend a little Live a lot

# User Manual

## Contents

Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used correctly. In the event of product failure within it’s intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.



**PRODUCED IN CHINA FOR:**  
ALDI STORES LTD. PO BOX 26, ATHERSTONE  
WARWICKSHIRE, CV9 2SH.

ALDI STORES (IRELAND) LTD.  
PO BOX 726, NAAS, CO. KILDARE.  
visit us at [www.aldi.com](http://www.aldi.com)

## AMBIANO RETRO KETTLE



 
 
 
With regard to this manual.....	1
Intended use.....	1
Important safeguards.....	1
Preliminary phases for use .....	5
Instructions for use.....	6
Cleaning the appliance .....	7
Technical data.....	8
Disposal of waste.....	8
Warranty card.....	9
Warranty conditions.....	10

### AFTER SALES SUPPORT

**GB** 01924 481053 **GB** customerservice@jaleno.com  
 **IRE** 014968036/014963993 **IRE** kenilworthelec@eircom.net

Model: 2877      Product Code: 71314      07/2016



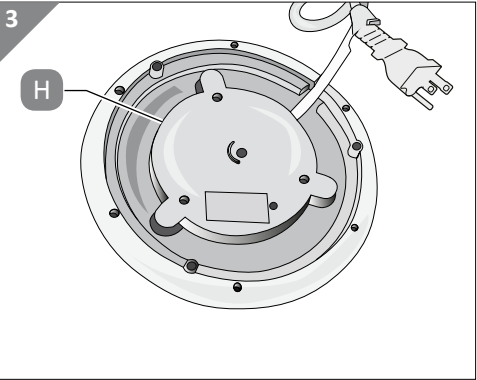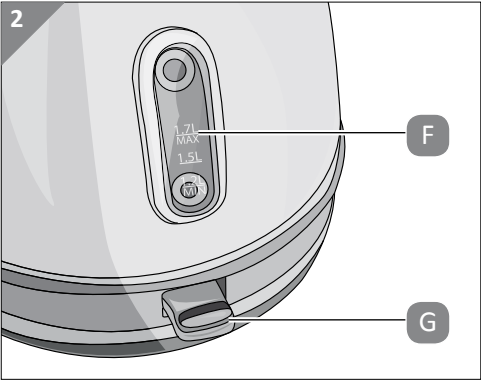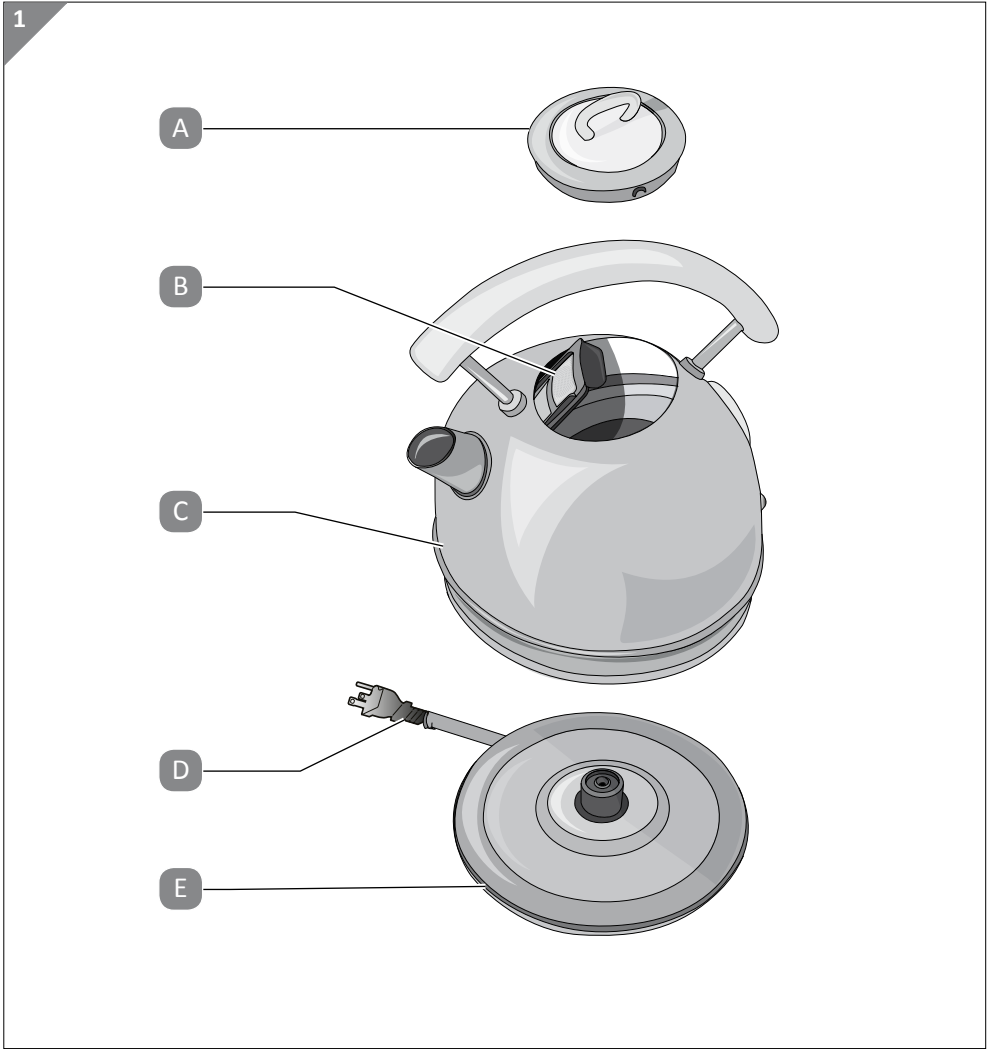

Description of the appliance

- A Lid
- B Scale filter
- C Kettle
- D Power cord + Plug
- E Power supply base
- F Water level indicator (Max and Min)
- G On lever / Operation indicator
- H Cord storage device

## WITH REGARDS TO THIS MANUAL

This appliance is made in conformity with appropriate European Regulations in force, to protect the user wherever possible from potential hazards. Even if you are familiar with this type of appliance, carefully read this manual before use. Only use this appliance for the purpose it is designed for in order to prevent accidents and damage. Keep this manual close by for future consultation. If you should decide to give this appliance to other people, remember to also include these instructions.

The information provided in this manual is marked with the following symbols indicating:



Warnings of burns



Danger for children



Danger from electricity



DANGER from other causes



IMPORTANT, possible damage to materials

This manual is available in electronic format on the website.

## INTENDED USE

You can use the appliance for boiling water only. No other use of the product is allowed by the manufacturer, which is exempt from any liability for all types of damages caused by improper use of the appliance. Improper use also results in any form of warranty being forfeited.

## IMPORTANT SAFEGUARDS

**READ THESE INSTRUCTIONS BEFORE USE.**

**ALWAYS KEEP THESE INSTRUCTIONS.**

## COMPLIANCE TO EU DIRECTIVES

This appliance conforms to the directives 2014/35/EU, EMC 2014/30/EU, 2011/65/EU and to the regulations (EC) No. 1935/2004 of 27/10/2004 regarding material in contact with foods.

To dispose of the product correctly according to European Directive 2012/19/EU, please refer to and read the provided information enclosed with the product.





### Warnings of burns

1. Never fill the appliance beyond the maximum limit; there is a risk of boiling water spilling out.
2. Do not open the cover while the water is boiling.
3. Be careful not to come into contact with the hot water while preparing beverages or cleaning; danger of burns.
4. When filling the kettle, avoid contact with the steam that escapes from the spout and lid.
5. Do not remove the lid while the water is boiling.
6. Lift the kettle by its handle.
7. During use, the appliance heats up. Avoid contact with the kettle.
8. Do not touch the hot surfaces. Only hold by the handle and knob provided for the purpose.



### Danger for children

9. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
10. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
11. Children shall not play with the appliance.
12. When disposing of the appliance as waste, it must be made inoperative by cutting off the power cord. Also remember to make any potentially hazardous parts of the appliance safe, as there is a risk that children may use them as playthings.
13. Packaging elements must not be left in reach of children as they are potentially hazardous.



**Danger from electricity**

14. Make sure that the voltage shown on the appliance rating plate corresponds to that of your local mains electricity supply.
15. Never leave the appliance unattended when connected to the power supply; unplug it after every use.
16. Make sure that the power cord does not come into contact with hot or sharp surfaces.
17. It is not recommended to use this appliance in conjunction with an extension cord.
18. Never let the kettle base, power supply base, cord or mains plug come into contact with water: risk of short circuit and / or electric shock.
19. Make sure the appliance is turned off before removing the kettle from the power base.

**Danger from other causes**

20. Always unplug the power cord from the mains supply before fitting or removing attachments or before cleaning the appliance.
21. Always make sure that your hands are thoroughly dry before operating the switches on the appliance, or before touching the power plug or power connections.
22. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
23. Always turn off the appliance and unplug the power cord from the electrical outlet before filling the kettle with water. Do not go past the MAX level.
24. Do not immerse the appliance in water or other liquids.

**Important, Possible damage to materials**

25. This appliance is designed solely for household use only.
26. We decline any responsibility resulting from misuse or any use other than those covered in this booklet.
27. It is recommended to keep the original packaging, because the free



- repair service does not cover failures caused by inadequate packaging of the product when shipped to an authorised Service Centre.
28. Using accessories not recommended or not supplied by the manufacturer of the appliance may entail risks of fire, electric shock or injuries to people and will invalidate your warranty.
  29. In the event that this appliance is to be disposed of, it is suggested that the power cord is cut off. It is also recommended that all potentially dangerous components, including the power cord, are rendered harmless to prevent personal injury. Do not let children play with the appliance or its components.
  30. The appliance must be used and rested on a stable heat resistant surface.
  31. The appliance is not to be used if it has been dropped, if there are visible sign of damage or if it is leaking. Do not use the appliance if the power cord or the plug are damaged, or if the appliance is faulty. To prevent any accident, all repairs, including the replacement of the power cord, must be carried out by an Authorised Service Centre or by suitably personnel.
  32. Place the appliance in an adequately illuminated environment and with the power outlet easily accessible.
  33. Do not use the appliance on an inclined surface.
  34. Do not lift the appliance by grasping its body or the power base. Hold it only by the handle.
  35. Only use the power supply base supplied: keep the base clean and dry.
  36. Never fill the appliance beyond the maximum limit; there is a risk of the kettle boiling over.
  37. Make sure the lid is correctly placed on the kettle before turning on the unit.
  38. Do not operate the kettle dry, without water.
  39. Never fill the kettle with hot or boiling water.
  40. The product cannot be powered by external timers or with separate remote control systems.
  41. Do not use sparkling (carbonated) water.
  42. Never use the appliance outdoors.
  43. Never put the appliance on or near gas stoves or electric hotplates.

44. Do not expose the appliance to outdoor elements (rain, sun, etc.).
45. Before cleaning the appliance always unplug it and allow it cool down.  
Clean only with a non-abrasive cloth that has been slightly dampened with water, adding a few drops of mild, non-aggressive detergent (never use solvents that damage plastic).

## PRELIMINARY PHASES FOR USE

### Using the appliance for the first time

Before connecting the appliance to the power supply, make sure that the voltage indicated on the rating plate on the bottom of the appliance corresponds to the local mains voltage. Place the appliance on a horizontal, stable and heat resistant surface.

#### **ATTENTION**

Do not place the appliance or power cord close to or on top of hot electric or gas cookers, or close to a microwave oven.

#### **ATTENTION**

Prevent the cord from protruding beyond the edge of the table or surface. Prevent children from grabbing the cord, in this way tipping over the appliance.

#### **ATTENTION**

If the power cord is too long, wrap it around the power supply base cord storage device (Fig. 3). The cable must not touch any hot parts of the appliance.

#### **ATTENTION**

Position the appliance so that children cannot reach the hot parts.

## INSTRUCTIONS FOR USE

### ATTENTION

The water filling and emptying operations must be performed with the kettle separated from the power supply base.

### ATTENTION

Before connecting or disconnecting the appliance from the electrical outlet, check that the on/off lever is in the “0” position.

### ATTENTION

Do not use the kettle without water.

- **Boil the water the first time the appliance is turned on. Empty and rinse the kettle. Repeat the operation two or three times.**
- Fill the kettle with cool tap water to the desired level.
- **Do not go past the MAX level.**
- Replace the lid (A). Place the kettle on the power supply base (E).
- Insert the plug into the socket, which must be earthed. Lower the ON lever (G) to position “1”. The operation light (H) turns on. When the water boils, the appliance automatically turns off. The ON lever returns to “0” and the operation light turns off.

### CAUTION

**Do not open the kettle lid while the water is boiling. Danger of splashing from boiling water.**

- Make sure that the kettle is off before lifting it from its power supply base. Grasp the kettle by its handle. Lift the kettle away from its power supply base. Pour the water into the cups. Empty any water remaining in the kettle after every use.  
If you turn on the kettle when the water inside is below the level indicated by Min, the appliance turns off automatically. To boil water again, wait a few seconds to allow the boil dry protection device to reset.
- **If the kettle should turn on and off during use, or if it turns off before coming to the boil, check the appliance for an accumulation of scale (see “Removing lime”).**
- The kettle is provided with a scale filter for retaining the scale particles.
- **Any drops of water under the kettle is entirely normal: it is only condensation.**



## CLEANING THE APPLIANCE

### CAUTION

All cleaning operations described below must be performed with the appliance off and with the mains plug disconnected from the socket-outlet.

### CAUTION

Regular maintenance and cleaning preserve and keep the appliance efficient for a longer period of time. Never wash any part of this appliance in the dishwasher. Do not use direct jets of water.

### CAUTION

All cleaning operations must be performed when the appliance is cold.

### Cleaning the kettle and power supply base

Clean the appliance using a damp, non-abrasive cloth so as to not damage the body. Dry thoroughly with a soft cloth.

### ATTENTION

Do not wash the appliance in a dishwasher.

### Scale filter

Open the lid. Remove the scale filter from the kettle. Wash the filter under running water. If necessary use a soft brush. Rinse thoroughly. Place the filter in the kettle. Alternatively you can leave the filter in the kettle and proceed with the descaling as described in the next paragraph.

### Removing lime

Good maintenance and regular cleaning preserve and keep the appliance operating efficiently for a longer period of time, considerably limiting the risks of lime deposits forming inside the appliance. However, should your kettle fail to work properly as a result of the frequent use of hard, high calcium content water, you may perform a decalcification procedure to restore its operational efficiency.

For this purpose you must use only citric acid-based decalcifying products. Suitable products are readily available in hardware stores or supermarkets. The supplier does not accept any responsibility whatsoever for damage to components inside the machine caused by the use of non-compliant products containing chemical additives. Should you need to decalcify your appliance, please follow the instructions which come with the decalcifying product.

## TECHNICAL DATA

Nominal voltage: 220-240V  
Nominal frequency: 50/60Hz  
Nominal power: 2520-3000W  
Protection Class: I (This appliance must be earthed.)

## DISPOSAL OF WASTE



**The product packaging is made of recyclable materials. The packaging material can be taken to public recycling collection points.**



**Old appliances do not belong in household waste!** To comply with current legislation, old appliances, having reached the end of their useful lives, should be taken to a disposal facility where they can be sorted.

In this way, any valuable material contained in the old appliances can be recycled and the environment protected. Responsible local authorities or their waste disposal operators can provide further information.





# WARRANTY CARD

## Retro Kettle

### Your personal details:

Name \_\_\_\_\_

Address \_\_\_\_\_

\_\_\_\_\_

 \_\_\_\_\_ Email \_\_\_\_\_

Date of purchase\* \_\_\_\_\_

\* We recommend you keep the receipt with this warranty card

Location of purchase \_\_\_\_\_

### Description of malfunction:



### Return your completed warranty card to:

**Jaleno Europe Limited**  
**Roe Head House**  
**Far Common Road**  
**Mirfield**  
**West Yorkshire**  
**WF14 0DQ**  
**England**

**Kenilworth Electrical**  
**253 Harolds Cross Road,**  
**Dublin, Ireland**  
**kenilworthelec@eircom.net**

### AFTER SALES SUPPORT



GB 01924 481053

IRE 014968036 / 014963993



GB customerservice@jaleno.com

IRE kenilworthelec@eircom.net

MODEL: 2877 PRODUCT CODE: 71314, 07/2016

# 3

YEAR WARRANTY



## Warranty conditions

Dear Customer,

The **ALDI warranty** offers you extensive benefits in addition to your statutory rights:

**Warranty period:**           **3 years from date of purchase.**  
**6 months** for wear parts and consumables under normal and proper conditions of use (e.g. rechargeable batteries).

**Costs:**                       Free repair/exchange or refund.  
No transport costs.

**Hotline:**                   No additional charge for fixed network calls.

**ADVICE:** Please contact our service hotline by phone, e-mail or fax before sending in the device. This allows us to provide support in the event of possible operator errors.

**In order to make a claim under the warranty, please send us:**

- the original receipt and the warranty card properly completed.
- the product with all components included in the packaging.

**The warranty does not cover** damage caused by:

- **Accident or unanticipated events** (e.g. lightning, water, fire).
- **Improper use or transport.**
- **Disregard of the safety and maintenance instructions.**
- **Other improper treatment or modification.**

After the expiry of the warranty period, you still have the possibility to have your product repaired at your own expense. If the repair or the estimate of costs is not free of charge you will be informed accordingly in advance.

This warranty does not affect your statutory rights.