



Spend a little Live a lot

Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used correctly. In the event of product failure within it’s intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.



PRODUCED IN CHINA FOR:
ALDI STORES LTD. PO BOX 26, ATHERSTONE
WARWICKSHIRE, CV9 2SH.

ALDI STORES (IRELAND) LTD.
PO BOX 726, NAAS, CO. KILDARE.
visit us at www.aldi.com

AFTER SALES SUPPORT

GB 01924 481053 **GB** customerservice@jaleno.com
 IRE 014968036/014963993 **IRE** kenilworthelec@eircom.net

Model: 2963 Product Code: 75141 02/2017



Spend a little Live a lot


User Manual

AMBIANO CHOCOLATE FOUNTAIN



Contents

Content	
Compliance to EU Directives.....	7
Intended use.....	7
Residual risks	8
Important safeguards	8
Before use	11
Instruction for use	11
After use	11
Cleaning and maintenance	12
Technical Data	13
Disposal of Waste	13

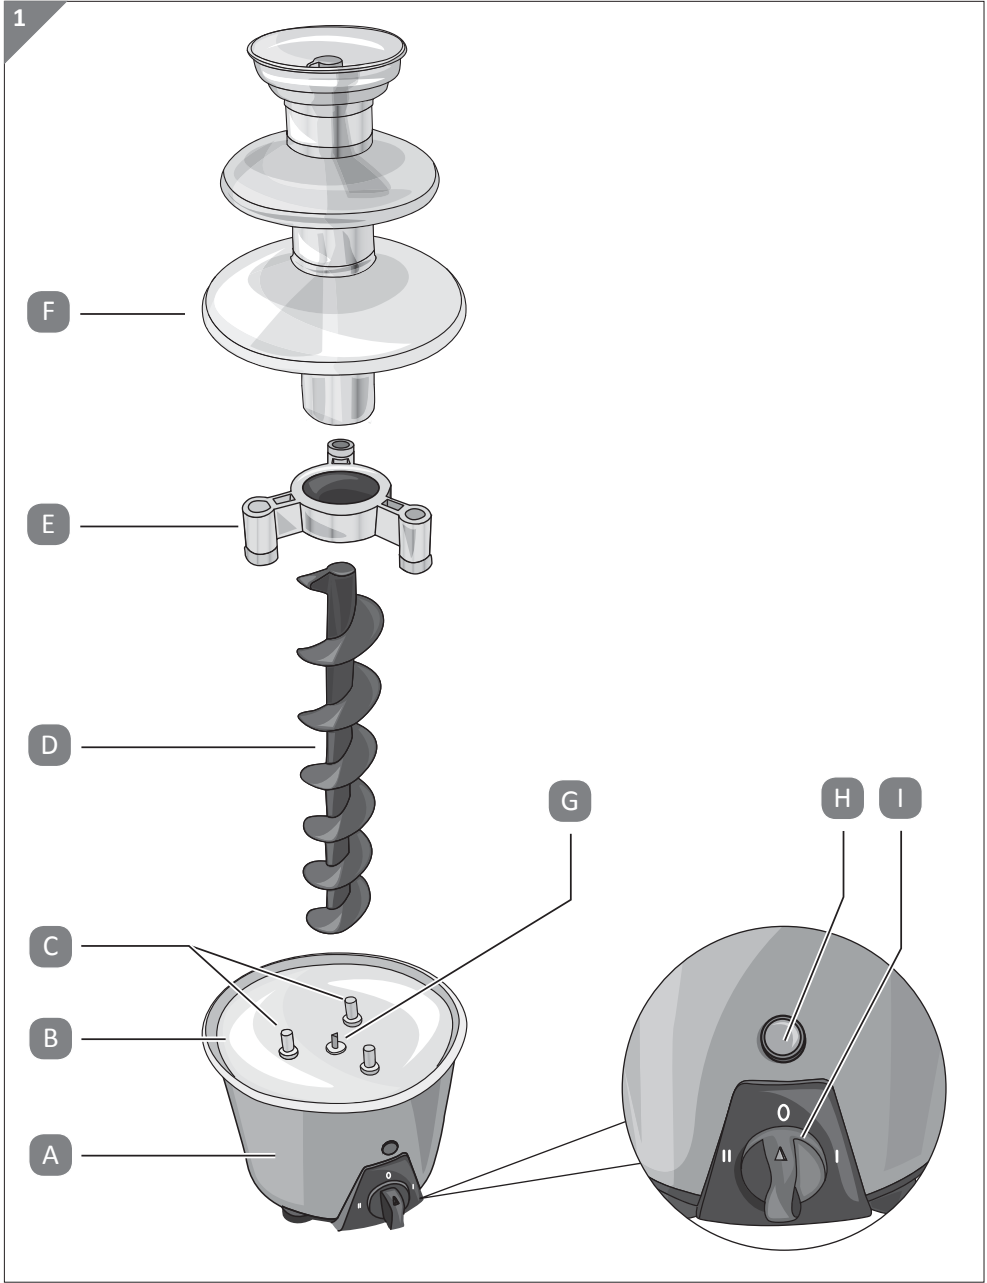

Description of the appliance

- A Base
- B Cup
- C Guide pins for the tower
- D Conveyor
- E Tower holder
- F Tower
- G Rotating pin
- H Operation indicator
- I ON/OFF knob

With regards to this manual

Carefully read these warnings and use the appliance only for the use it is designed for in order to prevent accidents and damage.

Keep this manual close by for future consultation. If you should decide to give this appliance to other people, remember to also include these instructions.

The information in this manual is marked with the following symbols and words that indicate:



Risk of injury

DANGER

Warns the user on the possible risk of serious injury



Risk of electric shock

WARNING

Warns the user on the possible risk of injury or serious property damage



Risk of burns

CAUTION

Warns the user on the possible risk of minor injury



Risk of material damage

NOTE

Warns the user on the possible risk of material damage

This manual is available in electronic format on the website www.aldi.co.uk.

COMPLIANCE TO EU DIRECTIVES

This appliance conforms to the directives 2014/35/EU, EMC 2014/30/EU, 2011/65/EU. To dispose of the product correctly according to European Directive 2012/19/EU, please refer to and read the provided information enclosed with the product. The appliance complies with Regulation (EC) No 1935/2004 of 27/10/2004 on the materials in contact with food.

INTENDED USE

The appliance must be used to let melted chocolate and similar liquids flow on the tower's surfaces, creating a fountain-like effect. During operation it is possible to dip various foods in the liquid (eg fruit, cookies, etc).

The appliance has been designed for home use only and must not be used for commercial or industrial purposes.

This appliance is intended to be used in household and similar applications as:

- Staff kitchen areas in shops, offices and other working environments
- Farm houses
- By clients in hotels, motels and other residential type environments
- Bed and breakfast type environments

Any other use of the appliance is not intended by the Manufacturer who does not



accept any responsibility for damages of any kind caused by improper use of the appliance itself.

Improper use also results in any form of warranty being forfeited.

RESIDUAL RISKS



WARNING

RISK OF BURNS. By the nature of the product, hot surfaces are exposed during and after use. The covers on the item cannot prevent all risk of injury.

IMPORTANT SAFEGUARDS

READ THESE INSTRUCTIONS BEFORE USE.

ALWAYS KEEP THESE INSTRUCTIONS.

1. Using the item outside of its intended function or other misuse may result in injury, for which the manufacturer cannot be held liable.
2. We suggest you keep the original box and packaging, as our free-of-charge service does not cover any damage resulting from inadequate packaging of the product when this is sent back to an Authorised Service Centre.
3. This appliance can be used by persons with reduced physical sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
4. Do not affect the safety of the appliance by using parts that are not original or which have not been approved by the manufacturer



Danger for children

5. This appliance can be used by children aged from 8 years if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
6. Children shall not play with the appliance.
7. Cleaning and maintenance by the user must not be carried out by children unless they are older than 8 years and are monitored during the operation.
8. Keep the appliance and its cord out of reach of children less than 8

years of age at all times.

9. Packaging elements must not be left in reach of children as they are potentially hazardous.



Danger of electric shock

10. Make sure that the voltage on the appliance rating plate corresponds to that of your local mains electricity supply.
11. Always connect the appliance to an earthed socket.
12. Never touch the appliance, the plug and the power cable with wet hands.
13. Never leave the appliance unattended when connected to the power supply; unplug it after every use.
14. Make sure that the power cord does not come into contact with hot or sharp surfaces.
15. The supply cable is intentionally short. This is a high power device and the use of extension leads is not recommended. Using an extension lead may introduce additional hazards to the environment for the user and those around them. Poor use of extensions leads can cause fires.
16. Remove the plug from the power outlet before cleaning or maintenance.
17. Do not immerse the appliance in water or other liquids.
18. The appliance must not be used if it has been dropped, if there are visible signs of damage or leaks of water. Do not use the appliance if the power cord or the plug are damaged, or if the appliance is faulty. To prevent any accident, all repairs, including the replacement of the power cord, must be carried out by an Authorised Service Centre or, in any case, by qualified personnel



Danger of burns

19. Do not touch the metal parts of the appliance when in operation and for several minutes after it is turned off since it could cause burns. The temperature of accessible surfaces may be high when the appliance is operating.





WARNING. Hot surfaces.



Danger of damage originating from other causes

20. Never leave the appliance unattended when it is connected to the power supply.
21. Turn on the appliance only when it is in working position.
22. Choose an adequately illuminated and clean room with easily accessible power outlet.
23. During use, rest the appliance onto a horizontal surface.
24. The appliance must be used and left at rest on a stable surface.



Danger of material damage

25. Place the appliance on a work surface that bears a temperature of at least 90°C (194°F). Do not place the appliance on delicate surfaces.
26. Use the appliance well away from flammable liquids. Do not use the appliance up against walls or close to parts in plastic that do not resist heat.
27. When the appliance is hot, do not rest it onto the power cord. Take special care in ensuring that the cord do not come into contact with the plates when it is hot.
28. Do not pull the power cord to unplug the appliance.
29. Do not expose the appliance to atmospheric agents (rain, sun ...).
30. External timers or separate remote controls to operate the appliance are not permitted.



BEFORE USE

Assembling

- Wash and dry the appliance. Follow the instructions present in the “Cleaning and Maintenance” section.
- Mount the conveyor (D) on the rotating pin (G).
- Insert the support (E) in the lower part of the tower (F).
- Position the tower over the conveyor until the support (E) is inserted into the guide pins (C).

Pre-heating

Before using the appliance, it is necessary to do the preheating:

- Insert the plug into the socket, which must be earthed.
- Rotate the ON/OFF knob to position “I”. The operation light (H) turns on.
- After 15-20 minutes the appliance is properly pre-heated.

INSTRUCTION FOR USE

NOTE

Use already melted chocolate (or similar liquids). The appliance must not be used to melt solid chocolate. Don't pour in the cup different food from the the ones indicated in the “Instructions for use”.

⚠ WARNING

Never touch the conveyor when it is moving.

- Pour the melted chocolate into the cup (B). If the chocolate is too dense, add a table-spoon of vegetal oil. The cup can contain about 350 grams of melted chocolate.
- Rotate the ON/OFF knob to position “II”. The conveyor (D) starts rotating. The chocolate is conveyed to the top and flows down along the tower.
- You can dip fruit, cookies and other foods in the melted chocolate, using a wooden skewer or a similar object. Use a spoon to remove potential remains of solid foods, that can hinder the functioning of the conveyor.

AFTER USE

- Rotate the ON/OFF knob to position “0”.
- Remove the remaining chocolate. If you want to reuse the remaining chocolate, put it in a container when it is still liquid.
- Wash the appliance after use. Follow the instructions present in the “Cleaning and maintenance” section.

CLEANING AND MAINTENANCE

DANGER

RISK OF ELECTRIC SHOCK. Never immerse the appliance in water or other liquids.

WARNING

Always unplug the appliance and allow it to cool before cleaning.

NOTE

RISK OF MATERIAL DAMAGE. Check the state of the power cable before each use, and if it is damaged, take it to the service centre closest to you to have it replaced only by specialised personnel.

Cleaning the base

Clean plastic parts with a damp, non-abrasive cloth and dry them with a dry cloth.

NOTE

RISK OF MATERIAL DAMAGE. Don't immerse the base in water. Don't wash in the dishwasher. Don't use aggressive products or solvents that may damage the plastic.

Cleaning of removable elements

- Disassemble and wash individually the tower, the conveyor and the tower holder.

Use only warm water and non-aggressive products.

Don't use abrasive sponges.

The removable elements can be washed in the dishwasher.

TECHNICAL DATA

Nominal voltage: 220-240V~
Nominal frequency: 50/60Hz
Nominal power: 90W
Protection Class: I (This appliance must be earthed.)

DISPOSAL OF WASTE



The product packaging is made of recyclable materials. The packaging material can be taken to public recycling collection points.



Old appliances do not belong in household waste! To comply with current legislation, old appliances, having reached the end of their useful lives, should be taken to a disposal facility where they can be sorted.

In this way, any valuable material contained in the old appliances can be recycled and the environment protected. Responsible local authorities or their waste disposal operators can provide further information.



WARRANTY CARD

Chocolate Fountain

Your personal details:

Name _____

Address _____



_____ Email _____

Date of purchase* _____

* We recommend you keep the receipt with this warranty card

Location of purchase _____

Description of malfunction:



Return your completed warranty card to:

Jaleno Europe Limited
 Roe Head House
 Far Common Road
 Mirfield
 West Yorkshire
 WF14 0DQ
 England

Kenilworth Electrical
 253 Harolds Cross Road,
 Dublin, Ireland
 kenilworthelec@eircom.net

AFTER SALES SUPPORT



GB 01924 481053

IRE 014968036 / 014963993



GB customerservice@jaleno.com

IRE kenilworthelec@eircom.net

MODEL: 2963 PRODUCT CODE: 75141, 02/2017

3

YEAR WARRANTY



Warranty conditions

Dear Customer,

The **ALDI warranty** offers you extensive benefits in addition to your statutory rights:

Warranty period: **3 years from date of purchase.**
 6 months for wear parts and consumables under
 normal and proper conditions of use
 (e.g. rechargeable batteries).

Costs: Free repair/exchange or refund.
 No transport costs.

Hotline: No additional charge for fixed network calls.

ADVICE: Please contact our service hotline by phone, e-mail or fax before sending in the device. This allows us to provide support in the event of possible operator errors.

In order to make a claim under the warranty, please send us:

- the original receipt and the warranty card properly completed.
- the product with all components included in the packaging.

The warranty does not cover damage caused by:

- **Accident or unanticipated events** (e.g. lightning, water, fire).
- **Improper use or transport.**
- **Disregard of the safety and maintenance instructions.**
- Other **improper treatment or modification.**

After the expiry of the warranty period, you still have the possibility to have your product repaired at your own expense. If the repair or the estimate of costs is not free of charge you will be informed accordingly in advance.

This warranty does not affect your statutory rights.