 


Ariete

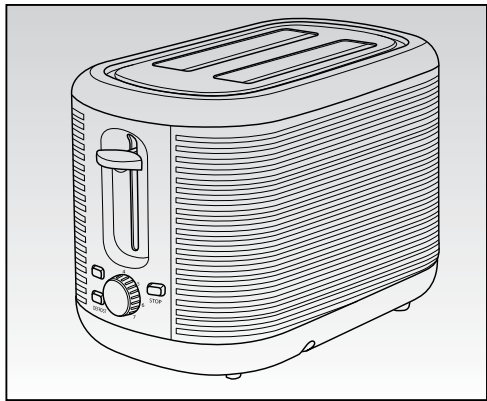

Mod. 150

EN

IMPORTANT SAFEGUARDS

READ THESE INSTRUCTIONS BEFORE USE


The necessary precautions must be taken when using electrical appliances, and these include the following:

1. Make sure that the voltage on the appliance rating plate corresponds to that of the mains electricity.
2. Never leave the appliance unattended when connected to the power supply; unplug it after every use.
3. Never place the appliance on or close to sources of heat.
4. Always place the appliance on a flat, level surface during use.
5. Never leave the appliance exposed to the elements (rain, sun, etc....).
6. Make sure that the power cord does not come into contact with hot surfaces.
7. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Do not allow children to play with the appliance. Cleaning and user maintenance must not be carried out by children unless they are older than 8 and supervised.
8. Children under age 8 should not be allowed to handle appliance and its power cord which must be kept out of their reach.
9. Never place the appliance body, plug-

or power cord in water or other liquids; always wipe clean with a damp cloth.

10. Always unplug the power cord from the electricity mains before fitting or removing single attachments or before cleaning the appliance.
11. Always make sure that your hands are thoroughly dry before using or adjusting the switches on the appliance, or before touching the power plug or power connections.
12. To unplug the appliance, grip the plug and remove it directly from the power socket. Never pull the power cord to unplug the appliance.
13. Do not use the appliance if the power cord or plug are damaged or if the appliance itself is faulty; all repairs, including substitution of power cord, must be carried out exclusively by an Ariete assistance centre or by authorized Ariete technicians in order to avoid all risks.
14. Never allow the cord to dangle in places where it may be grabbed by a child.
15. Do not threaten the safety of the appliance by using parts that are not original or which have not been approved by the manufacturer.
16. In the event that you decide to dispose of the appliance, we advise you to make it inoperative by cutting off the power cord. We also recommend that any parts that could be dangerous be rendered harmless, especially for children, who may play with the appliance or its parts.
17. Packaging must never be left within the reach of children since it is potentially dangerous.
18. Toasted bread can burn; never use the toaster under or alongside flammable materials, such as curtains.
19. Always handle the appliance with care during use and never touch the hot sides.
20. Do not place plates or other items on top of the toaster during use.
21. Do not place more than two slices in each slot.
22. Never insert forks or other utensils inside the toaster to remove the toast; this could damage the heating elements inside the appliance.
23. Never place your hands or any other metal materials (for example, knives or tin foil) inside the toaster.
24. Use the appliance well away from flammable liquids; do not rest it against walls, curtains or plastic parts that are not heat resistant.
25. The appliance may only be wiped clean with a damp cloth and only after unplug-

ging it from the mains and leaving it to cool completely.

26. After use, wait for the appliance to cool completely before storing.
27. This appliance may not be operated using external timers or remote controls.
28. This appliance conforms to EC Regulation 1935/2004 on materials and articles intended to come into contact with food.
29.  To dispose of product correctly according to European Directive 2012/19/CE, please refer to and read the provided leaflet enclosed with the product.

DO NOT THROW AWAY THESE INSTRUCTIONS

APPLIANCE DESCRIPTION (Fig. 1)

- A ON lever
- B Toasting level adjustment knob
- C Heating button with integrated light
- D Defrosting button with integrated light
- E Stop button with integrated light
- F Crumb tray

OPERATION PRECAUTIONS

- Do not use slices of bread that are too thin or broken.
- Do not insert foods that could drip during cooking. As well as making cleaning more difficult, these foods can also become the cause of fire. It is also very important to clean any food residues or crumbs from the crumb drawer (F) before each use.
- Do not insert food product that are too large by forcing them in.
- **Do not put forks or other utensils inside the toaster to remove the bread since they could damage the resistors of the appliance. RISK OF ELECTRIC SHOCKS.**

INSTRUCTIONS FOR USE

Keep the appliance on for a few minutes the first time it is used so as to get rid of the “new” odour and the fumes caused by the machining of the resistors.

Keep the original packing for future use if it should prove necessary. It is the best way to properly protect it from being damaged during transportation. **Before using this product, be sure to carefully follow the instructions supplied in the section entitled “IMPORTANT SAFEGUARDS”.**

Preparing toast

WARNING: Always allow at least 1 minute's cooling time between cycles if toaster is being used more than once at a time. Put the slices of bread inside the slits of the toaster and lower the on lever (A) until it locks into place.

Note: if the appliance is not plugged in, the lever does not lock.

Adjust the toasting lever with the knob (B). Wait a few minutes and after the toast is automatically ejected, check its toasting level. If the toast is not browned enough, select a higher toasting level. If, on the other hand, it is too dark, select a lower level.

Press the button (E) at any time to stop the toasting process.

Press the button (E) to turn the appliance off and disconnect the plug from the socket-outlet.

Thawing function

You can toast frozen slices of bread by pressing the button (D) right after you lower the lever (A) and by setting the browning control knob (B) onto 1. If you wish to cook, rather than defrosting, the knob will have to be set onto darker settings (i.e. 3, 4, 5, 6 or 7). The light integrated in the button will stay on as long as the defrosting function is used.

Heating function

Lower the on lever (A) and press the heating button (C). The light integrated in the button will stay on as long as this function is used. Please note that the heating time is fixed and cannot be changed.

CLEANING

It is severely forbidden to disassemble the appliance or to try in any way to work on it inside.

Keeping the appliance clean and tidy will ensure you will get optimum toasting and a longer lifetime of the appliance.

- **Turn off the appliance by pressing the button (E) and remove the plug from the socket-outlet before you start to clean it.**
- **Wait for the appliance to cool down before cleaning.**
- **Use only a slightly dampened cloth.**
- **Do not immerse the appliance in water or other liquids.**
- **Always dry the appliance parts by hand without putting them in an oven or microwave.**
- **Never use sharp metal utensils for cleaning the interior of the appliance.**
- **Unplug the appliance and empty the crumb tray (F) after each use.**

From time to time clean the exterior of the appliance with a damp cloth and then dry. Do not use abrasive detergents since they could ruin the surface.

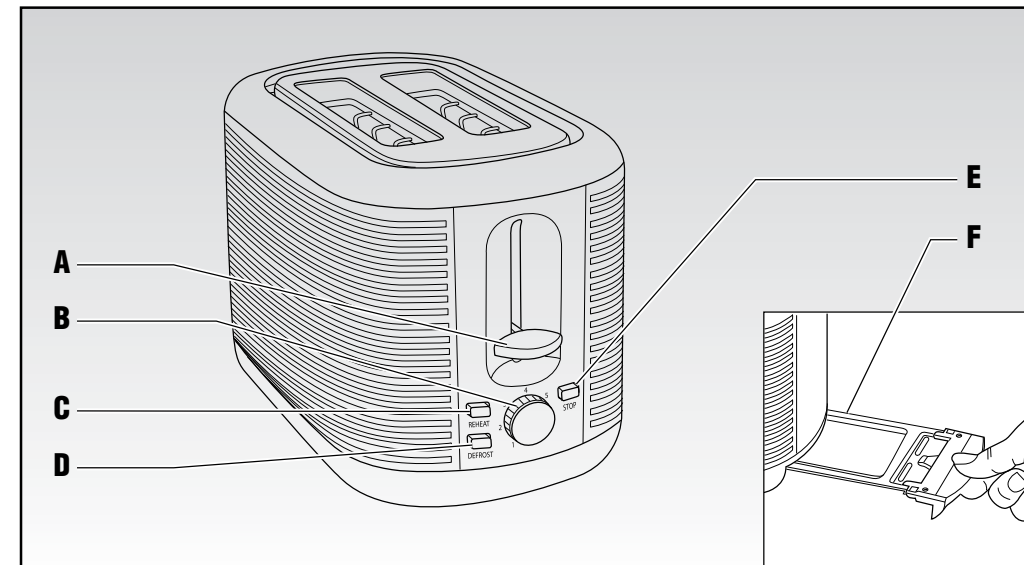 



Fig. 1

烤箱使用说明

使用前请阅读此说明

使用电器时必须采取必要的预防措施,如下:

1. 确保本产品规定的电源电压与供电电源电压相符。
2. 在无人值守的情况下请断开电源;每次使用前请确保电源是断开的。
3. 请勿将电器放置或靠近热源的地方。
4. 请将设备放置于水平表面。
5. 请勿将本产品遭受雨淋,日晒等。
6. 确保电源线不接触到热体表面。
7. 本产品可供8岁(需在监管的情况下)以上的人员使用,但要保证他们知道如何正确的操作并了解其中隐藏的危险,身体感知能力较弱的儿童,或缺乏相关经验和知识的人员,需要由了解此设备的专业人员进行指导。
8. 请勿让8岁以下的孩子接触设备或电源线,请放置于儿童触及不到的地方。
9. 请勿将设备、插头和电源线浸泡在水或其他液体里,只需用潮湿的布擦拭干净即可。
10. 在移动或清洗设备前必须拔掉电源线,切断电源。
11. 在使用或调整设备开关前,或在连接电源时,请确保您的手是完全干燥的。
12. 关闭设备拔下电源插头时,需拿住插头直接拔出,不要从设备上猛拉电源线。
13. 如果发现设备本身有明显的损坏,或电源线、插头损坏,为防止事故发生,所有的维修,包括更换电源线,必须由Ariete授权服务中心的专业人员来处理。
14. 请勿将电源线放置在孩子可能触及处。
15. 请勿使用任何非原厂的或未经制造商批准的零部件。
16. 如果暂时闲置此设备,建议您切断电源。另外,任何部分都有可能是危险的,尤其是对儿童,请勿让儿童玩弄此设备或其部件。

17. 请勿让儿童在产品包装附近玩耍,这也会有潜在的危險。
18. 由于烤面包时会有加热,所以请不要在烤箱附近放易燃物,如窗帘。
19. 请小心使用此设备,不要触摸加热处,容易烫伤。
20. 请勿将盘子或其他物品放置于烤箱中。
21. 每个插槽不要超过两片面包。
22. 请勿将叉子或其他器具放在烤箱中;这可能会损坏内部件。
23. 请勿将双手或任何其他金属材料(例如,刀锡纸)放在烤箱中。
24. 使用设备时要远离易燃液体;请勿将设备放置于窗帘或塑料等不耐热的材料旁。
25. 设备可以用湿布清洁,清洁前请将电源线拔掉,并使其完全冷却。
26. 使用后,请等待设备完全冷却之后再存储。
27. 此设备无法使用外部定时器或遥控器控制。
28. 此设备符合可接触食物的材料(EC)法规NO. 1935/2004的内容。
29.  若丢弃此设备,请根据欧洲2012/19/CE法规,并参考产品附带的手册。

请不要扔掉这些指令

设备描述(图1)

- A 开关杠杆
- B 水平调整旋钮
- C 加热按钮
- D 解冻按钮
- E 停止按钮
- F 碎屑托盘

预防措施

- 请勿使用太薄或折断的面包片。
- 在每次使用之前请将碎屑托盘(F)中残留的食物清理干净。否则这些食物的残留也会引起火灾。
- 请不要在设备中放入超量的食物。
- 请不要将叉子或其他器具放在烤箱里,可能会破坏设备的电阻或损坏。

使用说明

在初次使用本设备前请放置几分钟,散发其中的气味。请保留原包装以便后期使用。也是保护它避免在运输中损坏。在使用本产品之前,请务必仔细阅读“重要保障措施”的内容。

准备工作

注意:如果连续使用烤面包机,请将设备冷却至少一分钟。将面包片放在烤箱中,并按下开关杆(A)。注意:如果设备没有成功连接电源,开关杆不会锁定。调整旋钮(B)。等待几分钟,面包会自动弹出,检查烤出来的面包,如果面包色度不够,请选择高级档。相反,如果色度太深,请选择较低档。

按下按钮(E),可在任何时候停止烘烤。

按下按钮(E)关掉设备,并断开电源。

解冻功能

按下开关杆(A),调整旋钮(B)到一档,然后按解冻按钮(D)来烤冷冻的切片面包。1。如果你想烘烤,而不只是解冻,按钮必须设置到(i.e. 3,4、5、6或者7)档。

加热功能

按下开关杆(A)并按下加热按钮(C)。在使用过程中指示灯保持常亮。请注意,加热时间是固定的,不能改变。

清洁

禁止拆卸设备及零部件。保持设备清洁以延长设备使用寿命。

- 在清洁之前请按下按钮(E)关掉电源并将插头从插座中拔出。
- 等设备冷却后再进行清洗。
- 使用柔和的湿布擦拭。
- 不要将设备浸泡在水或其他液体中。
- 请勿在烤箱或微波炉中烘干设备。
- 请勿使用锋利金属器具清洁设备内部。
- 每次使用后,请拔掉电源并清

空碎屑托盘(F)。可常用湿布清洁设备外部,保持设备干燥。请勿使用有腐蚀性的清洁剂,否则会破坏设备表面。

产品简易图例请对应英文说明书

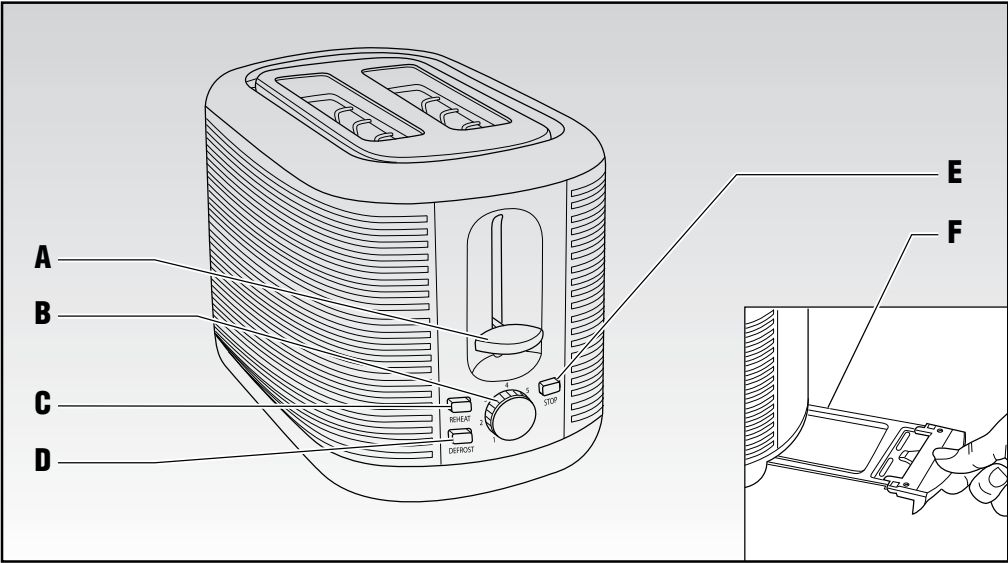 


Fig. 1

199 202 250
NUMERO UNICO

Ariete

De' Longhi Appliances Srl
Divisione Commerciale Ariete
Via San Quirico, 300
50013 Campi Bisenzio FI - Italy
E-Mail: info@ariete.net
Internet: www.ariete.net