

Spend a little Live a lot



Spend a little Live a lot

Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used correctly. In the event of product failure within it's intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.



PRODUCED IN CHINA FOR:

ALDI STORES LTD. PO BOX 26, ATHERSTONE WARWICKSHIRE, CV9 2SH.

ALDI STORES (IRELAND) LTD. PO BOX 726, NAAS, CO. KILDARE. visit us at www.aldi.com









Contents


Content	
Compliance to EU Directives	7
Intended use	
Residual risks	8
Important safeguards	
Instruction for use	
Cleaning and maintenance	13
Technical Data	14
Disnosal of Waste	14

4 GB IRE







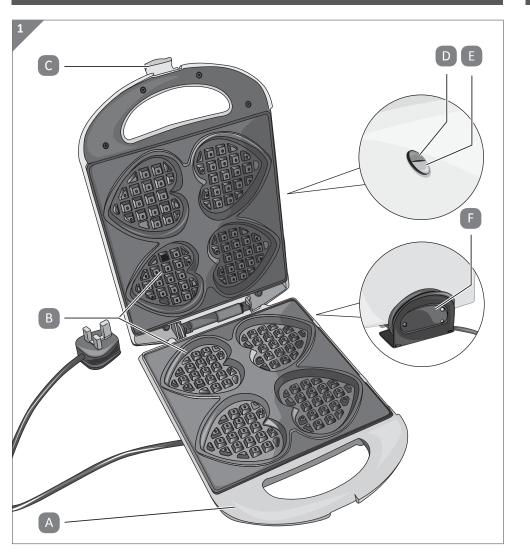



Description of the appliance

- A Handle
- B Non-stick waffle plate
- C Closing lever
- D Ready light
- F Cord storage device



Waffle Maker

With regards to this manual

Carefully read these warnings and use the appliance only for the use it is designed for in order to prevent accidents and damage.

Keep this manual close by for future consultation. If you should decide to give this appliance to other people, remember to also include these instructions.

The information in this manual is marked with the following symbols and words that indicate:



Risk of injury



Risk of electric shock



Warns the user on the possible risk of serious injury



Warns the user on the possible risk of injury or serious property damage



Risk of material damage

Warns the user on the possible risk of minor injury

NOTE

Warns the user on the possible risk of material damage

This manual is available in electronic format on the website www.aldi.co.uk.

COMPLIANCE TO EU DIRECTIVES

This appliance conforms to the directives 2014/35/EU, EMC 2014/30/EU, 2011/65/EU and to the regulations (EC) No. 1935/2004 of 27/10/2004 regarding material in contact with food. To dispose of the product correctly according to European

Directive 2012/19/EU, please refer to and read the provided information enclosed with the product.

INTENDED USE

This appliance is intended exclusively for the baking of waffles. It is not intended for the preparation of other foods.

The appliance has been designed for home use only and must not be used for commercial or industrial purposes.

Any other use of the appliance is not intended by the Manufacturer who does not accept any responsibility for damages of any kind caused by improper use of the appliance itself.

Improper use also results in any form of warranty being forfeited.









RESIDUAL RISKS



RISK OF BURNS. By the nature of the product, hot surfaces are exposed during and after use. The covers on the item cannot prevent all risk of injury.



RISK OF INJURY. After you have turned off the appliance and unplugged it from the socket-outlet, let it rest on a stable surface and above all out of the reach of children. Handle the appliance with care, above all when opening or closing the plates; there is a risk of accidental harm to hands or damage to other objects.

IMPORTANT SAFEGUARDS

READ THESE INSTRUCTIONS BEFORE USE.

ALWAYS KEEP THESE INSTRUCTIONS.

- 1. Using the item outside of its intended function or other misuse may result in injury, for which the manufacturer cannot be held liable.
- 2. We suggest you keep the original box and packaging, as our free-ofcharge service does not cover any damage resulting from inadequate packaging of the product when this is sent back to an Authorised Service Centre.
- 3. This appliance can be used by persons with reduced physical sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 4. Do not affect the safety of the appliance by using parts that are not original or which have not been approved by the manufacturer.



Danger for children

- 5. This appliance can be used by children aged from 8 years if the have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 6. Children shall not play with the appliance.
- 7. Cleaning and user maintenance shall not be made by children without





8



Waffle Maker

supervision.

8. Keep the appliance and its cord out of reach of children less than 8 years of age at all times.

9. Packaging elements must not be left in reach of children as they are potentially hazardous.



Danger of electric shock

- 10. Make sure that the voltage on the appliance rating plate corresponds to that of your local mains electricity supply.
- 11. Always connect the appliance to an earthed socket.
- 12. Never touch the appliance, the plug and the power cable with wet hands.
- 13. Never leave the appliance unattended when connected to the power supply; unplug it after every use.
- 14. Make sure that the power cord does not come into contact with hot or sharp surfaces.
- 15. The supply cable is intentionally short. This is a high power device and the use of extension leads is not recommended. Using an extension lead may introduce additional hazards to the environment for the user and those around them. Poor use of extensions leads can cause fires.
- 16. Remove the plug from the power outlet before cleaning or maintenance.
- 17. Do not immerse the appliance in water or other liquids.
- 18. The appliance must not be used if it has been dropped, if there are visible signs of damage or leaks of water. Do not use the appliance if the power cord or the plug are damaged, or if the appliance is faulty. To prevent any accident, all repairs, including the replacement of the power cord, must be carried out by an Authorised Service Centre or, in any case, by qualified personnel



9

Danger of burns

19. Do not touch the metal parts of the appliance when in operation and for several minutes after it is turned off since it could cause burns. The

AFTER SALES SUPPORT









Safety

temperature of accessible surfaces may be high when the appliance is operating.



CAUTION. Hot surfaces.



Danger of damage originating from other causes

- 20. Never leave the appliance unattended when it is connected to the power supply.
- 21. Turn on the appliance only when it is in working position.
- 22. Before use, the appliance must be transported only with the handle provided.
- 23. Choose an adequately illuminated and clean room with easily accessible power outlet.
- 24. During use, rest the appliance onto a horizontal surface.
- 25. The appliance must be used and left at rest on a stable surface.



Danger of material damage

- 26. Place the appliance on a work surface that bears a temperature of at least 90°C (194°F). Waffle mix and/or oil may leak from the sides during cooking. Do not place the appliance on delicate surfaces.
- 27. Use the appliance well away from flammable liquids. Do not use the appliance up against walls or close to parts in plastic that do not resist heat.
- 28. When the appliance is hot, do not rest it onto the power cord. Take special care in ensuring that the cord do not come into contact with the plates when it is hot.
- 29. Do not pull the power cord to unplug the appliance.
- 30. Do not expose the appliance to atmospheric agents (rain, sun ...).
- 31. External timers or separate remote controls to operate the appliance are not permitted.

AFTER SALES SUPPORT



10



INSTRUCTION FOR USE

NOTE


The appliance may give off a small amount of smoke the first time it is used; this is not a defect and the smoke will cease within a few minutes.

- Plug the appliance into the mains power socket.
- The red light (E) will switch on to show that the appliance is connected to the mains.
- When the appliance has reached the correct temperature (after about 3 minutes) and it is ready to use, the green light (D) will switch on.

NOTE

The light (D) will switch off again if the cooking temperature should fall below this level.

- Open the appliance completely, releasing it by pushing the closing lever (B) upwards.
- Before baking the first waffles of the day, use a pastry brush to lightly coat the top and bottom waffle grids with vegetable oil. A light coating of non-stick cooking spray also works well.
- With a ladle, pour the batter mix (prepared previously) into the bottom hot plate. When pouring in the mix, make sure that all of the compartments are full but not so much so that they could overflow while cooking.
- Put a wooden stick sidewards on each lower waffle plate (Fig. 2).
- Close the top plate over the bottom one, pushing down gently until the closing lever (B) clicks into place, locking the plates together.
- To remove the waffles from the appliance, only use a wooden or plastic spatula.
- If you want them darker, close the lid and continue baking until the desired color is achieved.

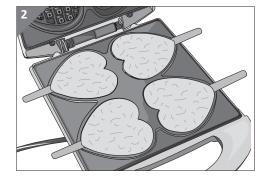









Instructions for use





Do not open for at least 1½ minutes. Opening too soon will cause under-baked waffles to split, making them difficult to remove.

- After use, unplug the power cord from the electric outlet.
- Wait for the hot parts to cool down.
- Use the cord storage (F) to wrap the cord around the appliance base.



RISK OF BURNS. Never touch the hot plates.

 
NOTE

Do not force the lever (B) as it is possible to break it.

Never use sharp objects or metal utensils (e.g., knife) as this could damage the plates. Only cook mixes with the plates closed.









CLEANING AND MAINTENANCE



RISK OF ELECTRIC SHOCK. Never immerse the appliance in water or other liquids.



Always unplug the appliance and allow it to cool before cleaning.

NOTE

RISK OF MATERIAL DAMAGE. Check the state of the power cable before each use, and if it is damaged, take it to the service centre closest to you to have it replaced only by specialised personnel.

Plastic parts cleaning

Clean plastic parts with a damp, non-abrasive cloth and dry them with a dry cloth.

NOTE

RISK OF MATERIAL DAMAGE. Never use solvents which may damage the plastic parts

Cleaning the plate

· Any deposits and other residue material on the non-stick waffle plate, must only be wiped clean with a damp cloth. Always dry the plate with a dry cloth.

RISK OF MATERIAL DAMAGE. Do not use abrasives for cleaning the plate. Try and keep the plate smooth: avoid contact with metal objects.

> AFTER SALES SUPPORT **(GB)** 01924 481053 **(RE)** 014968036 / 014963993











TECHNICAL DATA

Nominal voltage: 220-240V~ Nominal frequency: 50/60Hz Nominal power: 780W

Protection Class: I (This appliance must be earthed.)

DISPOSAL OF WASTE



The product packaging is made of recyclable materials. The packaging material can be taken to public recycling collection points.



Old appliances do not belong in household waste! To comply with current legislation, old appliances, having reached the end of their useful lives, should be taken to a disposal facility where they can be sorted.

In this way, any valuable material contained in the old appliances can be recycled and the environment protected. Responsible local authorities or their waste disposal operators can provide further information.







WARRANTY CARD

Waffle maker

Your personal details:	
Name	
Address	
Email	
Date of purchase* * We recommend you keep the receipt with this warranty card	
Location of purchase	

Description of malfunction:



Return your completed warranty card to:

Jaleno Europe Limited Roe Head House **Far Common Road** Mirfield West Yorkshire WF14 0DQ **England**

Kenilworth Electrical 253 Harolds Cross Road, Dublin, Ireland kenilworthelec@eircom.net













Warranty conditions

Dear Customer,

The ALDI warranty offers you extensive benefits in addition to your statutory rights:

Warranty period: 3 years from date of purchase.

6 months for wear parts and consumables under

normal and proper conditions of use

(e.g. rechargeable batteries).

Costs: Free repair/exchange or refund.

No transport costs.

Hotline: No additional charge for fixed network calls.

ADVICE: Please contact our service hotline by phone, e-mail or fax before sending in

the device. This allows us to provide support in the event of possible operator

errors.

In order to make a claim under the warranty, please send us:

- the original receipt and the warranty card properly completed.
- the product with all components included in the packaging.

The warranty does not cover damage caused by:

- Accident or unanticipated events (e.g. lightning, water, fire).
- Improper use or transport.
- Disregard of the safety and maintenance instructions.
- Other improper treatment or modification.

After the expiry of the warranty period, you still have the possibility to have your product repaired at your own expense. If the repair or the estimate of costs is not free of charge you will be informed accordingly in advance.

This warranty does not affect your statutory rights.



