



Spend a little Live a lot



Spend a little Live a lot

# User Manual

## Contents

Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used correctly. In the event of product failure within it’s intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.



**PRODUCED IN CHINA FOR:**  
ALDI STORES LTD. PO BOX 26, ATHERSTONE  
WARWICKSHIRE, CV9 2SH.

ALDI STORES (IRELAND) LTD.  
PO BOX 726, NAAS, CO. KILDARE.  
visit us at [www.aldi.com](http://www.aldi.com)

## AMBIANO MINI OVEN




With regard to this manual.....	1
Important safeguards.....	1
Using for the first time.....	4
Instructions for use.....	4
Cleaning and maintenance .....	5
Cooking guidelines for common foods .....	6
Technical data.....	7
Disposal of waste.....	7
Warranty card.....	8
Warranty conditions.....	9

### AFTER SALES SUPPORT

**GB** 01924 481053 **GB** customerservice@jaleno.com  
 **IRE** 014968036/014963993 **IRE** kenilworthelec@eircom.net

Model: 988      Product Code: 71345-71346-71347      09/2016



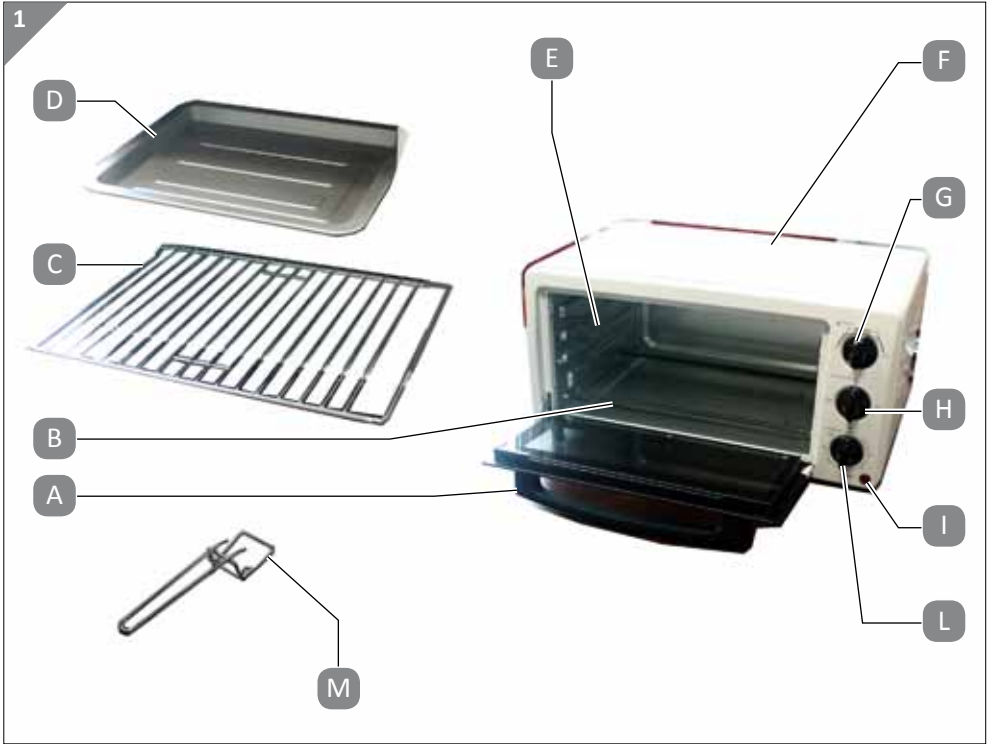

## Description of the appliance

- A Grill Handle
- B Heating elements
- C Grill
- D Drip pan
- E Cooking levels
- F Appliance body
- G Thermostat dial
- H Function select dial
- I Temperature light
- L Power on and timer dial
- M Fork to remove grill and drip pan

## WITH REGARDS TO THIS MANUAL

Even if you are familiar with this type of product please read these warnings carefully and use the appliance only for the use it is designed for in order to prevent accidents and damage. Keep this manual close by for future consultation. If you should decide to give this appliance to other people, remember to also include these instructions. The information provided in this manual is marked with the following symbols indicating:



Danger for children



Danger from electricity



DANGER from other causes



IMPORTANT, possible damage to materials

This manual is available in electronic format on the website.

## IMPORTANT SAFEGUARDS

**READ THESE INSTRUCTIONS BEFORE USE.**

**ALWAYS KEEP THESE INSTRUCTIONS.**

## COMPLIANCE TO EU DIRECTIVES

This appliance conforms to the directives 2014/35/EU, EMC 2014/30/EU, 2011/65/EU and to the regulations (EC) No. 1935/2004 of 27/10/2004 regarding material in contact with foods. To dispose of the product correctly according to European Directive 2012/19/EU, please refer to and read the provided information enclosed with the product.



### **Danger for children**

1. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
2. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children. Children shall not play with the appliance.
3. Never allow the cord to dangle in places where it may be grabbed by a child.
4. When disposing of the appliance as waste, it must be made inoperative by cutting off the power cord. Also remember to make any potentially hazardous parts of the appliance safe including the power cord, as



there is a risk that children may use them as playthings.

5. Packaging elements must not be left in reach of children as they are potentially hazardous.



### **Danger from electricity**

6. Make sure that the voltage on the appliance rating plate corresponds to that of your local mains electricity supply.
7. Never leave the appliance unattended when connected to the power supply; unplug it after every use.
8. Make sure that the power cord does not come into contact with hot or sharp surfaces.
9. It is not recommended to use this appliance in conjunction with an extension cord.



### **Danger from other causes**

10. Always unplug the power cord from the mains supply before fitting or removing attachments or before cleaning the appliance.
11. Always make sure that your hands are thoroughly dry before using or adjusting the controls on the appliance, or before touching the power plug or power connections.
12. Do not transport the appliance while it is operating.
13. During operation, the metal parts and glass become hot: only touch the door handle or user control knobs at this time.
14. Use the appliance well away from flammable liquids; do not rest it against walls, curtains or plastic parts that are not heat resistant.
15. The appliance may only be wiped clean with a damp cloth and only after unplugging it from the mains and leaving it to cool completely.
16. After use, wait for the appliance to cool completely before storing.
17. This appliance may not be operated using external timers or remote controls.




**Important, Possible damage to materials**

18. Place the Oven on a work top or kitchen cabinet capable of withstanding a temperature of at least 90°C and leave some room above it. Under no circumstances should it be slotted in or inserted into a unit.
19. Remove all internal accessories, then wash and dry with care.
20. Do not cover the inside parts of the Oven with aluminium foil as this could seriously damage thermostat operation.
21. Do not place anything on the door when it is open.
22. Do not place dish cloths or plates on the appliance.
23. Only use the appliance for cooking purposes.
24. Do not allow acidic substances (lemon juice, vinegar, etc.) to remain on the appliance. If left for long periods acidic substances, such as lemon juice, tomato sauce, vinegar or similar, may harm the enamel, causing it to lose its shine.
25. Never place the appliance on or close to sources of heat.
26. Always place the appliance on a flat, level and heat resistant surface during use.
27. Never leave the appliance exposed to the elements (rain, sun, etc....).
28. Never immerse the appliance body, plug or power cord in water or other liquids; always wipe clean with a damp cloth only.
29. To unplug the appliance, grip the plug and remove it directly from the power socket. Never pull the power cord to unplug the appliance.
30. Do not use the appliance if the power cord or plug are damaged or if the appliance itself is faulty; all repairs, including the replacement of the power cord, must be carried out exclusively by the After Sales Support centre or by authorised technicians in order to avoid all risks.
31. Do not affect the safety of the appliance by using parts that are not original or which have not been approved by the manufacturer. Risk of electrocution or injury.
32. Any changes to this product that have not been expressly authorised by the manufacturer may lead to the user's warranty being rendered null and void.



## USING FOR THE FIRST TIME

Carry out an "empty" cooking cycle so as to remove any residual smell and smoke from the protective coatings applied to metal parts during the manufacturing process:

- switch on the Oven by turning the "Function Select" dial (H) to the symbol ; set the temperature to the maximum by turning the "Thermostat" dial (G) and the "Power and Timer" dial (L) to 15 minutes;
- leave the appliance to operate with the door open in a well-aired environment.


During this operation, it is usual for smoke to come off metal parts and from side openings. After this operation, ventilate the room.

## INSTRUCTIONS FOR USE

- Prepare the foods for cooking by placing them on the grill (C) or inside the drip pan (D).
- Plug the appliance into the mains power and use the function select dial (H) to select the type of cooking required:

 top cooking (for gratin);

 bottom cooking;

 cooking at full power (top and bottom at the same time).

- Turn the dial of the thermostat (G) and set the required cooking temperature.
- Place the grill (C) with the previously prepared food into the Oven at the required cooking level (E), by using the supplied Grill Handle (M) (Fig. 2). In case of food prepared in the drip pan (D), insert the grill (C) into the Oven first, and then position the drip pan itself on it (D) (Fig. 3).

### **ATTENTION**


The drip pan is smaller than the grill, and needs to be placed on top of the grill to be placed on the grill to provide support. Never put the drip pan in direct contact with the heating elements.

### **CAUTION**

Place foods at a minimum distance of 2 cm from the top heating element.

- Use the dial (L) to set the timer to the required cooking time.

At this stage, the Oven starts cooking and the temperature light (I) switches on; it switches on and off automatically as the set temperature is maintained.

The cooking process will stop and the indicator extinguish if the dial (L) is manually reset to "0" position or if the dial (H) is manually reset to the symbol .

### CAUTION

**Keep an eye on the food while it is cooking.**

- At the end of the cooking time, the Oven stops automatically, sending out an alarm.
- Unplug the appliance, open the door and remove the grill (C) or the drip pan (D) using suitable Oven gloves or the appropriate grill handle (M) supplied.

## CLEANING AND MAINTENANCE

### CAUTION

**It is forbidden to disassemble the appliance or to try in any way to undertake any maintenance work on the appliance other than as described in this manual.**

### ATTENTION

**All removable enamelled parts need to be washed with soapy water or other non-abrasive products.**

- Frequent cleaning prevents the formation of smoke and unpleasant odours during cooking.
- The drip pan (D) and the grill (C) can be washed in warm soapy water or in the top rack of the dishwasher.
- Always wipe the outside clean with a damp sponge.  
Do not use abrasive products that can damage the paintwork.
- Never use products that might corrode aluminium (spray detergents) to clean the inside surfaces and never scrape the sides with sharp or pointed objects. Wipe with a damp sponge at the end of each use, when the Oven has completely cooled.
- When there are grease spots or smoke exhalations, we recommend removing grease with a sponge soaked in hot soapy water.

### WARNING

**Never immerse the appliance body, plug or power cord in water or other liquids.**



**Dry with a soft cloth. Acidic substances such as lemon juice, tomato purée, vinegar or similar can damage the enamel, making it lose shine.**

## COOKING GUIDELINES FOR COMMON FOODS

\*All cooking times are approx. Always read the instructions on the food label.

<i><b>Typ of food</b></i>	<i><b>Temperture</b></i>	<i><b>Site (shelf)</b></i>	<i><b>Time</b></i>
Bread	180°	3	9-13 min.
Cake	180°	2	25-35 min.
Fish	230	2	10-15 min.
Chicken/Duck	220°-230°	2	30-45 min.
Pancake	160°	1	7-10 min.
Beef	230°	2	8-15 min.
Hot Dog	200°	2	6-10 min.
Hamburger	230°	2	10-14 min.



## TECHNICAL DATA

Nominal voltage: 220-240V  
Nominal frequency: ~ 50/60Hz  
Nominal power: 1380W  
Protection Class: I (This appliance must be earthed)

## DISPOSAL OF WASTE



**The product packaging is made of recyclable materials. The packaging material can be taken to public recycling collection points.**



**Old appliances do not belong in household waste!** To comply with current legislation, old appliances, having reached the end of their useful lives, should be taken to a disposal facility where they can be sorted. In this way, any valuable material contained in the old appliances can be recycled and the environment protected. Responsible local authorities or their waste disposal operators can provide further information.





## WARRANTY CARD

## Mini Oven

## Your personal details:

Name \_\_\_\_\_

Address \_\_\_\_\_

\_\_\_\_\_



\_\_\_\_\_ Email \_\_\_\_\_

Date of purchase\* \_\_\_\_\_

\* We recommend you keep the receipt with this warranty card

Location of purchase \_\_\_\_\_

## Description of malfunction:



## Return your completed warranty card to:

Jaleno Europe Limited  
Roe Head House  
Far Common Road  
Mirfield  
West Yorkshire  
WF14 0DQ  
England

Kenilworth Electrical  
253 Harolds Cross Road,  
Dublin, Ireland  
kenilworthelec@eircom.net

## AFTER SALES SUPPORT



GB 01924 481053

IRE 014968036 / 014963993



GB customerservice@jaleno.com

IRE kenilworthelec@eircom.net

MODEL: 988 PRODUCT CODE: 71345-71346-71347, 09/2016

3

YEAR WARRANTY



## Warranty conditions

Dear Customer,

The **ALDI warranty** offers you extensive benefits in addition to your statutory rights:

**Warranty period:**        **3 years from date of purchase.**  
                                 **6 months** for wear parts and consumables under  
                                 normal and proper conditions of use  
                                 (e.g. rechargeable batteries).

**Costs:**                      Free repair/exchange or refund.  
                                 No transport costs.

**Hotline:**                      No additional charge for fixed network calls.

**ADVICE:** Please contact our service hotline by phone, e-mail or fax before sending in the device. This allows us to provide support in the event of possible operator errors.

**In order to make a claim under the warranty, please send us:**

- the original receipt and the warranty card properly completed.
- the product with all components included in the packaging.

**The warranty does not cover** damage caused by:

- **Accident or unanticipated events** (e.g. lightning, water, fire).
- **Improper use or transport.**
- **Disregard of the safety and maintenance instructions.**
- **Other improper treatment or modification.**

After the expiry of the warranty period, you still have the possibility to have your product repaired at your own expense. If the repair or the estimate of costs is not free of charge you will be informed accordingly in advance.

This warranty does not affect your statutory rights.

