



Everyday Amazing

Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used correctly. In the event of product failure within it's intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.



**PRODUCED IN CHINA FOR:**  
ALDI STORES LTD. PO BOX 26, ATHERSTONE  
WARWICKSHIRE, CV9 2SH.

ALDI STORES (IRELAND) LTD.  
PO BOX 726, NAAS, CO. KILDARE.  
visit us at [www.aldi.com](http://www.aldi.com)

**AFTER SALES SUPPORT**

**GB** 01924 481053 **GB** [customerservice@advancedhomewares.co.uk](mailto:customerservice@advancedhomewares.co.uk)  
 **IRE** 01 4968036 **IRE** [kenilworthelec@eircom.net](mailto:kenilworthelec@eircom.net)

Model: 2967 Product Code: 707885 12/2020



Everyday Amazing

# User Manual




## CHOCOLATE FOUNTAIN



### Contents

Content	
Intended use.....	7
Residual risks.....	8
Compliance to EU Directives.....	8
Important safeguards.....	8
Before use .....	11
Instructions for use.....	12
After use .....	12
Cleaning and maintenance .....	13
Troubleshooting .....	14
Technical Data .....	16
Disposal of Waste .....	16

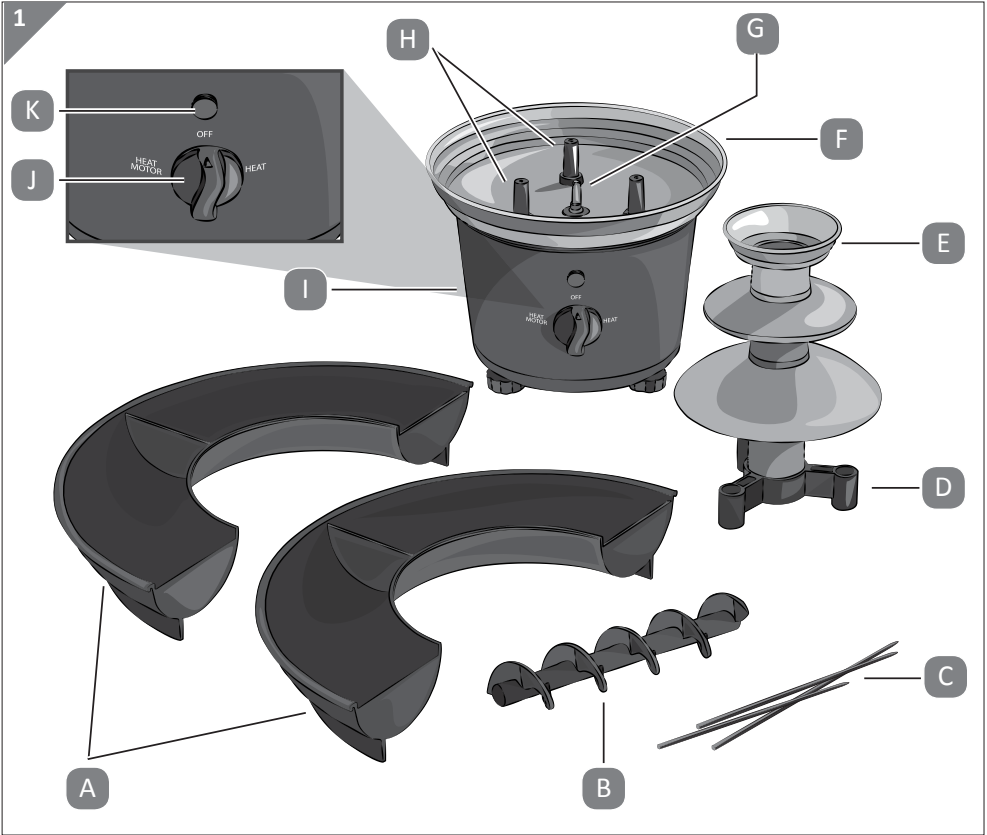

## Description of the appliance

- A Trays
- B Conveyor
- C Bamboo skewers
- D Tower holder
- E Tower
- F Cup
- G Rotating pin
- H Guide pins for the tower
- I Base
- J Power knob
- K Operation light

### With regards to this manual

Carefully read these warnings and use the appliance only for the use it is designed for in order to prevent accidents and damage.

Keep this manual close by for future consultation. If you should decide to give this appliance to other people, remember to also include these instructions.

The information in this manual is marked with the following symbols and words that indicate:



Risk of injury

#### **DANGER**

**Warns the user on the possible risk of serious injury**



Risk of electric shock

#### **WARNING**

**Warns the user on the possible risk of injury or serious property damage**



Risk of burns

#### **CAUTION**

**Warns the user on the possible risk of minor injury**



Risk of material damage

#### **NOTE**

**Warns the user on the possible risk of material damage**

### INTENDED USE

The appliance must be used to let melted chocolate and similar liquids flow on the tower's surfaces, creating a fountain-like effect. During operation it is possible to dip various foods in the liquid (eg fruit, cookies, etc).

The appliance has been designed for home use only and must not be used for commercial or industrial purposes.

Any other use of the appliance is not intended by the Manufacturer who does not accept any responsibility for damages of any kind caused by improper use of the appliance itself.

Improper use also results in any form of warranty being forfeited.

## RESIDUAL RISKS



**RISK OF BURNS.** The constructive characteristics of the appliance, covered by this publication, do not allow to protect the user from possible contact with the hot surfaces of the appliance both during the intended use and in the minutes following its switching off.

## COMPLIANCE TO EU DIRECTIVES

This appliance conforms to the directives 2014/35/EU, EMC 2014/30/EU, 2011/65/EU and 2015/863/EU. To dispose of the product correctly according to European Directive 2012/19/EU, please refer to and read the provided information enclosed with the product.

## IMPORTANT SAFEGUARDS

**READ THESE INSTRUCTIONS BEFORE USE.**

**ALWAYS KEEP THESE INSTRUCTIONS.**

1. We decline any responsibility resulting from misuse or any use other than those covered in this booklet.
2. We suggest you keep the original box and packaging, as our free-of-charge service does not cover any damage resulting from inadequate packaging of the product when this is sent back to an Authorised Service Centre.
3. The appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments
  - farm houses
  - by clients in hotels, motels and other residential type environments
  - bed and breakfast type environments.
4. This appliance can be used by persons who have reduced physical sensory or mental capabilities, or lack of experience and knowledge, only if they are monitored by a responsible person or if they have received and understood instructions regarding the appliance safe use and if they have understood the dangers which may arise during the

appliance use.



### **Danger for children**

5. This appliance can be used by children aged 8 years and up if properly monitored or if you have received instructions regarding the appliance safe use and if they understand the dangers involved.
6. Do not leave the packaging near children because it is potentially dangerous.
7. Children shall not play with the appliance or its components.
8. Cleaning and maintenance by the user must not be carried out by children unless they are older than 8 years and are monitored during the operation.
9. Always keep the appliance and the power cord out of the reach of children under the age of 8 years.
10. Packaging elements must not be left in the reach of children as they are potentially hazardous.



### **Danger of electric shock**

11. Make sure that the voltage on the appliance rating plate corresponds to that of your local mains electricity supply.
12. Always connect the appliance to an earthed socket.
13. Never touch the appliance, the plug and the power cable if your hands are wet or if you are barefoot.
14. Never leave the appliance unattended when connected to the power supply; unplug it after every use.
15. Make sure that the power cord does not come into contact with hot or sharp surfaces.
16. It is not recommended to use this appliance in conjunction with an extension cord.
17. Remove the plug from the power outlet before cleaning or maintenance.
18. Do not immerse the appliance in water or other liquids.

**Danger of burns**

19. Do not touch the appliance when in operation and for several minutes after it is turned off since it could cause burns.
20. All cleaning operations must be performed when the hot parts have cooled.

**Danger of damage originating from other causes**

21. Never leave the appliance unattended when it is connected to the power supply.
22. Turn on the appliance only when it is in working position.
23. Choose an adequately illuminated and clean room with easily accessible power outlet.
24. During use, rest the appliance onto a horizontal surface.
25. The appliance must be used and left at rest on a stable surface.
26. The appliance is not to be used if it has been dropped, if there are visible sign of damage. Do not use the appliance if the power cord or the plug are damaged, or if the appliance is faulty. To prevent any accident, all repairs, including the replacement of the power cord, must be carried out by an Authorised Service Centre or by suitably qualified personnel.

**Danger of material damage**

27. Place the appliance on a work surface that bears a temperature of at least 90°C (194°F). Do not place the appliance on delicate surfaces.
28. When the appliance is hot, do not rest it onto the power cord. Take special care in ensuring that the cable and the cord do not come into contact with hot surfaces.
29. Do not pull the power cord to unplug the appliance.
30. Do not expose the appliance to atmospheric agents (rain, sun ...).
31. Do not use the appliance outdoors.

32. The appliance must not be power supplied by external timers or separate remote-controlled systems.
33. Don't pour in the cup different food from the the ones indicated in the "Instructions for use".

## BEFORE USE



**Risk of material damage. Do not place the appliance or power cord close to or on top of hot electric or gas cookers, or close to a microwave oven.**

**Prevent the cord from protruding beyond the edge of the table or surface. Prevent children from grabbing the cord, in this way tipping over the appliance.**

**Do not place the appliance near surfaces, materials or containers of flammable substances.**

## Assembling

- Wash and dry the appliance. Follow the instructions given in the "Cleaning and Maintenance" section.
- Mount the conveyor (B) on the rotating pin (F).
- Insert the tower holder (C) in the lower part of the tower (D).
- Position the tower over the conveyor until the tower holder (C) is inserted into the guide pins (G).
- Mount the trays (A) on the sides of the base (H).

## Pre-heating

Before using the appliance, it is necessary to do the preheating:

- Insert the plug into the socket, which must be earthed.
- Rotate the power knob (I) to position "I" to start heating up the appliance. The operation light (J) turns on.
- After 15-20 minutes the appliance is properly pre-heated.

## INSTRUCTIONS FOR USE

### DANGER

**Risk of burns. Danger of contact with hot surfaces. The appliance and its accessories become hot during use. Do not touch the appliance when in operation and for several minutes after it is turned off since it could cause burns.**

### NOTE

**Use already melted chocolate (or similar liquids). The appliance must not be used to melt solid chocolate. Don't pour in the cup different food from the ones indicated in the "Instructions for use".**

**Never touch the conveyor when it is moving.**

- Pour the melted chocolate into the cup (E). If the chocolate is too dense, add a tablespoon of vegetable oil. The cup can contain about 350 grams of melted chocolate.
- Rotate the power knob to position "II". The conveyor (D) starts rotating. The chocolate is conveyed to the top and flows down along the tower.
- Stir chocolate every 2-3 minutes using a spatula, in order not to let it stick to the cup.
- You can dip fruit, cookies and other foods in the melted chocolate, using a wooden skewer or a similar object. Use a spoon to remove potential remains of solid foods, that can hinder the functioning of the conveyor.

## AFTER USE

- Rotate the power knob (I) to position "0". The operation light (J) turns off.
- Unplug the appliance.
- Let the appliance cool down completely.
- Remove the remaining chocolate. If you want to reuse the remaining chocolate, put it in a container when it is still liquid.
- Wash the appliance after use. Follow the instructions given in the "Cleaning and maintenance" section.



## CLEANING AND MAINTENANCE

Regular maintenance and cleaning preserve and maintain the appliance efficient for a longer period.

### DANGER

**Risk of electric shock. All cleaning operations described below must be made with power off and the electrical plug disconnect from the power outlet.**

### CAUTION

**Risk of burns. Each cleaning and maintenance operation should be performed when the unit is completely cooled.**

## Cleaning the base

### DANGER

**Risk of electric shock. Don't immerse the base in water.**

**Never wash the base of the appliance in the dishwasher. Do not use direct jets of water.**

### CAUTION

**Risk of material damage. Don't use aggressive products or solvents that may damage the plastic.**

Clean plastic parts using a slightly wet, non-abrasive cloth and few drops of a non-aggressive product.

## Cleaning the accessories

- Disassemble and wash individually the tower, the conveyor, the trays and the tower holder.
- Wash the accessories using warm water, a damp cloth and non-aggressive products.
- Alternatively, the accessories can be cleaned in the dishwasher.
- Dry with a dry cloth.

## SETTING THE MACHINE OUT OF SERVICE

- Unplug it from the electric outlet.
- Cut the power cord.

In the case of decommissioning of the appliance, it must be electrically disconnected. To dispose of the appliance as a waste, cut the power cord.

In case of scrapping you will be required to separate the various materials used in the construction of the appliance and dispose of them according to their composition and to the applicable laws in the country of use.

## TROUBLESHOOTING

Issue	Cause	Solution
The appliance does not work.	The appliance is not plugged in.	Check the appliance is properly plugged in.
		Check the power knob position.
The fountain does not take shape.	The poured chocolate quantity is not enough.	You need 350 g of chocolate to form a fountain. Add the amount of chocolate missing.
	Chocolate is too liquid.	Add melted chocolate or starch to thicken the mixture, in order to get the proper chocolate consistency.
Chocolate remains lumpy.	The chocolate is overheated or burned.	<p>Add and mix a small quantity of vegetable oil or cocoa butter in chocolate until you get the desired consistency.</p> <p>To avoid burning milk, mix chocolate every 2-3 minutes with a spatula, removing the chocolate stuck to the bottom of the cup.</p> <p>Remember that white chocolate and milk chocolate always tend to overheat.</p>
	The chocolate came into contact with water (or with substances diluted with water).	<p>The chocolate must not come into contact with water (or substances diluted with water).</p> <p>If you want to use additives (e.g. flavourings or colourants), use fat-soluble additives.</p>
The chocolate does not flow but drips.	Chocolate is too thick.	<p>Gradually add vegetable oil to dilute, then wait a few minutes until the mixture is well blended.</p> <p>For the fondue use chocolate with a cocoa content exceeding 60%.</p>
	The appliance is not placed on a horizontal surface.	Place the appliance on a horizontal surface.

Issue	Cause	Solution
The chocolate flow is irregular.	The appliance is not placed on a horizontal surface.	Place the appliance on a horizontal surface.
	Air or air bubbles have formed into the tower.	<p>Turn off the device for about 1 minute so as to eliminate air from the tower (from the tower).</p> <p>Turn the device back on. Repeat this operation as necessary until the air is completely eliminated and the chocolate flow becomes regular.</p> <p>If the chocolate level in the base cup is too low, air can form in the tower. Be careful to use a sufficient quantity of chocolate. The required quantity is 350 g.</p> <p>Add the quantity of chocolate missing.</p>
The chocolate flow is jerky, intermittent or irregular.	Air or air bubbles have formed into the tower.	See the previous issue line "The chocolate flow is irregular."
	Chocolate is not totally melted.	Melt the chocolate completely.
	Chocolate or food pieces obstruct the conveyor.	Turn off the appliance and unplug it from the mains socket. Remove food or chocolate pieces.
	Chocolate or food pieces mixed with the flow of chocolate fondue. These pieces can form voids in the chocolate fountain flow along the tower.	Turn off the appliance and unplug it from the mains socket. Remove the food pieces (e.g. with a spatula or a sieve).

## TECHNICAL DATA

Nominal voltage: 220-240V~  
Nominal frequency: 50-60Hz  
Nominal power: 70-90W

## DISPOSAL OF WASTE



The product packaging is made of recyclable materials. The packaging material can be taken to public recycling collection points.



Old appliances do not belong in household waste! To comply with current legislation, old appliances, having reached the end of their useful lives, should be taken to a disposal facility where they can be sorted.

In this way, any valuable material contained in the old appliances can be recycled and the environment protected. Responsible local authorities or their waste disposal operators can provide further information.



## WARRANTY CARD

### Chocolate Fountain

**Your personal details:**

Name \_\_\_\_\_

Address \_\_\_\_\_

\_\_\_\_\_



\_\_\_\_\_ Email \_\_\_\_\_

Date of purchase\* \_\_\_\_\_

\* We recommend you keep the receipt with this warranty card

Location of purchase \_\_\_\_\_

**Description of malfunction:****Return your completed warranty card to:**

Jaleno Europe Limited  
Roe Head House  
Far Common Road  
Mirfield  
West Yorkshire  
WF14 0DQ  
England

Kenilworth Electrical  
253 Harolds Cross Road,  
Dublin, Ireland  
kenilworthelec@eircom.net

**AFTER SALES SUPPORT**GB 01924 481053  
IRE 01 4968036GB customerservice@advancedhomewares.co.uk  
IRE kenilworthelec@eircom.net

MODEL: 2967 PRODUCT CODE: 707884, 12/2020

**3**

YEAR WARRANTY

## Warranty conditions

Dear Customer,

The **ALDI warranty** offers you extensive benefits in addition to your statutory rights:

**Warranty period:**        **3 years from date of purchase.**  
                                 **6 months** for wear parts and consumables under  
                                 normal and proper conditions of use  
                                 (e.g. rechargeable batteries).

**Costs:**                      Free repair/exchange or refund.  
                                 No transport costs.

**Hotline:**                      No additional charge for fixed network calls.

**ADVICE:** Please contact our service hotline by phone, e-mail or fax before sending in the device. This allows us to provide support in the event of possible operator errors.

**In order to make a claim under the warranty, please send us:**

- the original receipt and the warranty card properly completed.
- the product with all components included in the packaging.

**The warranty does not cover** damage caused by:

- **Accident or unanticipated events** (e.g. lightning, water, fire).
- **Improper use or transport.**
- **Disregard of the safety and maintenance instructions.**
- **Other improper treatment or modification.**

After the expiry of the warranty period, you still have the possibility to have your product repaired at your own expense. If the repair or the estimate of costs is not free of charge you will be informed accordingly in advance.

This warranty does not affect your statutory rights.