 
 


KENWOOD

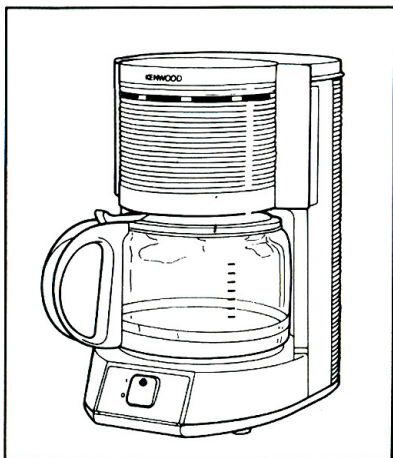

CM50

Know your Kenwood Coffee Maker

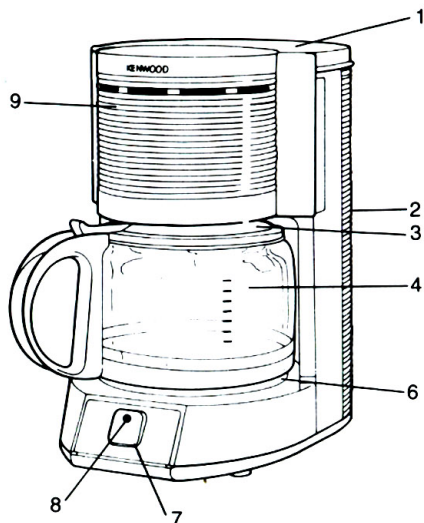

Key

- | | |
|------------------------|-------------------------|
| 1. Water Reservoir Lid | 6. Keep Warm Plate |
| 2. Water Reservoir | 7. On/Off Switch |
| 3. Anti-drip Valve | 8. Power "On" Light |
| 4. Carafe | 9. Swivel Filter Holder |
| 5. Cord Stowage | |

Important

Do not remove the carafe whilst the appliance is switched on with water in the reservoir.

Never reheat coffee by passing it through the coffee maker.

Except for cleaning do not pour any liquids except cold water into the reservoir.

Care of your Carafe

The carafe is designed for use with this appliance. It must never be used on a gas or electric cooker, or over an open flame.

Do not place a hot carafe on a cold or wet surface.

Never put the empty carafe onto the hotplate when the appliance is switched on or the keep warm plate is still hot. This may cause the carafe to break.

 
Do not use a cracked carafe or one with a loose or weakened handle. Do not try to tighten the band as excessive pressure could lead to breakage.

Do not allow the carafe to boil dry.

Before Using your Coffee Maker

Remove the filter holder, (see Fig. 2), permanent filter, carafe and lid, and wash in hot soapy water, rinse and dry thoroughly. Assemble onto your coffee maker (see below).

Fill the water reservoir to the maximum level with cold water (4 cups). Plug in the appliance and switch on. Allow the water to flow through the appliance and then discard. Repeat once more. This procedure should also be followed if the coffee maker has not been used for a long time.

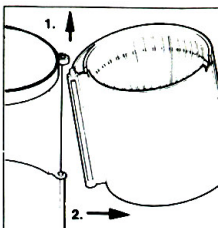



Making Coffee

Ensure that the On/Off switch is in the Off position. Fill the water reservoir with cold water to the desired cup capacity using the markings inside. Maximum is 4 cups. If the glass carafe is used to fill the water reservoir, remember that the markings on the carafe do not coincide with those in the water reservoir due to the coffee absorbing some of the water. (Always use cold water to make coffee, never use warm water or carbonated water or other liquids which could cause damage to the appliance).

Place the permanent filter in the filter holder ensuring it is properly seated. Add ground coffee according to individual taste. Swing the filter holder back into place. Plug in the appliance and switch on. Hot water will be dispersed gently and evenly through the coffee grounds. Once all the water has been pumped out of the reservoir, the heater will switch off automatically but continue to keep the coffee warm providing the appliance remains switched on.

After the brewing cycle has finished the glass carafe can be removed from the appliance without having to remove the filter holder. After pouring the coffee, return the remaining coffee in the carafe to the keep warm plate.

  If the keep warm plate is no longer needed, switch off the appliance by means of the On/Off switch and remove the plug from the power supply.

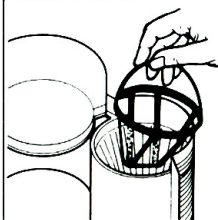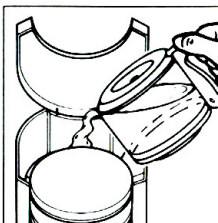

IMPORTANT SAFEGUARDS

When using electrical appliances basic safety precautions should always be followed, including the following:-

1. Read all instructions
2. Do not touch the hotplate and hot surfaces of the carafe.
3. Do not immerse appliance, cord or plug in water or other liquids.
4. Do not use if there is any visible damage to the appliance or to the supply cord.
5. Unplug the appliance from the mains supply before cleaning or immediately after use.
6. Close supervision is necessary when any appliance is used by or near children.
7. Do not let the cord hang over the edge of table or worktop or touch hot surfaces.
8. Do not use your appliance for other than its intended use.
9. Do not use outdoors.

SAVE THESE INSTRUCTIONS

DO NOT IMMERSE THIS APPLIANCE IN WATER


Connecting to Power

Before switching on make sure that the voltage of your electricity supply is the same as that indicated on the rating plate.

IMPORTANT! (UK ONLY) The wires in the mains lead are coloured in accordance with the following code:-

GREEN AND YELLOW	EARTH
BLUE	NEUTRAL
BROWN	LIVE

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal which is marked with the letter 'E' or by the 'Earth' symbol  or coloured green or green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter 'N' or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter 'L' or coloured red.

The appliance must be protected by a 13A ASTA approved (BS1362) fuse if a 13A (BS1363) plug or a non-rewireable plug is used or if any other type of plug is used by a 15A fuse either in the plug or adaptor or at the distribution board.

WARNING - THIS APPLIANCE MUST BE EARTHED

If your appliance has been fitted with a mains lead terminated in a factory fitted plug you must comply with the following regulations:-

1. The plug fitted to the lead contains a fuse. For replacement use only a 13A ASTA approved (BS1362) fuse.
2. For non-rewireable plugs the fuse cover **MUST** be refitted when replacing the fuse. If the fuse cover is lost then the plug must not be used until a replacement can be obtained. The correct fuse cover for the plug is identified by colour and replacements may be obtained from your Kenwood Authorised Repairer (see detail under SERVICE).
3. If the socket outlets in your home are not suitable for the plug fitted then the plug should be removed. Non-rewireable plugs must be cut off and **IMMEDIATELY DESTROYED**. An electric shock hazard may arise if an unwanted non-rewireable plug is inadvertently inserted into a 13A socket outlet.
4. Fit a suitable plug to the appliance taking note of the information contained in the plug wiring instructions above.

This appliance complies with European Economic Community Radio Interference Directive 82/499/EEC.

Cleaning

Always remove the plug from the power supply before cleaning.

Never clean the coffee maker under running water and never immerse the appliance in water.

To clean, remove cover, water spout, permanent filter, filter holder, carafe and lid and wash in hot soapy water. Rinse thoroughly and dry.

Wipe over the outside of the appliance with a damp cloth and finish with a dry one.

Do not use abrasive cleaners.

Decalcifying

If you use a hard water supply, decalcify the appliance occasionally with a propriety cleaning agent. The frequency required depends on the hardness of your water and how often the appliance is used. An indication of 'furring up' is when the coffee takes much longer to brew.

CAUTION: Use the decalcifier according to the manufacturers instructions, these solutions are generally caustic.

Switch the coffee maker on and allow the agent to flow through into the carafe (without filter fitted) avoid letting the solution drip onto hotplate.

Empty the used solution and rinse the carafe well. Let the maximum amount of clean water flow through several times to avoid affecting the taste and aroma of your coffee.

Service

If the supply cord of this appliance is damaged, it must only be replaced by an authorised Kenwood repairer because special purpose tools are required.

UK only

For any repairs in or out of guarantee, servicing or selected spare parts, please contact your Kenwood Authorised Repairer in **YELLOW PAGES** under the heading of **ELECTRICAL APPLIANCE REPAIRERS** or telephone 0705 476000 extension 2800 Service Department.

Eire

Contact local repairer from advertisement in **Golden Pages**.

All Other Markets

Contact the dealer from whom you purchased your appliance.

KENWOOD LIMITED

New Lane • Havant • Hants PO9 2NH

85556/1