
KENWOOD

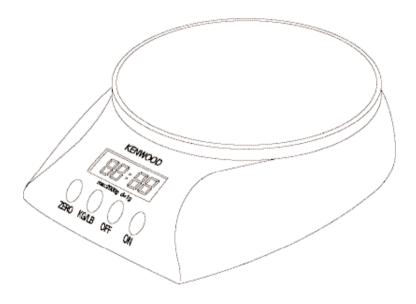

DS900 series

battery installation

1 Fit 1 x 9V battery. Unclip the battery cover on the underside of the scale by pushing the clip towards the front of the scale and then lifting off. Fit the battery matching the + and - in the position as indicated on the scale. Clip the battery cover back into place.

Note - During use, if the battery symbol appears in the display, it means that battery power is low and the batteries should be replaced. If the power is too low to use, the display will show 'Lo' and then turn off automatically.

to weigh

Always place the scale on a dry and flat surface prior to weighing. Turn on the scale by pressing the 'ON' button. The unit will say 'Hello' and once the platform is stable it will say 'I'm ready' and display either 0g or Ooz. Place the item to be weighed onto the platform and the weight will be displayed and read out once the reading is stable. There is a stability indicator 'H' in the top left corner of the display. Whenever the weight is stable the 'H' will be displayed before the voice reading.

Turn the scale off by pressing the 'OFF' button and the unit will say 'Goodbye'.

- The scale will give a warning 'Beep, beep' and show 'Err' if it is trying to weigh above its capacity.
- The voice reading function only responds to a change which is more than 5g.

to select ounces or grams

Switch on the scale and wait for it to say 'I'm ready' and display '0g' or '0oz'. Press the KG/LB button on the front of the unit to select either ounces or grams.

to add and weigh

After the weight is displayed, press the ZERO button and the display will return to '0'. Add the next ingredient and that weight will be displayed and read out. This can be repeated until all the ingredients are weighed.

Note:-

- The maximum weighing capacity is 2 Kg/4 lb 6 oz.
 This is the total weight of all ingredients plus the weight of the container
- The scale will give a 'Beep, beep, beep' and a '-' will appear on the display to represent a minus reading when using the add and weigh facility.

auto switch off:

The scale will turn off automatically if the scale shows the same weight reading after approximately 3 minutes.

talking function

Move the switch on the underside of the scale to switch the talking function on or off.

cleaning

Do not immerse the scale in water. Wipe over the scale with a damp cloth, then dry

Wipe over the scale with a damp cloth, then dry thoroughly. Do not use abrasive or chemical agents to clean.

important

- The scale is for domestic use only.
- Do not overload the scale by exceeding the maximum weighing capacity of 2Kg/ 4 lb 6 oz as this may damage the weighing sensor.
- Do not place hot food or hot containers such as saucepans onto the weighing platform.
- Do not subject the scale to excessive force.
- Do not stand the scale near an oven or other direct source of heat.
- Do not allow the scale to come into contact with strongly flavoured/coloured food or acids such as the zest from citrus fruits which could damage the plastic surface of the scale.

service

UK

 If you need help with using your scale please contact Customer Care on 023 9239 2333. Please have your model number ready.

other countries

Contact the shop where you bought the scales

