
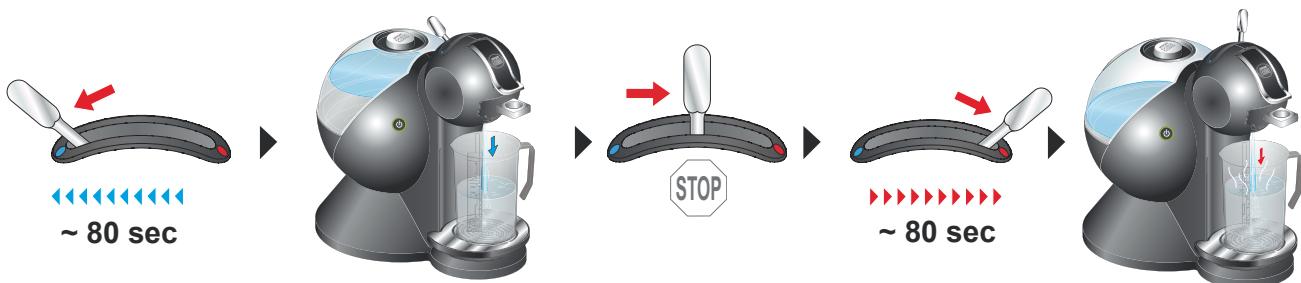
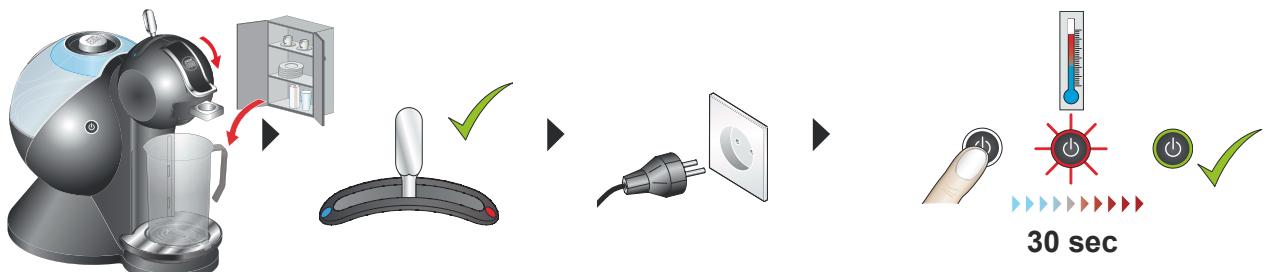



**NO** Første gangs bruk  
**SV** Första användning  
**FI** Käyttö ensimmäistä kertaa


**DA** Første anvendelse  
**ES** Primera puesta en funcionamiento  
**IT** Prima messa in funzione

**FR** Première mise en service  
**DE** Erste Inbetriebnahme  
**EN** First use

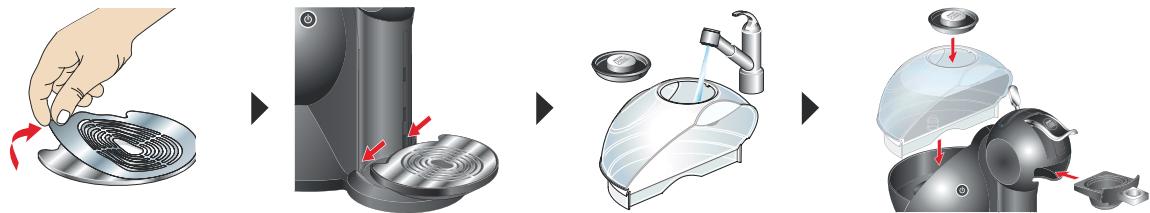

NESCAFÉ  
Dolce Gusto

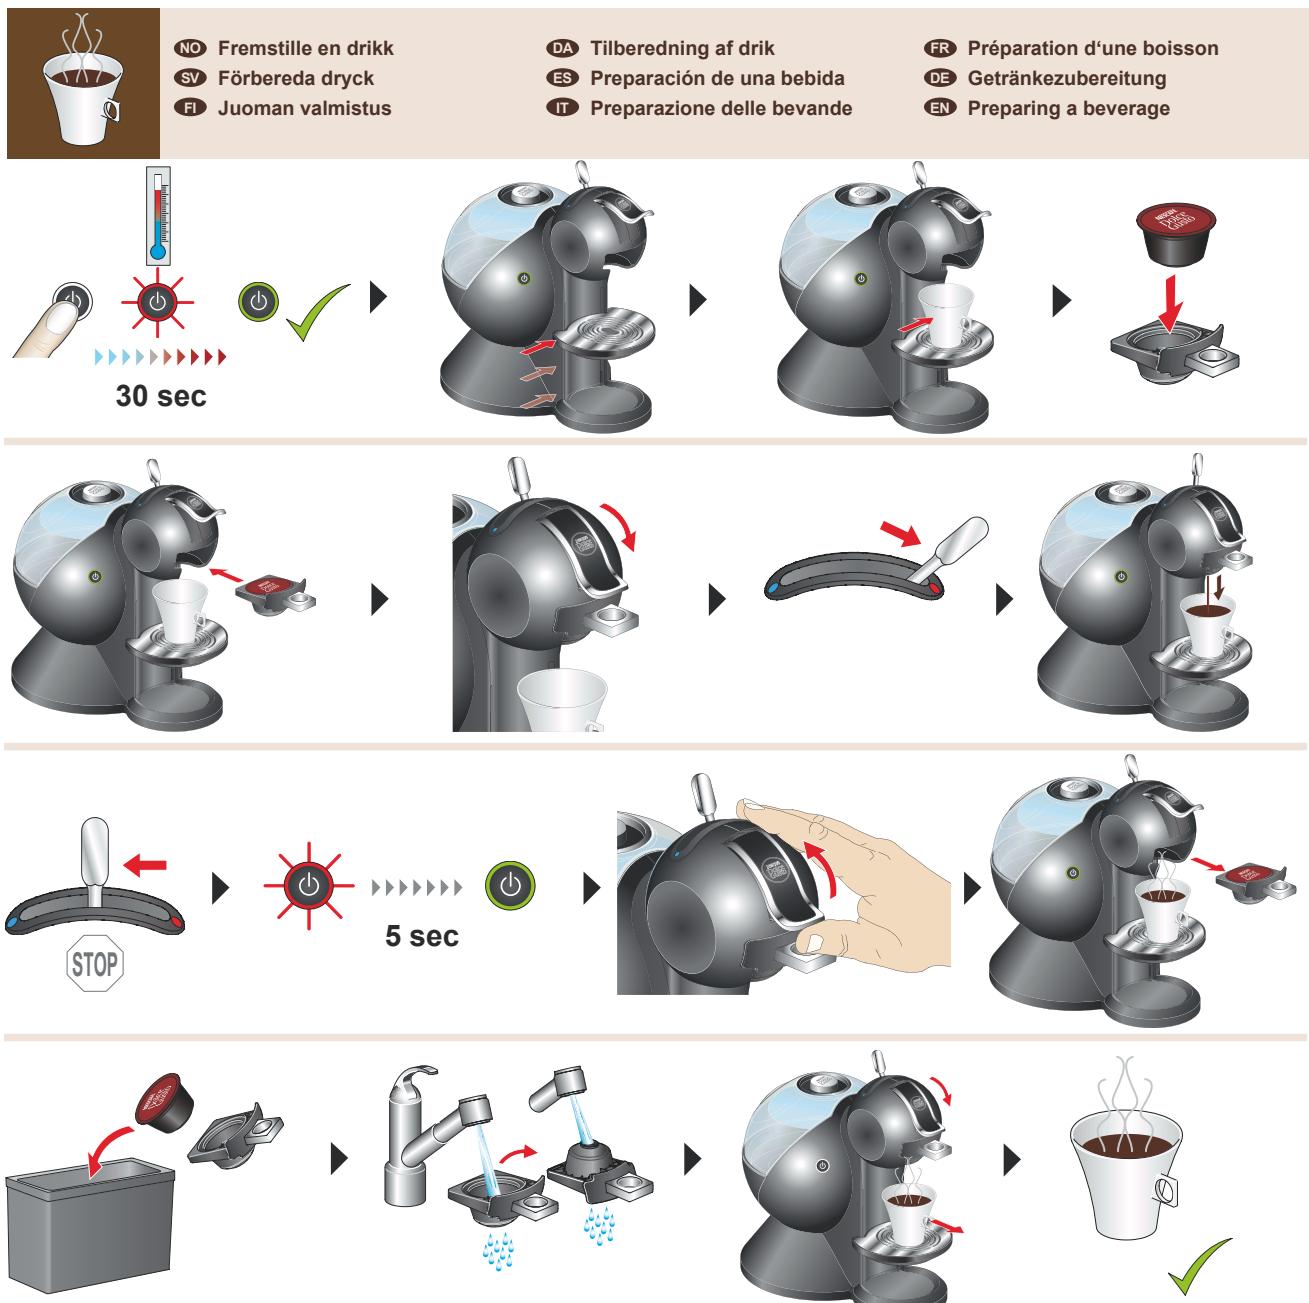

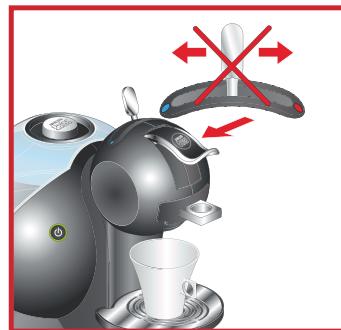




NO Strømpsaremodus  
SV Energisparläge  
FI Ekonominen tila

DA Økonomi-mode  
ES Modo Económico  
IT Modalità Eco


FR Mode Eco  
DE Stromsparmodus  
EN Economy mode



- NO Standard innstilling - sparemodus aktivert  
SV Standardinställning - sparläge aktiverat  
FI Vakioasetus - taloudellisuustila aktivoitu  
DA Standardindstilling - økonomi-mode aktiveret  
ES Ajuste estándezar - modo económico activado  
IT Modalità Eco attivata  
FR Réglage standard - mode économique activé  
DE Standardeinstellung - Stromsparmodus aktiv  
EN Standard setting - economy mode activated

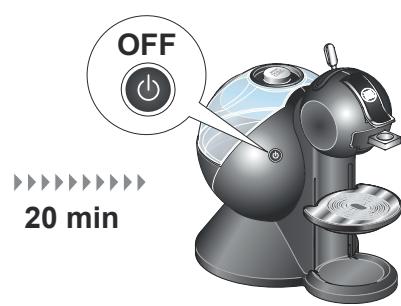

- NO Deaktiver sparemodus  
SV Inaktivera sparläge  
FI Estä taloudellisuustila  
DA Deaktiver økonomi-mode  
ES Desactivar modo económico  
IT Disattivare modalità Eco  
FR Désactiver le mode économique  
DE Stromsparmodus deaktivieren  
EN Deactivate economy mode

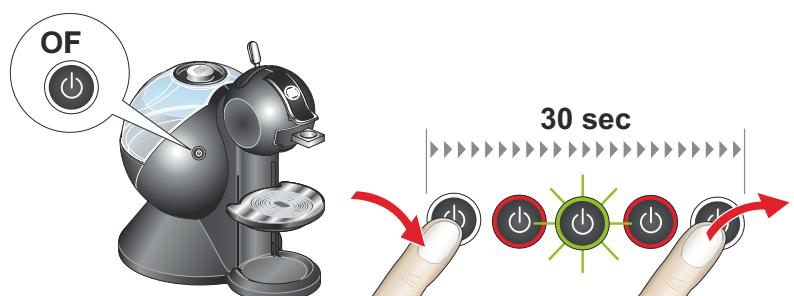

- NO Aktiver sparemodus på nytt  
SV Aktivera sparläge  
FI Aktivoi taloudellisuustila uudestaan  
DA Aktiver økonomi-mode  
ES Reactivar modo económico  
IT Riattivare modo modalità Eco  
FR Réactiver le mode économique  
DE Stromsparmodus wieder aktivieren  
EN Reactivate economy mode





**NO** Rengjøring  
**SV** Rengöring  
**FI** Puhdistus

**DA** Rengøring  
**ES** Limpieza  
**IT** Pulizia

**FR** Nettoyage  
**DE** Reinigung  
**EN** Cleaning

