

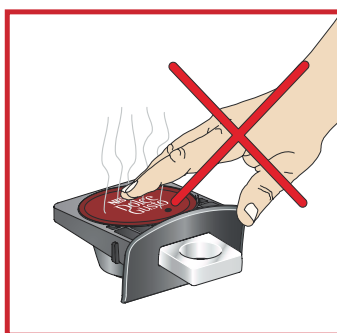
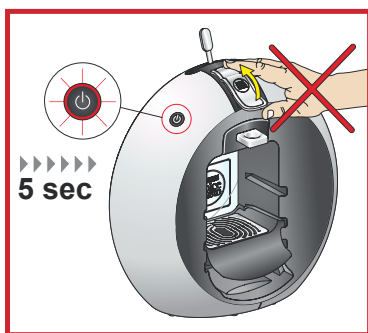
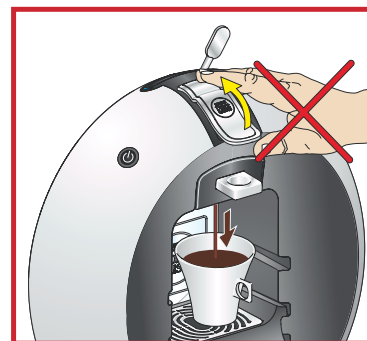


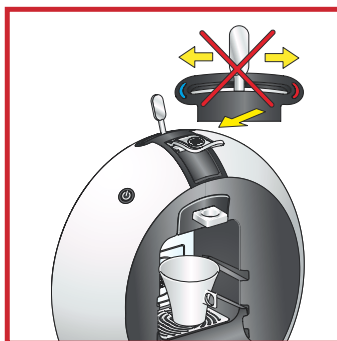

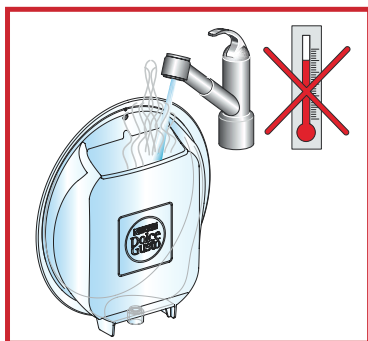

NO Strømsparemodus
SV Energisparläge
FI Ekonominen tila

DA Økonomi-mode
ES Modo Económico
IT Modalità Eco

FR Mode Eco
DE Stromsparmodus
EN Economy mode



ON



OFF






20 min



NO Rengjøring
SV Rengöring
FI Puhdistus

DA Rengøring
ES Limpieza
IT Pulizia

FR Nettoyage
DE Reinigung
EN Cleaning

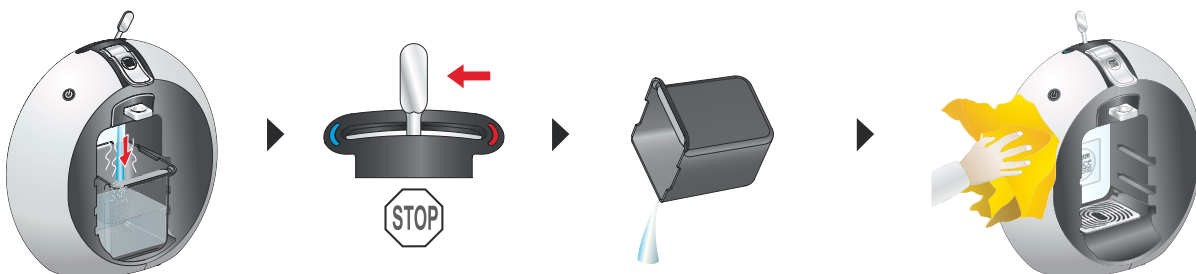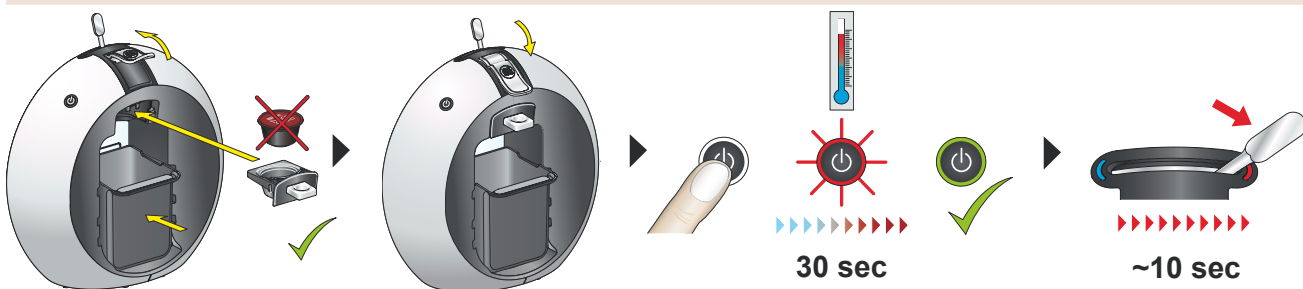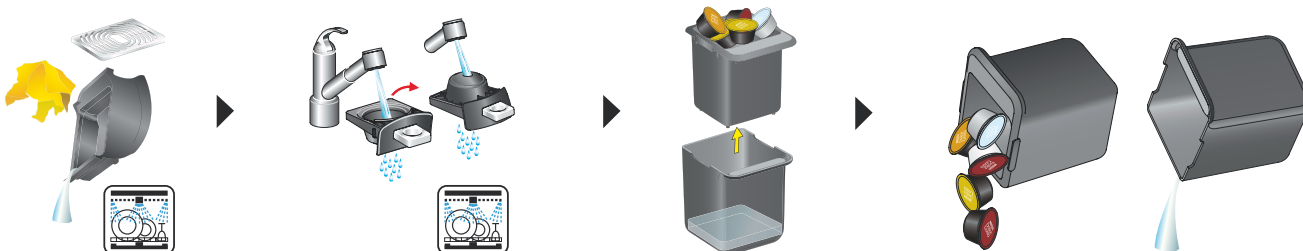








De'Longhi
Entkalker/Descaler



NO Avkalking hver 3.-4. måned
SV Avkalking var 3-4 månad
FI Kalkinpoisto 3-4 kuukauden
välein

DA Afkalkning hver 3.-4. måned
ES Descalcificación cada 3-4 meses
IT Decalcificazione ogni 3-4 mesi





FR Détartrage tous les 3-4 mois
DE Entkalkung alle 3-4 Monate
EN Descaling every 3-4 months

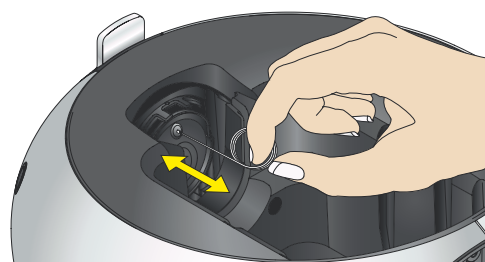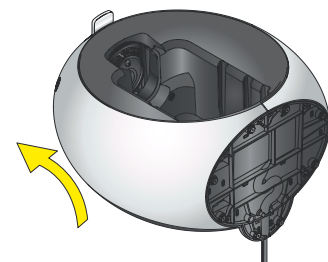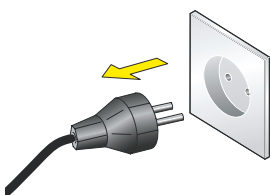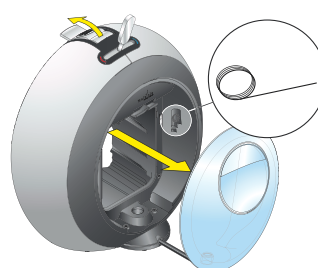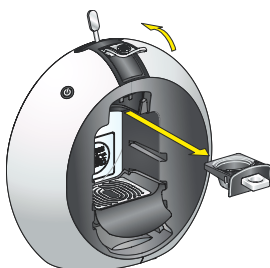

OFF

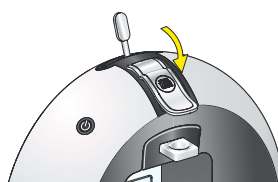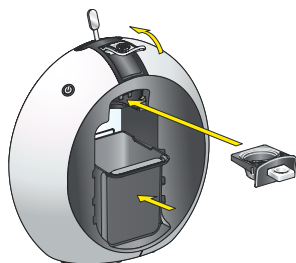

5 sec

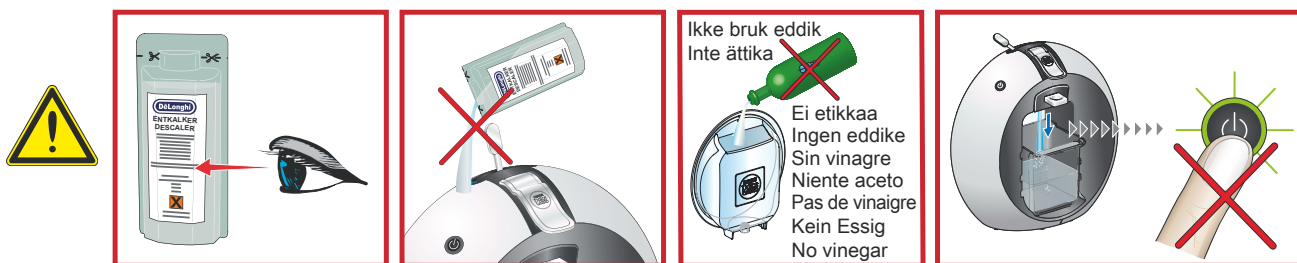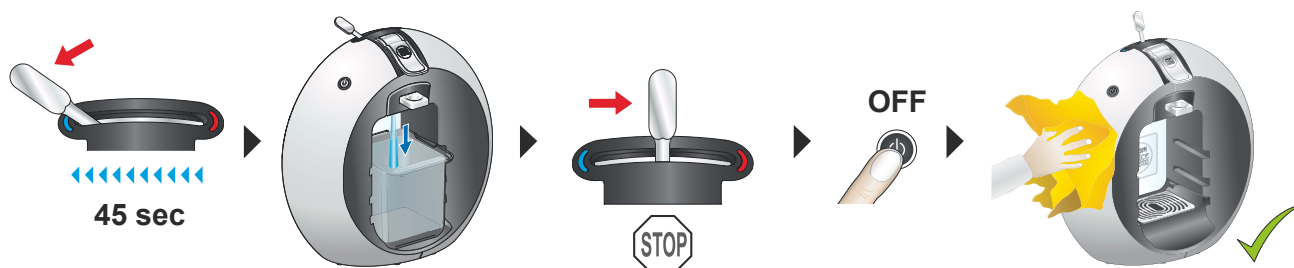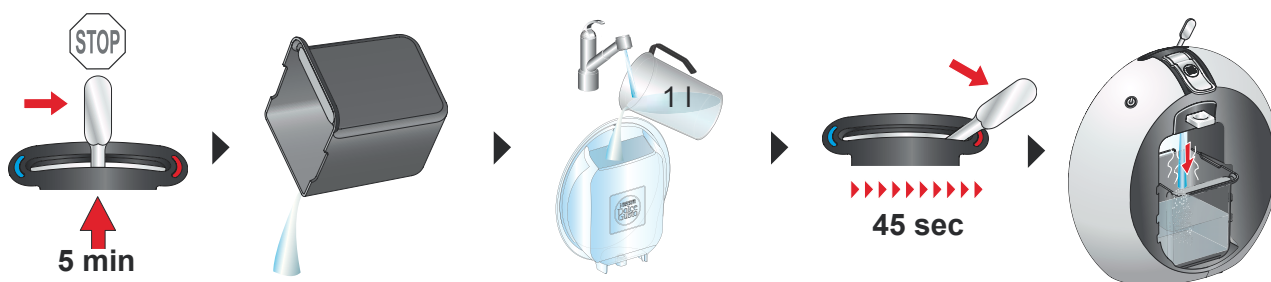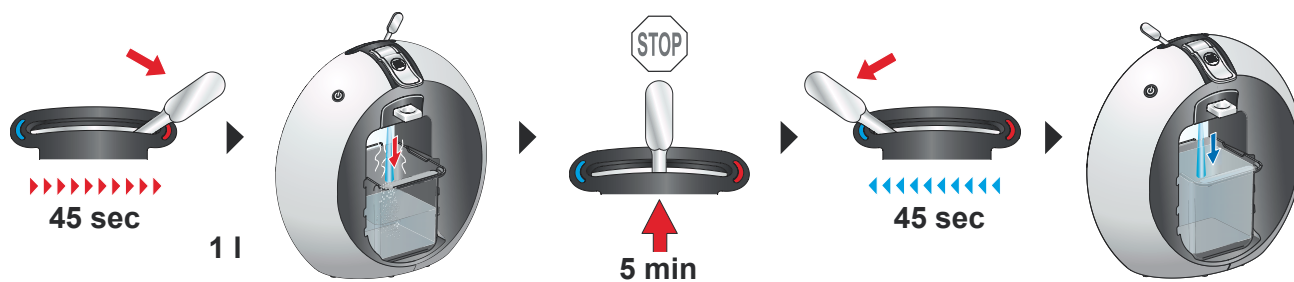

- NO Hvis det ikke kommer ut noe væske... DA Hvis der ikke kommer væske ud... FR S'il n'y a pas de sortie de liquide...
 SV Om ingen vätska rinner... ES Si no sale líquido... DE Wenn keine Flüssigkeit herausfließt...
 FI Jos nestettä ei tule ulos... IT Se nessun liquido fuoriesce... EN If no liquid comes out...

