

When in use the reservoir is under pressure. Before removing the reservoir cap (fig 3) or removing the filter holder always ensure that the pressure has been equalised by opening the steam control knob.

#### Making Espresso Coffee

The preparation of Espresso coffee involves hot water being forced through fine coffee grounds under high pressure. This gives Espresso coffee its aromatic and strong taste. It is essential to use a good roasted bean with the correct grinding. Small cups 50ml (2 fl.oz) are used to serve Espresso and a typical sign of a good cup of coffee is a fine foam, known as a crema, on the surface.

- Set the strength/steam control to the desired strength (ES310 only).
- Fill the coffee filter with coffee grounds to the required level and pack down firmly with the measuring spoon. Recommended amounts for 2 and 4 cups are marked on the coffee filter but the quantity can be varied to individual taste.
- Place the brewing sieve filter over the filter holder.
- Locate the filter holder in position (fig. 1).
- Remove the reservoir cap.
- Fill the carafe with the required amount of water and pour the water into the reservoir.
- Replace the cap.
- Check that the steam control knob is closed (fig 2). On the ES310 only, move the strength control lever to the required setting. We recommend a stronger roast when first using the appliance for the first time. Do not set the strength control lever to the steam control.
- Place the carafe under the filter holder (fig. 4) ensuring that the lid is on the carafe. Or attach the 2 cup adaptor (if supplied) to the filter holder and place a cup under each outlet (fig. 5).
- Switch ON.
- When all the water has run through the filter into the carafe, switch OFF the appliance. You may now serve your espresso coffee.
- Unplug from the power supply.

#### Making Cappuccino

A cappuccino is an espresso coffee with a froth topping made by heating milk.

- Using the Quantity Chart as a guide pour the required amount of milk into the carafe.
- Transfer the milk into a jug. The jug should be large enough to allow the milk to expand to around treble its volume.
- Rinse the carafe.
- Then follow steps 1-9 in the section Making Espresso Coffee.
- Switch the appliance ON.
- When the coffee starts to drip from the filter holder, place the steam nozzle in the milk (fig. 6) and open the steam valve by turning the steam knob anti-clockwise.
- When sufficient milk froth has been produced, turn the steam knob clockwise to close the steam valve.
- Allow the remaining coffee to drip through the filter holder into the carafe, then switch the appliance OFF.
- Pour the coffee into cups and place the milk froth on the surface using a spoon. Sprinkle chocolate, nutmeg or cinnamon on top to serve.

#### ES310 only

- Setting the strength/steam control lever to steam only (fig. 7) will prevent any water from passing through the coffee filter. This setting gives you more control when using the steam nozzle and can be used when only steam is required, for example to froth hot chocolate.
8. Unplug from power supply.

#### HINTS

- Making good espresso and cappuccino is not difficult, however, if you are not familiar with the methods it may require a little practice. The following points may help you serve the perfect cup.
- If the coffee is not hot enough when served, try warming the cups first.
  - If the coffee is too weak use more coffee in the coffee filter or pack the coffee more firmly. On the ES310 you may use a stronger setting on the strength control lever. Alternatively, try a stronger roast or type of coffee bean. Many different types are available in supermarkets and specialist coffee shops.
  - If the coffee is too strong for your taste, then change the type of coffee. Choose a popular espresso coffee should prevent this.
  - Freshly ground coffee gives a better tasting espresso. Ground coffee should be stored in an airtight container.
  - When frothing, move the jug up and down. This will distribute the steam through the milk and produce a better froth.
  - Refrigerated, skimmed milk is the easiest to froth although full cream milk reputedly has the best taste.
  - If the reservoir cap is difficult to remove, open the steam control knob to ensure that the pressure has been equalized.

#### Cleaning

- Unplug the appliance from the power supply.
- After every use, empty the coffee from the coffee filter. Wash the carafe, lid, filter holder, coffee filter, steam nozzle and measuring spoon in hot soapy water and rinse. The drip tray can also be removed and washed. Wipe the outside of the appliances and the steam tube with a damp cloth and polish with a dry one. The brewing sieve should be wiped and if necessary can be removed for cleaning by unscrewing the one or two screws that secure it in place. Wash the brewing sieve. Ensure that the brewing sieve and the screws are firmly in place before using the appliance.

#### RADY

- Preparing doughy kávę espresso nebo cappuccino není příliš těžké, ale pokud ještě tento druh kávy zůstává nevařil, počkejte trochu. Následující rád vám málem pomoci při vaření perfektního šálku.
- Pokud káva není ve chvíli servirování dostatečně horák, je zapotřebí nahřát šálku.
  - Pokud je hotová káva příliš slaba, přidejte příslušný do filtru více mleté kávy a kávu více upřečte. U modelu ES310 můžete slímu kávy seřazit našavlenou pásky sily kávy. Další možnost je použít silnéjší druh kávy. Supermarkety a specializované obchody nabízí různé druhy silných káv.
  - Užitek jednorázových kávových kapslí, může být využit dobrošruheho ventilu místo kávového ventilu, který může dle povolení sítka odskočit.

#### Scaling

- Descaling should be carried out regularly. The frequency required will depend upon the hardness of the water and how often the appliance is used. Descaling solution is available from most supermarkets and should be used as directed by the manufacturer. To descale the appliance, put the descaling solution in the reservoir. Without the brewing sieve or filter holder in place, put a large container under the water outlet. Replace the reservoir cap and switch ON. When the descaling solution has passed through the appliance switch OFF and discard the solution. Rinse the brewing sieve thoroughly and replace. Flush the appliance twice with clean water as described in the Preparing Your Espresso Coffee Maker section.

#### Service

- If the supply cord of this appliance is damaged, it must only be replaced by an Authorised Kenwood Repairer, as special purpose tools are required.

Contact the dealer from whom you purchased your appliance.

#### Cleaning

- When using electrical appliances basic safety precautions should always be followed including:
- Read all instructions.
  - Do not immerse appliance, cord or plug in water or other liquid.
  - Unplug the appliance from the power supply before cleaning and immediately after use.
  - Do not use the appliance for other than its intended use.
  - Close supervision is necessary when any appliance is used by or near children.
  - Do not allow the supply cord to hang down over edges of a worktop or table or touch hot surfaces.
  - Do not use if there is any visible damage to the appliance or to the cord.
  - Do not touch hot parts.
  - Take care to avoid contact with the steam tube and the steam nozzle from the steam nozzle as it can cause injury.
  - Only start the appliance when there is water in the reservoir.
  - Whilst water is passing through the coffee grains, do not remove the filter holder as it is under pressure.
  - Release pressure through steam tube before removing reservoir cap or filter holder.
  - Remove any build up of lime-scale regularly.

#### PLEASE KEEP THESE INSTRUCTIONS

#### Key

- |  |                                 |
|--|---------------------------------|
| 1. Strength/steam control lever (ES310 only) | 9. Drip tray                    |
| 2. Reservoir cap                             | 10. Measuring spoon             |
| 3. Steam control knob                        | 11. Coffee filter               |
| 4. Steam tube                                | 12. Filter holder               |
| 5. Carafe with lid                           | 13. 2-in-1 cup (where supplied) |
| 6. Cord                                      | 14. Brew sieve screw            |
| 8. ON/OFF switch                             | 15. Brewing sieve               |

#### Connecting to Power

Before switching on make sure that the voltage of your electricity supply is the same as that indicated on the rating plate.

NOTE:  
This appliance complies with European Economic Community Radio Interference Directive 82/499/EEC.

#### Preparing your Espresso Coffee Maker

Before using the machine for the first time, or following periods of prolonged storage, flush the appliance through with cold water. To do this, follow steps 11-13 in the section Making Espresso Coffee using water.

#### STROJEK NA KÁVU ESPRESSO KENWOOD (ES300 a ES310)

Kávovar espresso znackou Kenwood je vhodný na přípravu kávy typu espresso a cappuccino. Přesným dodržováním návodů k použití si zajistíte bezpečné a snadné užívání tohoto expresa Kenwood.

#### DŮLEŽITÉ BEZPEČNOSTNÍ OPATŘENÍ

Při používání elektrických spotřebičů je zapotřebí dodržovat základní bezpečnostní opatření, včetně následujících:

- Přečtěte si pečlivě návod k použití.
- Neponutíte spotřebič, jehož šلنky či zástrčku do vody nejde kapalně.
- Před čištěním a ihned po použití vytáhněte zástrčku spotřebiče z zástrčky.
- Spotřebič nepoužívejte k jiným než výrobci doporučeným použitím a zdrojem vodou.
- Připojte žaroufle k vodě a nechte ho dozrátit.
- Připojte žaroufle nenechávejte předpádat ze stolu nebo z pracovního plochy.
- Kávovar neužívejte v případě viditelného poškození spotřebiče nebo jeho přípojné řady.
- Pozor, nedotýkejte se horáků částí spotřebiče.
- Dave, pozor, abyste se nespustili o parní trubici nebo neopatřili párku vlnou v parní trubici.
- Spotřebič zapínáte pouze s nasazenou odkapávací miskou na konvičku na kávu.

#### CONNECTING TO POWER

Before switching on make sure that the voltage of your electricity supply is the same as that indicated on the rating plate.

NOTE:  
This appliance complies with European Economic Community Radio Interference Directive 82/499/EEC.

#### PREPARING YOUR ESPRESSO COFFEE MAKER

Before using the machine for the first time, or following periods of prolonged storage, flush the appliance through with cold water. To do this, follow steps 11-13 in the section Making Espresso Coffee using water.

#### PLEASE KEEP THESE INSTRUCTIONS

#### Key

- |  |                                 |
|--|---------------------------------|
| 1. Strength/steam control lever (ES310 only) | 9. Drip tray                    |
| 2. Reservoir cap                             | 10. Measuring spoon             |
| 3. Steam control knob                        | 11. Coffee filter               |
| 4. Steam tube                                | 12. Filter holder               |
| 5. Carafe with lid                           | 13. 2-in-1 cup (where supplied) |
| 6. Cord                                      | 14. Brew sieve screw            |
| 8. ON/OFF switch                             | 15. Brewing sieve               |

#### CONNECTING TO POWER

Before switching on make sure that the voltage of your electricity supply is the same as that indicated on the rating plate.

NOTE:  
This appliance complies with European Economic Community Radio Interference Directive 82/499/EEC.

#### PREPARING YOUR ESPRESSO COFFEE MAKER

Before using the machine for the first time, or following periods of prolonged storage, flush the appliance through with cold water. To do this, follow steps 11-13 in the section Making Espresso Coffee using water.

#### IMPORTANT SAFEGUARDS

When using electrical appliances basic safety precautions should always be followed including:

- Read all instructions.
- Do not immerse appliance, cord or plug in water or other liquid.
- Unplug the appliance from the power supply before cleaning and immediately after use.
- Do not use the appliance for other than its intended use.
- Close supervision is necessary when any appliance is used by or near children.
- Do not allow the supply cord to hang down over edges of a worktop or table or touch hot surfaces.
- Do not use if there is any visible damage to the appliance or to the cord.
- Do not touch hot parts.
- Take care to avoid contact with the steam tube and the steam nozzle from the steam nozzle as it can cause injury.
- Only start the appliance when there is water in the reservoir.
- Whilst water is passing through the coffee grains, do not remove the filter holder as it is under pressure.
- Release pressure through steam tube before removing reservoir cap or filter holder.
- Remove any build up of lime-scale regularly.

#### Know your Espresso Coffee Maker

Your Kenwood Espresso Coffee Maker is suitable for making Espresso and Cappuccino coffee. Follow these instructions carefully to ensure safe and enjoyable use of your Espresso Coffee Maker.

#### IMPORTANT SAFEGUARDS

When using electrical appliances basic safety precautions should always be followed including:

- Read all instructions.
- Do not immerse appliance, cord or plug in water or other liquid.
- Unplug the appliance from the power supply before cleaning and immediately after use.
- Do not use the appliance for other than its intended use.
- Close supervision is necessary when any appliance is used by or near children.
- Do not allow the supply cord to hang down over edges of a worktop or table or touch hot surfaces.
- Do not use if there is any visible damage to the appliance or to the cord.
- Do not touch hot parts.
- Take care to avoid contact with the steam tube and the steam nozzle from the steam nozzle as it can cause injury.
- Only start the appliance when there is water in the reservoir.
- Whilst water is passing through the coffee grains, do not remove the filter holder as it is under pressure.
- Release pressure through steam tube before removing reservoir cap or filter holder.
- Remove any build up of lime-scale regularly.

#### Know your Espresso Coffee Maker

Your Kenwood Espresso Coffee Maker is suitable for making Espresso and Cappuccino coffee. Follow these instructions carefully to ensure safe and enjoyable use of your Espresso Coffee Maker.

#### IMPORTANT SAFEGUARDS

When using electrical appliances basic safety precautions should always be followed including:

- Read all instructions.
- Do not immerse appliance, cord or plug in water or other liquid.
- Unplug the appliance from the power supply before cleaning and immediately after use.
- Do not use the appliance for other than its intended use.
- Close supervision is necessary when any appliance is used by or near children.
- Do not allow the supply cord to hang down over edges of a worktop or table or touch hot surfaces.
- Do not use if there is any visible damage to the appliance or to the cord.
- Do not touch hot parts.
- Take care to avoid contact with the steam tube and the steam nozzle from the steam nozzle as it can cause injury.
- Only start the appliance when there is water in the reservoir.
- Whilst water is passing through the coffee grains, do not remove the filter holder as it is under pressure.
- Release pressure through steam tube before removing reservoir cap or filter holder.
- Remove any build up of lime-scale regularly.

#### Know your Espresso Coffee Maker

Your Kenwood Espresso Coffee Maker is suitable for making Espresso and Cappuccino coffee. Follow these instructions carefully to ensure safe and enjoyable use of your Espresso Coffee Maker.

#### IMPORTANT SAFEGUARDS

When using electrical appliances basic safety precautions should always be followed including:

- Read all instructions.
- Do not immerse appliance, cord or plug in water or other liquid.
- Unplug the appliance from the power supply before cleaning and immediately after use.
- Do not use the appliance for other than its intended use.
- Close supervision is necessary when any appliance is used by or near children.
- Do not allow the supply cord to hang down over edges of a worktop or table or touch hot surfaces.
- Do not use if there is any visible damage to the appliance or to the cord.
- Do not touch hot parts.
- Take care to avoid contact with the steam tube and the steam nozzle from the steam nozzle as it can cause injury.
- Only start the appliance when there is water in the reservoir.
- Whilst water is passing through the coffee grains, do not remove the filter holder as it is under pressure.
- Release pressure through steam tube before removing reservoir cap or filter holder.
- Remove any build up of lime-scale regularly.

#### Know your Espresso Coffee Maker

Your Kenwood Espresso Coffee Maker is suitable for making Espresso and Cappuccino coffee. Follow these instructions carefully to ensure safe and enjoyable use of your Espresso Coffee Maker.

#### IMPORTANT SAFEGUARDS

When using electrical appliances basic safety precautions should always be followed including:

- Read all instructions.
- Do not immerse appliance, cord or plug in water or other liquid.
- Unplug the appliance from the power supply before cleaning and immediately after use.
- Do not use the appliance for other than its intended use.
- Close supervision is necessary when any appliance is used by or near children.
- Do not allow the supply cord to hang down over edges of a worktop or table or touch hot surfaces.
- Do not use if there is any visible damage to the appliance or to the cord.
- Do not touch hot parts.
- Take care to avoid contact with the steam tube and the steam nozzle from the steam nozzle as it can cause injury.
- Only start the appliance when there is water in the reservoir.
- Whilst water is passing through the coffee grains, do not remove the filter holder as it is under pressure.
- Release pressure through steam tube before removing reservoir cap or filter holder.
- Remove any build up of lime-scale regularly.

#### Know your Espresso Coffee Maker









Your Kenwood Espresso Coffee Maker is suitable for making Espresso and Cappuccino coffee. Follow these instructions carefully to ensure safe and enjoyable use of your Espresso Coffee Maker.

#### IMPORTANT SAFEGUARDS

When using electrical appliances basic safety precautions should always be followed including:

- Read all instructions.
- Do not immerse appliance, cord or plug in water or other liquid.
- Unplug the appliance from the power supply before cleaning and immediately after use.
- Do not use the appliance for other than its intended use.
- Close supervision is necessary when any appliance is used by or near children.
- Do not allow the supply cord to hang down over edges of a worktop or table or touch hot surfaces.
- Do not use if there is any visible damage to the appliance or to the cord.
- Do not touch hot parts.
- Take care to avoid contact with the steam tube and the steam nozzle from the steam nozzle as it can cause injury.
- Only start the appliance when there is water in the reservoir.
- Whilst water is passing through the coffee grains, do not remove the filter holder as it is under pressure.
- Release pressure through steam tube before removing reservoir cap or filter holder.
- Remove any build up of lime-scale regularly.

#### Know your Espresso Coffee Maker

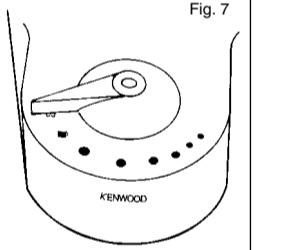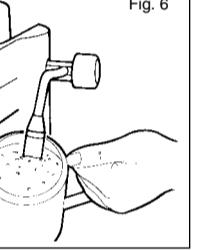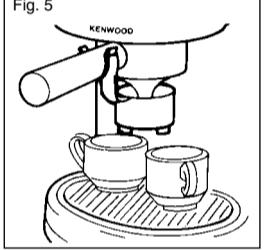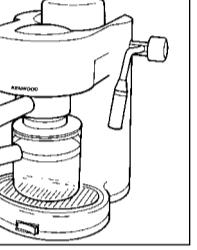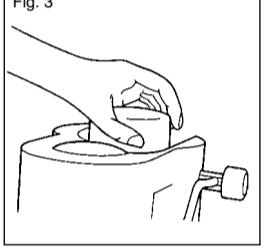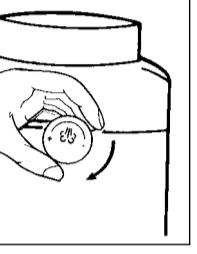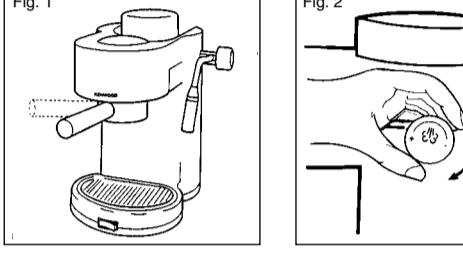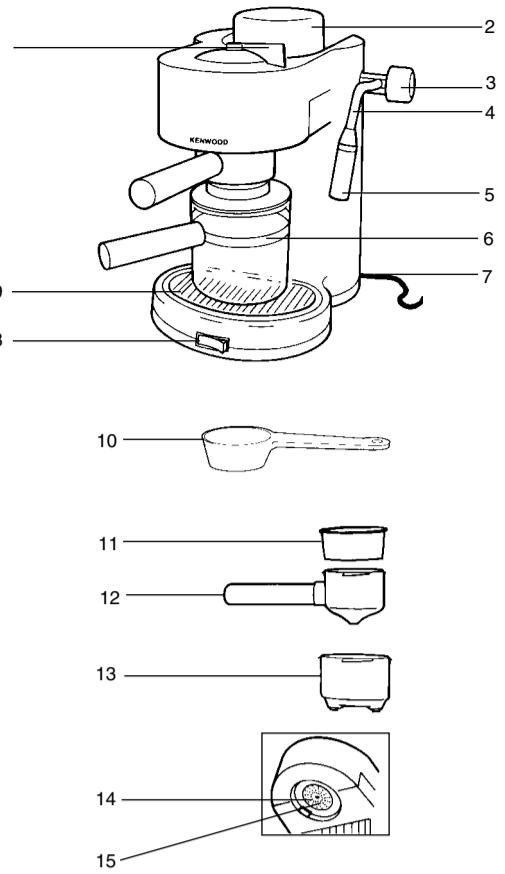

E

#### Conozca su máquina de café expreso

Su máquina de café expreso se puede usar para hacer café expreso y cappuccino. Siga las instrucciones, con detenimiento, para asegurarse un uso agradable y seguro de su máquina de café expreso.

#### RECOMENDACIONES IMPORTANTES PARA LA SEGURIDAD

Cuando se usan aparatos eléctricos se deberán tomar siempre unas medidas de precaución básicas, incluyendo las siguientes:

- Lea bien las instrucciones.
- No sumerja el aparato, cable o enchufe en agua u otros líquidos.
- Desconecte el aparato de la corriente eléctrica antes de limpiar e imponga este procedimiento.
- Sólo utilice el aparato para el uso para el que fue fabricado.
- Es necesario que se tenga mucho cuidado cuando se use cerca de los niños.
- No deje que el cable de alimentación eléctrica cuelgue de la mesa o del tablero o esté en contacto con superficies calientes.
- No use el aparato si éste o el conector de alimentación eléctrica parecen dañados.
- No toque las partes calientes.
- Evite el contacto con el tubo del vapor y el vapor que emite la tobera, ya que podría lesionar a la persona.
- Únicamente haga funcionar el aparato cuando la bandera para el goteo y la jarra de cristal estén en el depósito.
- Sólo haga funcionar el aparato cuando haya agua en el depósito.
- Cuando esté pasando agua por el aparato, no retire el porta-filtro ya que se pierde vapor y agua en esos momentos.
- Saque la presión por el tubo de vapor antes de quitar la tapadera del depósito o el porta-filtro.
- Quite, de vez en cuando, la cal que se vaya produciendo.

#### GUARDE ESTAS INSTRUCCIONES

#### Claves

- |   |   |
|---|---|
| 1. Control del vapor/presión (ES310 sólo) | 9. Bandeja de goteo                             |
| 2. Tapadera del depósito                  | 10. Cuchara para medir                          |
| 3. Botón de control del vapor             | 11. Filtro para el café                         |
| 4. Tubo del vapor                         | 12. Rosca para el colador-filtro                |
| 5. Tubería para el vapor                  | 13. Adaptador para dos tazas (se si suministra) |
| 6. Jarra de cristal con tapadera          | 14. Rosca para el colador-filtro                |
| 7. Cable eléctrico                        | 15. Colador                                     |

#### Conexión a la alimentación eléctrica

Antes de conectar el aparato, asegúrese de que la tensión de su alimentación eléctrica es la misma que la que se indica en la placa de fabricante.

#### NOTA:

Este aparato cumple con la Directiva de la Comunidad Económica Europea sobre Radiointerferencia 82/499/CEE.

#### Preparar su máquina de café expreso

Antes de usar la máquina por primera vez, o tras largos períodos de

almacenamiento, haga funcionar el aparato con agua fría. Para hacer esto, siga los pasos 3-11 del apartado Hacer Café Expreso con agua.

Cuando el aparato está en marcha, el depósito está bajo presión. Antes de quitar la tapadera del depósito (fig. 3) o el porta-filtro, asegúrese siempre que no quede presión abriendo el botón de control del vapor.

#### Hacer Café Expreso

La preparación del café expreso consiste en que agua caliente pase a través de los granos de café bajo una fuerte presión. Esto es lo que da al café su sabor fuerte y aromático. Es esencial usar buenos granos de café tostados con el molde correcto. Se usan tazas pequeñas de 50 ml. para servir el café expreso y un típico indicio de que se ha conseguido una buena taza de café es que haya un poquito de espuma, conocida como crema, en su superficie.

- Coloque el control de vapor/presión a la posición que usted desee (ES310 sólo).
- Llene el porta-filtro con granos de café en el nivel deseado y comprima bien con la cuchara de medir. Las cantidades recomendadas para 2 y 4 tazas vienen marcadas en el filtro de café, pero hay que tener en cuenta que la cantidad puede variar dependiendo del tipo de cada uno.
- Coloque el filtro de café en el porta-filtro.
- Coloque el porta-filtro en su sitio (fig. 1).
- Quite la tapadera del depósito.
- Llene la jarra de cristal con la cantidad requerida de agua y vierta el agua en el depósito.
- Vuelva a colocar la tapadera.
- Compruebe que el botón de control del vapor está cerrado (fig. 2).
- Coloque la jarra de cristal debajo del porta-filtro (fig. 4), o coloque el adaptador de 2 tazas (cuando se suministre) al porta-filtro (fig. 5).
- Encendido (ON).
- Una vez que haya pasado todo el agua del filtro a la jarra de cristal, apague (OFF) el aparato. Su café expreso estará listo para servir.

#### Hacer un cappuccino

Un cappuccino es un café expreso con bastante espuma por encima, hecha al calentar leche.

- Siguiendo la Tabla de cantidades, como guía, vierta la cantidad deseada de leche en la jarra de cristal.
- Pase la leche a otra jarra. Dicha jarra deberá ser lo suficientemente grande como para triplicar su volumen.
- Enjuague la jarra de cristal.

A continuación siga los pasos 1-9 del apartado Hacer Café Expreso.

- Continúe el apartado.
- Cuando el café empieza a gotear del porta-filtro, coloque la tobera del vapor en la lejana parte y tire la maneta del vapor girando el botón de vapor en la dirección opuesta a las agujas del reloj.
- Una vez que se ha producido suficiente espuma, gire el botón del vapor en la dirección de las agujas del reloj para cerrar la válvula de vapor.
- Deje que caiga el resto de café que quede en el filtro a la jarra de cristal, y luego apague el aparato OFF.
- Vierta el café en las tazas y ponga la espuma con la leche que era de la taza con una cuchara. Rocíe chocolate, nuez moscada o canela para servir.

#### ES310 sólo

Fijar el control de vapor/presión para la función de vapor únicamente (fig. 7) evitara que el agua pase a través del filtro. Esto le proporciona un mayor control cuando use la tobera del vapor y se puede usar solo cuando se necesita vapor, por ejemplo para hacer espuma en el chocolate caliente.

#### CONSEJOS

Hacer buen café expreso y cappuccino no es difícil, no obstante si usted no está familiarizado con los métodos puede ser que necesite un poquito de práctica. Los puntos que se dan a continuación pueden servirle para servir la taza perfecta.

- Si el café no está suficientemente caliente cuando se sirve, intente calentar las tazas primero.
- Si el café no es muy fuerte, ponga más café en el filtro de café o compríma éste aún más. En el modelo ES310, tiene la opción de usar el control de aroma del café. Como alternativa, intente un tipo de café más fuerte. Hay muchos tipos de café de diferente aroma que se venden en los supermercados y en las tiendas de café especializadas.
- Si el café se ha pasificado amargo puede que se deba al tipo de café.
- Si elige un tipo de café expreso conocido, puede que evite esto.
- El café recién molido proporciona un mejor sabor, el cual se deberá guardar en un recipiente hermético.
- Cuando haga espuma, muévase bien la jarra para que se distribuya el vapor por toda la leche y se produzca una mejor espuma.
- La leche desnatada, refrigerada es con la que más fácil se hace espuma, aunque se dice que la leche entera tiene el mejor sabor de todas.
- En el caso de que sea difícil quitar la tapadera, abra el botón de control del vapor para asegurar que no queda presión.

#### Limpieza

Desconecte el aparato de la corriente eléctrica.

Después de cada uso, vacíe el café que quede en el filtro. Lave la jarra de cristal, la tapadera, el porta-filtro y el filtro del café, o la cuchara de medir en agua caliente con abundante jabón y luego enjuáguelos. La bandeja de goteo también se puede quitar y lavar del mismo modo.

Limpie la parte exterior del aparato y el tubo de vapor con un trapo húmedo y luego páselo un trapo seco. El colador se deberá limpiar y en caso de que sea necesario, se puede quitar para lavarlo desenroscando una o dos roscas que lo sujetan en su sitio. Lave el colador. Asegúrese de que el colador y las rosas están bien colocados en su sitio antes de volver a usar el aparato.

#### Servicio

Si se daña el cable de alimentación eléctrica del aparato, deberá llevarlo a reparar solamente a un especialista de Kenwood autorizado, ya que se deben usar herramientas especiales para su reparación.

Póngase en contacto con el distribuidor al que le compró su aparato.

#### TR

#### Espresso Kahve Makinenizi Tanıyalım

Kenwood Ekspresso Kahve Makineniz, Espresso ve Kaputino kahve yapmak için tasarılmamıştır. Aşağıdaki talimatlar dikkatle izleyiniz ve Espresso Kahve Makinenizi zevkle kullanın.

#### ÖNEMLİ ÖNLEMLER

Elektrikli cihazlar kullanılırken, aşağıda belirtilen bazı temel önlemlerin alınması gereklidir:

- Talimatları tamamı okuyunuz.
- Cihazı, elektrik kordonunu ya da fırınını su ya da diğer sıvılarla temasına önlenez.
- Temizlemeden önce kurdan kalkınan sonrakı fırınını prizden çekiniz.
- Cihazı kulanımı amaçları dışında, başka amaçlar için kullanmayın.
- Cocukluk bulunduğu yerlerde kullanırken cihazı sürekli denetimiz altına bulundurunuz.
- Elektrik kordonunu masa ya da calısmalı yüzeyi kenarından kesmemek gereklidir.
- Cihazda ya da elektrik kordonunda gözle görülebilir bir hasar olması halinde cihazı kullanmayı bırakın.
- Cihazda ya da elektrik kordonunda sıcak yüzeylerle temas etmesini önlenez.

hazır cihazı kullanmayın.

Çıkan sıcak yüzeylerin dokunulmasının engellenmesi gereklidir.

Buhar borusuna ve buhar çıkış ucuna dokunmayın. Yanıklara ve yaralanmaya neden olabileceklerden boruların çıkış boruların uzak durumuz.

10. Damıtma tablası ve sürahî tam konumunda olmadan cihazı çalıştmayınız.

11. Cihazı, su haznesi suyla dolmadan çalıştmayınız.

12. Su, kahve zerzercikleri içerişinden süzülürken filtre kabi basınçlı olmalıdır.

13. Su, buhar kapaklı ya da filtre kabinin yerinden çıkardıktan önce, basınçlı buhar borusundan boşaltın.

14. Kireçlenmeye karşı, bükülmüş kireç tortularını düzenli olarak temizleyiniz.

#### AR

#### Bakım

Bu cihazın elektrik kordonunda herhangi bir hasar olması halinde, deGetInstance için özel aletler gerekeceğinden, yeni kordon yetkilisi Kenwood onarmacı tarafından takılmalıdır.

Bakım için cihazı satın aldığınız acenteye başvurunuz.

#### GR

#### Tabla de cantidades Ölçüt Çizelgesi

Bebidas	Aqua	Café	Leche
Fincan Sayısı	Su	Kahve	Süt
2	+	+	+
4	+	+	+
6	+	+	+
8	+	+	+
10	+	+	+
12	+	+	+
14	+	+	+
16	+	+	+

**KENWOOD LIMITED**  
New Lane • Havant • Hants • PO9 2NH

87527/1  
ENGLISH  
CZECH  
HUNGARIAN  
POLISH  
PORTUGUESE  
SPANISH  
TURKISH  
GREEK  
ARABIC