


KENWOOD

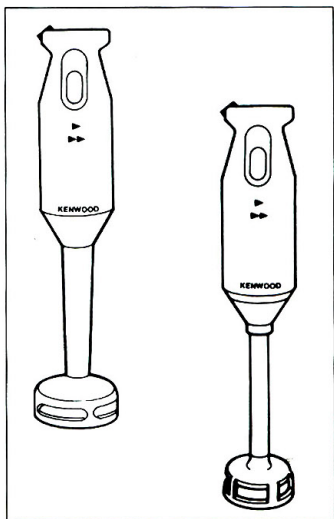

HB300/HB310/HB350/HB360

Know Your Kenwood Hand Blender

Your Kenwood Hand Blender can be used to make mayonnaise, soups, baby foods, sauces, milk shakes and cocktails. To obtain maximum benefit keep it in a convenient location ready for use. The shaft of your hand blender is removable for easier cleaning.

Two speeds are available. Speed 1 is slower than speed 2 and is for greater control. It also reduces splashing. Speed 2 should be used when finer mixes are required, for example, purées and baby foods. Using speed 2 when making mayonnaise will ensure that the oil is thoroughly dispersed.

IMPORTANT SAFEGUARDS


When using electrical appliances basic safety precautions should always be followed, including the following:-

1. Read all instructions
2. Close supervision is necessary when any appliance is used by or near children.
3. Do not immerse the body of the hand blender, cord or plug in water or other liquid.
4. Do not use the appliance for other than its intended use.
5. Do not use if there is any visible damage to the appliance or to the supply cord.
6. Do not let the cord hang over the edge of a table or worktop or touch hot surfaces.
7. The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.
8. Unplug from the power supply when not in use.
9. Keep fingers, hair, clothing, spatulas and utensils away from moving parts.
10. Do not use this appliance in hot oils or fats.

KEEP THESE INSTRUCTIONS

Key

- | | |
|------------------------------------|-------------------------------------|
| 1. Wall Bracket (HB310,HB360 only) | 6. Beaker (HB310,HB360 only) |
| 2. Cord | 7. Steel Shaft (HB350,HB360 only) |
| 3. Speed Control Button | 8. Plastic Shaft (HB300,HB310 only) |
| 4. Body | 9. Spatula (HB310,HB360 only) |
| 5. Foot | |

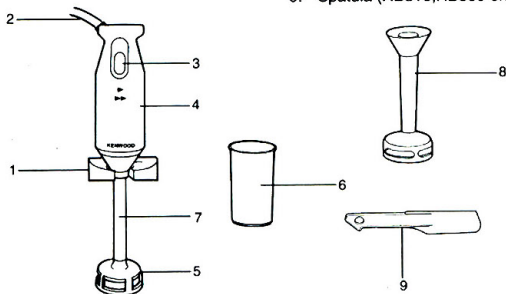

Locating Wall Bracket (when supplied)

Before drilling screw holes, check for hidden gas, electric and water services. Allow enough clearance between cupboards and worktops for appliance.

Connecting to Power

Before switching on make sure that the voltage of your electricity supply is the same as that indicated on the rating plate.

IMPORTANT (UK ONLY)

The wires in the mains lead are coloured in accordance with the following code:

BLUE	- NEUTRAL
BROWN	- LIVE

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter 'N' or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter 'L' or coloured red.

Connection must not be made to the earth terminal of a 3-pin plug.

The appliance must be protected by a 3A ASTA approved (BS1362) fuse if a 13A (BS1363) plug or a non-rewireable plug is used or if any other type of plug is used by a 5A fuse either in the plug or adaptor or at the distribution board.

FACTORY FITTED PLUG

If your appliance has been fitted with a mains lead terminated in a factory fitted plug you must comply with the following regulations.

1. The plug fitted to the lead contains a fuse. For replacement use only a 3A ASTA approved (BS1362) fuse.
2. For non-rewireable plugs the fuse cover **MUST** be refitted when replacing the fuse. If the fuse cover is lost then the plug must not be used until a replacement can be obtained. The correct fuse cover for the plug is identified by colour and replacements may be obtained from your Kenwood Authorised Repairer (see detail under SERVICE).
3. If the socket outlets in your home are not suitable for the plug fitted then the plug should be removed. Non-rewireable plugs must be cut off and **IMMEDIATELY DESTROYED**. An electric shock hazard may arise if an unwanted non-rewireable plug is inadvertently inserted into a 13A socket outlet.
4. Fit a suitable plug to the appliance taking note of the information contained in the plug wiring instructions above.

This appliance complies with European Economic Community Radio Interference Directive 82/499/EEC.

To Use

Your hand blender is suitable for blending soups and mayonnaise, mashing cooked vegetables and for preparing baby foods, omelettes, milk shakes and cocktails. It is unsuitable for crumbing bread, refining sugar or similar operations.

Assemble your hand blender by screwing the shaft onto the body (Fig. 1)

Place the items to be blended in the beaker provided, a high sided bowl, or a saucepan. Always ensure that pans have been removed from the heat before blending.


Plug the hand blender into the power supply. Place the foot of the appliance into the items to be blended and squeeze the speed control button. Pressing the speed control button lightly will give Speed 1, pressing the speed control button more firmly will give speed 2.

Move the foot through the food to break lumps and use a stabbing action to attain the right degree of blending.

After use, release the speed control button and disconnect the blender from the power supply.

Do not operate the appliance for more than one minute at a time. After 1 minute allow it to rest for 4 minutes.

Fig. 1

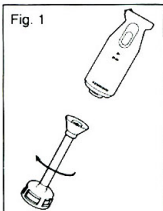

Cleaning

To clean your hand blender, disconnect it from the power supply and unscrew the shaft from the body. Wash the blades under running water to remove food debris, ensuring that no water is allowed to enter the central cavity in the shaft.

Alternatively, fill a beaker 1/3 full with hot, sudsy water, place the foot into the beaker and switch the appliance on for a few seconds. Always disconnect the appliance from the power supply source before drying it.

To clean the body, disconnect from the power supply, wipe with a damp cloth and then polish with a dry one.

Some foods can discolour plastic. Rubbing the area with a kitchen towel and vegetable oil may remove the stain.

Never immerse the body in water or operate under running water.

Service

If the supply cord of this appliance is damaged, it must only be replaced by an authorised Kenwood repairer, as special purpose tools are required.

UK

For any repairs in or out of guarantee, servicing or selected spare parts, contact your Kenwood Authorised Repairer in the **Yellow Pages** under **Electrical Appliance Repairs** or telephone Havant (01705) 476000 extension 2800 Service Department.

Eire

Contact local repairer from advertisement in **Golden Pages**.

All Other Markets

Contact the dealer from whom you purchased your appliance.

KENWOOD LIMITED

New Lane • Havant • Hants • PO9 2NH

86330/1