

## safety

- Never let the cord or plug get wet – you could get an electric shock.
- Keep fingers, hair, clothing and utensils away from moving parts.
- Never let the cord touch hot surfaces or hang down where a child could grab it.
- Never use a damaged handmixer. Get it checked or repaired: see 'service and customer care'.
- Never use an unauthorised attachment.
- Don't let children or infirm people use the handmixer without supervision.
- Only use your handmixer for its intended domestic use.
- Young children should be supervised to ensure that they do not play with this appliance.
- Always unplug the handmixer when not in use.

### before plugging in

- Make sure your electricity supply is the same as the one shown on the underside of your handmixer.

### important (UK only)

- The wires in the cord are coloured as follows:  
Blue = Neutral, Brown = Live.
- This handmixer complies with European Economic Community Directive 89/336/EEC.

### before using for the first time

- 1 Remove all packaging.
- 2 Wash the beaters and kneaders: see 'cleaning'.

## know your Kenwood handmixer

see illustrations

- ① beater release button
- ② speed switch
- ③ beaters

## to use your handmixer

- 1 Insert the beaters turn and push. (To remove them, press the beater release button.)
- 2 Plug in.
- 3 Push the speed switch forward.
  - As the mixture thickens, increase the speed.
  - If the machine labours increase the speed.
  - For safety reasons, your handmixer won't work without the beaters fitted.

## cleaning

- Always switch off, unplug and remove the beaters before cleaning.
- Never put the handmixer body in water or let the cord or plug get wet.

### beaters

- Wash by hand or in your dishwasher, then dry.

### handmixer body

- Wipe with a damp cloth, then dry.

## service and customer care

- If the cord is damaged it must, for safety reasons, be replaced by Kenwood or an authorised Kenwood repairer.

### UK

If you need help with:

- using your handmixer or
- servicing or repairs (in or out of guarantee)

call Kenwood Customer Care on **023 92392333**. Have your **model number ready** - it is located on the underside of your handmixer.

### Eire

- See our advertisement in Golden Pages.

### other countries

- Contact the shop where you bought your handmixer.


## guarantee (UK only)

If your handmixer goes wrong within one year from the date you bought it, we will repair or replace it free of charge provided:

- you have not misused, neglected or damaged it;
- it has not been modified (unless by Kenwood);
- it is not second-hand;
- it has not been used commercially;
- you have not fitted a plug incorrectly; and
- **you supply your receipt to show when you bought it.**

This guarantee does not affect your statutory rights.

# KENWOOD

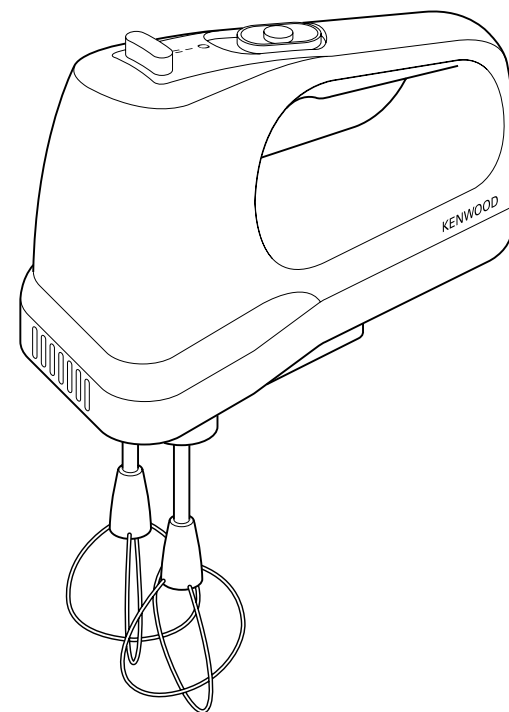

**HM190**

