



KENWOOD


AUTOMATIC CITRUS JUICER

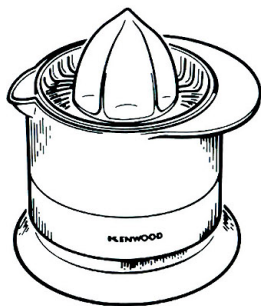

JE100

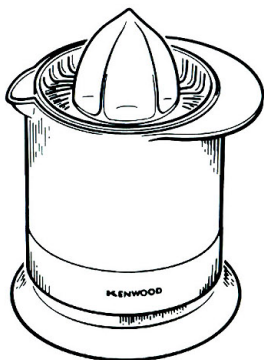

JE150

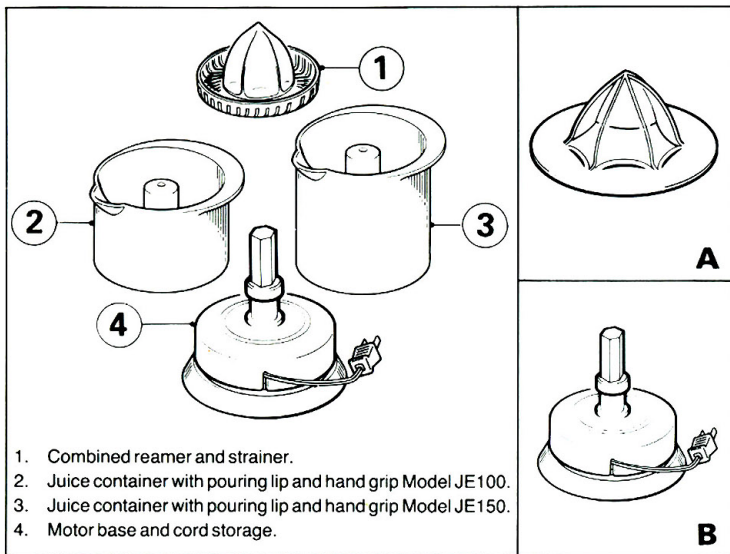

Assembly

Place the juice container on the motor base, then rest the reamer in the juice container.

Note: Model JE150 also has a clear cover (**A**).

Cord Storage (B)

Unwanted cord can be wound around the motor base and secured in the slot provided.

To Operate

Cut the citrus fruit (lemons, oranges, grapefruit and limes) in half horizontally. Take each half and press down on the reamer, the motor will automatically start. When the juice has been extracted, lift the fruit from the reamer and the motor will stop. The juice will flow into the juice container leaving the seeds, pips and pulp behind. To serve simply remove the combined reamer and strainer from the collecting vessel and pour out the juice.

Note: The reamer will operate in a clockwise or anti-clockwise direction.

Capacity

Model JE 100 - 9 fl.ozs

Model JE 150 - 24 fl.ozs

Once the juice container is full, it should be emptied, and the pulp, seeds etc removed from the combined reamer and strainer. Once this has been carried out the juicing operation can continue.

Important

To avoid overheating do not press too hard on the reamer and do not operate continuously for more than 10 minutes at a time.

Cleaning

Always unplug the unit before cleaning. The combined reamer and strainer, and juice container may be washed in warm soapy water. The motor base needs only to be wiped over with a damp cloth.

Do not immerse in water.

This appliance is for household use only.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all Instructions.
2. To protect against risk of electrical shock, do not put the motor base of the appliance in water or other liquids.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
7. The use of attachments, not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter.

SAVE THESE INSTRUCTIONS

KENWOOD APPLIANCES

156 Halsey Road · Parsippany · NJ 07054
PRINTED IN BRITAIN

83569/1