 


KENWOOD

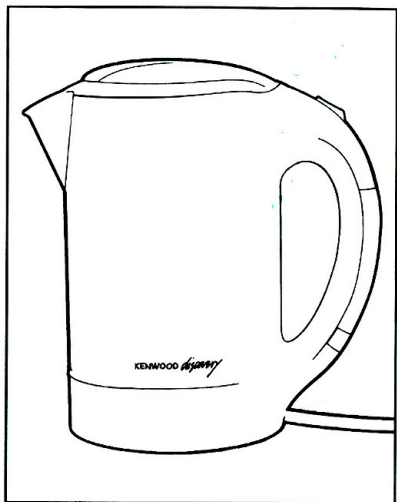

JK55

Your New Kenwood Travel Kettlejug

Your new Kenwood Travel Kettlejug is a compact kettlejug with a convenient 0.75 litre/1.3 pint capacity and a powerful heating element for rapid boiling. The kettlejug will switch off automatically when the water has boiled. For extra safety, the appliance is also fitted with a boil-dry protection device.

Included with your new Kettlejug are a container to store coffee, a coffee filter and a filter holder for brewing ground coffee, and 2 cups for serving. All these items can be packed away inside the kettlejug for compact storage.

IMPORTANT SAFEGUARDS

When using electrical appliances consideration should always be given to basic safety precautions including:

1. Read all instructions
2. Do not use the appliance for other than its intended use.
3. Do not immerse the appliance, supply cord or plug in water or other liquids.
4. Do not use if the appliance or supply cord appear damaged.
5. Always unplug from the power supply before filling, before cleaning and immediately after use.
6. Do not allow the supply cord to hang over the edge of a table or worktop.
7. Keep the kettlejug away from hot surfaces such as cookers, hotplate, or gas burners.
8. Close supervision is necessary when any appliance is used by or near children.
9. Never overfill your kettlejug, it may eject boiling water. Always ensure that the lid is in place during use.
10. Do not touch hot parts, particularly steam emitted from the spout during boiling or when removing the lid.
11. The ON switch cannot be switched off manually. It will only switch OFF after boiling.

PLEASE KEEP THESE INSTRUCTIONS

Hints

- In some parts of the country deposits will quickly form on the heating element. These will result in increased brewing times and can effect the operation of the appliance. This deposit should be removed regularly to prevent permanent damage to the coffee maker. See the Descaling instructions in the Care and Cleaning section.
- In some parts of the country, the boiled water in the kettlejug appears cloudy with deposits on the surface of the water or on the sides of the kettlejug. The cause is calcium carbonate (chalk) which occurs naturally in the water and is not harmful. To minimise its occurrence only boil enough water each time, rinse after each use, and use fresh water each time.
- This kettlejug is made from materials which have been approved for food use. They will not affect water.

Care and Cleaning

Always unplug the appliance from the power supply immediately after use, and before cleaning.

Wipe the outside of the kettlejug with a damp cloth and polish with a dry one. Do not use abrasive cleaners which will scratch the plastic surface.

Descaling


In certain areas furring or lime deposits will form on the heating element which will result in increased boiling times and can affect the kettle operation. If this deposit is not removed it can cause permanent damage to the kettle. The scale can be removed by using an appropriate descalent available from most leading supermarkets, department and hardware stores or chemists. After descaling, the kettle should be boiled with fresh water several times before use. Excessive use of descalents should be avoided as this may shorten the life of the kettle element. Ensure that the exterior of your kettlejug is thoroughly cleaned to remove any traces of descalent, failure to do so may damage your kettlejug.

Before Use

Before using this appliance for the first time, or after a period of prolonged storage, wash the accessories in hot soapy water, rinse and then dry. Clean the inside of the kettlejug by following the instructions in Using Your Kenwood Kettlejug once and then discard the water.

Using Your Kenwood Kettlejug

1. Remove the lid and remove all accessories.
2. Fill the kettlejug with the required amount of water. The water level should lie between the maximum and minimum marks inside the kettlejug (fig. 1). Remember that it is not economical to boil more water than you need.
3. Replace the lid.
4. Plug into the power supply.
5. Switch the appliance ON.

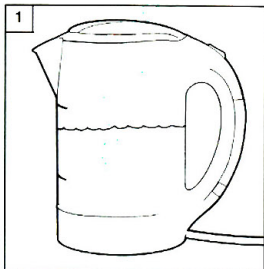

- When the water boils the kettlejug will automatically switch off. It is not possible to switch off manually as the action of the steam activates the OFF switch. To reboil, it may be necessary to wait a few seconds before the switch can be pressed ON.
6. After use the kettlejug should be unplugged from the power supply.

Boil Dry Protection

The kettlejug is fitted with a safety device which protects against overheating should the appliance be operated with insufficient water. If this occurs the kettlejug will stop heating up. Allow the kettlejug to cool before re-filling. The safety device resets automatically when the kettle has cooled down.

Approximate Boiling Times


Please note the following approximate boiling times depending on the voltage used

220/240 volt approx 5 minutes for 0.75l

110/120 volt approx 20 minutes for 0.75l


Making Coffee

1. Place the required amount of filter coffee for one into the coffee filter. We recommend 1 tablespoon/15ml $\frac{1}{2}$ oz per cup.
2. Place the coffee filter into the filter holder.
3. Fit the filter holder on to one of the cups (fig. 2).
4. Pour the boiling water over the coffee grains.

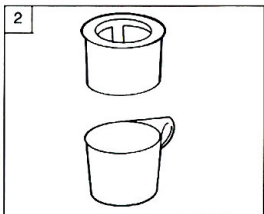

Your coffee is now ready to add milk or serve black as required. Repeat these steps for each cup of coffee

Know your Kenwood Travel Kettlejug

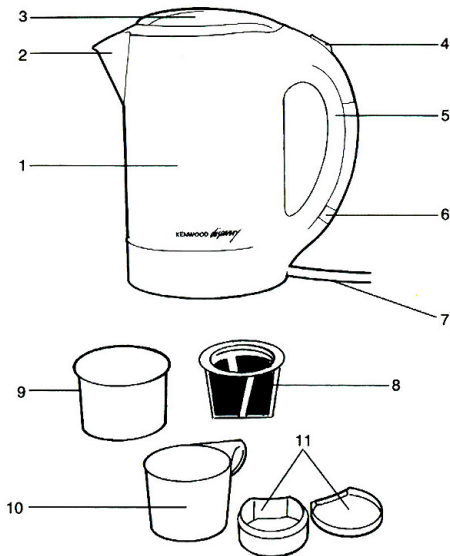

Key

- | | |
|--------------------|------------------|
| 1. Body | 7. Supply cord |
| 2. Spout | 8. Coffee filter |
| 3. Lid | 9. Filter holder |
| 4. ON switch | 10. Cup (x2) |
| 5. Handle | 11. Container |
| 6. Indicator light | |

Connecting to Power

Before switching on make sure that the voltage of your electricity supply is the same as that indicated on the rating plate.

IMPORTANT (UK ONLY) The wires in the mains lead are coloured in accordance with the following code:-

GREEN AND YELLOW
BLUE
BROWN

EARTH
NEUTRAL
LIVE

 
WARNING - THIS APPLIANCE MUST BE EARTHED

This appliance complies with European Economic Community Radio Interference Directive 82/499/EEC.

Storage

After use the accessories can be packed away inside the kettlejug for compact storage (fig. 3). The lid of the kettlejug will secure the accessories inside.

3

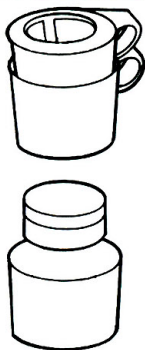

Service

If the supply cord of this appliance is damaged, it must only be replaced by an authorised Kenwood repairer because special purpose tools are required.

UK only

For any repairs in or out of guarantee, servicing or selected spare parts, please contact your Kenwood Authorised Repairer in **YELLOW PAGES** under the heading of **ELECTRICAL APPLIANCE REPAIRERS** or telephone 01705 476000 extension 2805 Customer Care Department.

Eire

Contact local repairer from advertisement in **Golden Pages**.

All Other Markets

Contact the dealer from whom you purchased your appliance.

KENWOOD LIMITED

New Lane • Havant • Hants PO9 2NH

87747/3