

before using your Kenwood appliance

- Read these instructions carefully and retain for future reference.
- Remove all packaging and any labels.

safety

- Always use the filter and never overfill - boiling water may splash out.
- Avoid contact with steam coming out of the spout area when pouring and out of the lid or spout area when refilling.
- Never let the cord hang down where a child could grab it.
- Always unplug your kettle when not in use.
- Never put the kettle, powerbase, cord or plug in liquid.
- Never use a damaged appliance. Get it checked or repaired: see 'service'
- Caution: Do not operate the kettle on an inclined surface.
- Only use the powerbase supplied and keep it clean and dry.
- Make sure the lid is secure before switching the kettle on.
- Warning: Do not open the lid while the water is boiling.
- Take care when opening the lid - droplets of hot water may be ejected.
- Make sure the kettle is switched off before lifting or pouring.
- Remove the kettle from the base before filling or pouring.
- Never put the kettle near or on cooker hot plates or gas burners.
- Do not let infirm people use the appliance without supervision.
- Do not let children use or play with the appliance.
- This kettle is for boiling water only.

- Only use the appliance for its intended domestic use. Kenwood will not accept any liability if the appliance is subject to improper use, or failure to comply with these instructions.

before plugging in

- Make sure your electricity supply is the same as the one shown on the underside of your kettle.

Important - UK only

- The wires in the cord are coloured as follows:
Green and Yellow = Earth
Blue = Neutral
Brown = Live.
- The appliance must be protected by a 13A approved (BS1362) fuse.
- **WARNING: THIS APPLIANCE MUST BE EARTHED.**

Note:

- For non-rewireable plugs the fuse cover **MUST** be refitted when replacing the fuse. If the fuse cover is lost then the plug must not be used until a replacement can be obtained. The correct fuse cover is identified by colour and a replacement may be obtained from your Kenwood Authorised Repairer (see Service).
- If a non-rewireable plug is cut off it must be **DESTROYED IMMEDIATELY**. An electric shock hazard may arise if an unwanted non-rewireable plug is inadvertently inserted into a 13A socket outlet.
- This kettle complies with European Economic Community Directive 89/336/EEC.

before using for the first time

- 1 Adjust the length of the cord ① - turn the underside of the base clockwise (a) to lengthen and anticlockwise (b) to shorten the cord.
- 2 Fill to 'MAX', boil, then pour the water away. Repeat 2 to 3 times.

key

- ① hinged lid
- ② lid release catch
- ③ filter
- ④ water level gauges
- ⑤ on/off switch with indicator light
- ⑥ 360° powerbase
- ⑦ cord storage

to use your kettle

- 1 Fill the kettle through either the spout or lid.
- 2 To open the lid, pull back the lid release catch ②.
- 3 Plug in and switch on by pushing the switch down ⑤. The inside of the kettle and the on/off switch will glow blue.
- 4 Your kettle will boil and switch off automatically into the rapid re-boil position. To re-boil, wait a few seconds - the on/off switch needs time to reset.

rapid re-boil feature

- After boiling the on/off switch will automatically lift up ④ into the rapid re-boil position and glow red. This keeps the water hot after boiling allowing for a rapid re-boil if the water is not used immediately.

NOTE

- In the re-boil position the kettle will switch off automatically once the kettle is removed from the powerbase.
- If the kettle is removed from the powerbase before the boiling cycle is complete (switch still glowing blue), the kettle will continue to boil when replaced on the powerbase.
- To switch the kettle off manually, lift the switch up before replacing the kettle back on the powerbase.
- Always unplug your kettle when not in use.

- If you experience problems with your kettle switching on and off during use or switching off before boiling, check that the flat element is free from scale - see "descaling".
- Your kettle is fitted with a filter to hold back limescale particles.
- If you find drops of water under your kettle, don't worry - it is just condensation.

boil-dry protection

- If you switch on with too little water, your kettle will cut out automatically. Switch off, remove from the powerbase and let it cool down before re-filling. When it has cooled down, the switch will reset itself.

care and cleaning

- Before cleaning, unplug your kettle and let it cool down.

the outside and powerbase

- Wipe with a damp cloth, then dry. Do not use abrasives - they will scratch the plastic surfaces.

the inside

- Even though your kettle comes with a filter, you still need to clean the inside (and the filter) regularly.

the filter

- 1 Open the lid by pulling the lid release catch back. Then pull the lid back ⑤.
- 2 Gently lift out the filter ③.
- 3 To re-fit the filter, locate the filter tab with the cradle support slot ⑦.

descaling

- Regular descaling of the flat element will improve the performance of your kettle. If the kettle is not descaled regularly the build up of limescale may result in the following:
 - problems may be experienced with the kettle switching on and off during use or switching off before boiling.

- the kettle may take longer to boil.
- the flat element may be damaged.

Please note: Failure to descale your kettle may invalidate your guarantee.

- When limescale starts to build up on the heating element, buy a suitable descaler and descale your kettle. After descaling, boil with fresh water several times and discard. Clean any descaler off the kettle - it can damage the parts.
- Some regions of the country have chalky water. This makes boiled water look cloudy and leaves a deposit on the side of the kettle. This is normal but can be removed with regular cleaning.
- Alternatively, to reduce limescale build up, use filtered water to fill your kettle.
- A range of Kenwood jug water filters are available.

service and customer care

- If the cord is damaged it must, for safety reasons, be replaced by KENWOOD or an authorised KENWOOD repairer.

UK

If you need help with:

- using your kettle
- servicing or repairs (in or out of guarantee)

☎ call Kenwood Customer Care on 023 9239 2333. Have your model number and date code (4 digit code ie 5B05) ready - they are located on the underside of your kettle.

- spares and attachments

☎ call 0870 2413653.
other countries

- Contact the shop where you bought your kettle.

guarantee (UK only)

If your kettle goes wrong within one year from the date you bought it, we will repair or replace it free of charge provided:

- you have not misused, neglected or damaged it;
- it has not been modified (unless by Kenwood);
- it is not second-hand;
- it has not been used commercially;
- you have not fitted a plug incorrectly; and
- you supply your receipt to show when you bought it.

This guarantee does not affect your statutory rights.

children and burns or scalds

advice from the British Burn Association


Every year, 30,000 children go to hospital with burns. What might be a minor burn for an adult could horrifically injure - or even kill - a child.

take these precautions

- Keep hot drinks out of children's reach.
- Don't drink while holding your baby. If you're passing someone a drink, make sure a child isn't underneath.
- Keep your kettle, and its cord, well back from the worktop edge so that children can't grab them.
- Keep children away from the kitchen work area.
- For baby's bath, run the cold water first, then add the hot. Mix well and test the temperature with your elbow before you put baby in.
- Teach children about hot things.

run cold water over a burn immediately, then get medical help. Don't stop to remove clothing.

KENWOOD

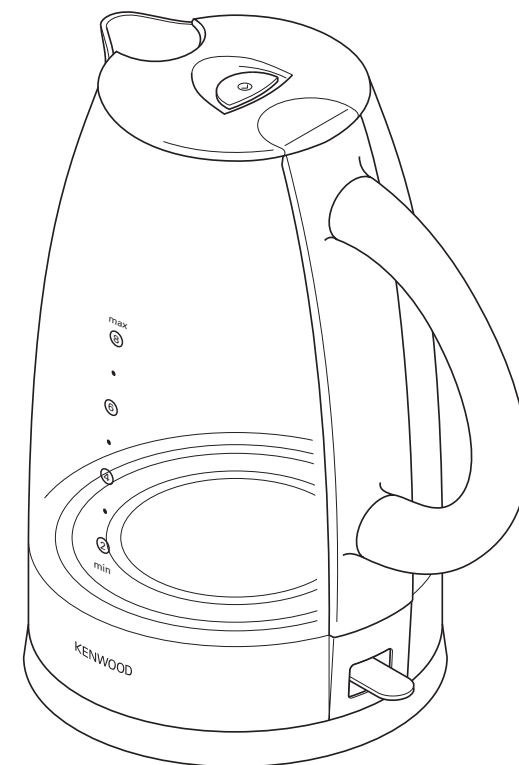

JK930 series